





(BAT)
15A
FUEL PMP
2
FUEL PMP Relay
6 1V
7 1V
B (*1)
G (*1)
11 AR2
R (*1)
1 SR3
L (*1)
4 A
M
5 A
S5(A)
Fuel Sender Gauge Assembly
W-B (*1)
2 SR3
W-B (*1)
R1
(BAT)
80A
GLOW
2
1
B
5
2
GLOW Relay
3
1
B
7 AC2
B
1
B
C98
Glow Plug Assembly
W-B
A1
(IG)
10A
IGN NO.2
56 2O
W
C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
IGSW
FC
GREL
24 R
7 Q
19 N
G (*1)
R
17 CG1
R
44 GA2 (LHD)
41 GA2 (RHD)
61 GA6 (LHD)
10 GA2 (RHD)
R
W-B
W-B
4
2
6
A70
Junction Connector
W-B

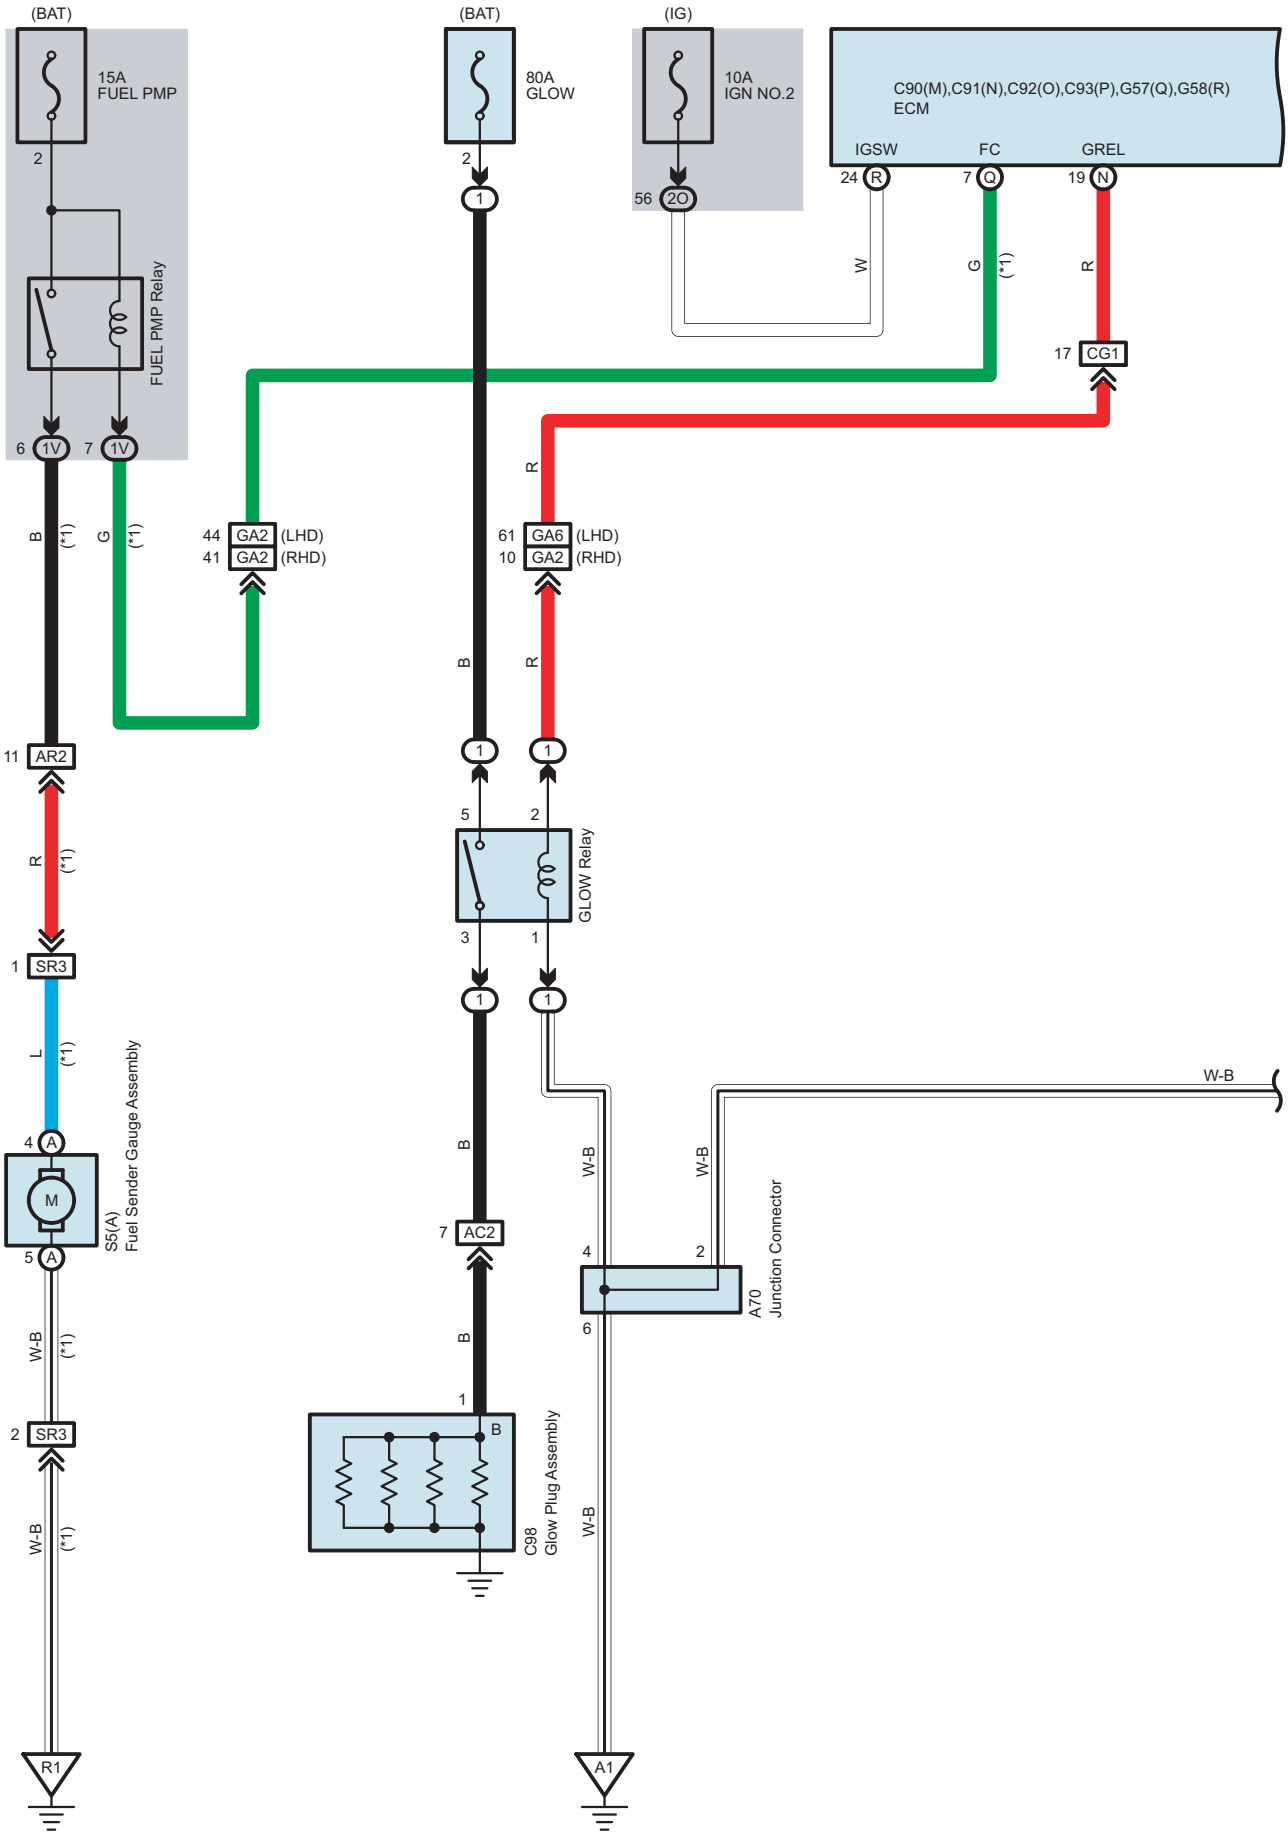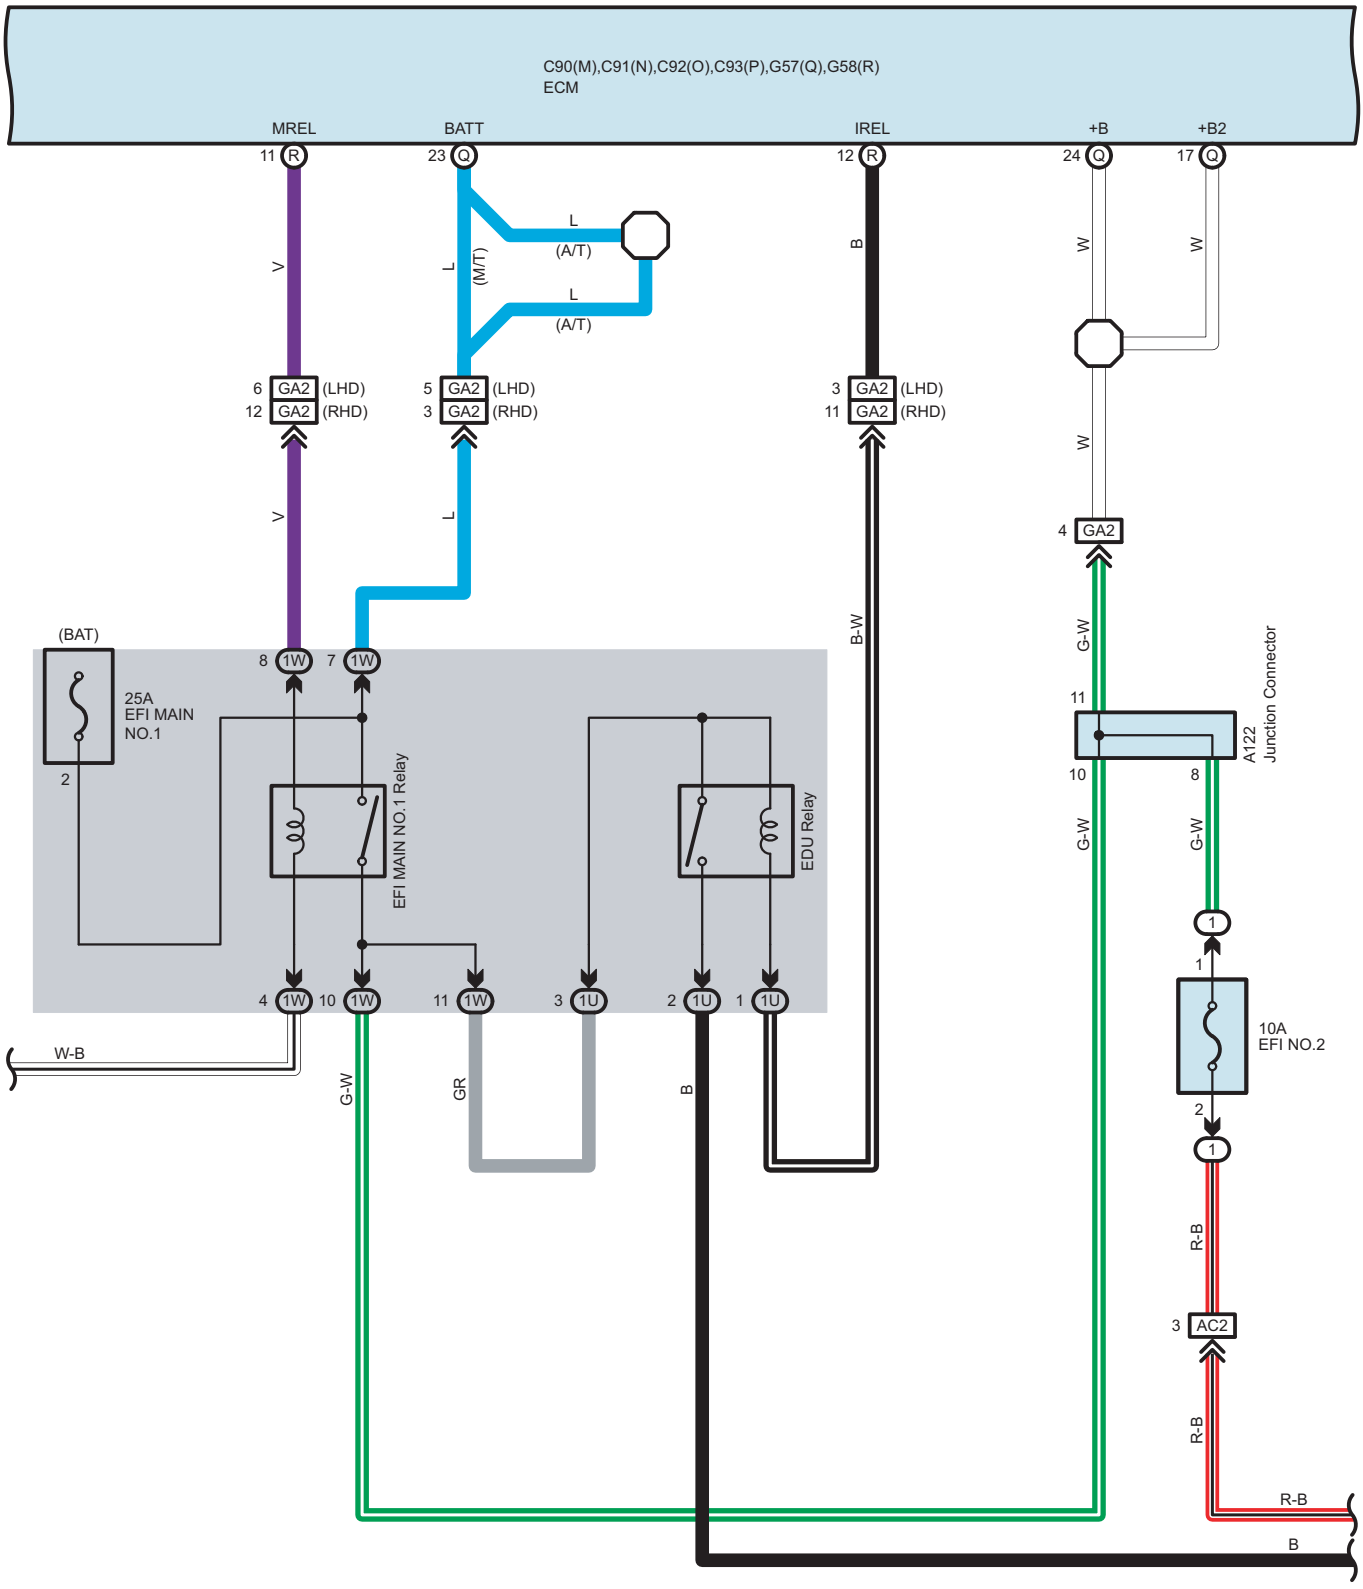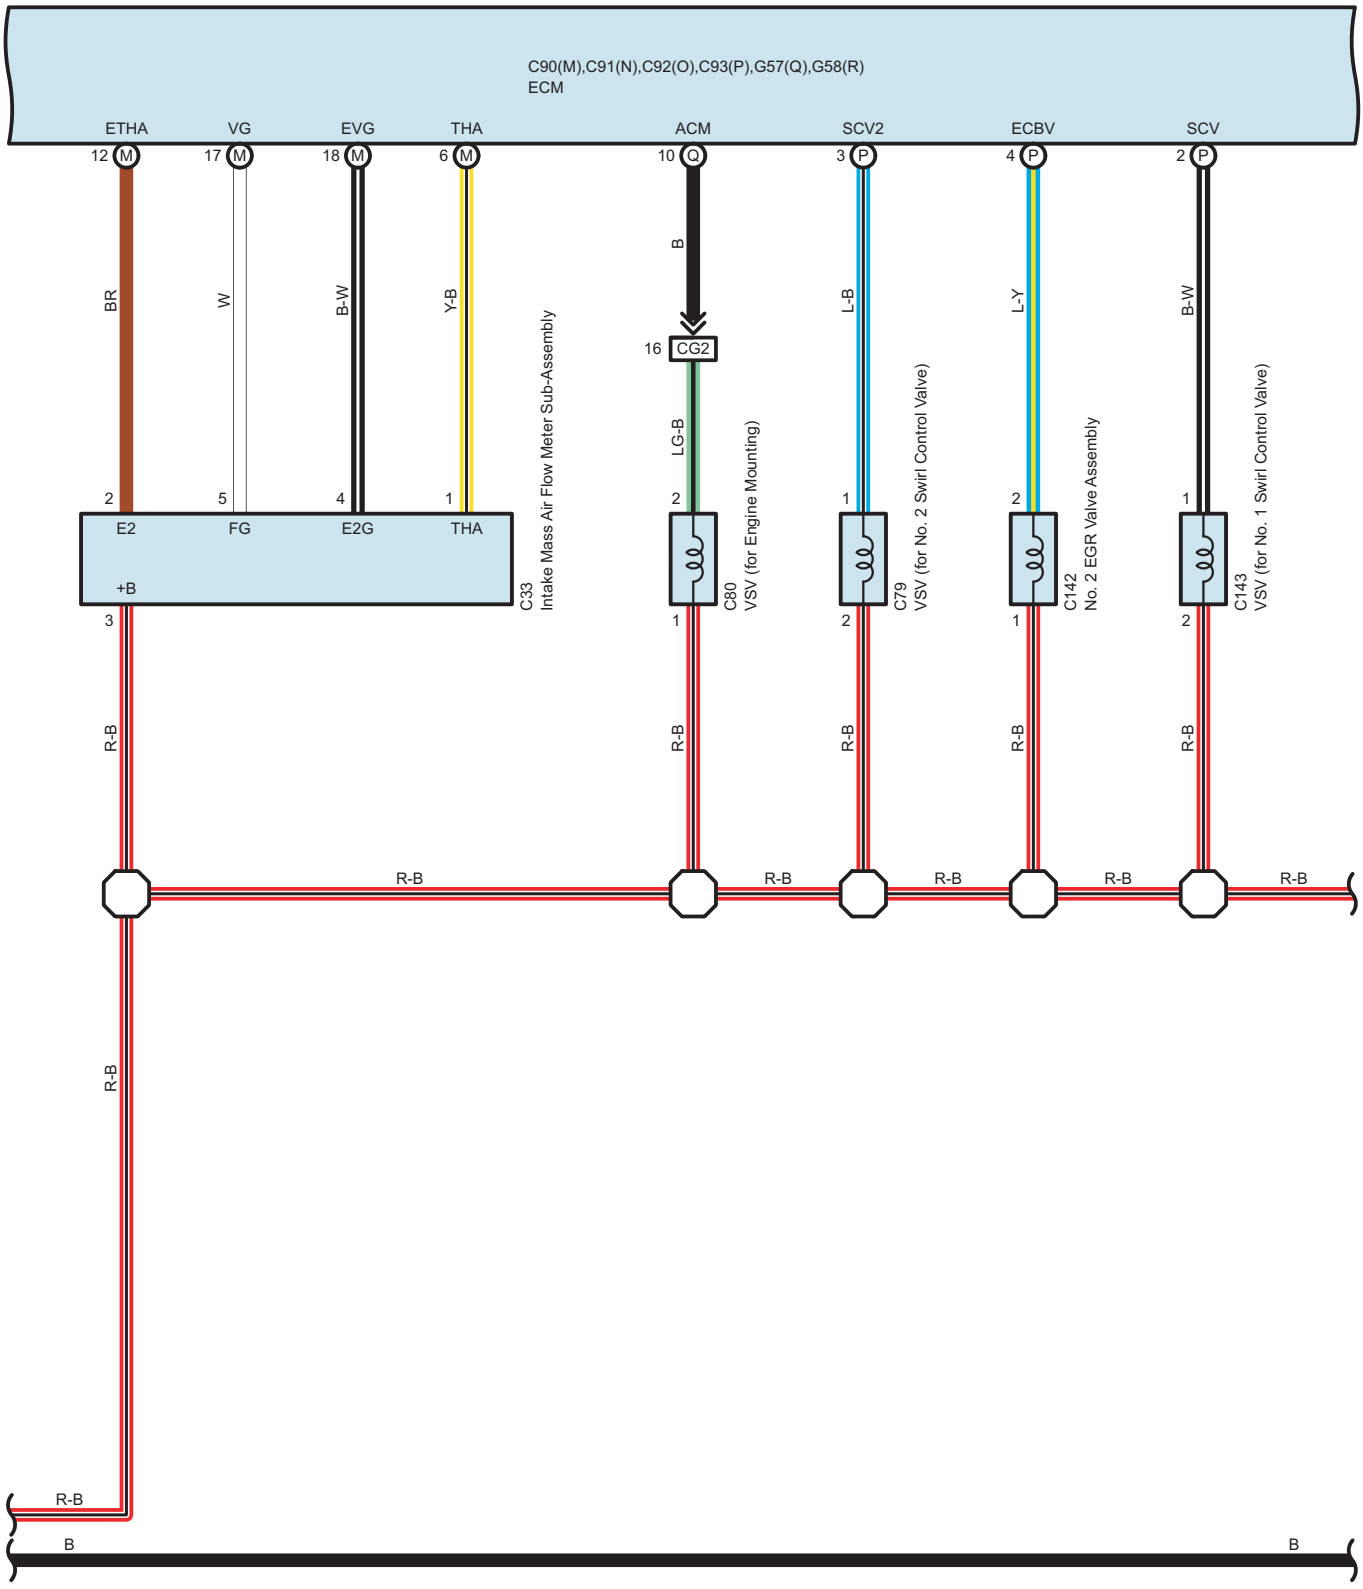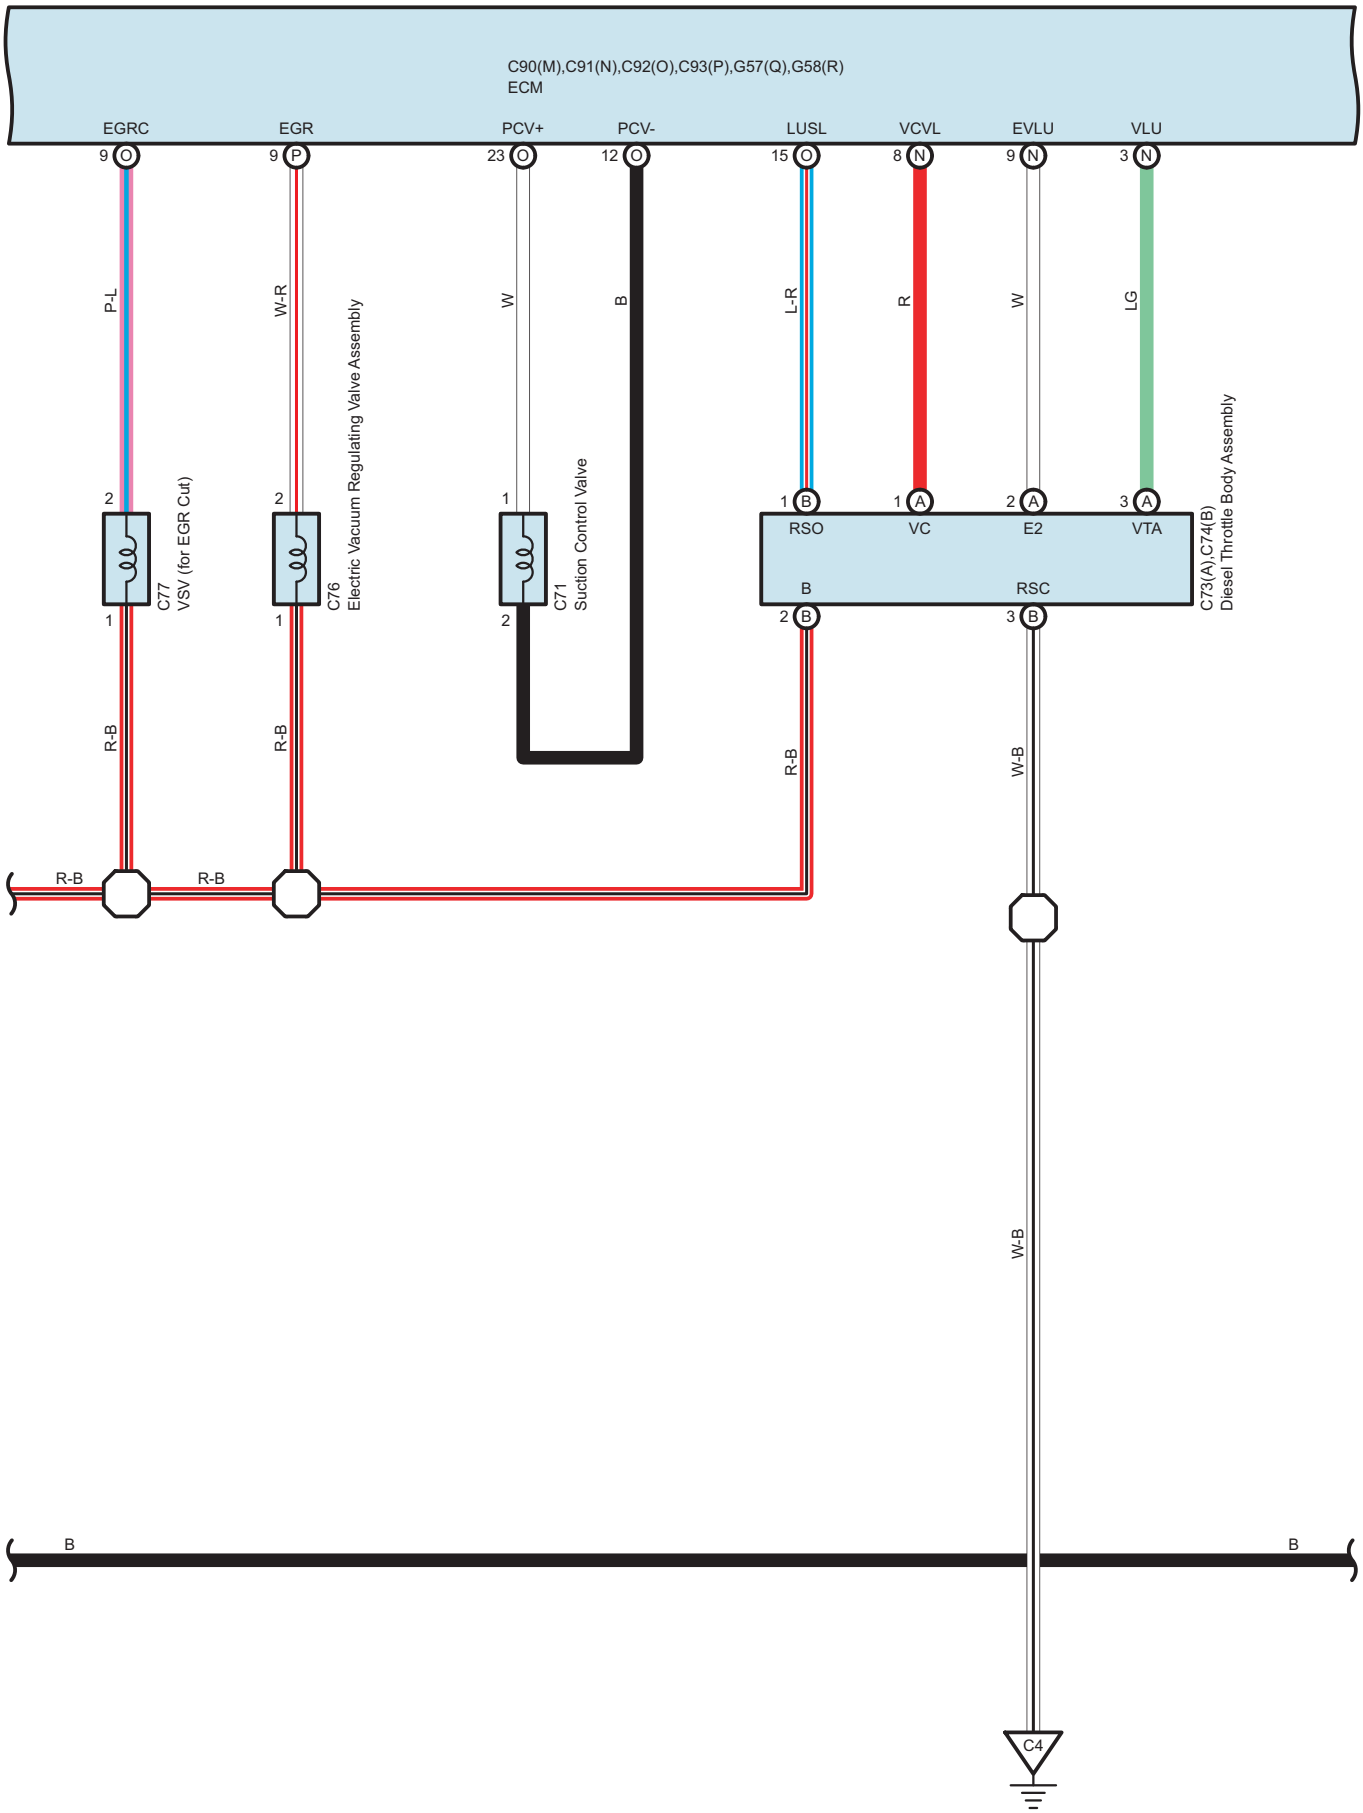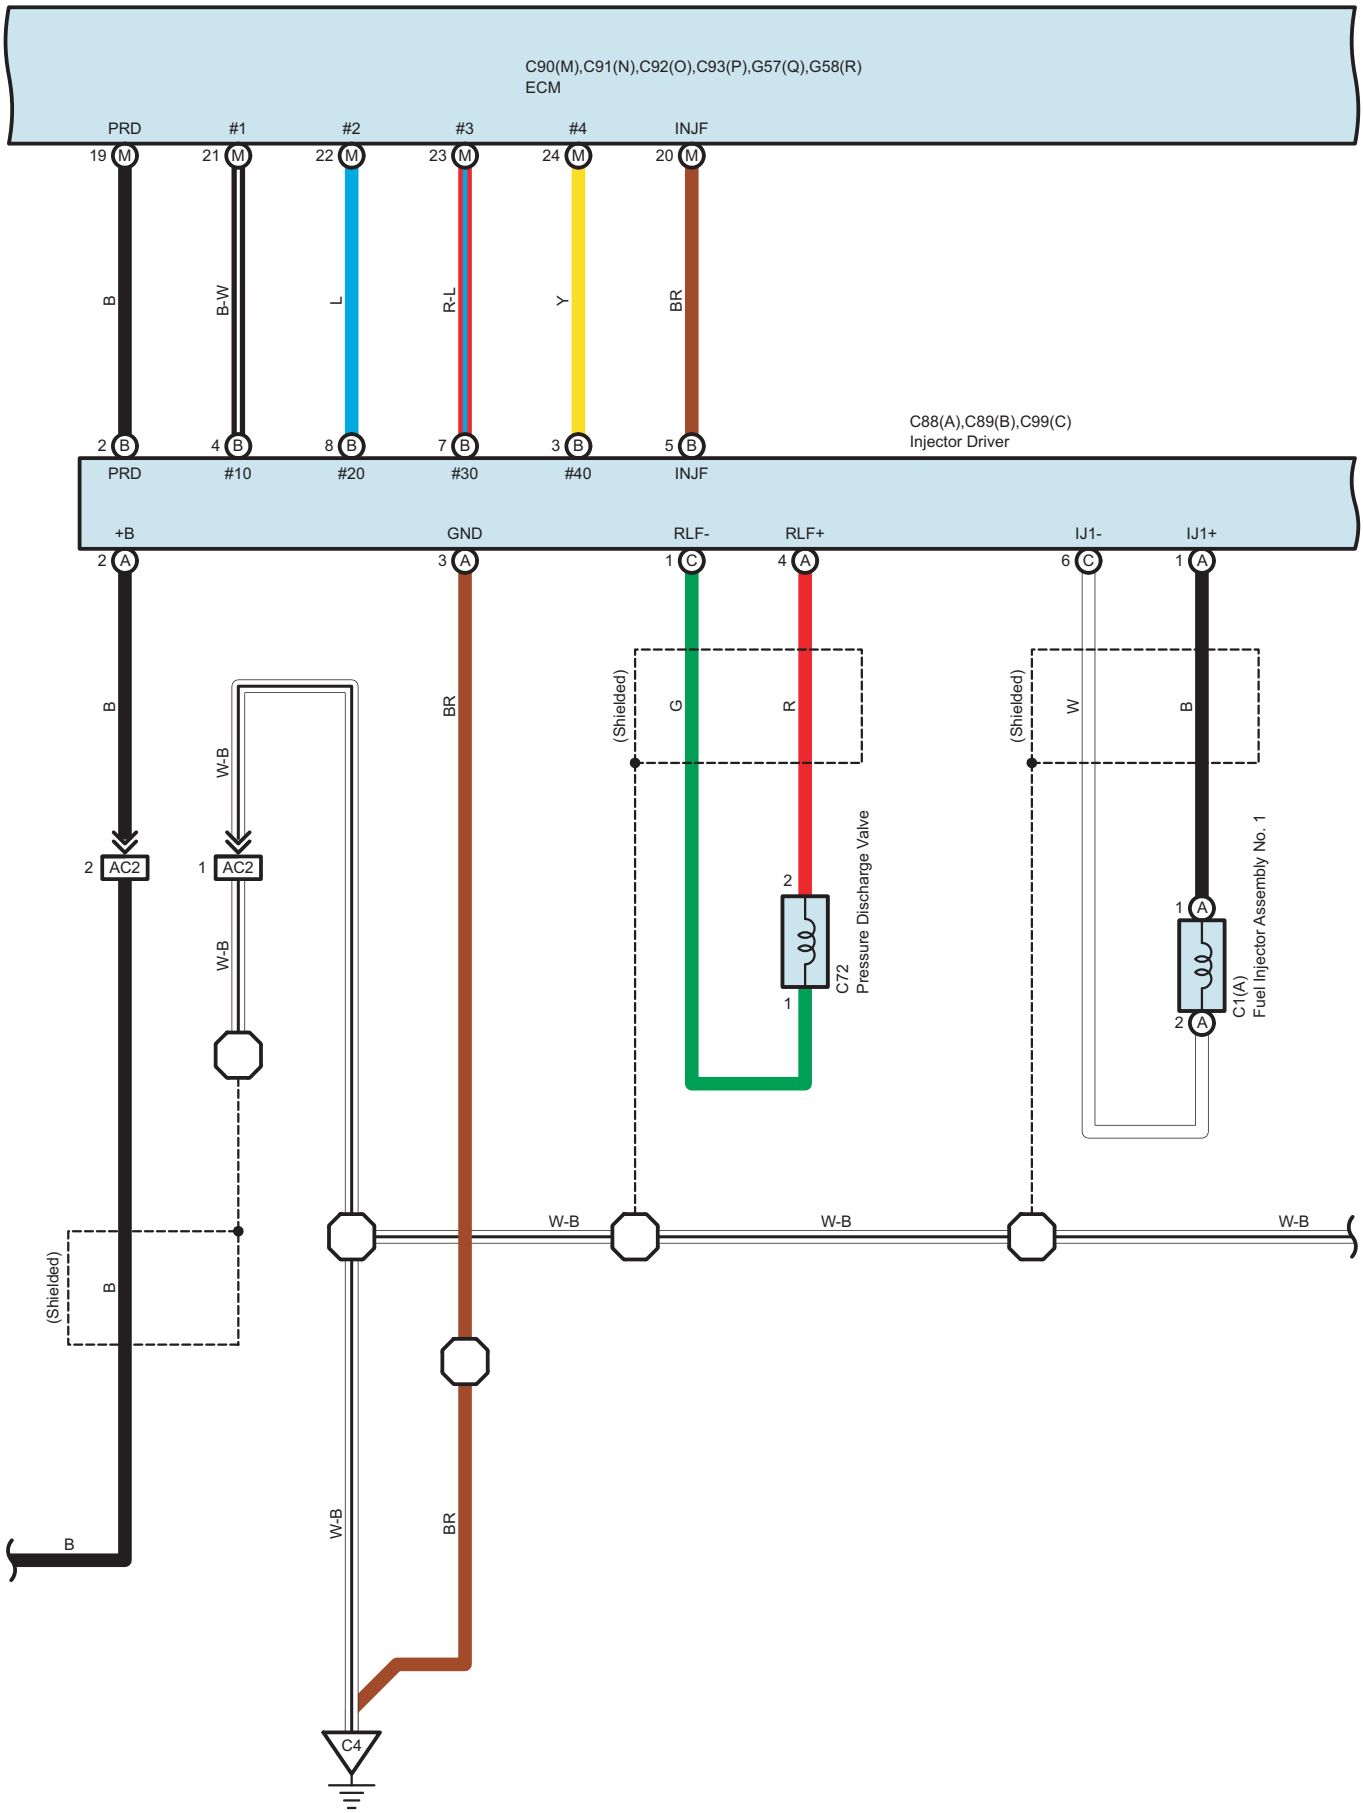


*1 :w/ Fuel Sub Tank



C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
ETHA
VG
EVG
THA
ACM
SCV2
ECBV
SCV
12 M
17 M
18 M
6 M
10 Q
3 P
4 P
2 P
BR
W
B-W
Y-B
B
L-B
L-Y
B-W
16 CG2
LG-B
2
5
4
1
2
1
2
1
E2
FG
E2G
THA
+B
3
C33
Intake Mass Air Flow Meter Sub-Assembly
C80
VSV (for Engine Mounting)
C79
VSV (for No. 2 Swirl Control Valve)
C142
No. 2 EGR Valve Assembly
C143
VSV (for No. 1 Swirl Control Valve)
R-B
B



C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
EGRC
EGR
PCV+
PCV-
LUSL
VCVL
EVLU
VLU
9 O
9 P
23 O
12 O
15 O
8 N
9 N
3 N
P-L
W-R
W
B
L-R
R
W
LG
2
1
C77
VSV (for EGR Cut)
C76
Electric Vacuum Regulating Valve Assembly
C71
Suction Control Valve
1 B
1 A
2 A
3 A
RSO
VC
E2
VTA
B
RSC
2 B
3 B
C73(A),C74(B)
Diesel Throttle Body Assembly
R-B
R-B
R-B
R-B
W-B
W-B
B
B
C4



C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
PRD
#1
#2
#3
#4
INJF
19 M
21 M
22 M
23 M
24 M
20 M
B
B-W
L
R-L
Y
BR
2 B
4 B
8 B
7 B
3 B
5 B
C88(A),C89(B),C99(C)
Injector Driver
PRD
#10
#20
#30
#40
INJF
+B
GND
RLF-
RLF+
IJ1-
IJ1+
2 A
3 A
1 C
4 A
6 C
1 A
B
BR
W-B
G
R
W
B
(Shielded)
2 AC2
1 AC2
C72
Pressure Discharge Valve
C1(A)
Fuel Injector Assembly No. 1
W-B
W-B
W-B
(Shielded)
B
B
W-B
BR
C4


C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM

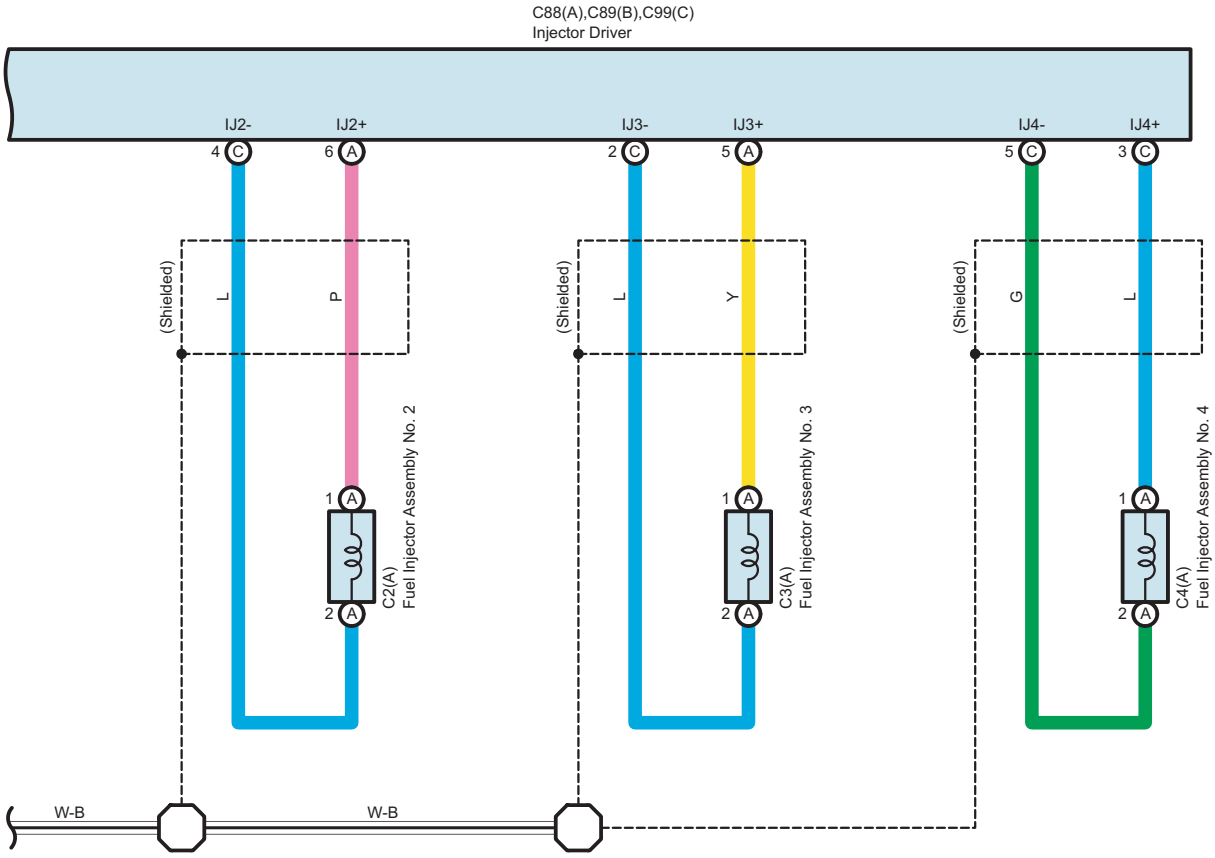


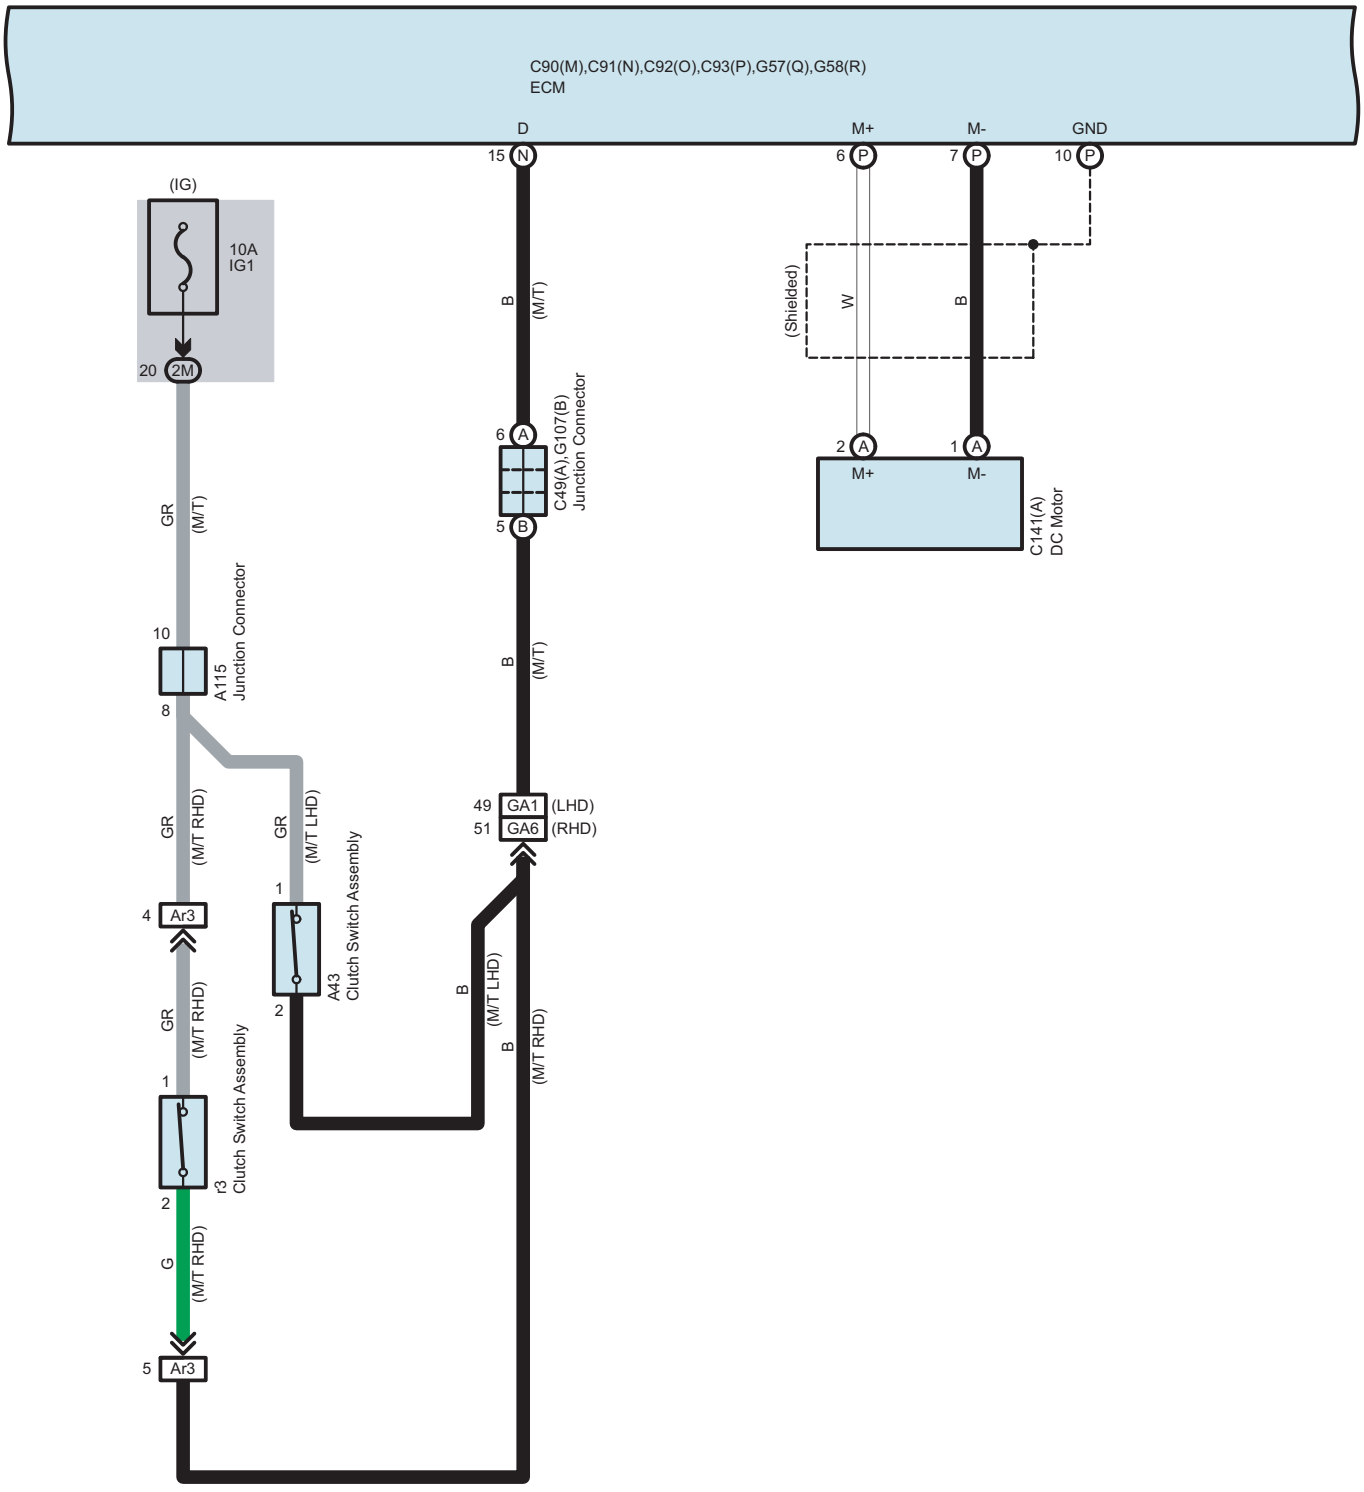

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
D
15 N
M+
6 P
M-
7 P
GND
10 P
(IG)
10A
IG1
20 2M
B
(M/T)
(Shielded)
W
B
6 A
C49(A),G107(B)
Junction Connector
5 B
2 A
M+
1 A
M-
C141(A)
DC Motor
GR
(M/T)
10
A115
Junction Connector
8
B
(M/T)
GR
(M/T RHD)
GR
(M/T LHD)
49 GA1 (LHD)
51 GA6 (RHD)
4 Ar3
1
A43
Clutch Switch Assembly
2
B
(M/T LHD)
B
(M/T RHD)
GR
(M/T RHD)
1
r3
Clutch Switch Assembly
2
G
(M/T RHD)
5 Ar3

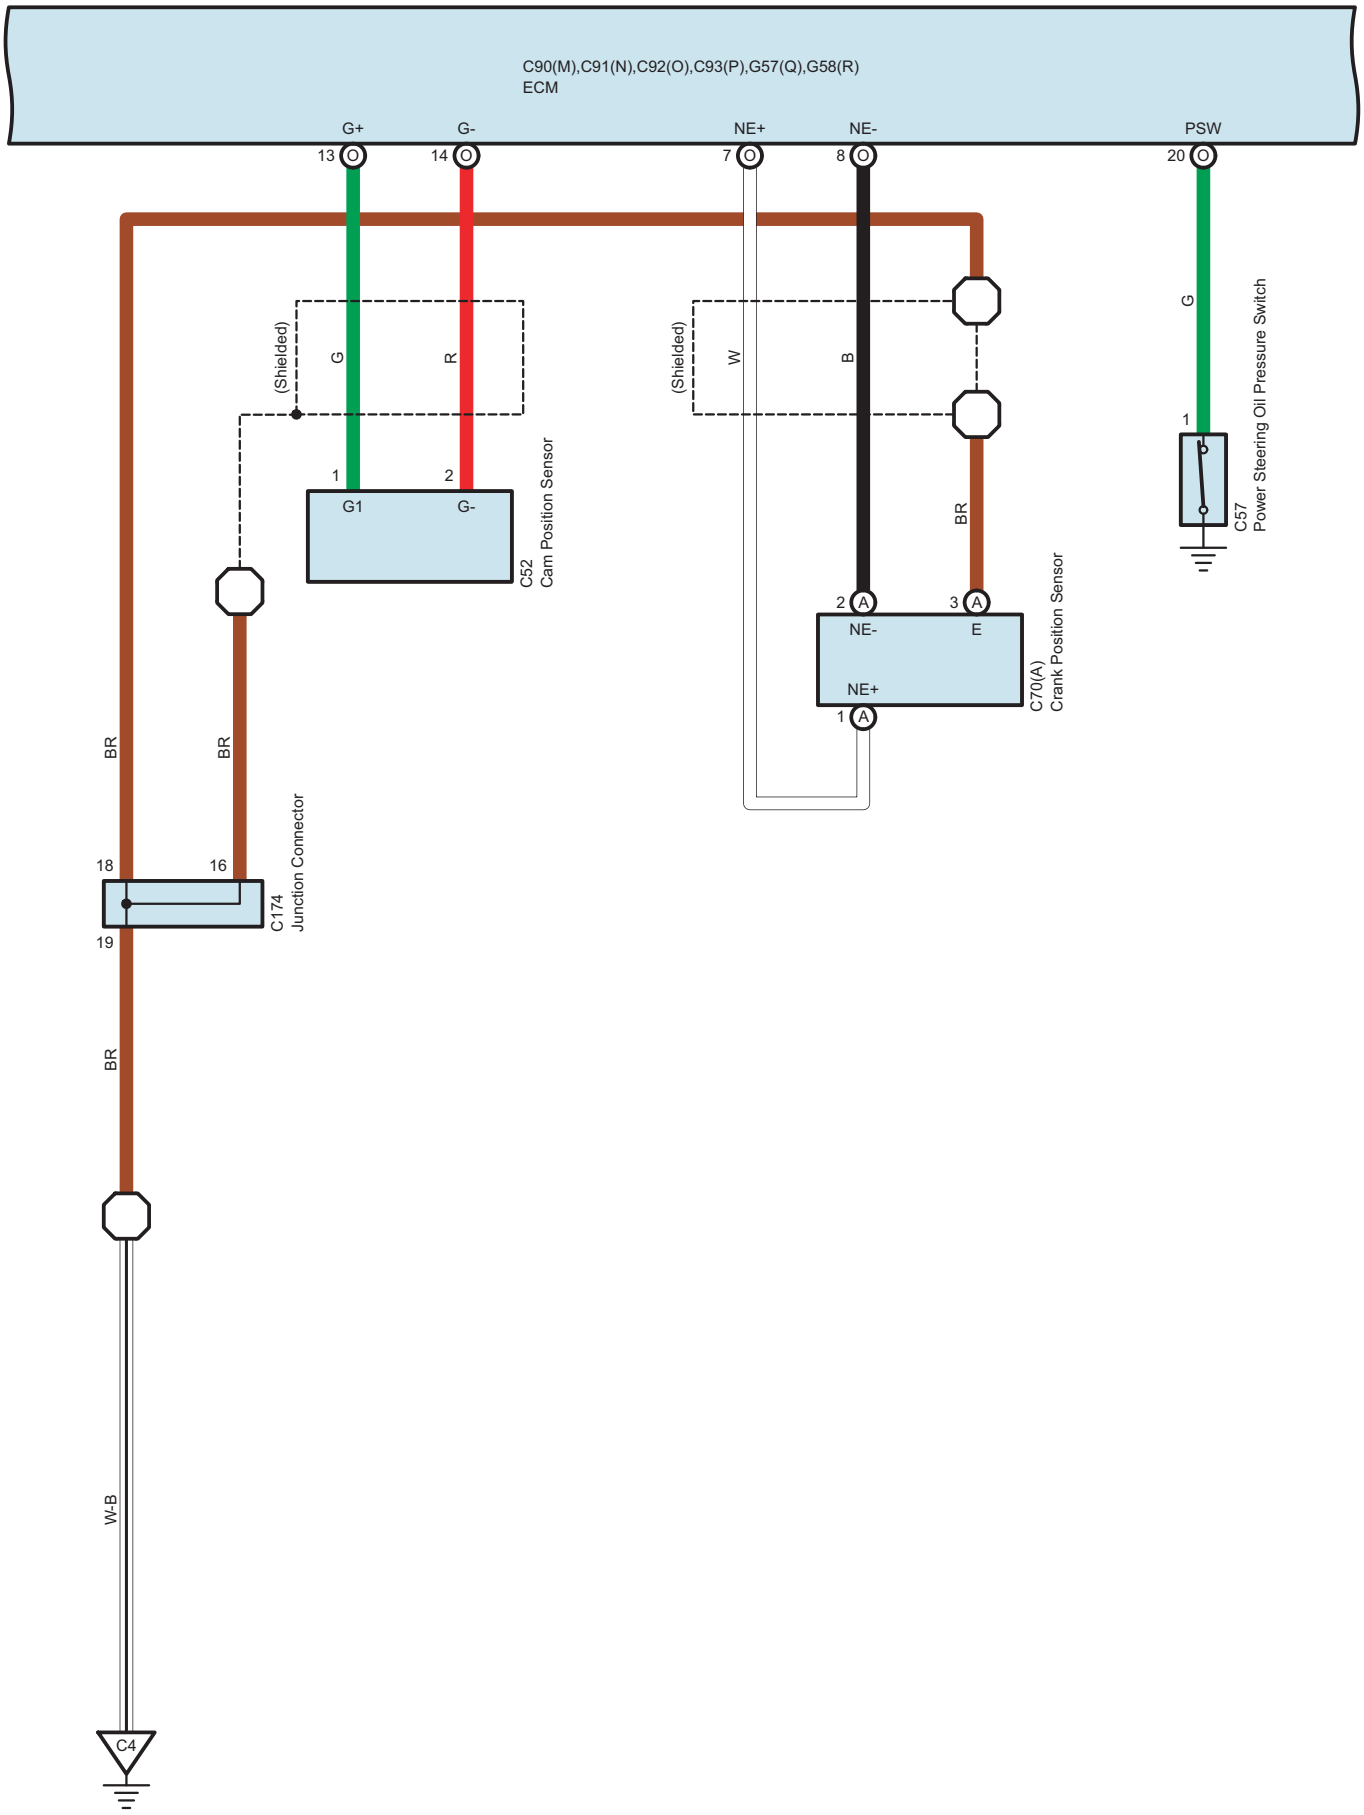
C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
G+
G-
NE+
NE-
PSW
13
14
7
8
20
(Shielded)
G
R
(Shielded)
W
B
G
1
2
G1
G-
C52
Cam Position Sensor
BR
2
3
NE-
E
NE+
1
C70(A)
Crank Position Sensor
1
C57
Power Steering Oil Pressure Switch
BR
BR
18
16
19
C174
Junction Connector
BR
W-B
C4

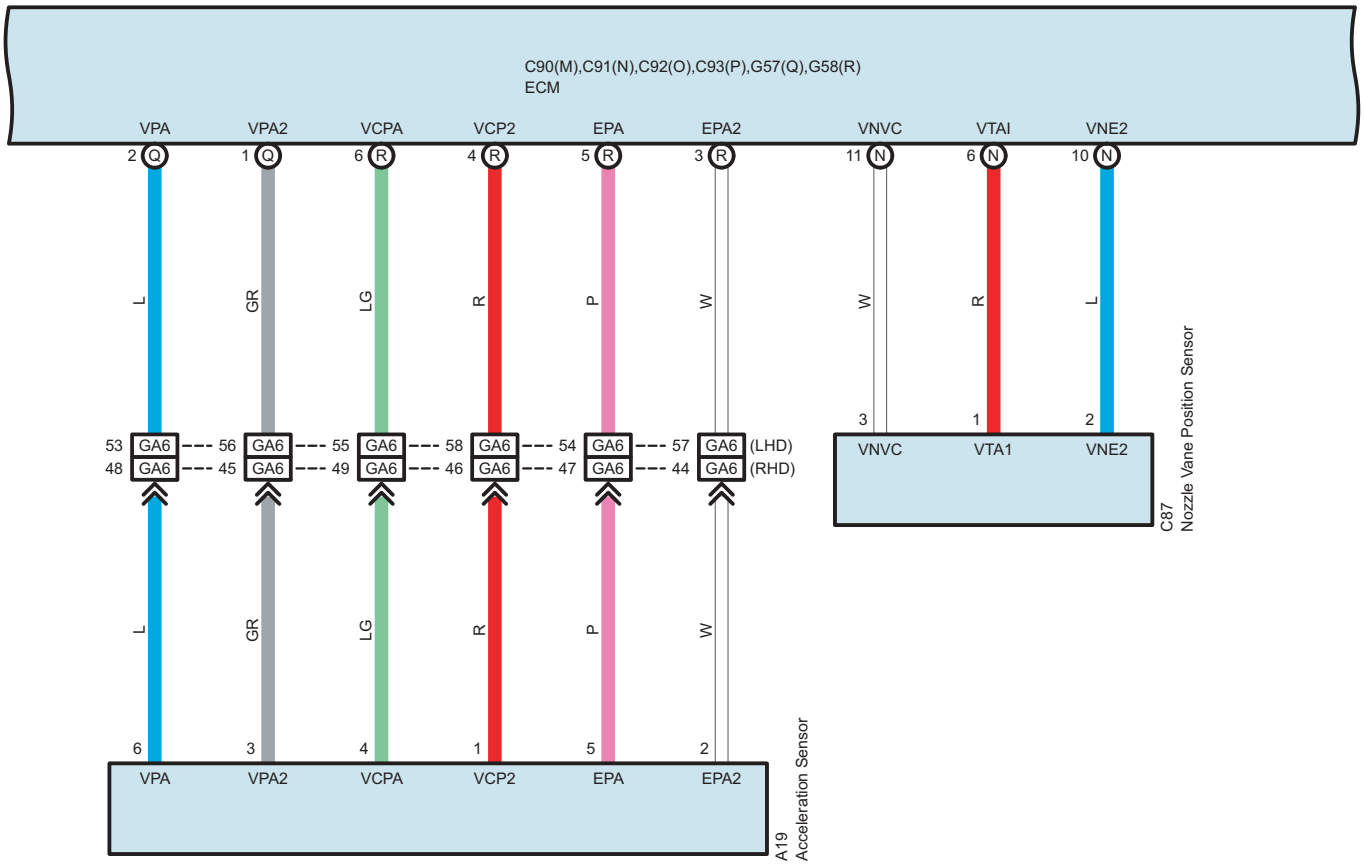

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
VPA
VPA2
VCPA
VCP2
EPA
EPA2
VNVC
VTAI
VNE2
2 Q
1 Q
6 R
4 R
5 R
3 R
11 N
6 N
10 N
L
GR
LG
R
P
W
W
R
L
53 GA6
48 GA6
56 GA6
45 GA6
55 GA6
49 GA6
58 GA6
46 GA6
54 GA6
47 GA6
57 GA6
44 GA6
(LHD)
(RHD)
3
1
2
VNVC
VTA1
VNE2
C87
Nozzle Vane Position Sensor
6
3
4
1
5
2
VPA
VPA2
VCPA
VCP2
EPA
EPA2
A19
Acceleration Sensor

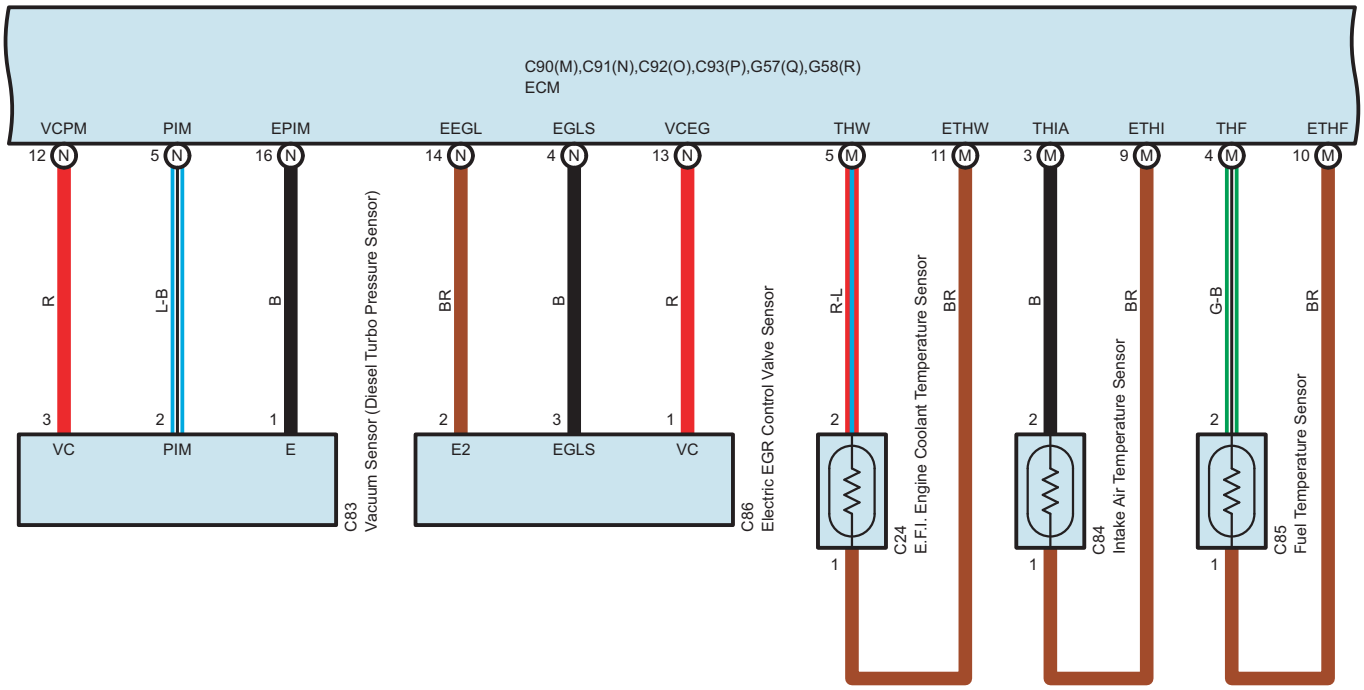

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
VCPM
PIM
EPIM
EEGL
EGLS
VCEG
THW
ETHW
THIA
ETHI
THF
ETHF
12 N
5 N
16 N
14 N
4 N
13 N
5 M
11 M
3 M
9 M
4 M
10 M
R
L-B
B
BR
B
R
R-L
BR
B
BR
G-B
BR
3
2
1
2
3
1
2
1
2
1
2
1
VC
PIM
E
E2
EGLS
VC
C83
Vacuum Sensor (Diesel Turbo Pressure Sensor)
C86
Electric EGR Control Valve Sensor
C24
E.F.I. Engine Coolant Temperature Sensor
C84
Intake Air Temperature Sensor
C85
Fuel Temperature Sensor

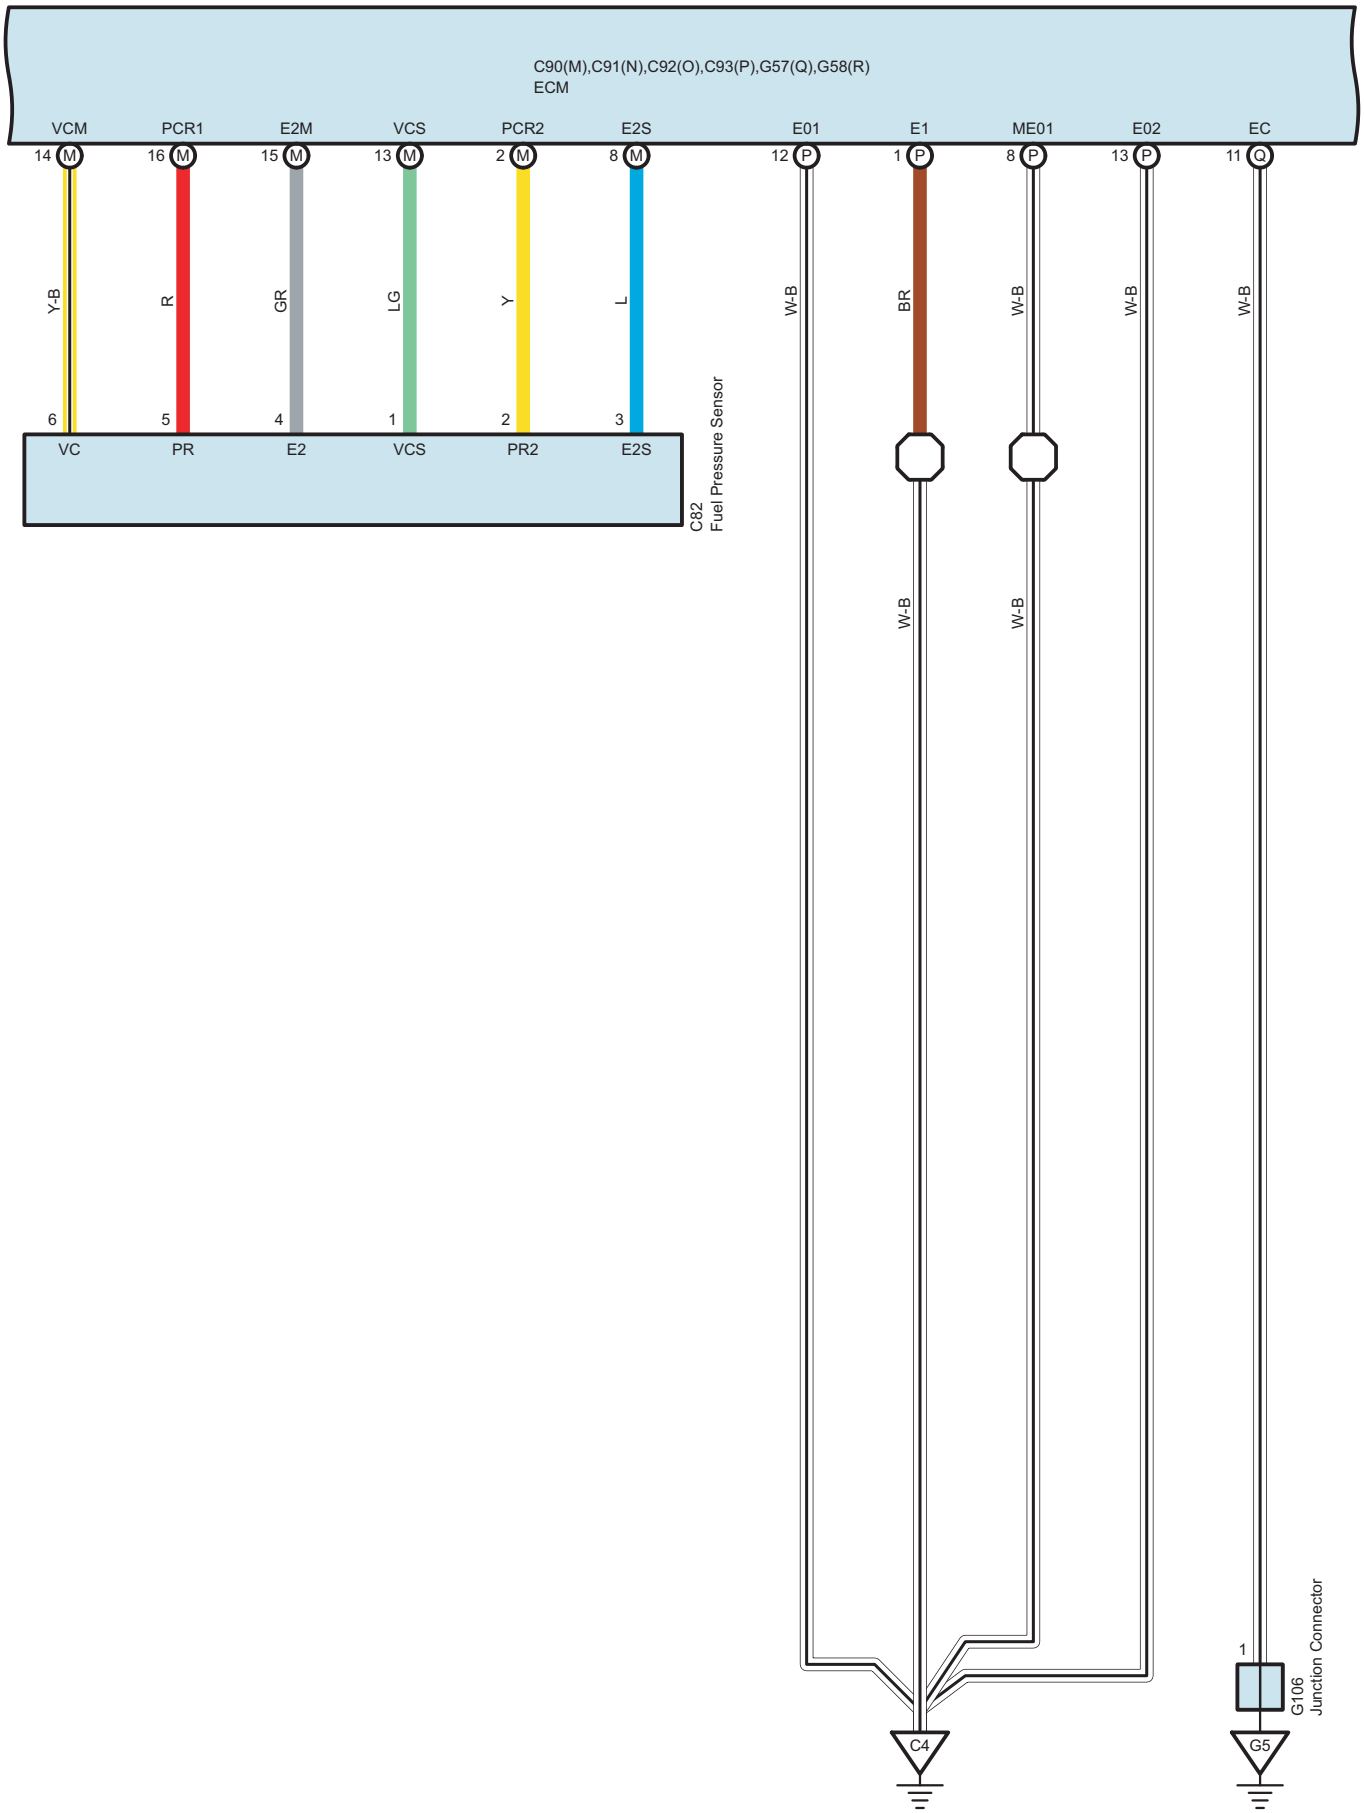

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
VCM
PCR1
E2M
VCS
PCR2
E2S
E01
E1
ME01
E02
EC
14 M
16 M
15 M
13 M
2 M
8 M
12 P
1 P
8 P
13 P
11 Q
Y-B
R
GR
LG
Y
L
W-B
BR
W-B
W-B
W-B
6
5
4
1
2
3
VC
PR
E2
VCS
PR2
E2S
C82
Fuel Pressure Sensor
W-B
W-B
C4
1
G106
Junction Connector
G5

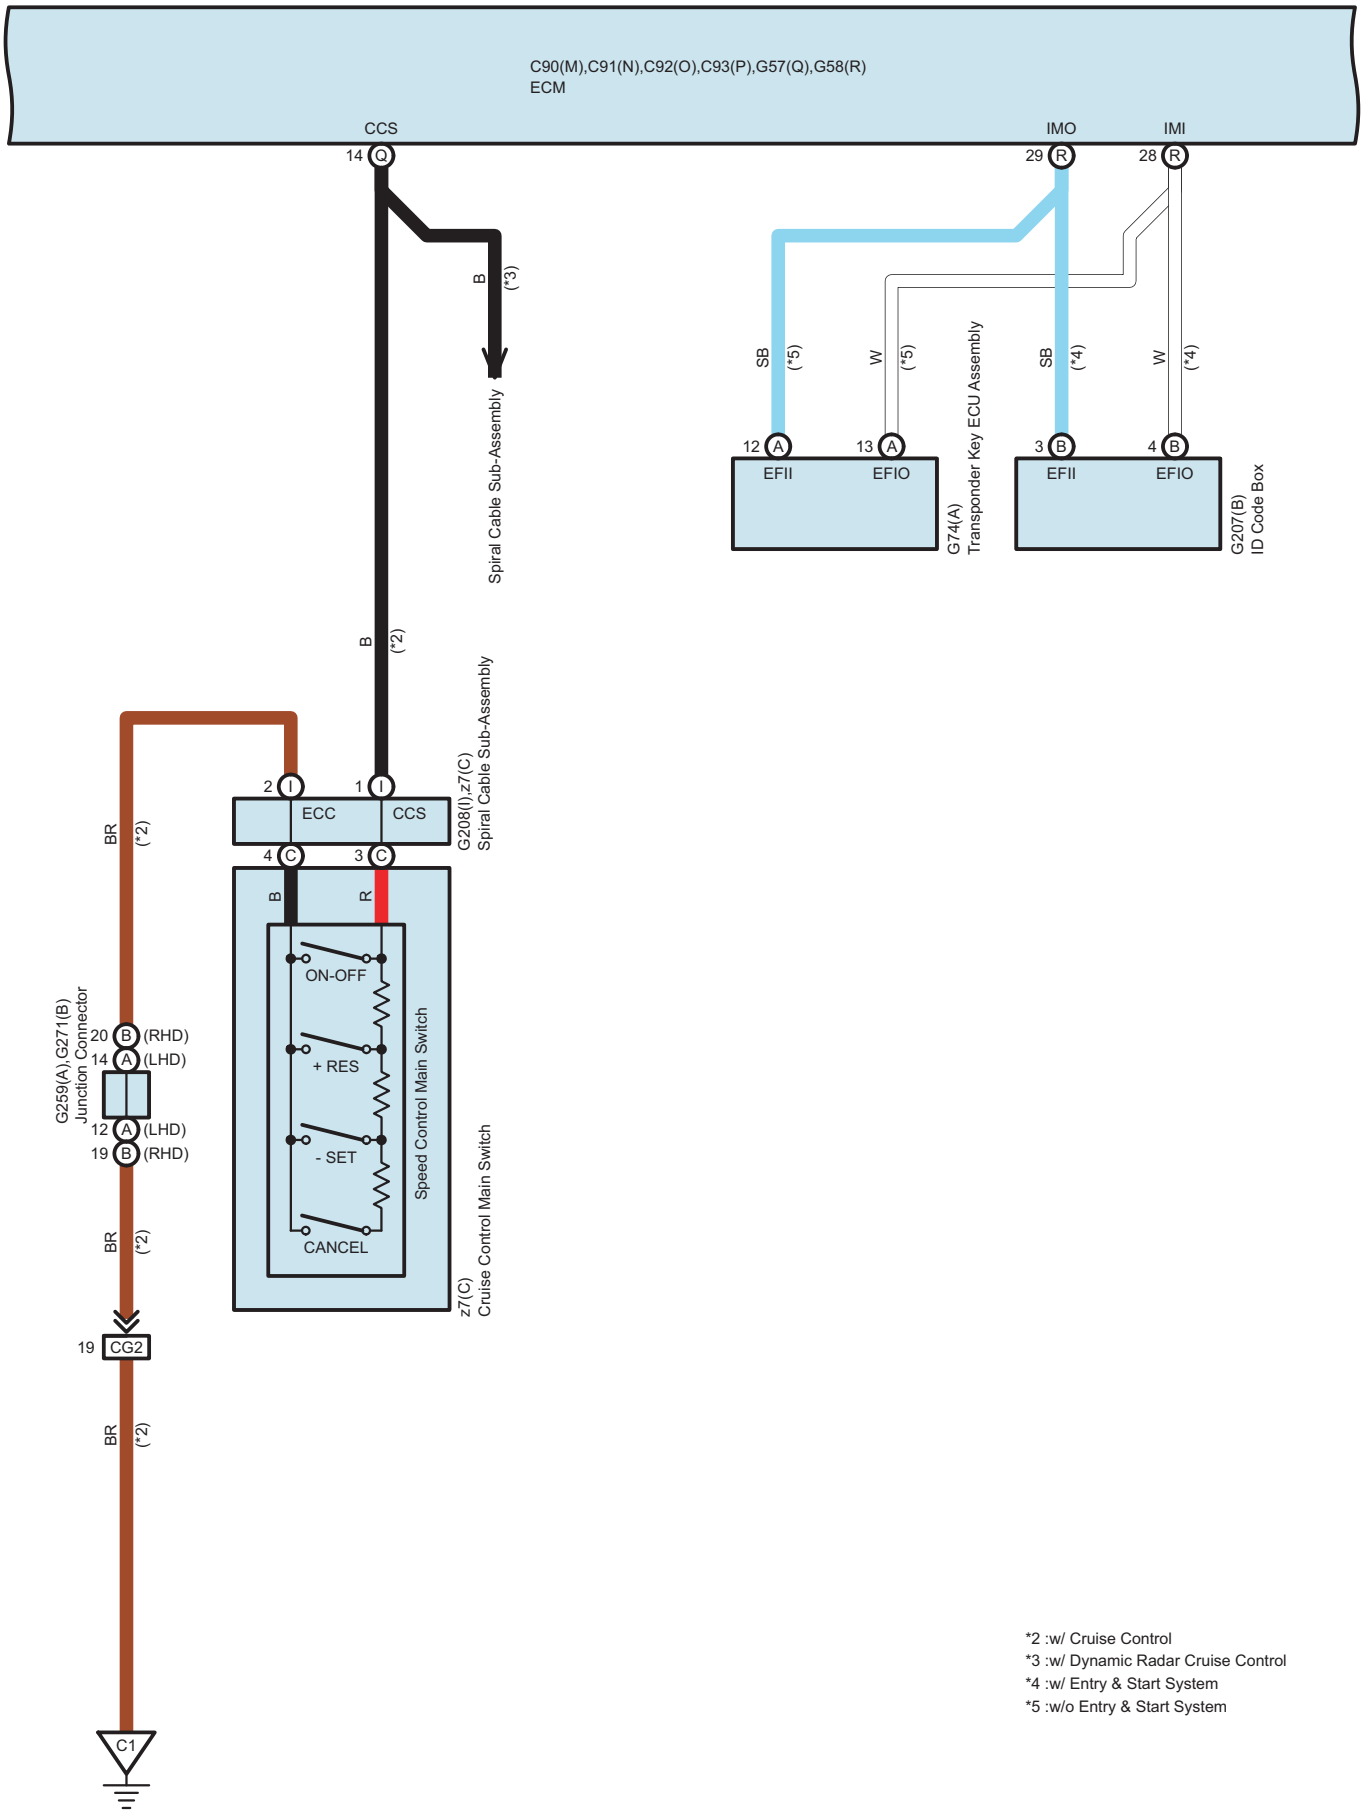



*2 :w/ Cruise Control
*3 :w/ Dynamic Radar Cruise Control
*4 :w/ Entry & Start System
*5 :w/o Entry & Start System

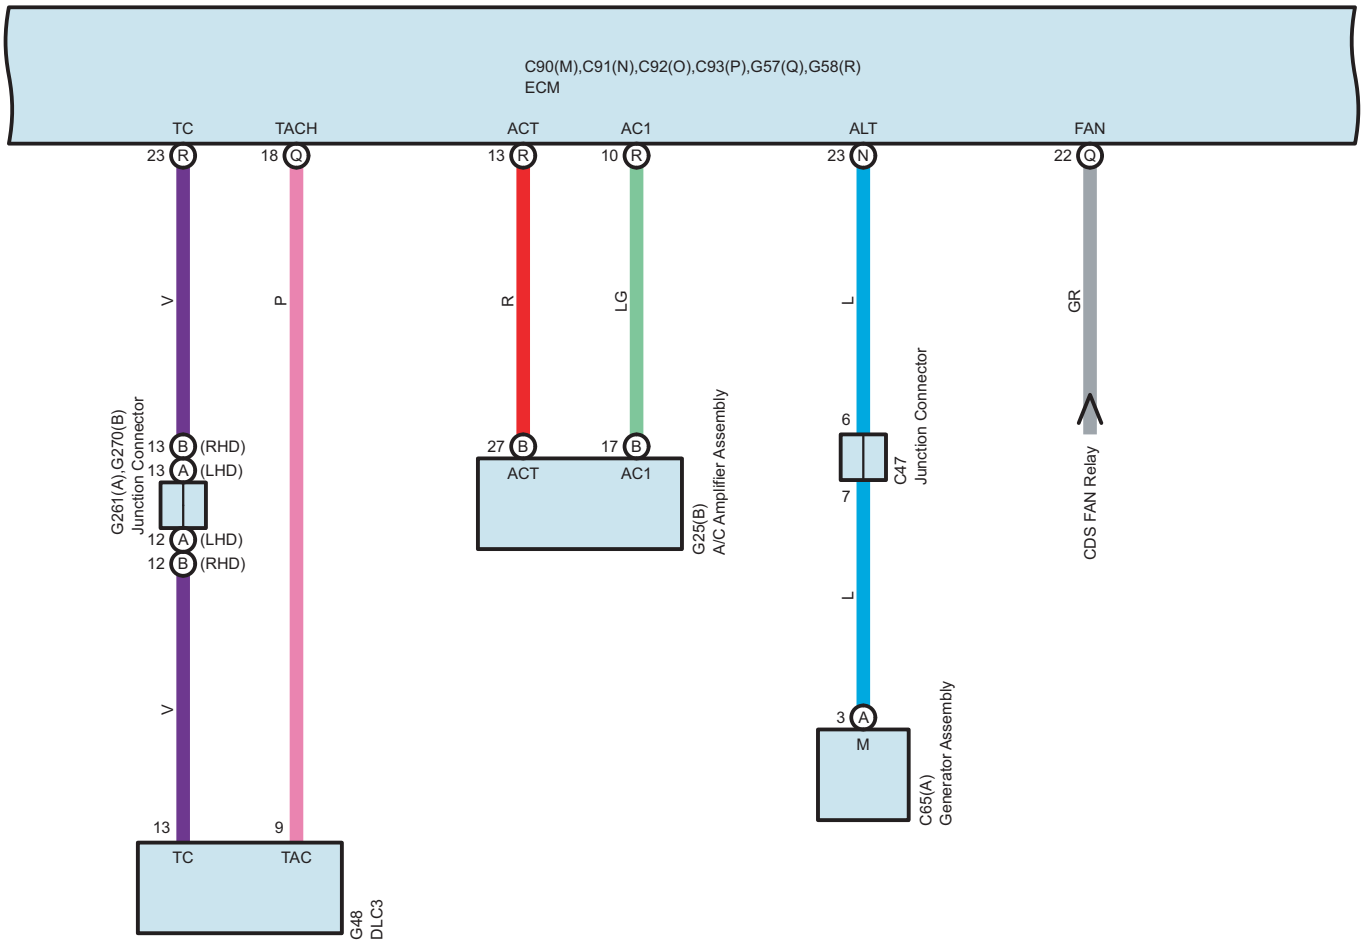

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
TC
TACH
ACT
AC1
ALT
FAN
23 R
18 Q
13 R
10 R
23 N
22 Q
V
P
R
LG
L
GR
G261(A),G270(B)
Junction Connector
13 B (RHD)
13 A (LHD)
12 A (LHD)
12 B (RHD)
27 B
17 B
ACT
AC1
G25(B)
A/C Amplifier Assembly
6
7
C47
Junction Connector
CDS FAN Relay
3 A
M
C65(A)
Generator Assembly
13
9
TC
TAC
G48
DLC3

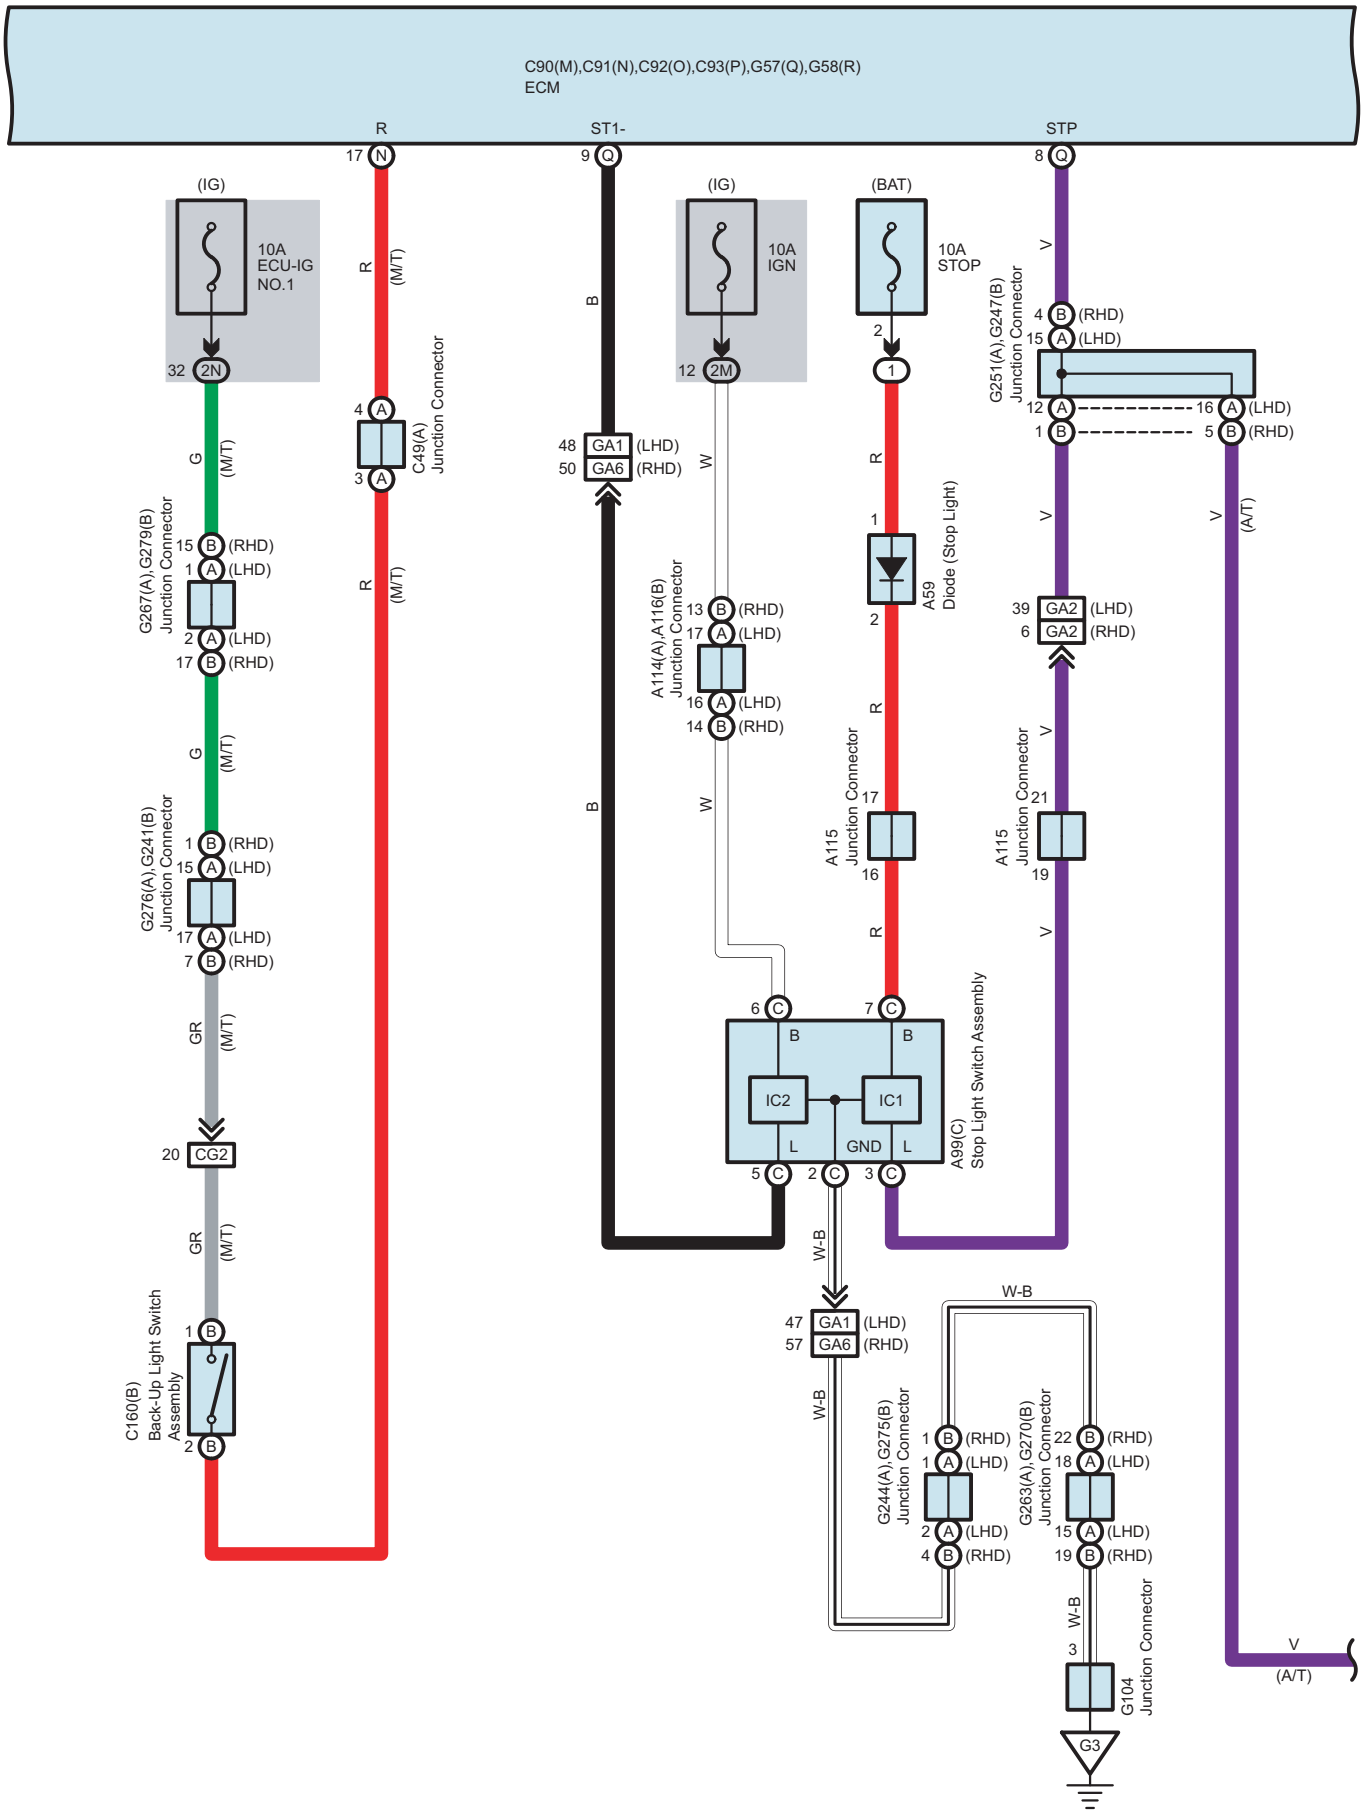

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
R
ST1-
STP
17 N
9 Q
8 Q
(IG)
10A
ECU-IG
NO.1
32 2N
(IG)
10A
IGN
12 2M
(BAT)
10A
STOP
2
1
R
(M/T)
B
V
4 A
3 A
C49(A)
Junction Connector
48 GA1 (LHD)
50 GA6 (RHD)
W
R
1
2
A59
Diode (Stop Light)
4 B (RHD)
15 A (LHD)
G251(A),G247(B)
Junction Connector
12 A
1 B
16 A (LHD)
5 B (RHD)
V
(A/T)
G267(A),G279(B)
Junction Connector
15 B (RHD)
1 A (LHD)
2 A (LHD)
17 B (RHD)
G
(M/T)
A114(A),A116(B)
Junction Connector
13 B (RHD)
17 A (LHD)
16 A (LHD)
14 B (RHD)
39 GA2 (LHD)
6 GA2 (RHD)
A115
Junction Connector
17
16
21
19
G276(A),G241(B)
Junction Connector
1 B (RHD)
15 A (LHD)
17 A (LHD)
7 B (RHD)
GR
(M/T)
6 C
7 C
B
IC2
IC1
L
GND
L
5 C
2 C
3 C
A99(C)
Stop Light Switch Assembly
20 CG2
W-B
47 GA1 (LHD)
57 GA6 (RHD)
C160(B)
Back-Up Light Switch
Assembly
1 B
2 B
G244(A),G275(B)
Junction Connector
1 B (RHD)
1 A (LHD)
2 A (LHD)
4 B (RHD)
G263(A),G270(B)
Junction Connector
22 B (RHD)
18 A (LHD)
15 A (LHD)
19 B (RHD)
G104
Junction Connector
3
G3

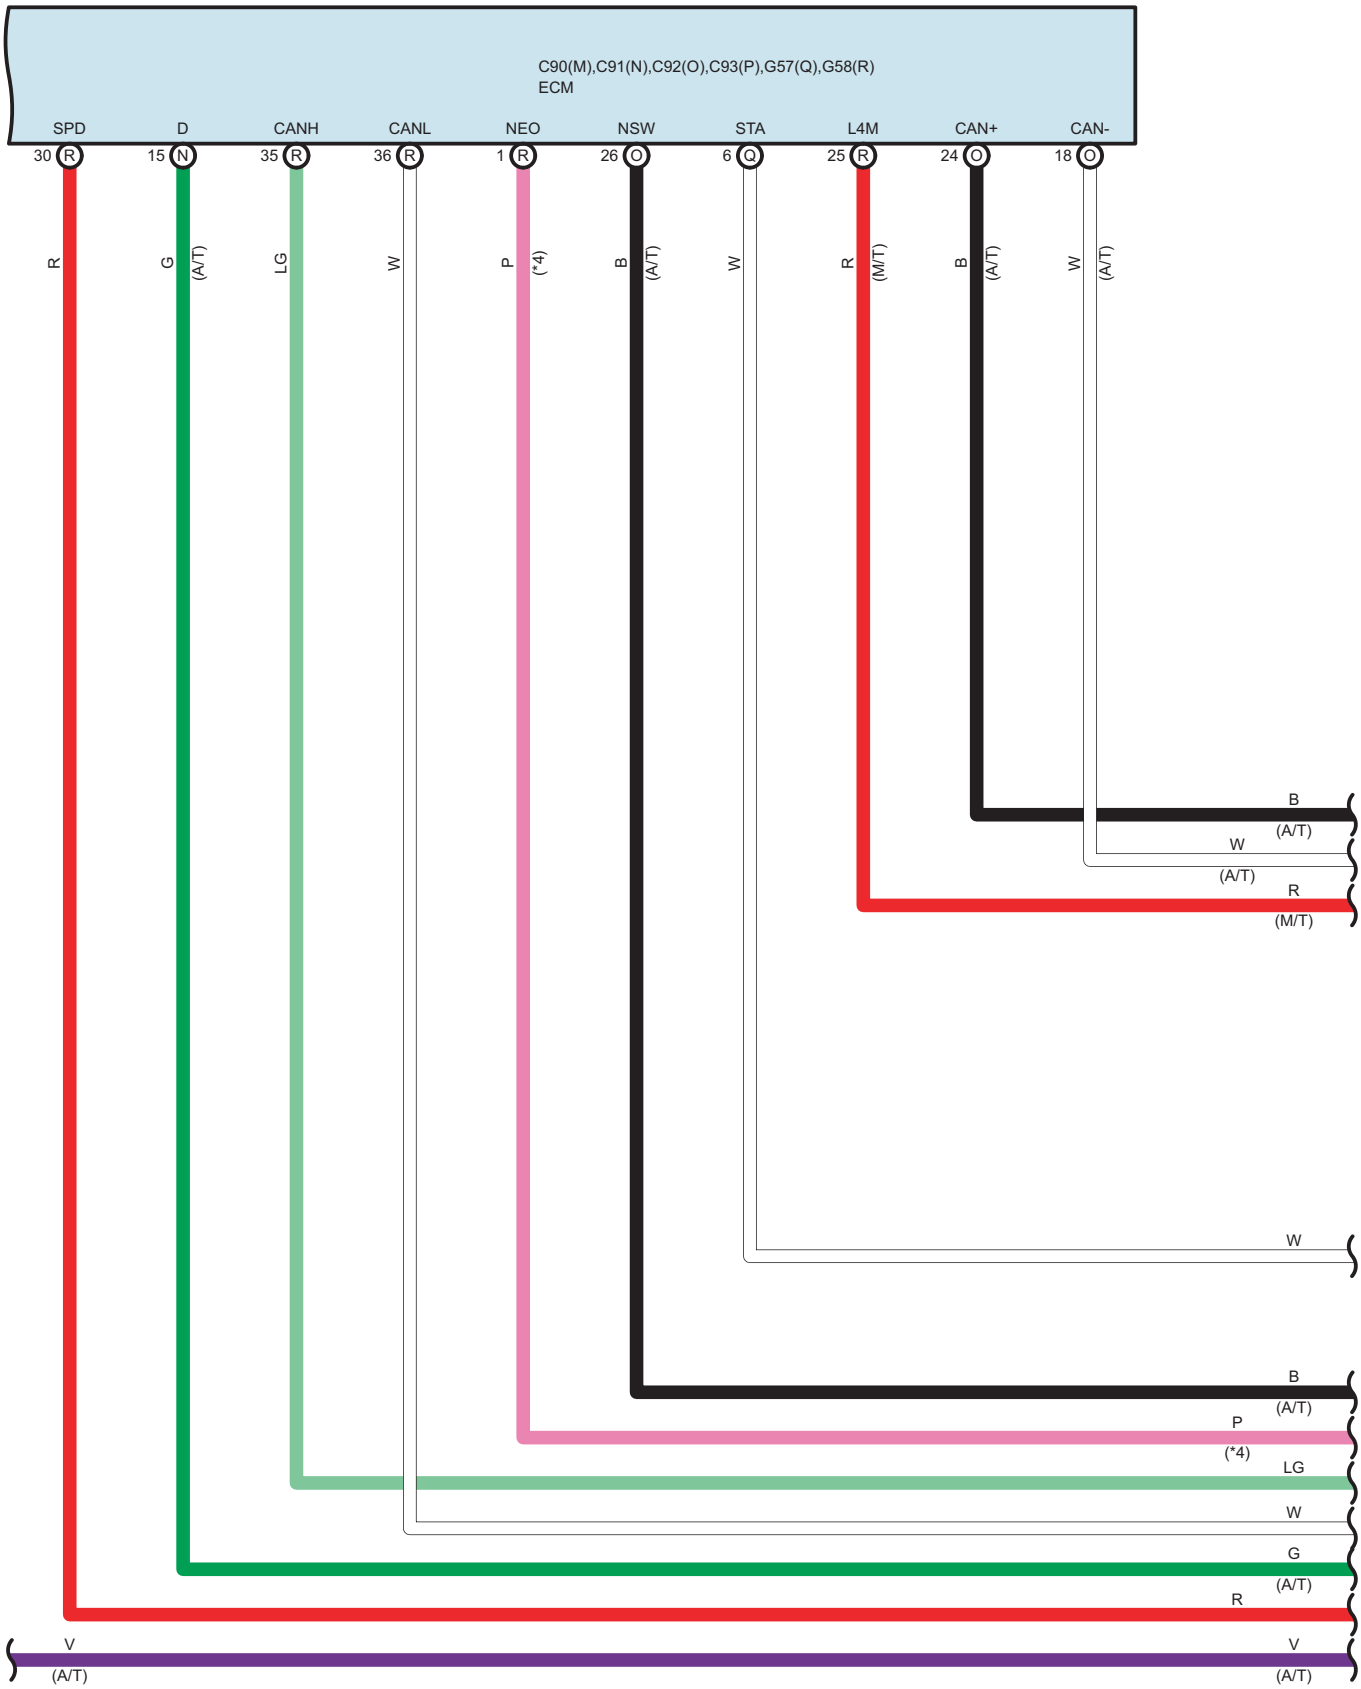

C90(M),C91(N),C92(O),C93(P),G57(Q),G58(R)
ECM
SPD
D
CANH
CANL
NEO
NSW
STA
L4M
CAN+
CAN-
30 R
15 N
35 R
36 R
1 R
26 O
6 Q
25 R
24 O
18 O
R
G
(A/T)
LG
W
P
(*4)
B
(A/T)
W
R
(M/T)
B
(A/T)
W
(A/T)
B
(A/T)
W
P
(*4)
LG
W
G
(A/T)
R
V
(A/T)
V
(A/T)

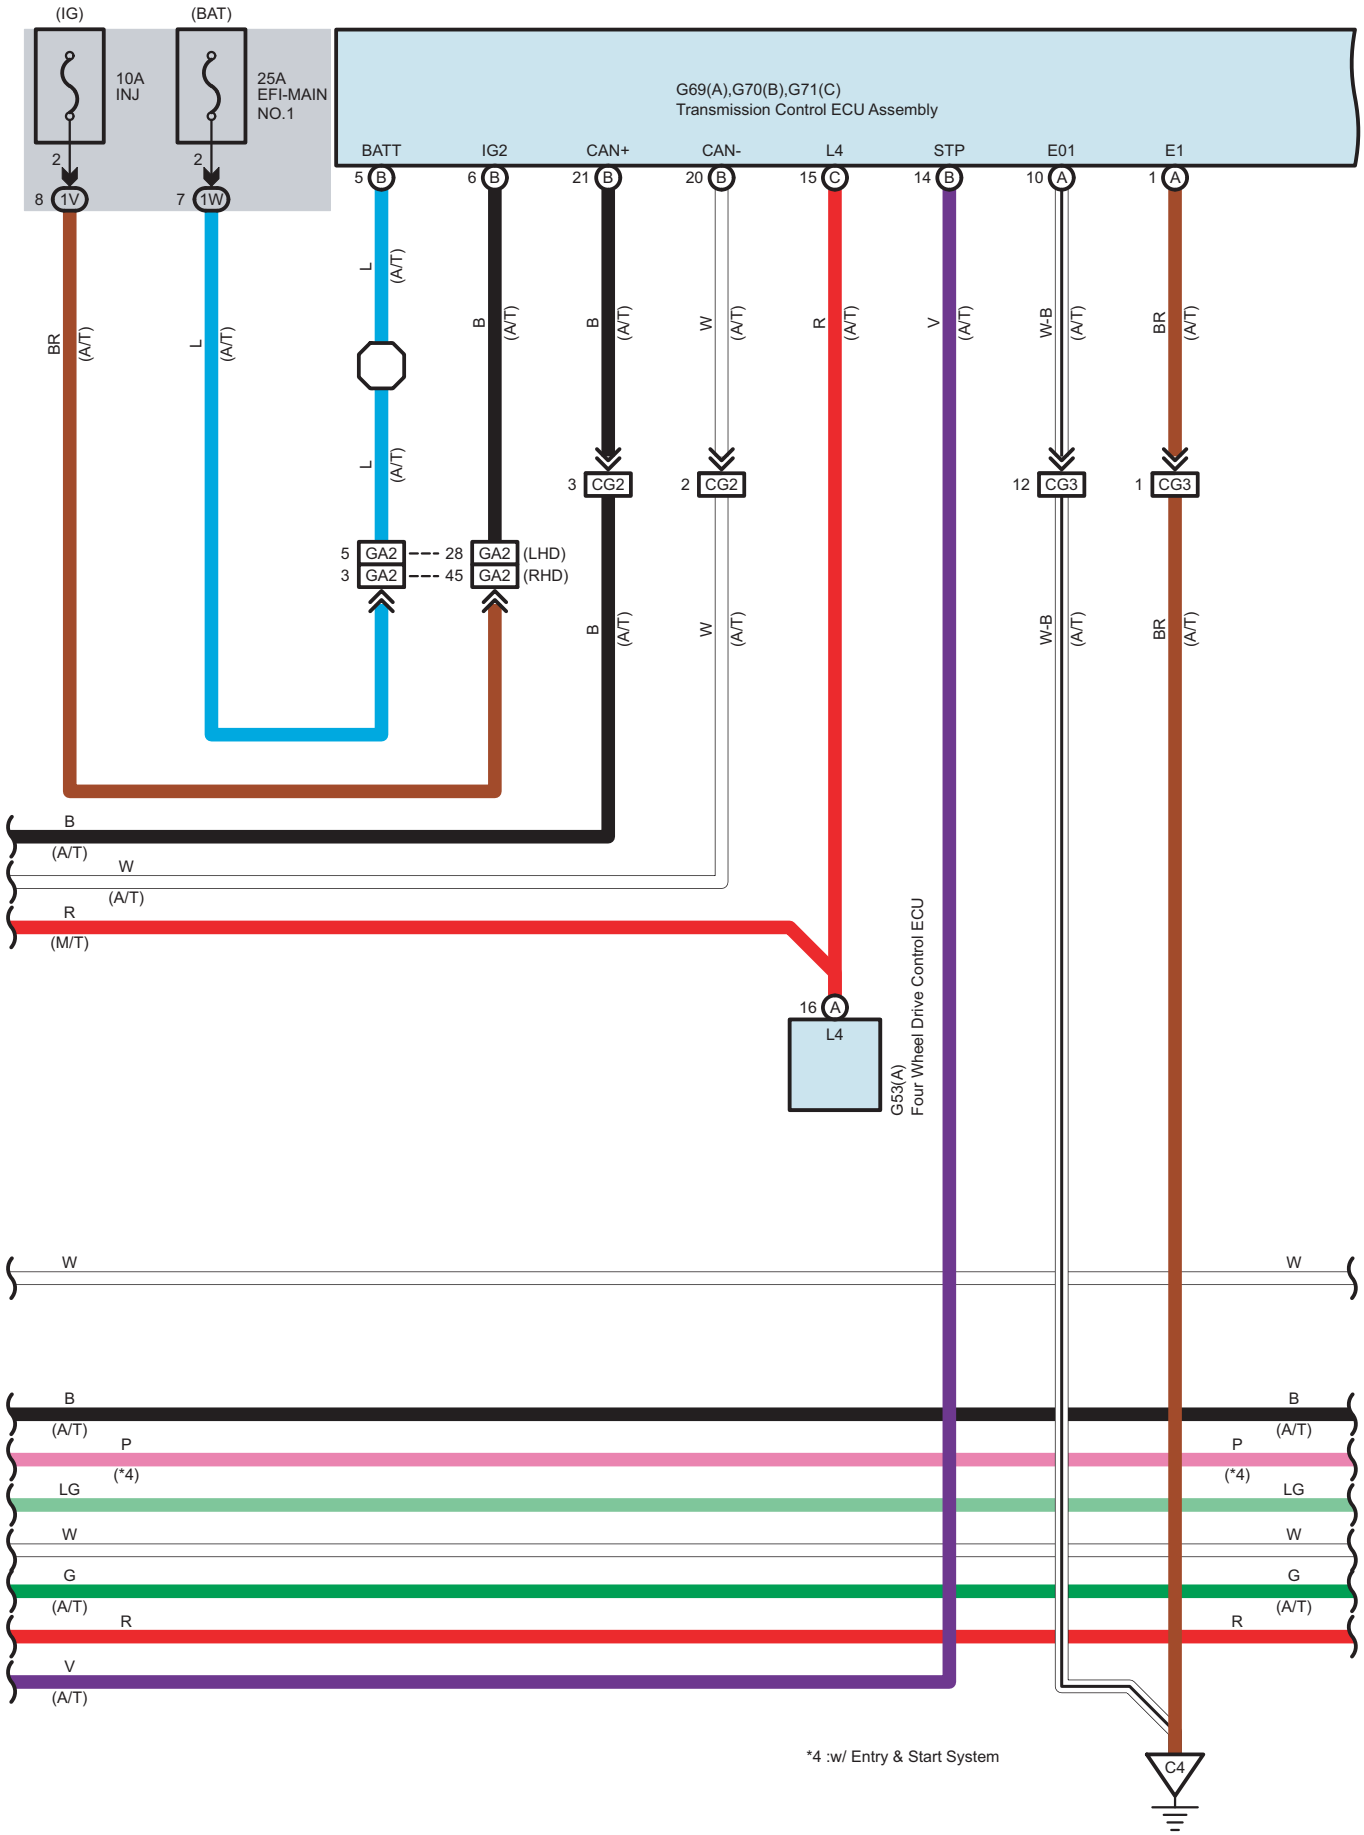
(IG)
(BAT)
10A
INJ
25A
EFI-MAIN
NO.1
G69(A),G70(B),G71(C)
Transmission Control ECU Assembly
BATT
IG2
CAN+
CAN-
L4
STP
E01
E1
5 B
6 B
21 B
20 B
15 C
14 B
10 A
1 A
8 1V
7 1W
2
2
BR (A/T)
L (A/T)
L (A/T)
B (A/T)
B (A/T)
W (A/T)
R (A/T)
V (A/T)
W-B (A/T)
BR (A/T)
3 CG2
2 CG2
12 CG3
1 CG3
5 GA2
3 GA2
28 GA2 (LHD)
45 GA2 (RHD)
B (A/T)
W (A/T)
R (M/T)
16 A
L4
G53(A)
Four Wheel Drive Control ECU
W
W
B (A/T)
P (*4)
LG
W
G (A/T)
R
V (A/T)
B (A/T)
P (*4)
LG
W
G (A/T)
R
*4 :w/ Entry & Start System
C4

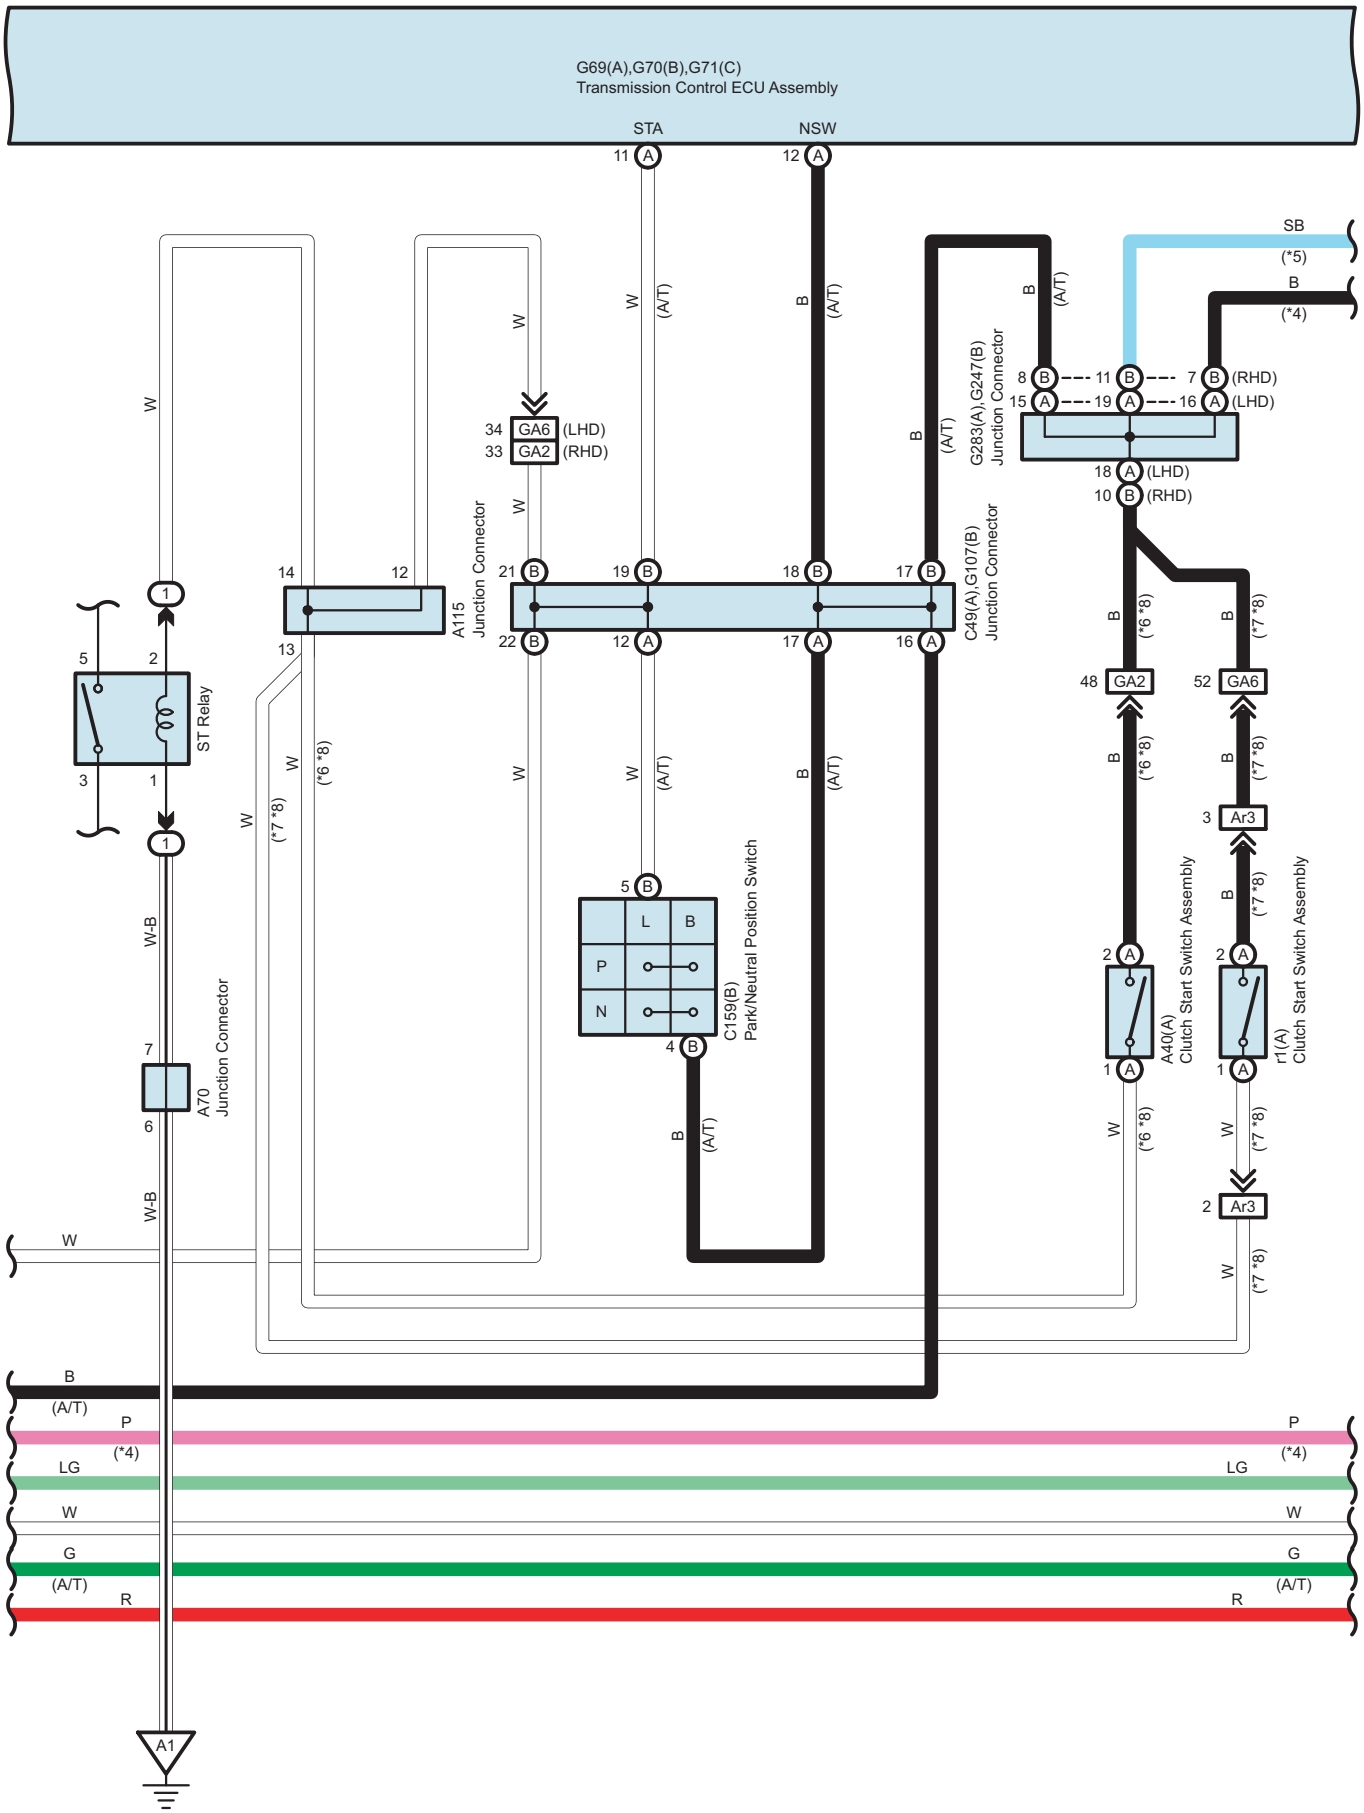

G69(A),G70(B),G71(C)
Transmission Control ECU Assembly
STA
NSW
11 A
12 A
W
(A/T)
B
(A/T)
SB
(*5)
B
(*4)
8 B
11 B
7 B (RHD)
15 A
19 A
16 A (LHD)
G283(A),G247(B)
Junction Connector
18 A (LHD)
10 B (RHD)
34 GA6 (LHD)
33 GA2 (RHD)
W
21 B
19 B
18 B
17 B
22 B
12 A
17 A
16 A
A115
Junction Connector
C49(A),G107(B)
Junction Connector
14
12
13
1
5
2
3
1
ST Relay
(*6 *8)
(*7 *8)
48 GA2
52 GA6
3 Ar3
2 A
1 A
A40(A)
Clutch Start Switch Assembly
r1(A)
Clutch Start Switch Assembly
5 B
L B
P
N
4 B
C159(B)
Park/Neutral Position Switch
7
6
A70
Junction Connector
W-B
W
B
(A/T)
P
(*4)
LG
G
R
A1

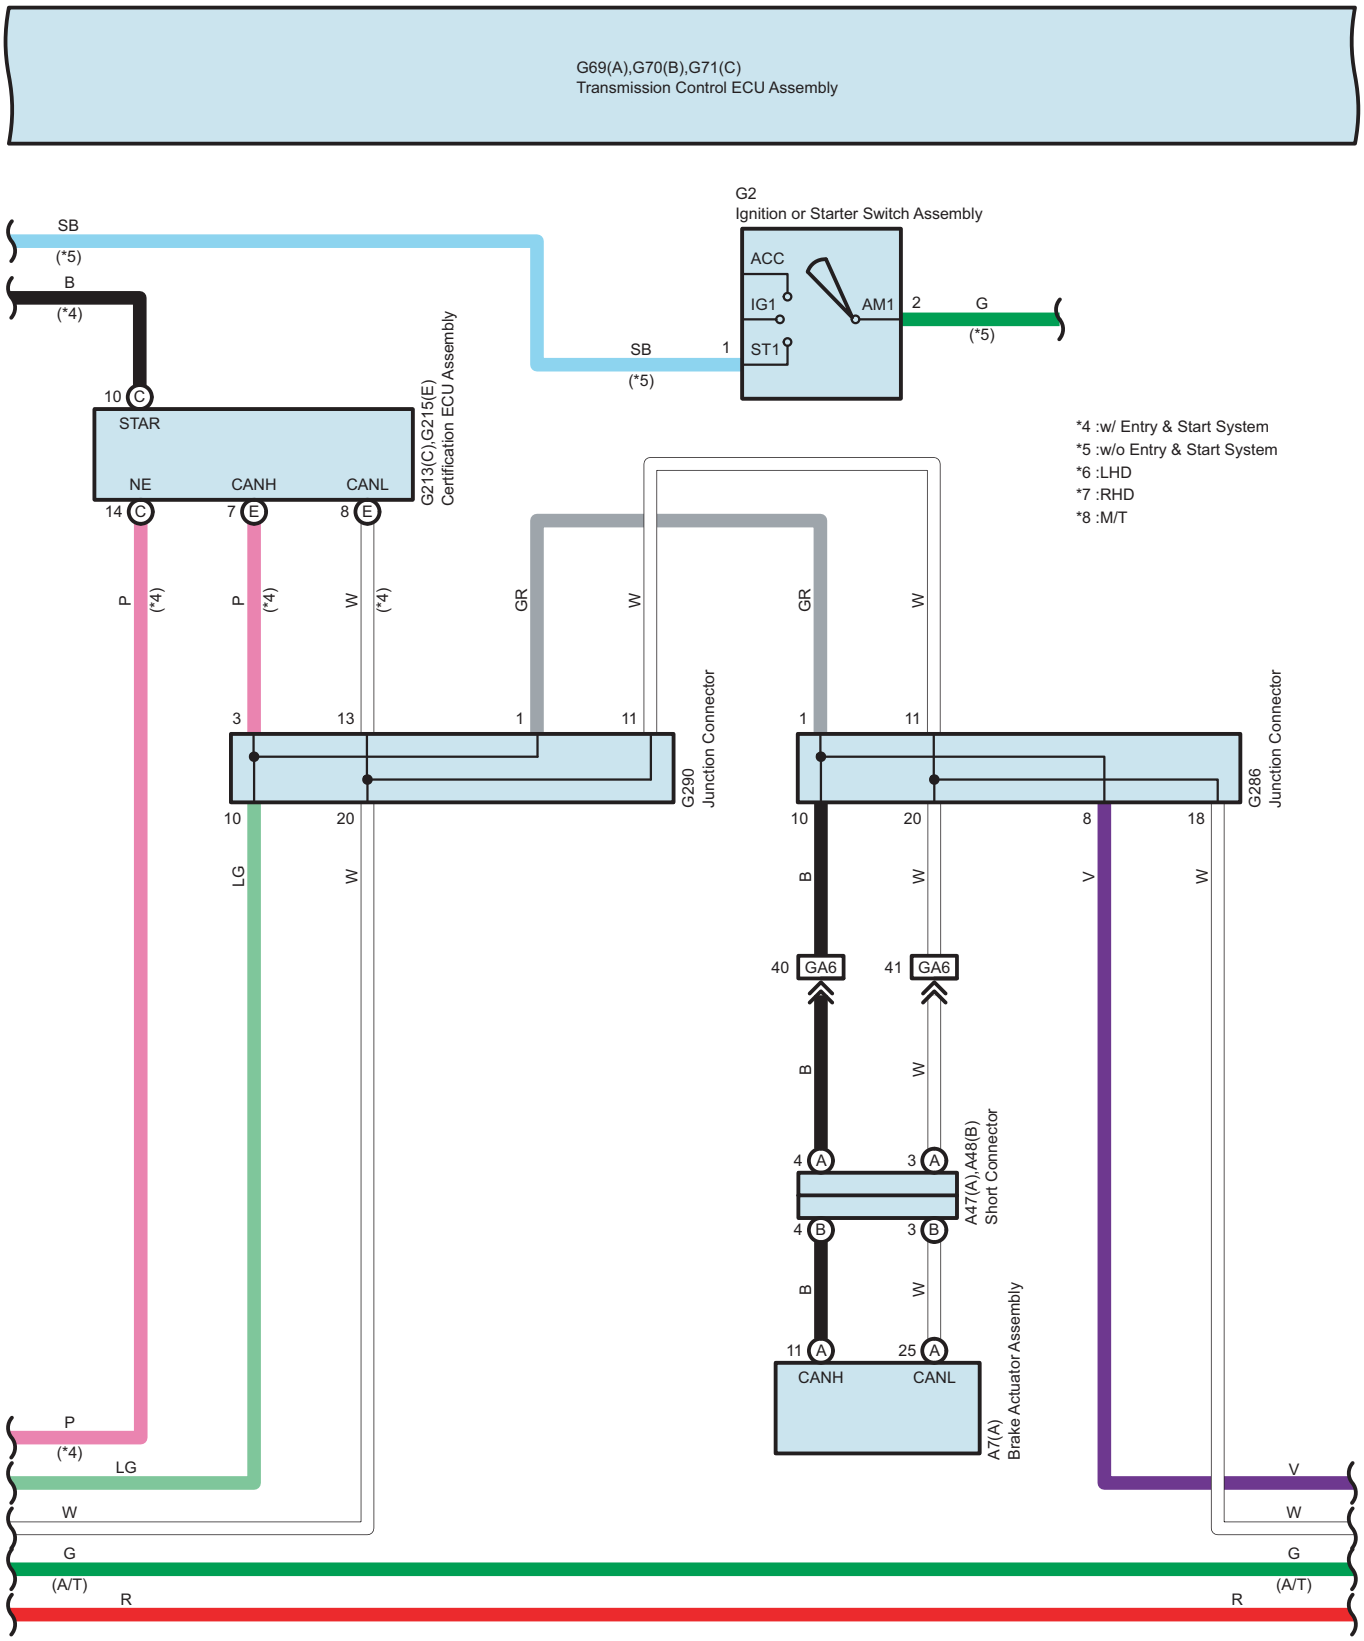

G69(A),G70(B),G71(C)
Transmission Control ECU Assembly
G2
Ignition or Starter Switch Assembly
ACC
IG1
ST1
AM1
SB
(*5)
B
(*4)
G
(*5)
10 C
STAR
NE
CANH
CANL
14 C
7 E
8 E
G213(C),G215(E)
Certification ECU Assembly
*4 :w/ Entry & Start System
*5 :w/o Entry & Start System
*6 :LHD
*7 :RHD
*8 :M/T
P
W
GR
G290
Junction Connector
G286
Junction Connector
LG
V
40 GA6
41 GA6
4 A
3 A
4 B
3 B
A47(A),A48(B)
Short Connector
11 A
25 A
CANH
CANL
A7(A)
Brake Actuator Assembly
(A/T)
R

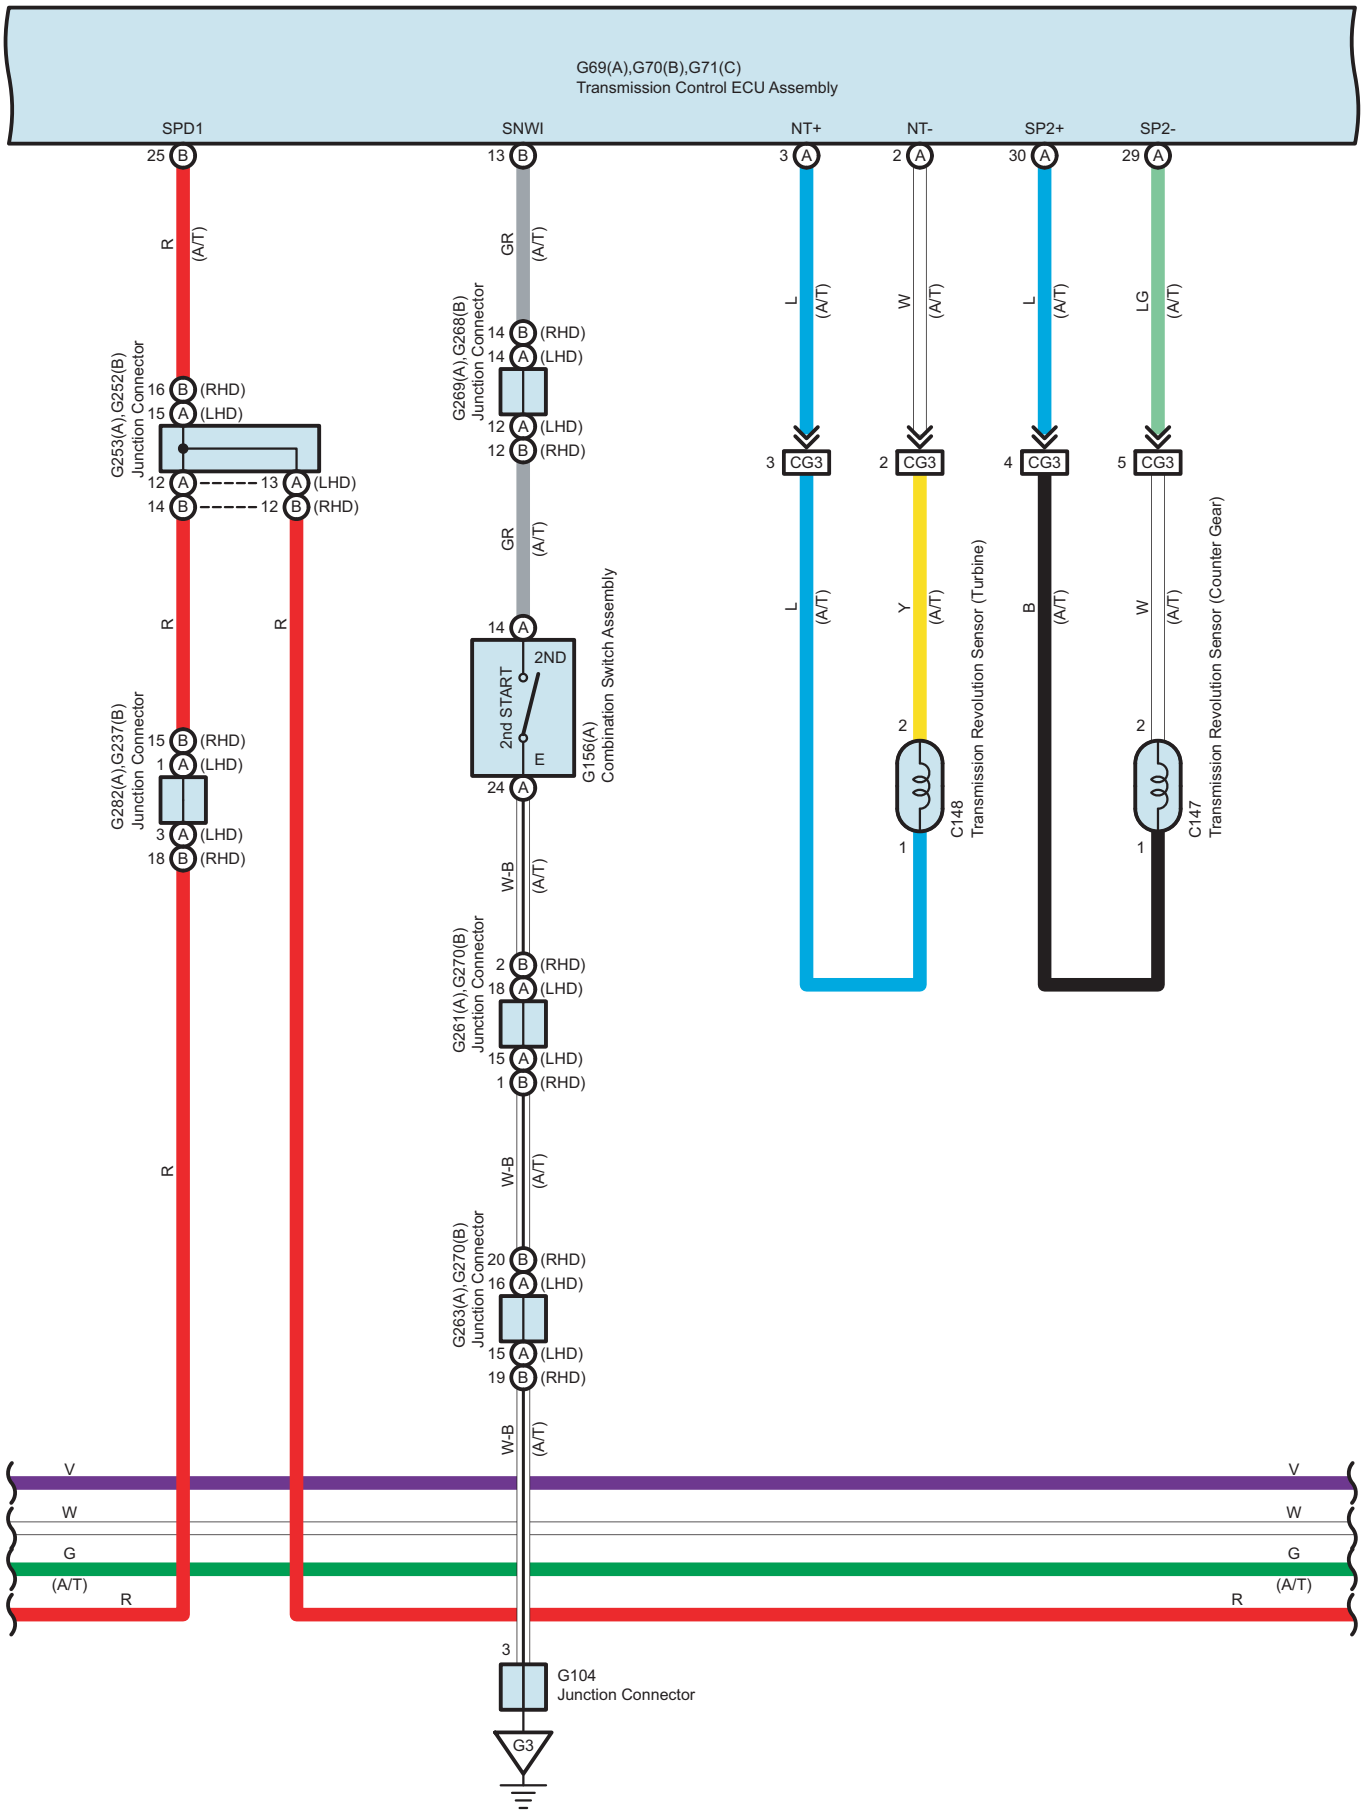

G69(A),G70(B),G71(C)
Transmission Control ECU Assembly
SPD1
SNWI
NT+
NT-
SP2+
SP2-
25 B
13 B
3 A
2 A
30 A
29 A
R (A/T)
GR (A/T)
L (A/T)
W (A/T)
L (A/T)
LG (A/T)
G269(A),G268(B) Junction Connector
14 B (RHD)
14 A (LHD)
12 A (LHD)
12 B (RHD)
G253(A),G252(B) Junction Connector
16 B (RHD)
15 A (LHD)
12 A
13 A (LHD)
14 B
12 B (RHD)
3 CG3
2 CG3
4 CG3
5 CG3
G156(A) Combination Switch Assembly
14 A
2ND
2nd START
E
24 A
C148 Transmission Revolution Sensor (Turbine)
C147 Transmission Revolution Sensor (Counter Gear)
L (A/T)
Y (A/T)
B (A/T)
W (A/T)
2
1
G282(A),G237(B) Junction Connector
15 B (RHD)
1 A (LHD)
3 A (LHD)
18 B (RHD)
W-B (A/T)
G261(A),G270(B) Junction Connector
2 B (RHD)
18 A (LHD)
15 A (LHD)
1 B (RHD)
G263(A),G270(B) Junction Connector
20 B (RHD)
16 A (LHD)
15 A (LHD)
19 B (RHD)
V
W
G
(A/T)
R
3
G104
Junction Connector
G3

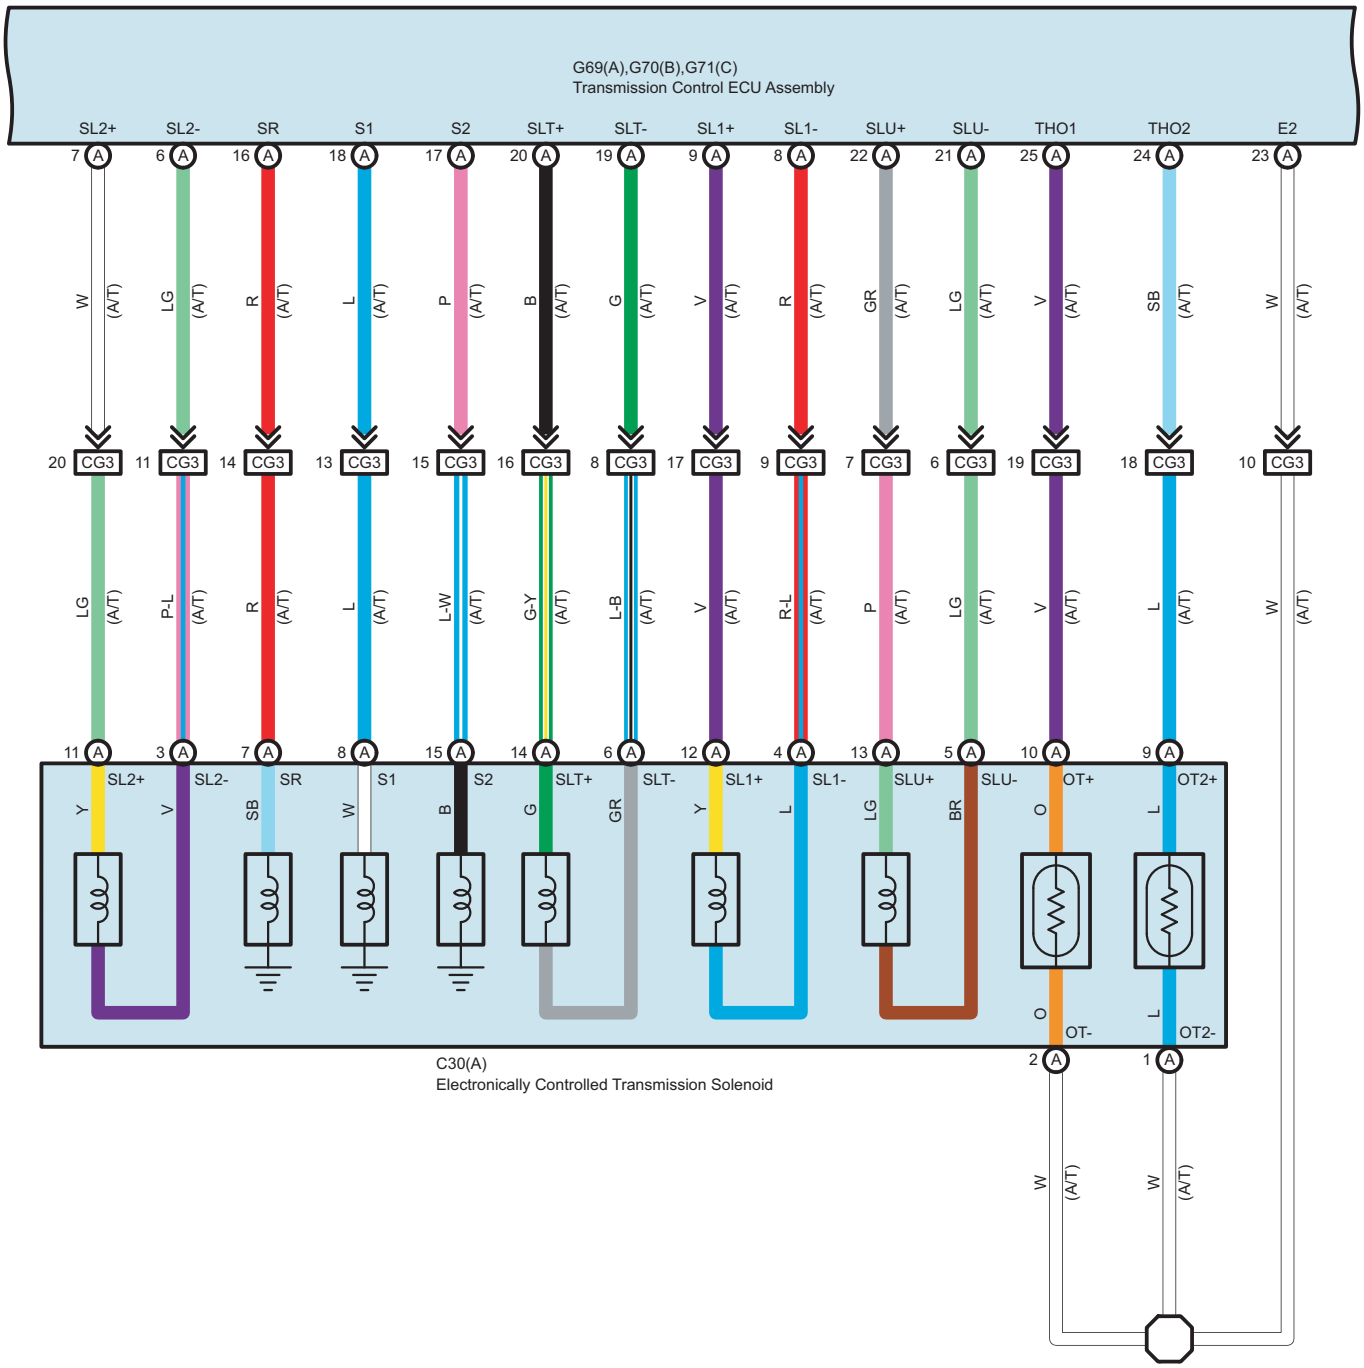
G69(A),G70(B),G71(C)
Transmission Control ECU Assembly
SL2+
SL2-
SR
S1
S2
SLT+
SLT-
SL1+
SL1-
SLU+
SLU-
THO1
THO2
E2
C30(A)
Electronically Controlled Transmission Solenoid
OT+
OT-
OT2+
OT2-



V
W
G
(A/T)
R

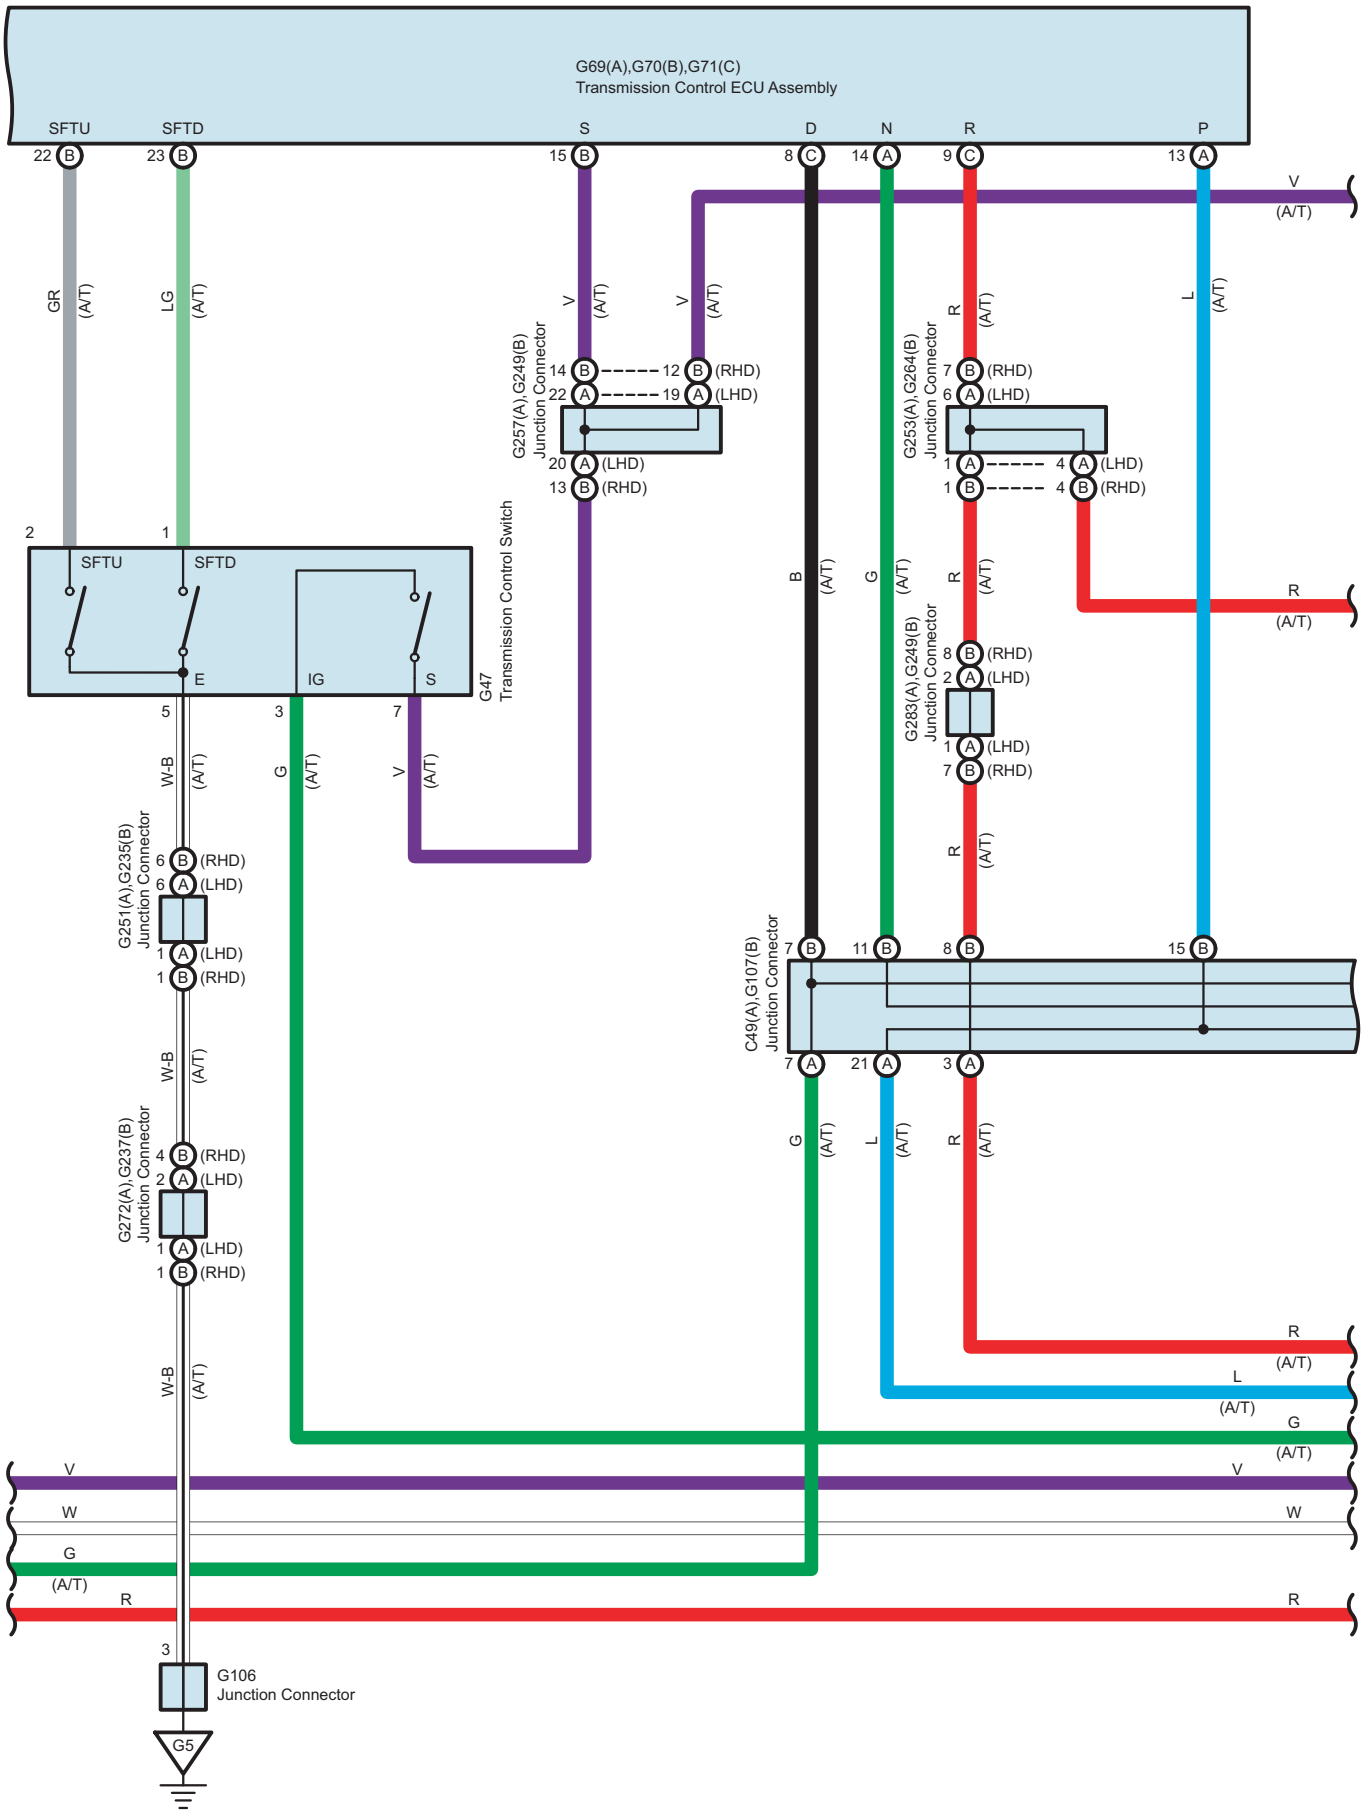
G69(A),G70(B),G71(C)
Transmission Control ECU Assembly
SFTU
SFTD
S
D
N
R
P
22 B
23 B
15 B
8 C
14 A
9 C
13 A
GR (A/T)
LG (A/T)
V (A/T)
V (A/T)
B (A/T)
G (A/T)
R (A/T)
L (A/T)
V (A/T)
R (A/T)
G257(A),G249(B) Junction Connector
14 B 12 B (RHD)
22 A 19 A (LHD)
20 A (LHD)
13 B (RHD)
G253(A),G264(B) Junction Connector
7 B (RHD)
6 A (LHD)
1 A 4 A (LHD)
1 B 4 B (RHD)
G283(A),G249(B) Junction Connector
8 B (RHD)
2 A (LHD)
1 A (LHD)
7 B (RHD)
2
1
SFTU
SFTD
E
IG
S
G47
Transmission Control Switch
5
3
7
W-B (A/T)
G (A/T)
V (A/T)
G251(A),G235(B) Junction Connector
6 B (RHD)
6 A (LHD)
1 A (LHD)
1 B (RHD)
W-B (A/T)
G272(A),G237(B) Junction Connector
4 B (RHD)
2 A (LHD)
1 A (LHD)
1 B (RHD)
W-B (A/T)
C49(A),G107(B) Junction Connector
7 B
11 B
8 B
15 B
7 A
21 A
3 A
G (A/T)
L (A/T)
R (A/T)
V
W
G (A/T)
R
3
G106
Junction Connector
G5

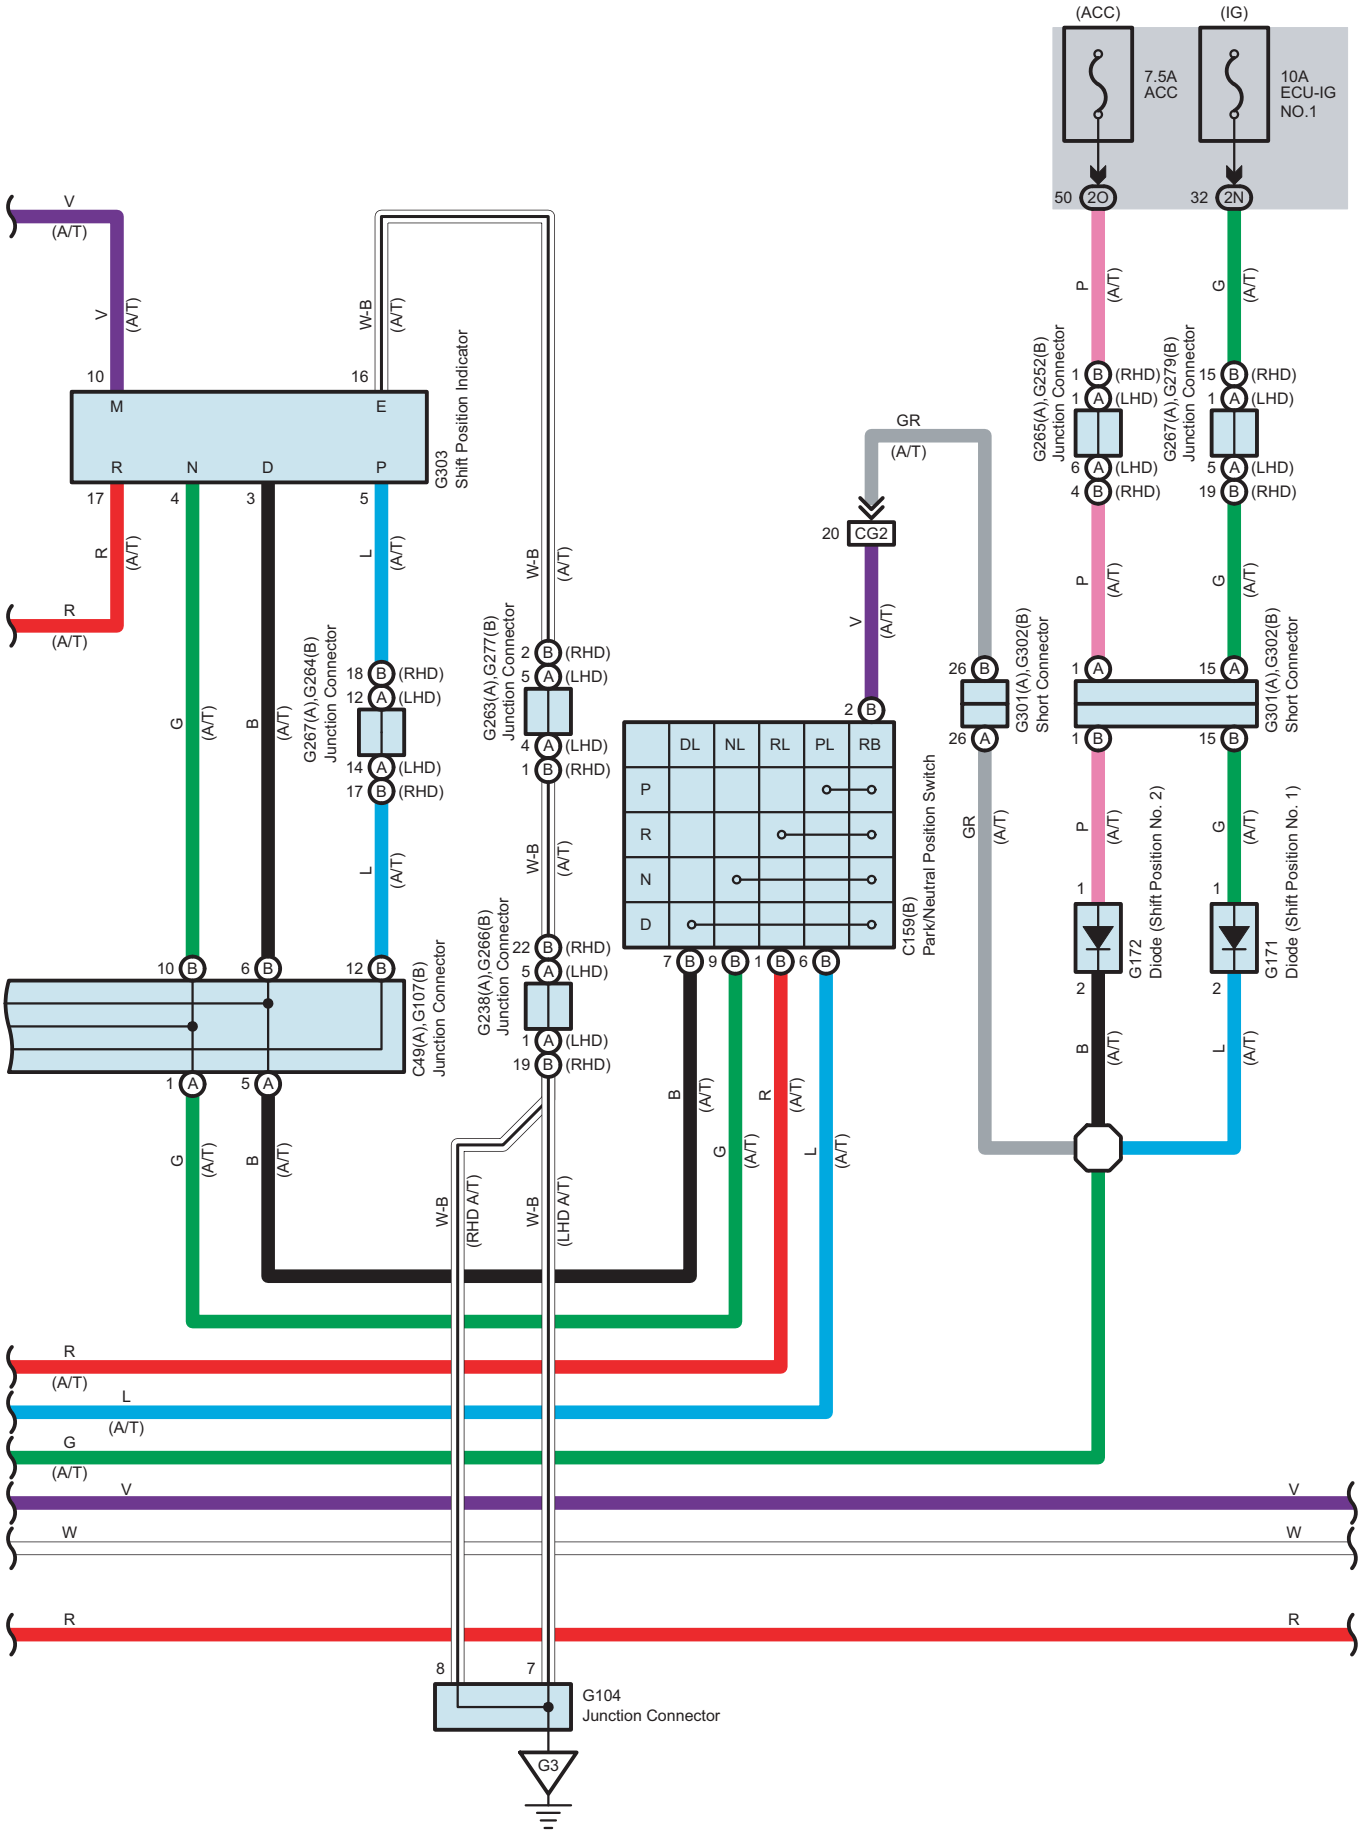
(ACC)
(IG)
7.5A ACC
10A ECU-IG NO.1
50 2O
32 2N
G303 Shift Position Indicator
M
E
R
N
D
P
G267(A),G264(B) Junction Connector
G263(A),G277(B) Junction Connector
G238(A),G266(B) Junction Connector
C49(A),G107(B) Junction Connector
C159(B) Park/Neutral Position Switch
DL
NL
RL
PL
RB
CG2
G265(A),G252(B) Junction Connector
G267(A),G279(B) Junction Connector
G301(A),G302(B) Short Connector
G172 Diode (Shift Position No. 2)
G171 Diode (Shift Position No. 1)
(RHD A/T)
(LHD A/T)
G104 Junction Connector
G3

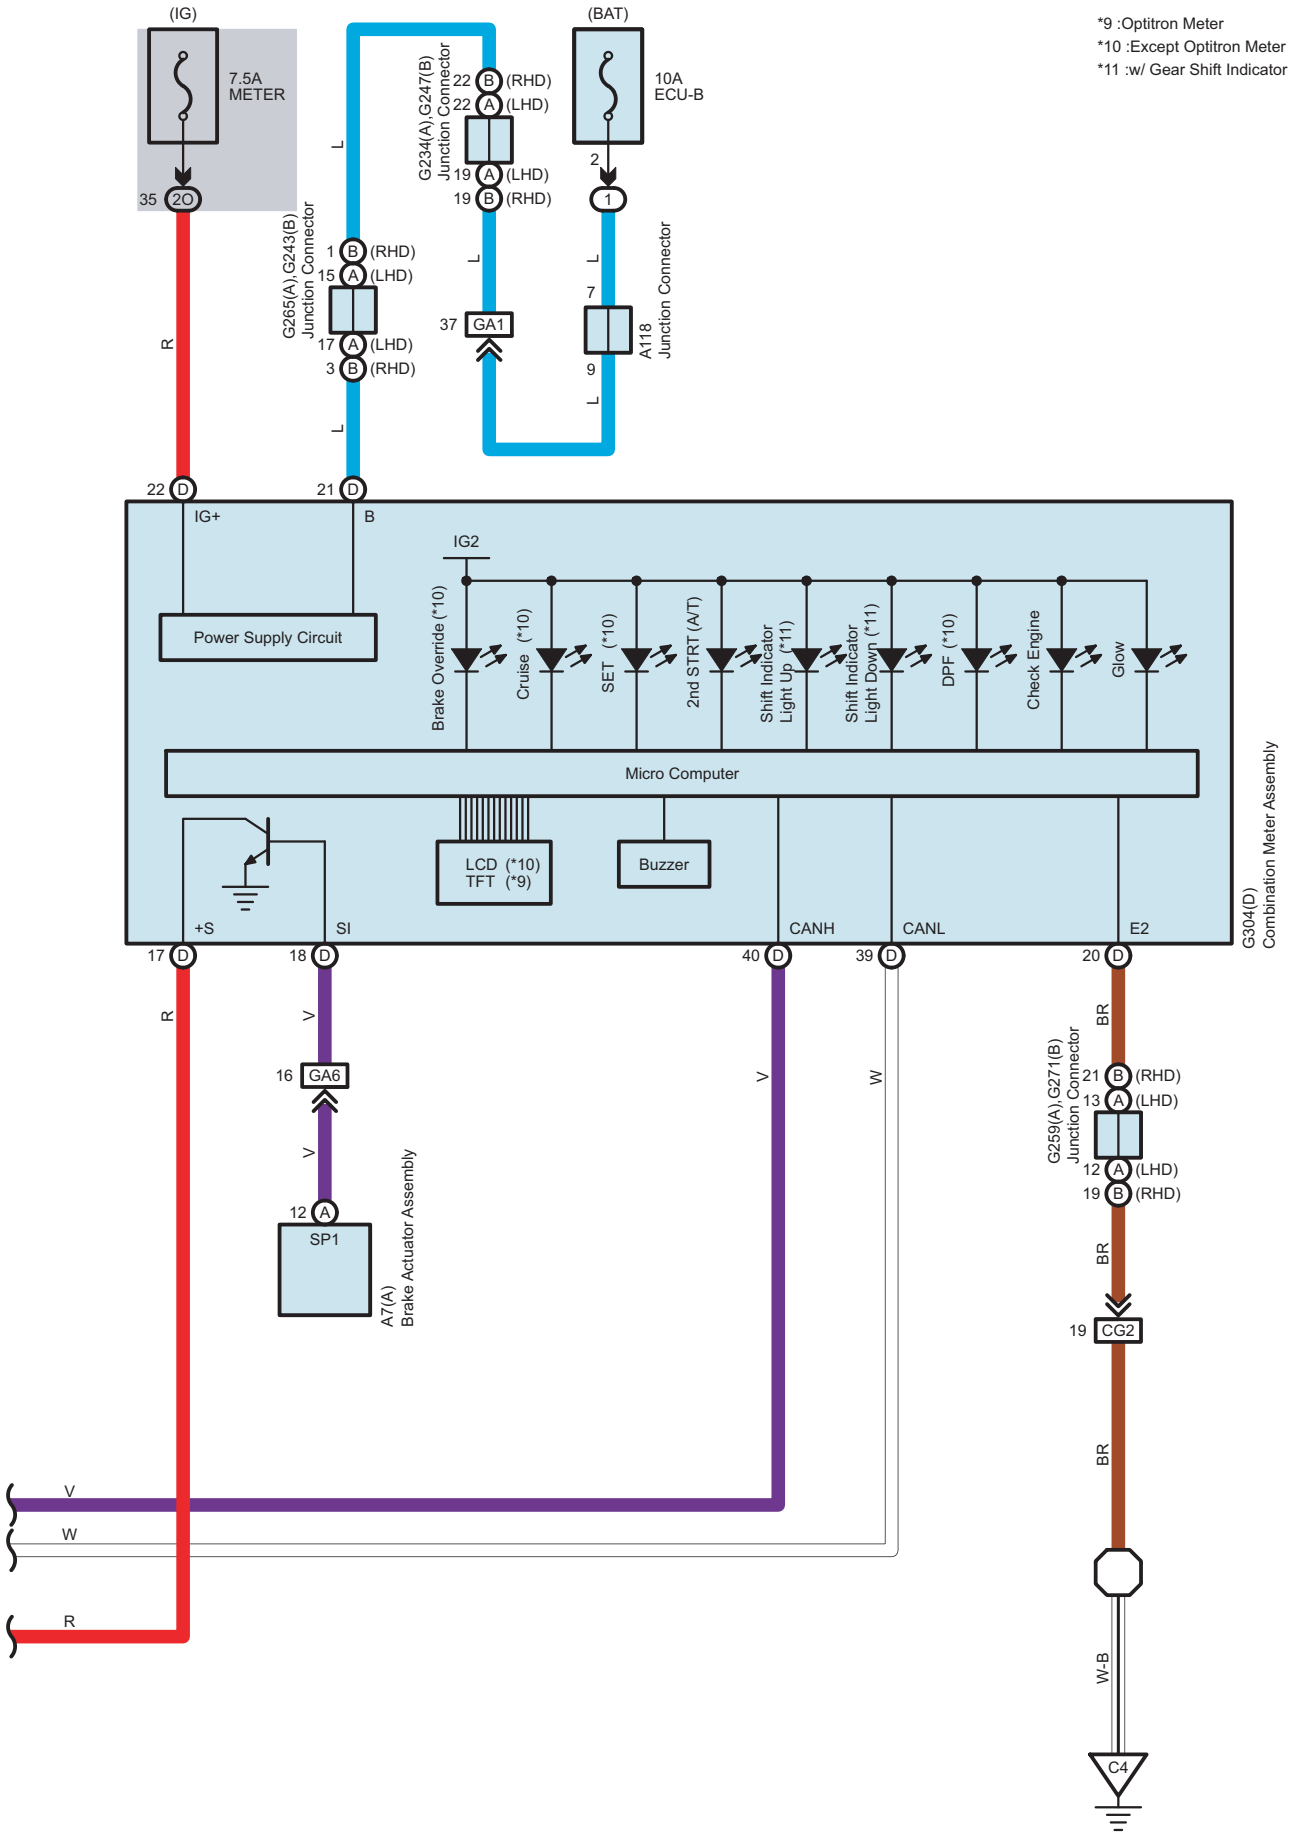

*9 :Optitron Meter
*10 :Except Optitron Meter
*11 :w/ Gear Shift Indicator
(IG)
7.5A METER
35 2O
R
(BAT)
10A ECU-B
2
1
L
7
9
A118 Junction Connector
G234(A),G247(B) Junction Connector
22 B (RHD)
22 A (LHD)
19 A (LHD)
19 B (RHD)
37 GA1
G265(A),G243(B) Junction Connector
1 B (RHD)
15 A (LHD)
17 A (LHD)
3 B (RHD)
22 D
21 D
IG+
B
IG2
Power Supply Circuit
Brake Override (*10)
Cruise (*10)
SET (*10)
2nd STRT (A/T)
Shift Indicator Light Up (*11)
Shift Indicator Light Down (*11)
DPF (*10)
Check Engine
Glow
Micro Computer
LCD (*10)
TFT (*9)
Buzzer
+S
SI
CANH
CANL
E2
G304(D) Combination Meter Assembly
17 D
18 D
40 D
39 D
20 D
V
W
16 GA6
12 A
SP1
A7(A) Brake Actuator Assembly
BR
G259(A),G271(B) Junction Connector
21 B (RHD)
13 A (LHD)
12 A (LHD)
19 B (RHD)
19 CG2
W-B
C4

A7
Black

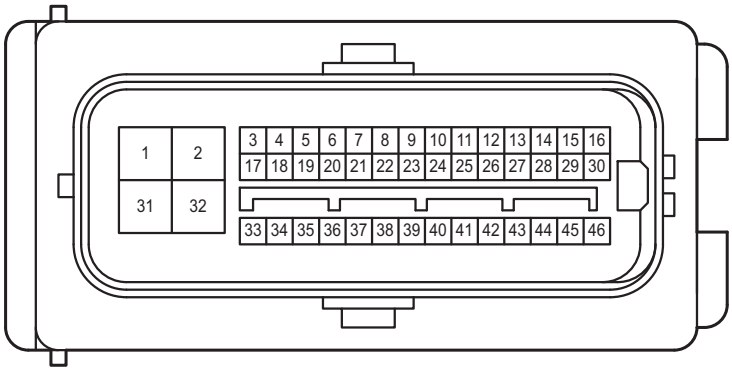

90980-12297

A19
Black

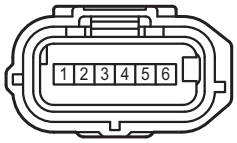

90980-12303

A40
Black



90980-10825

A43
White



90980-10906

A47
Gray



90980-10945

A48
Gray




90980-10946

A59
Black




90980-10962

A70
White

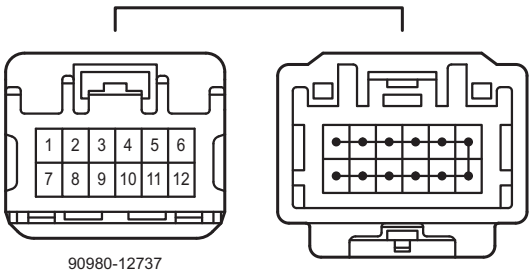


90980-12737

A99
Black

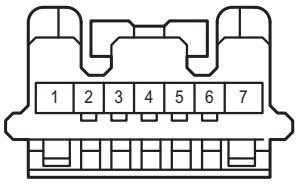


90980-12092

A114
Blue

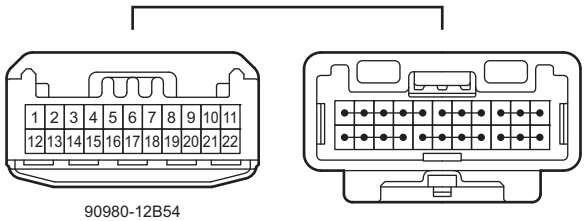


90980-12B54

A115
Gray

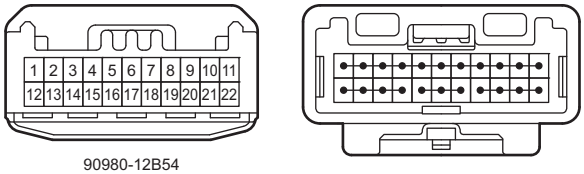


90980-12B54

A116
White

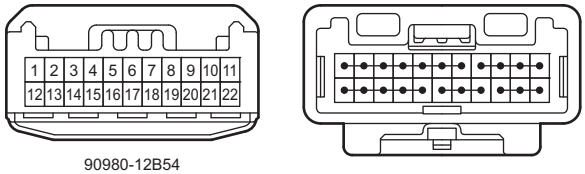


90980-12B54

A118
Gray

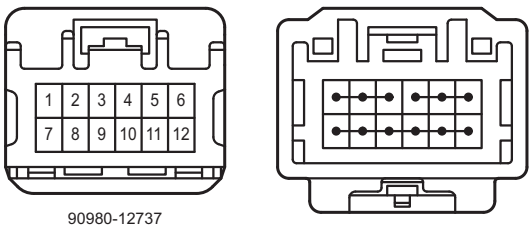


90980-12737

A122
Black

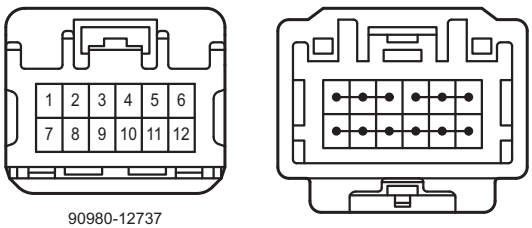


90980-12737

C1
Gray




90980-11875

C2
Gray




90980-11875

C3
Gray



90980-11875

C4
Gray




90980-11875

C24
Black (1GR-FE 2TR-FE 1KD-FTV ,1GD-FTV Before Jun. 2018 Production ,1GD-FTV w/o Urea SCR From Jun. 2018 Production) / White (1GD-FTV w/ Urea SCR From Jun. 2018 Production)



90980-10735

C30
Gray

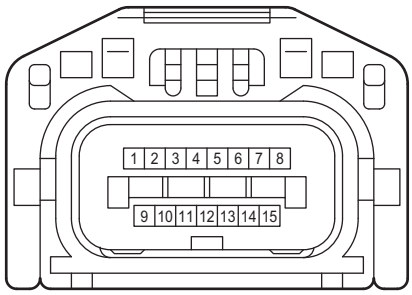


90980-12293

C33
Black




90980-12292

C47
Black

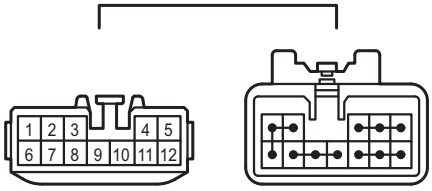


90980-10803

C49
Blue

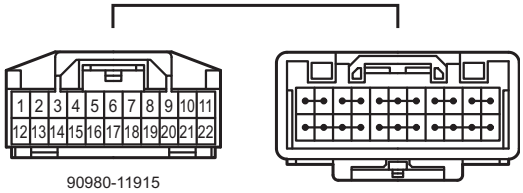

90980-11915

C52
Black

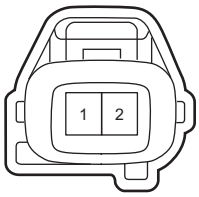


90980-10947

C57
Black




90980-11428

C65
Black

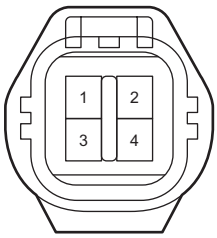

90980-11964

C70
Gray

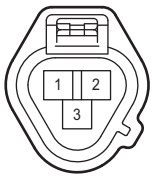

90980-11016

C71
Gray




90980-11285

C72
Black



90980-11162

C73
Black

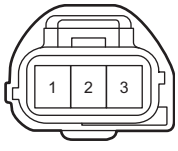

90980-11261

C74
Black




90980-11145

C76
Brown




90980-11162

C77
Brown

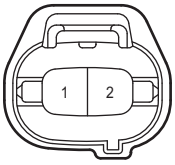

90980-11149

C79
Brown

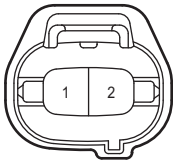

90980-11149

C80
Brown



90980-10617

C82
Black



90980-11194

C83
Black



90980-10845

C84
Gray



90980-11025

C85
Dark Gray




90980-10737

C86
Black



90980-11143

C87
Black

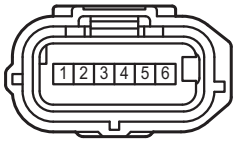

90980-12303

C88
Dark Gray




90980-11144

C89
Gray




90980-12520

C90
White

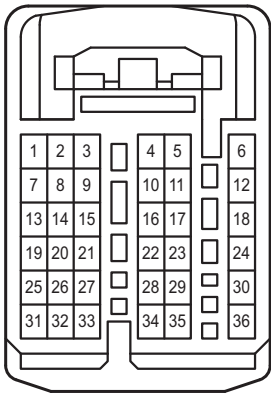


82824-26130

C91
White

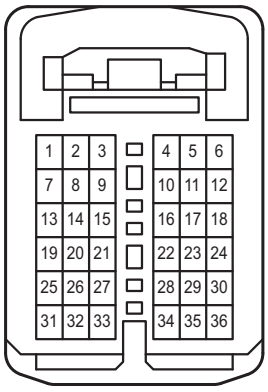


82824-26140

C92
White

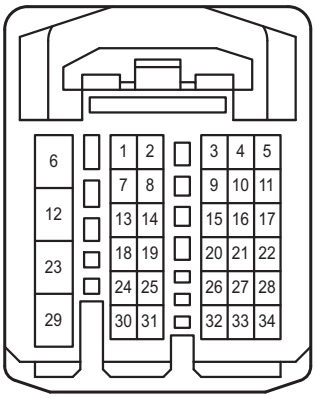

82824-26150

C93
White

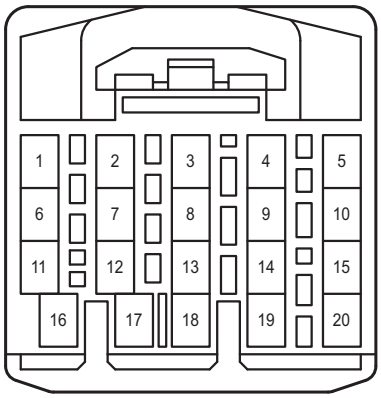

82824-26160

C98



C99
Black



90980-11194

C141
Black



90980-12B06

C142
Gray



90980-12B06

C143
Gray



90980-12B06

C147
Black




90980-12B06

C148
Black



90980-12B06

C159
Gray

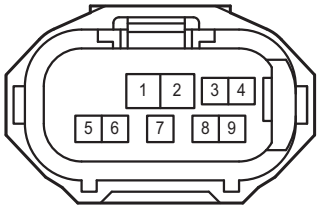


90980-12A23

C160
White




90980-12B06

C174
Gray

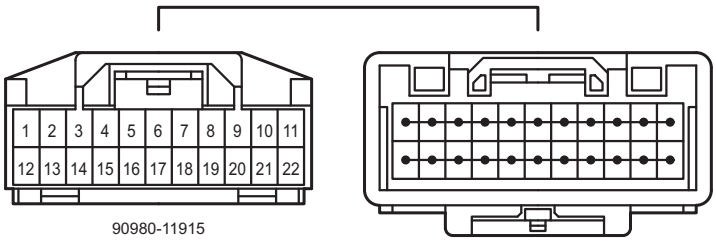


90980-11915

G2
White

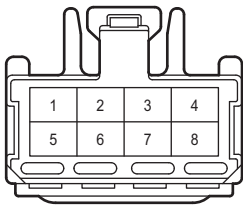


90980-11615

G25
White

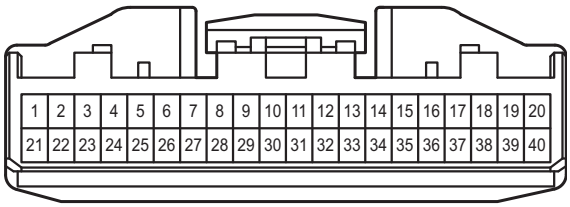


90980-12557

G47
Black

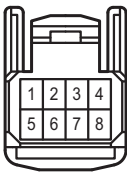


90980-12551

G48
White

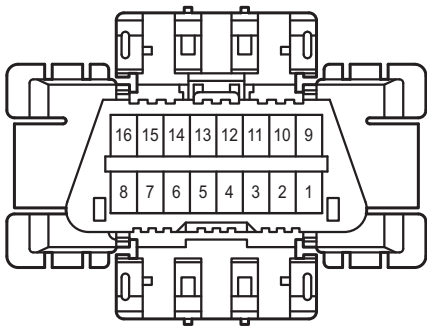


90980-11978

G53
Black

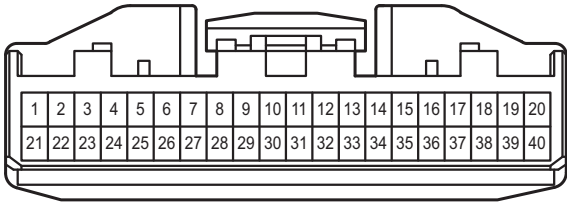


90980-12557

G57
White

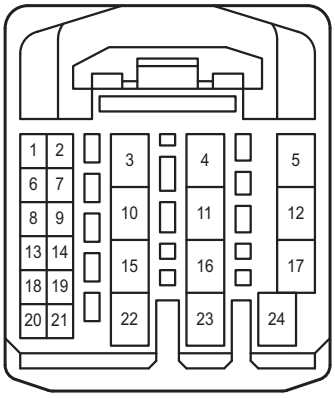


82824-26110

G58
White

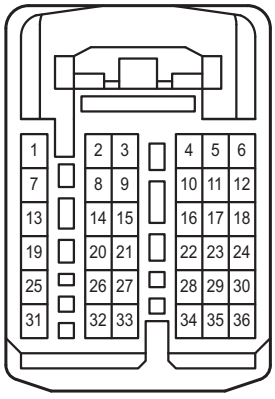


82824-26120

G69
White

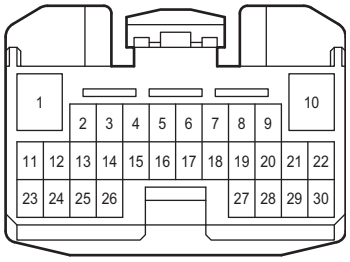


90980-12562

G70
White

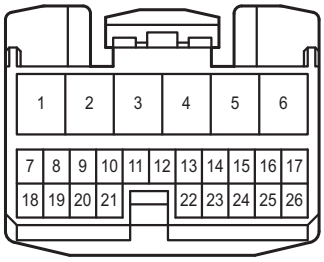


90980-12561

G71
White

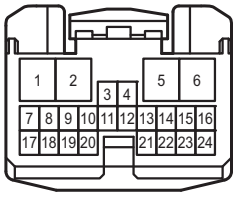


90980-12560

G74
Black

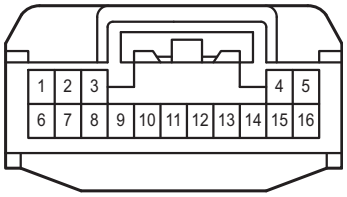


90980-12423

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

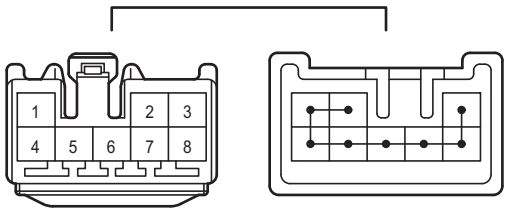


90980-11686

G106
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

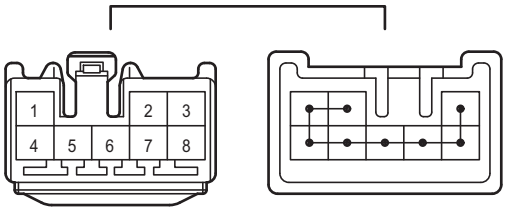


90980-11686

G107
Blue

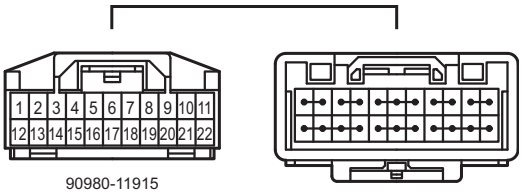

90980-11915

G156
Black

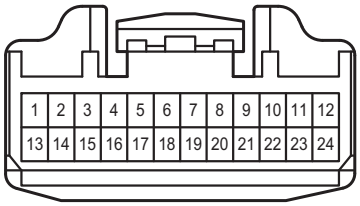

90980-12554

G171
Gray




90980-11608

G172
Gray




90980-11608

G207
White

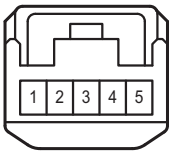


90980-12366

G208
Black

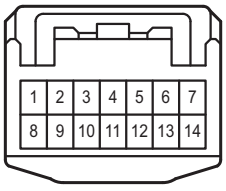


90980-12370

G213
White

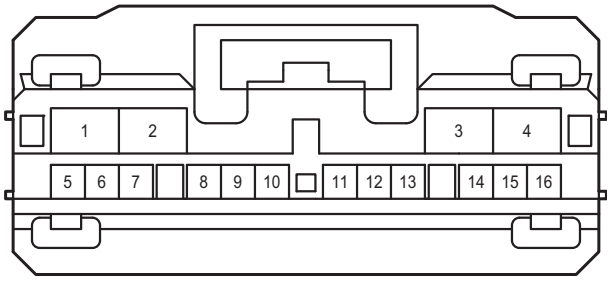


90980-12763

G215
Black

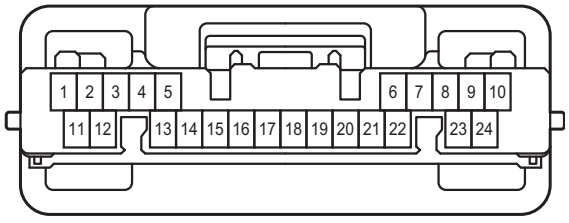


90980-12A42

G234
Blue

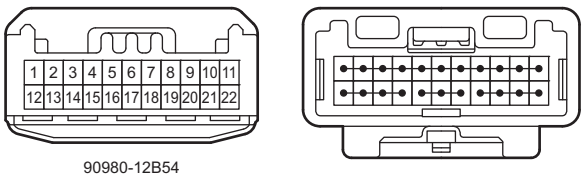


90980-12B54

G235
Gray

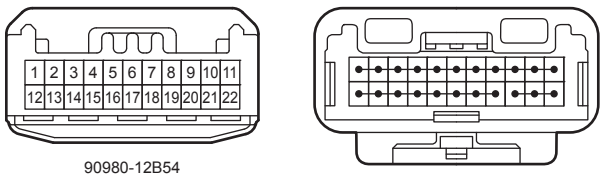


90980-12B54

G237
Blue

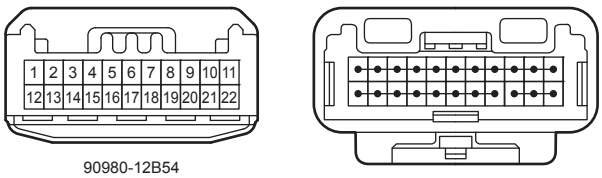


90980-12B54

G238
Blue

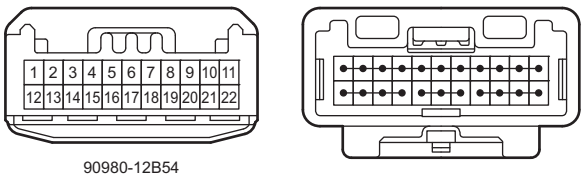


90980-12B54

G241
Gray

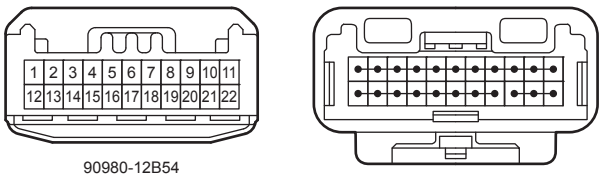


90980-12B54

G243
Blue

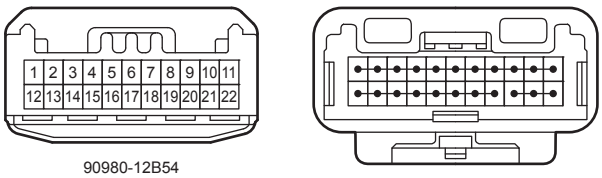


90980-12B54

G244
White

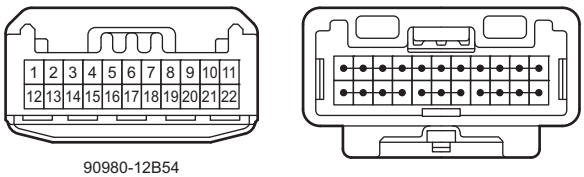


90980-12B54

G247
Gray

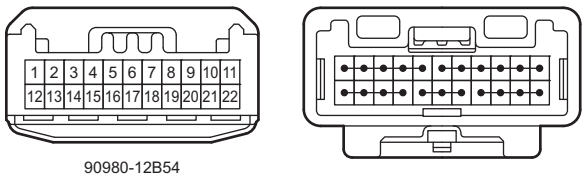


90980-12B54

G249
Blue

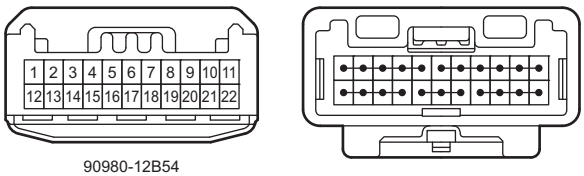


90980-12B54

G251
Blue

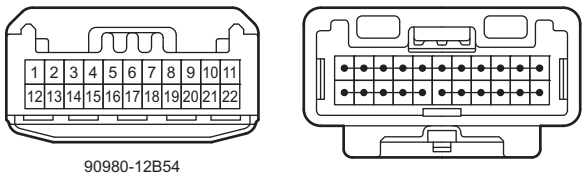


90980-12B54

G252
Gray

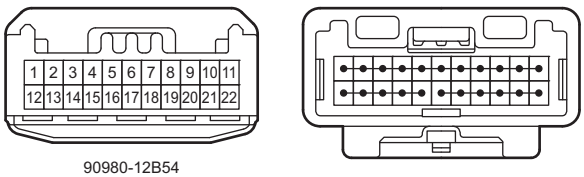


90980-12B54

G253
White

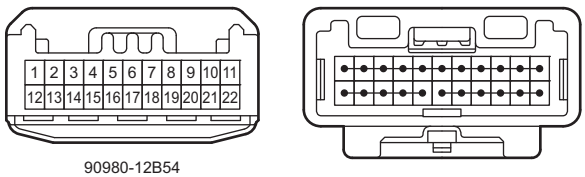


90980-12B54

G257
White

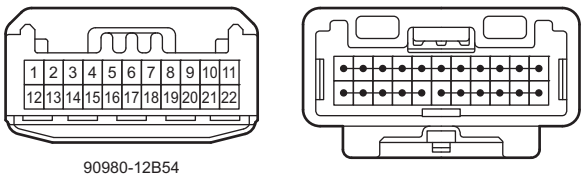


90980-12B54

G259
Blue

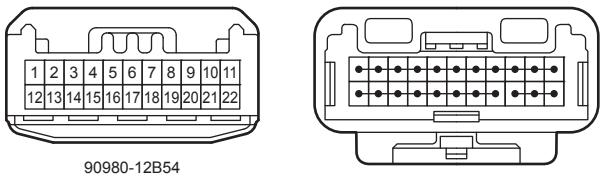


90980-12B54

G261
White

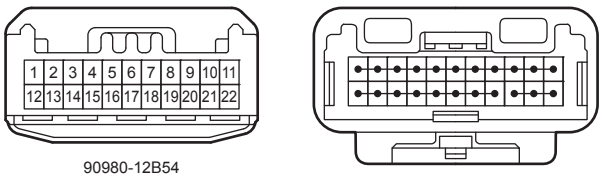


90980-12B54

G263
Blue

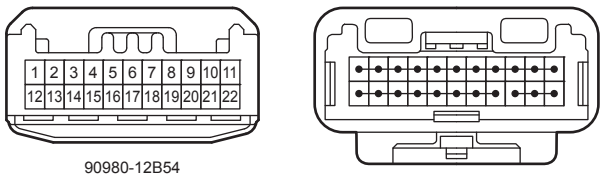


90980-12B54

G264
Gray

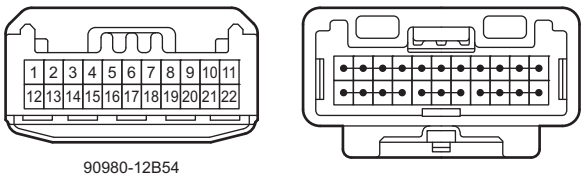


90980-12B54

G265
White

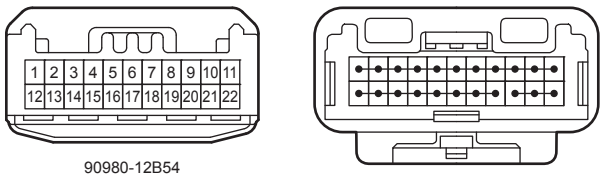


90980-12B54

G266
Blue

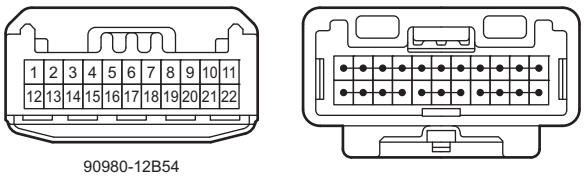


90980-12B54

G267
Blue

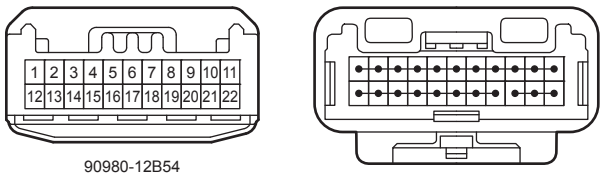


90980-12B54

G268
White

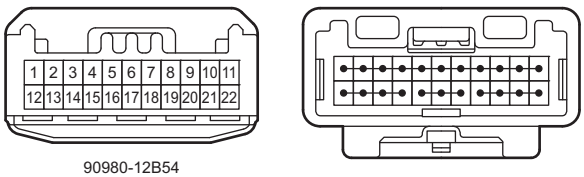


90980-12B54

G269
White

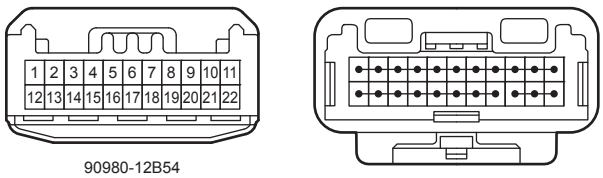


90980-12B54

G270
Blue

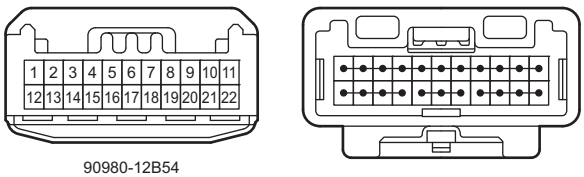


90980-12B54

G271
White

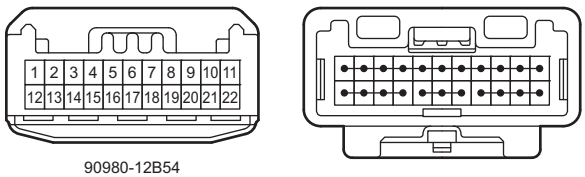


90980-12B54

G272
Gray

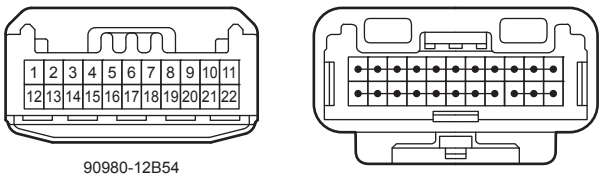


90980-12B54

G275
White

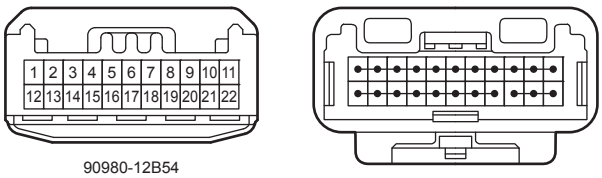


90980-12B54

G276
White

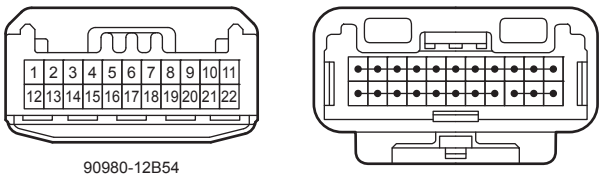


90980-12B54

G277
Blue

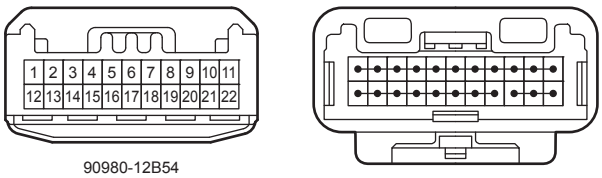


90980-12B54

G279
White

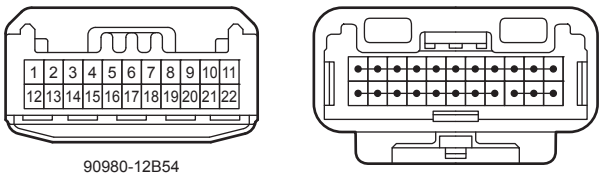


90980-12B54

G282
Gray

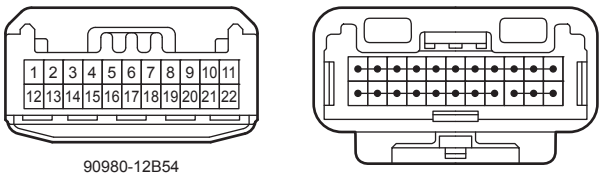


90980-12B54

G283
Blue

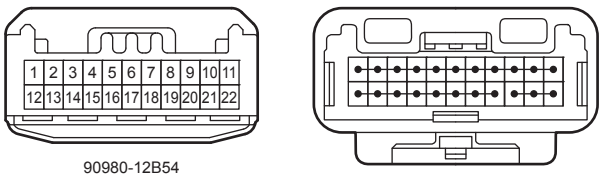


90980-12B54

G286
White

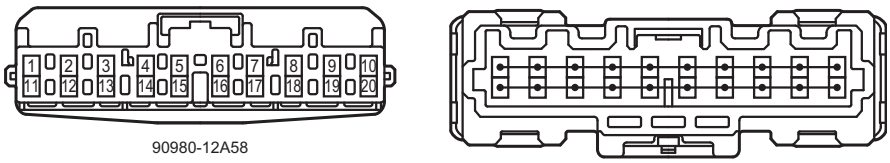


90980-12A58

G290
White

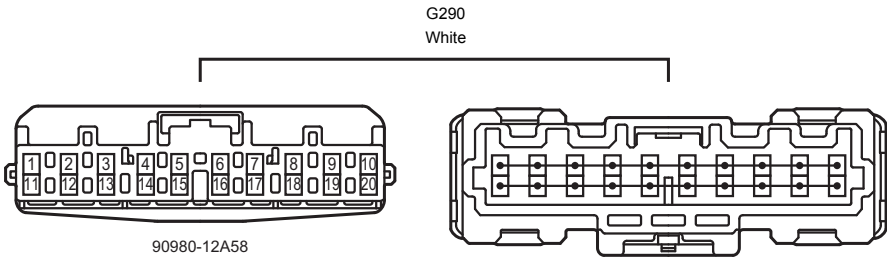


90980-12A58

G301
White

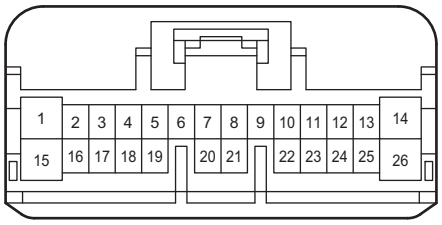


90980-12771

G302
White

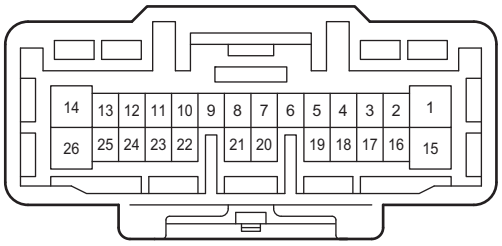


90980-12770

G303
White

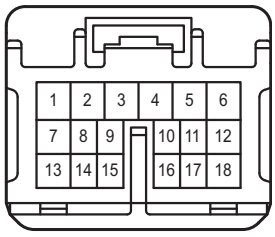

90980-12745

G304
White

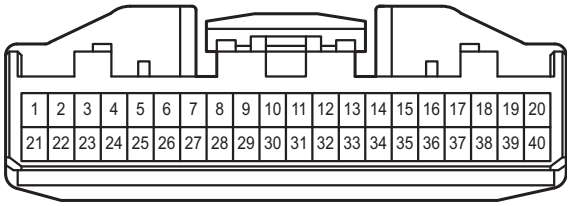


90980-12557

S5
White



90980-11077

r1
Black




90980-10825

r3
White



90980-10906

z7
White



90980-12360

1U
White




90980-12A55

1V
Black




90980-12A54

1W
White

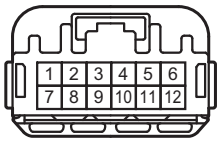


90980-12A91

2M
White

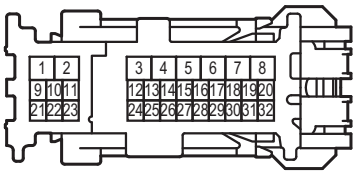


90980-12A47

2N
White

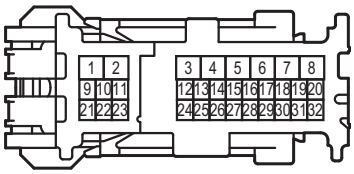

90980-12A48

2O
White

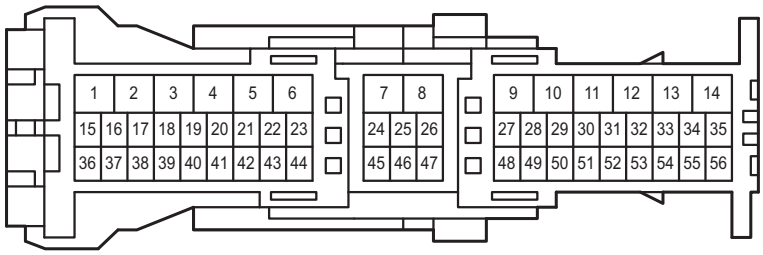

90980-12943

AC2
Dark Gray




90980-11242




90980-11241

AR2
Gray

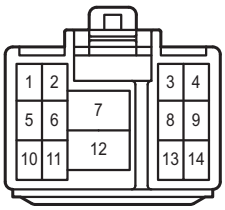


90980-10813

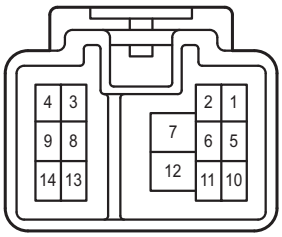


90980-10812

Ar3
Gray

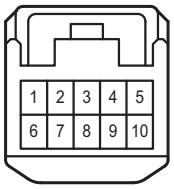


90980-12368

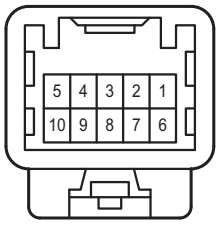


90980-12367

CG1
White

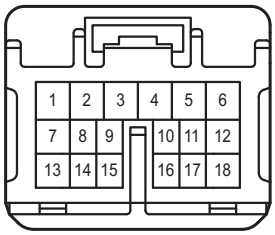


90980-12745

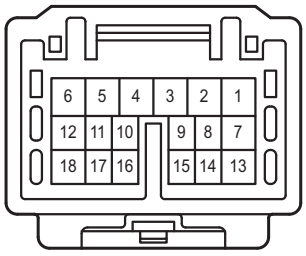

90980-12744


CG2
White

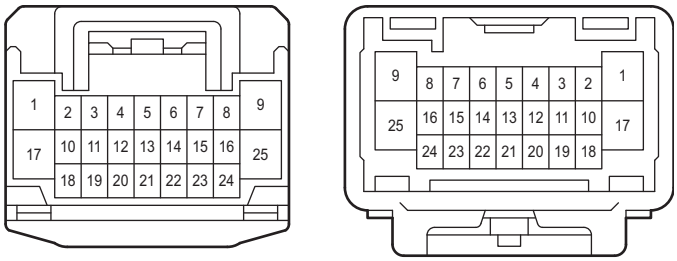

90980-12414

90980-12413


CG3
White

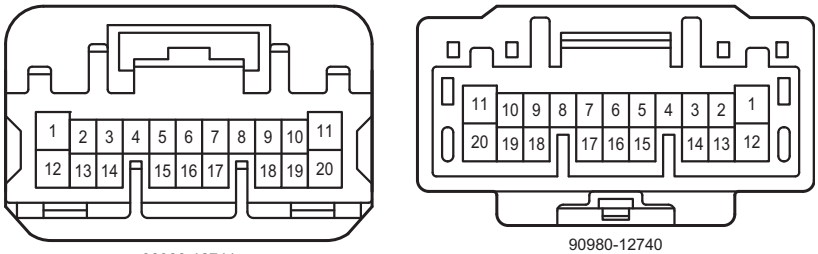

90980-12741

90980-12740


GA1
White

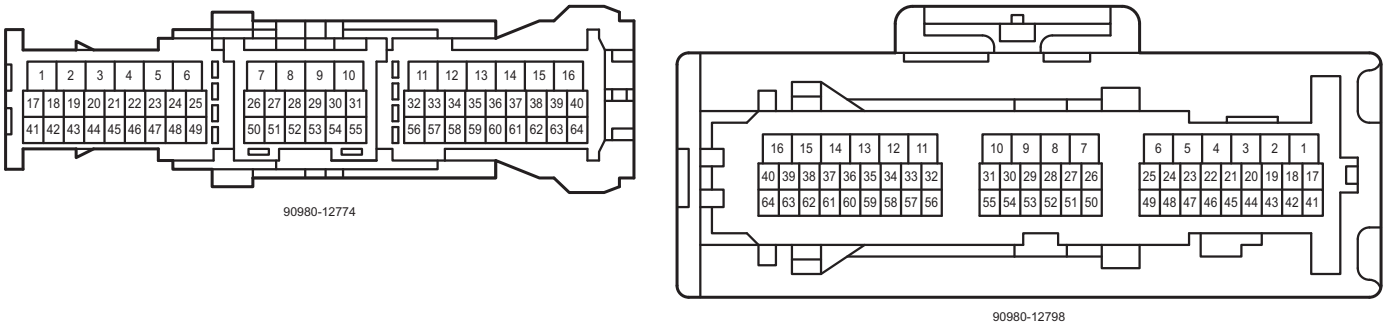

90980-12774

90980-12798


GA2
White

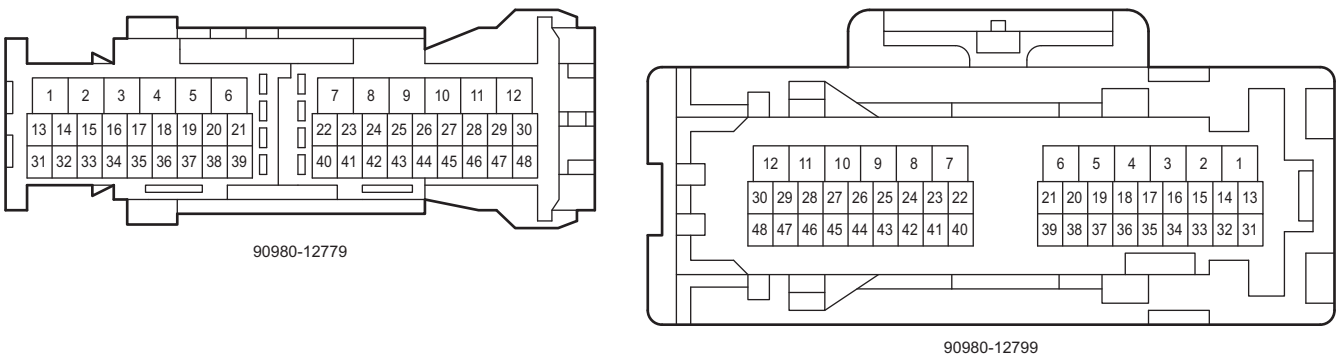


90980-12779

90980-12799

GA6
White

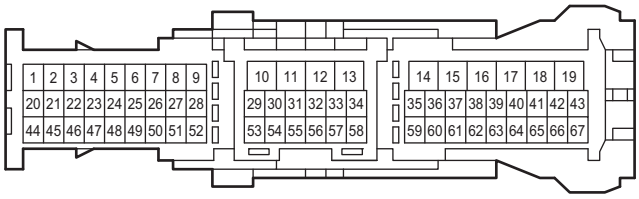

90980-12783

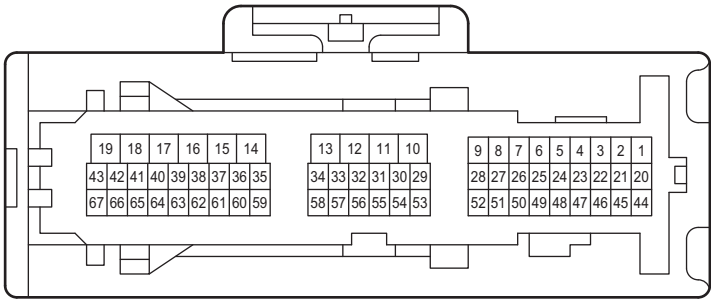

90980-12800

SR3
White



90980-10942



90980-10941