




HWD NO.3 Relay (-S)
HWD NO.4 Relay (-S)
HWD NO.1 Relay (-S)
ST NO.2 Relay (-S)
IG2 Relay
IG2 Relay
EFI MAIN NO.1 Relay
A/F Relay (*1,*2)
FUEL HTR Relay (*3)
EFI MAIN NO.2 Relay (*4)
IG2 Relay
AI VSV Relay (*1)
EDU Relay (*3,*4)
INV Relay (-S)
NOISE FILTER (DEF)
INJ NO.2 Relay (E)
BKUP LP NO.2 Relay (L)
ST Relay (-S)
GLOW Relay (-S)
AIR SUS Relay (-S)
AIR SUS Relay (-S)
(-S) HWD NO.2 Relay
A111 (HI) Headlight Assembly LH
(LO)
A112 (RH E) Headlight Assembly RH
(E)
A38 (E) Headlight Cleaner Control Relay
A93 (-) Diode (Clearance Light RH)
A4 (E) Condenser Fan Motor (With Shroud Blower Assembly)
A51 (L) Noise Filter (Condenser Fan)
A7 (GND2) Brake Actuator Assembly
B16 (GND1) Door Control Battery
B5 (E) Fog Light Assembly LH
A113 (HI) Headlight Assembly RH
(LO)
A102 (GND) Headlight Assembly LH (Headlamp Computer Sub-Assembly Main)
A130 (GND) Headlight Assembly LH (Headlamp Computer Sub-Assembly Main)
A100 (SGND) Millimeter Wave Radar Sensor Assembly
A104 (GND1) Door Control Battery
A131 (GND1) Door Control Battery
A70 Junction Connector
AB2
BA2
A1
A6
W-B
BR


*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*7 :w/ Pre-Crash Safety System
*8 :w/ Front Fog Light
*9 :w/ Heated Windshield Defroster
*10 :Halogen Headlight
*11 :LED Headlight
*12 :w/ Door Control Battery
*13 :Pressure Switch Type
*14 :w/ Electronic Modulated Air Suspension
*15 :w/ Power Outlet (220V)
*16 :Water-cooled Type Intercooler
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*20 :Before Apr. 2021 Production
*21 :From Apr. 2021 Production
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production

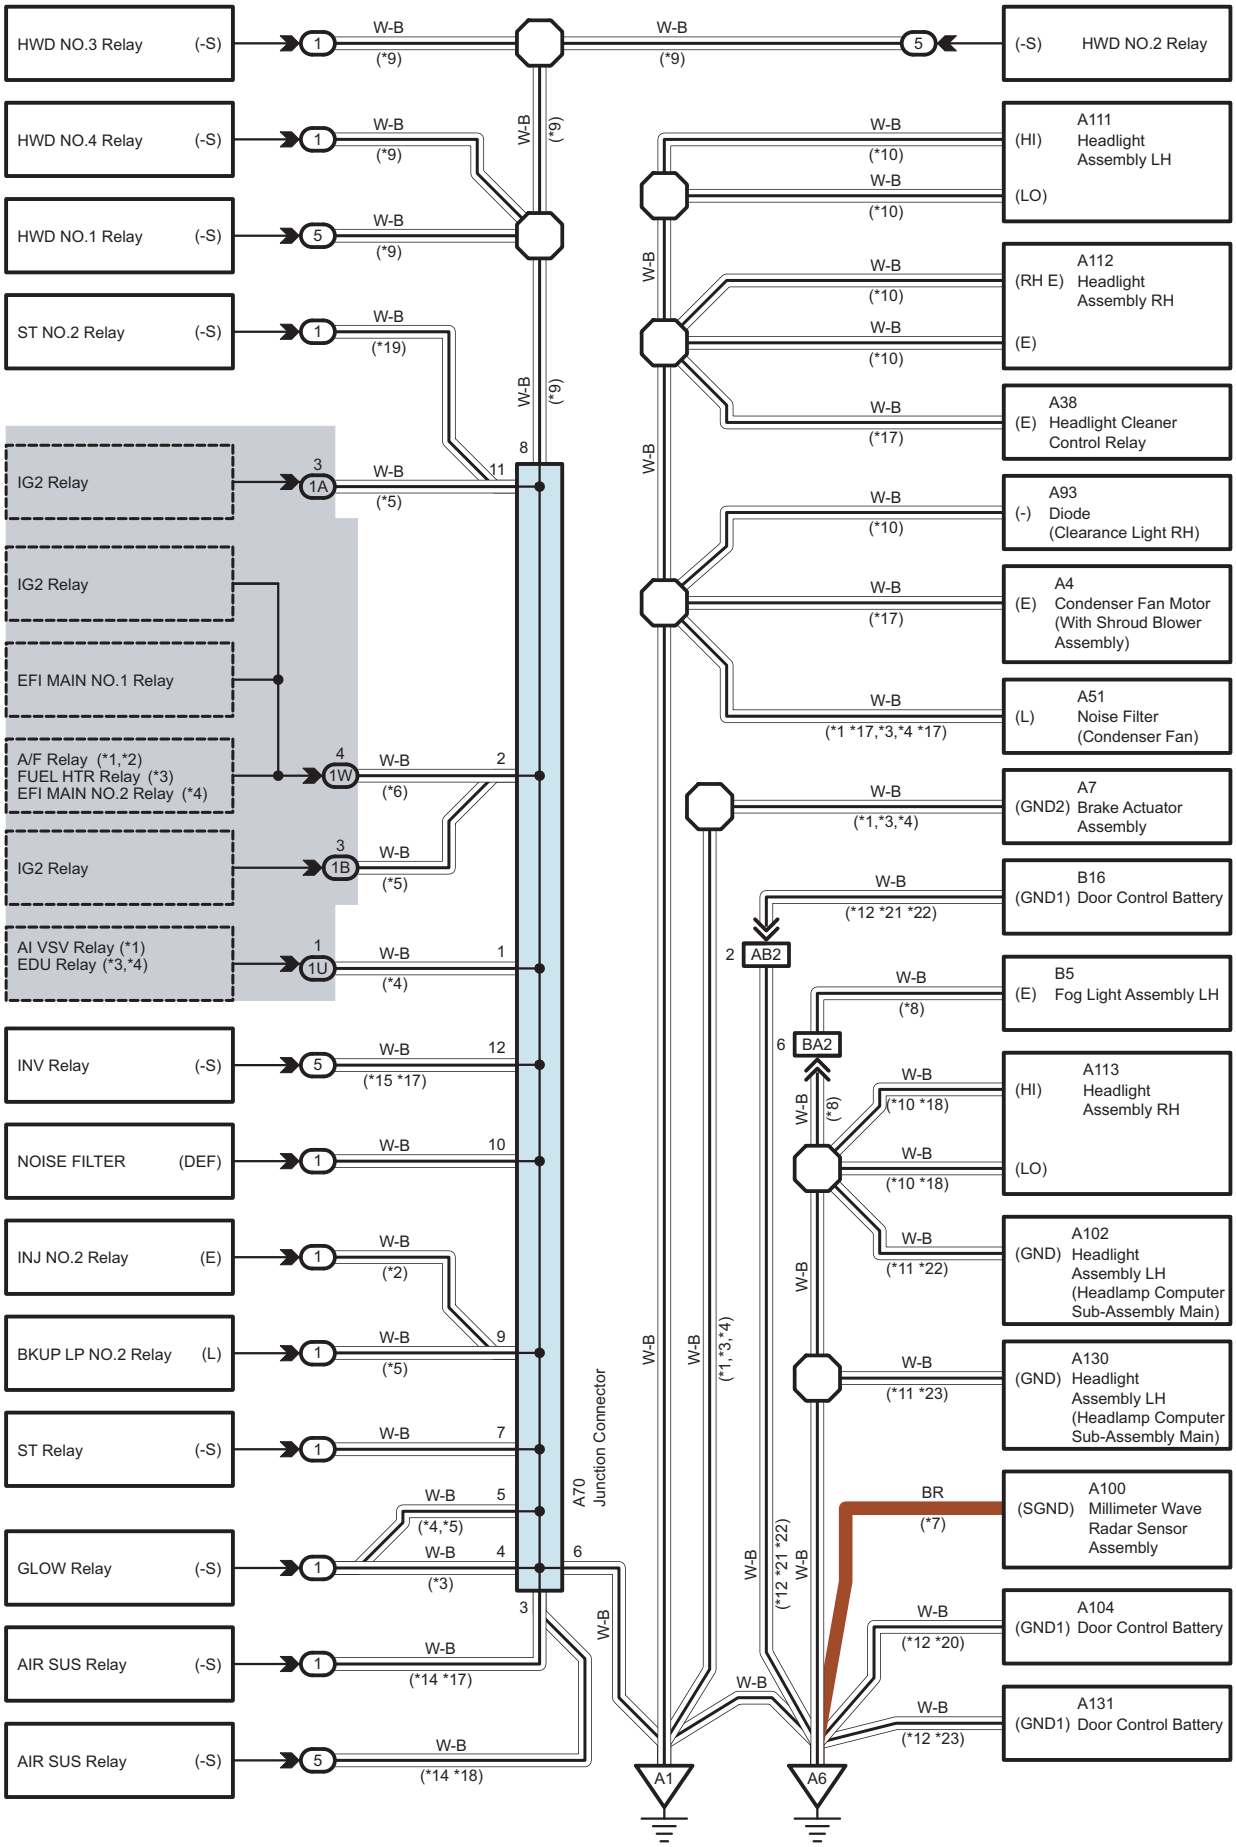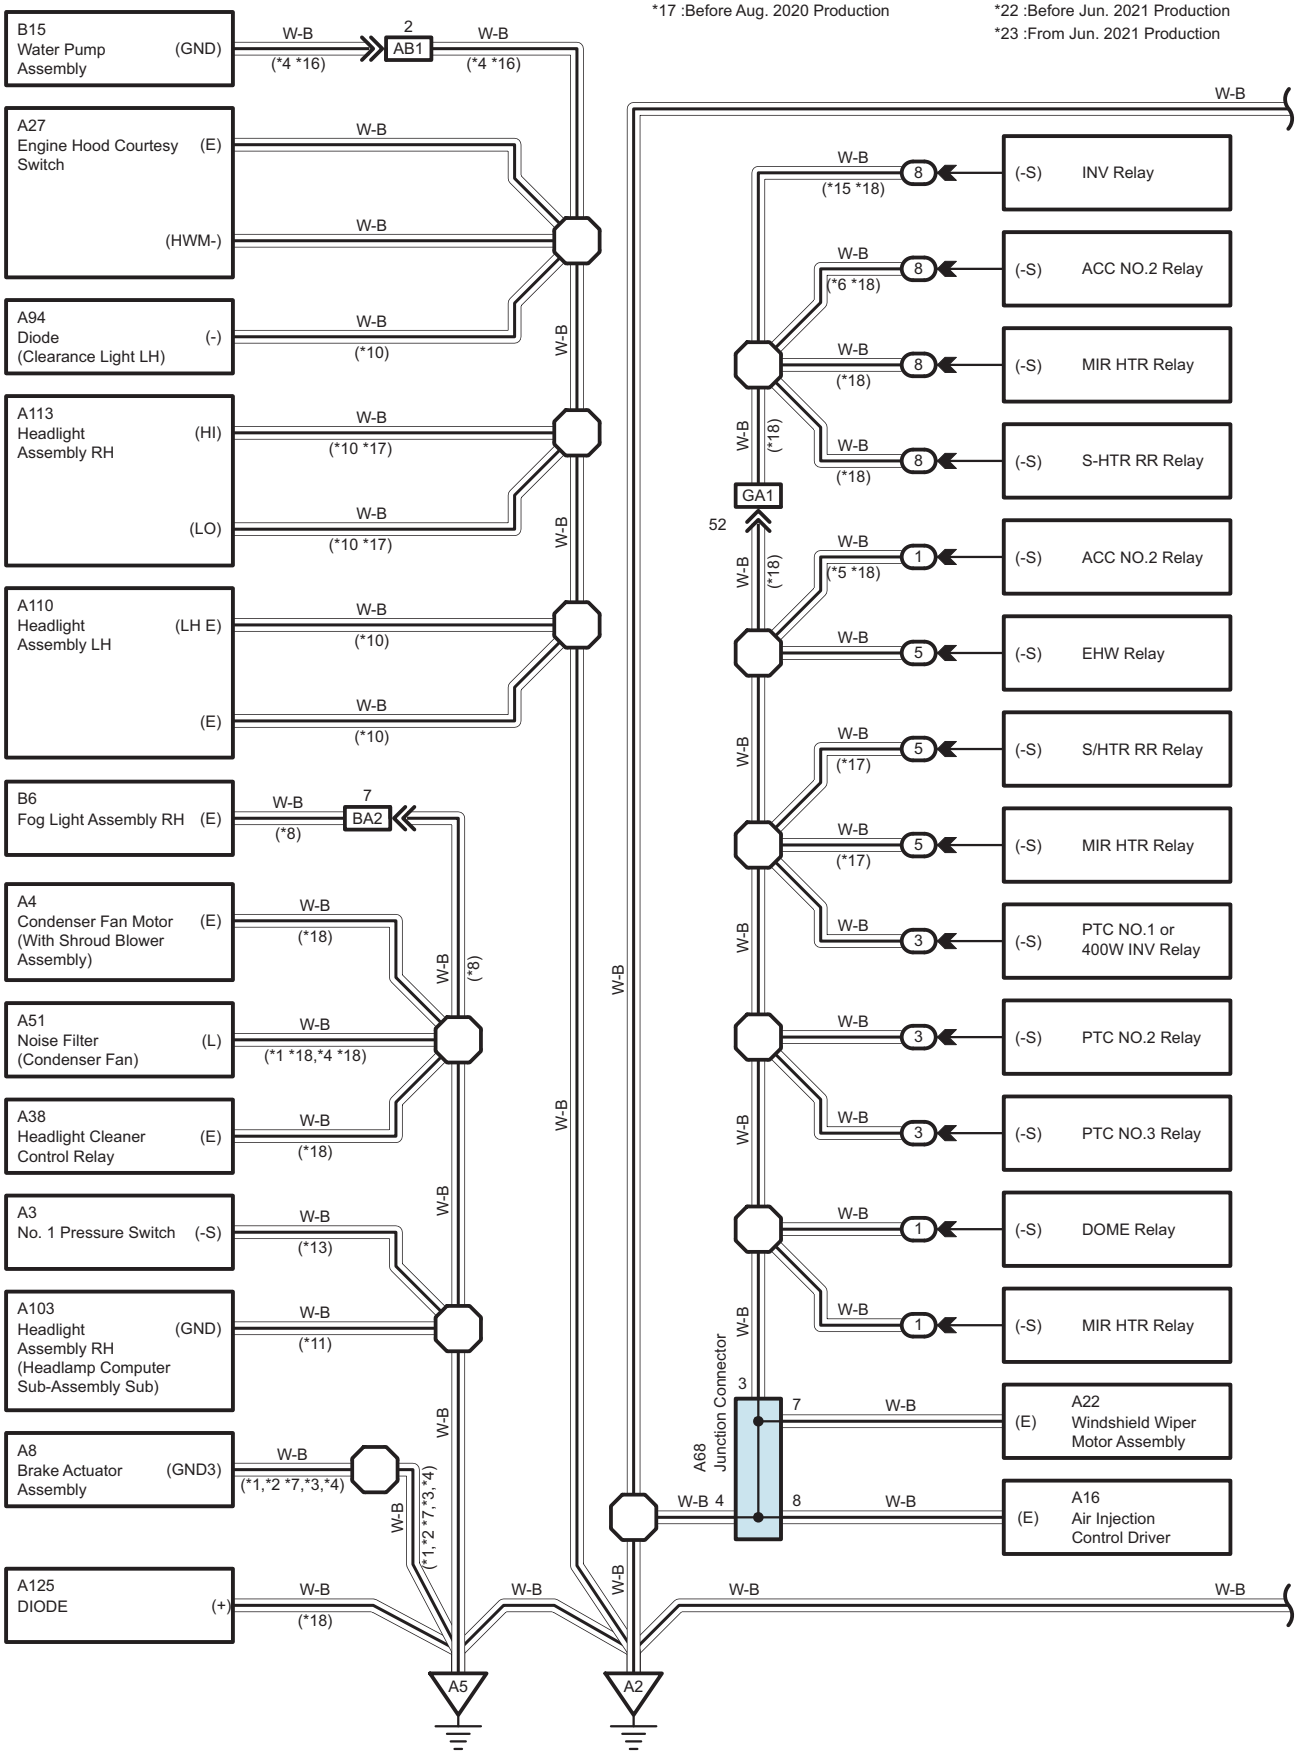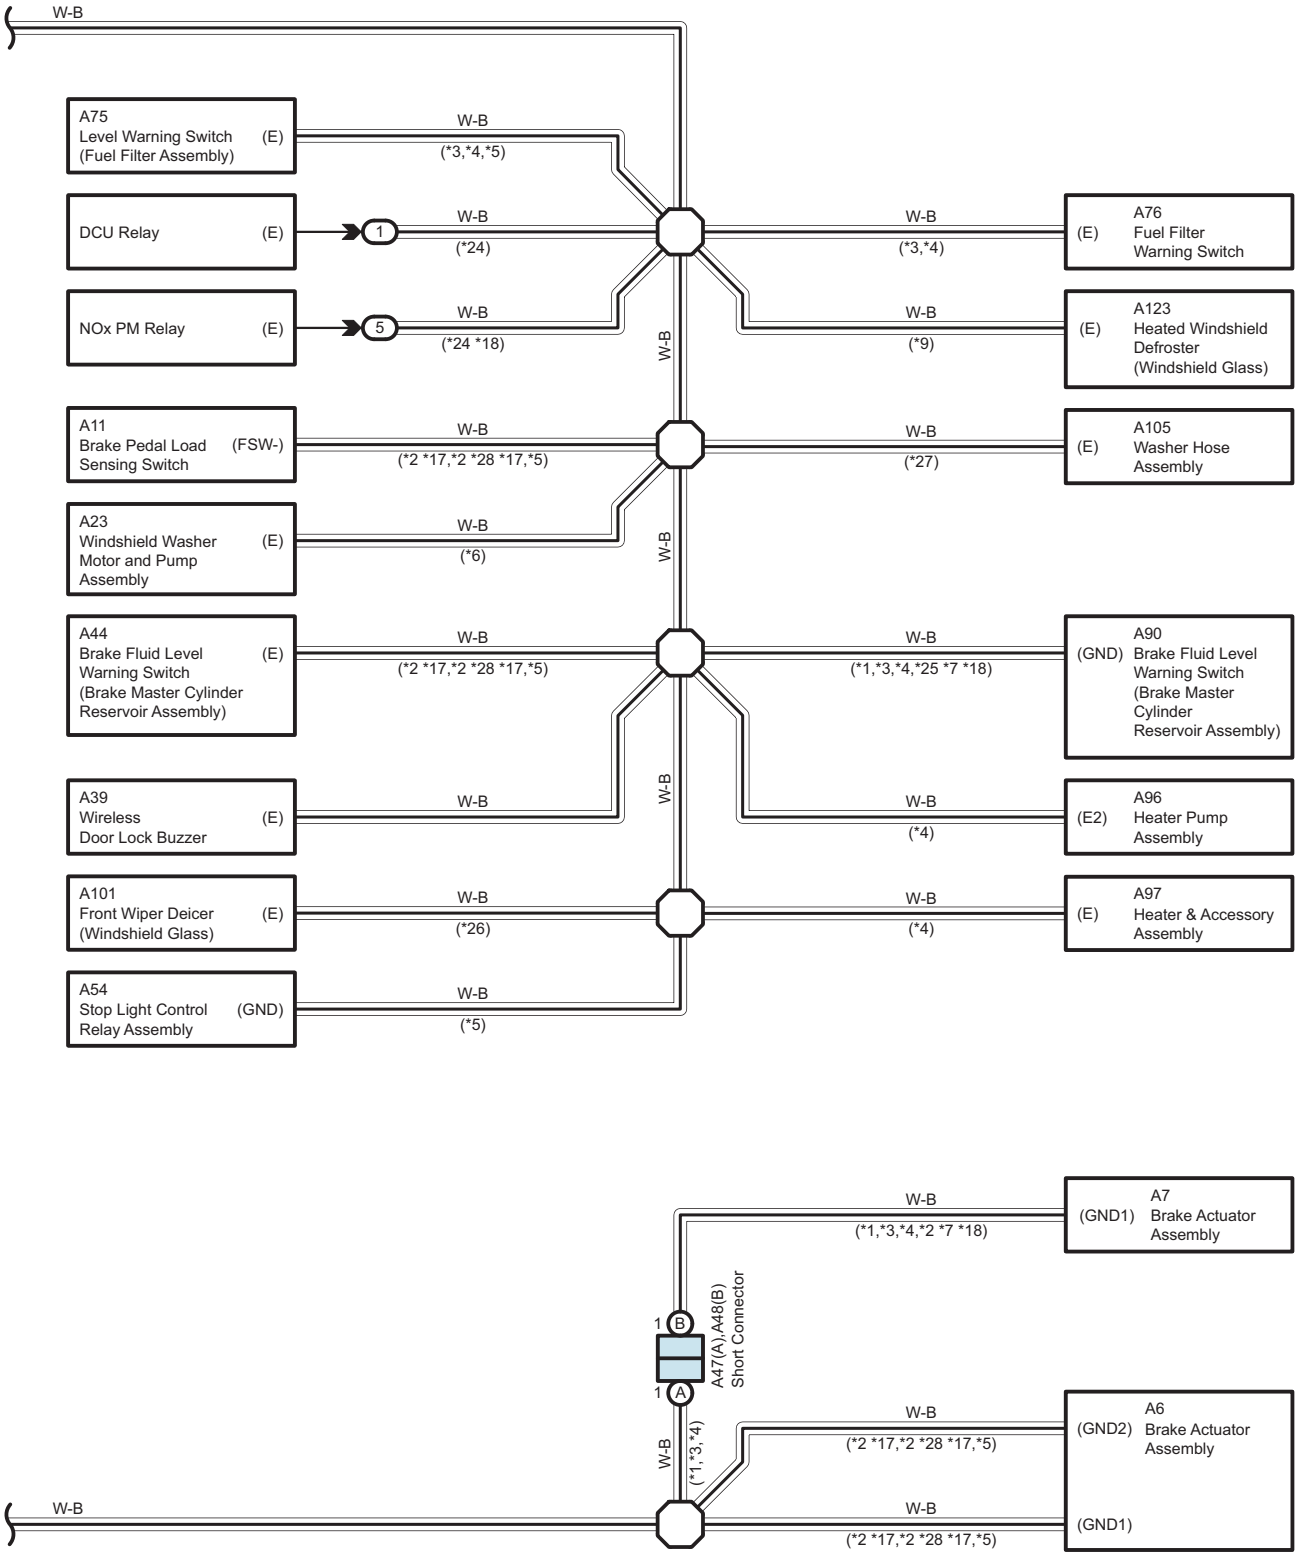




W-B
A75
Level Warning Switch (E)
(Fuel Filter Assembly)
W-B
(*3,*4,*5)
DCU Relay (E)
1
W-B
(*24)
NOx PM Relay (E)
5
W-B
(*24 *18)
W-B
A11
Brake Pedal Load (FSW-)
Sensing Switch
W-B
(*2 *17,*2 *28 *17,*5)
A23
Windshield Washer (E)
Motor and Pump
Assembly
W-B
(*6)
W-B
A44
Brake Fluid Level (E)
Warning Switch
(Brake Master Cylinder
Reservoir Assembly)
W-B
(*2 *17,*2 *28 *17,*5)
A39
Wireless (E)
Door Lock Buzzer
W-B
W-B
A101
Front Wiper Deicer (E)
(Windshield Glass)
W-B
(*26)
A54
Stop Light Control (GND)
Relay Assembly
W-B
(*5)
W-B
(*3,*4)
A76
(E) Fuel Filter
Warning Switch
W-B
(*9)
A123
(E) Heated Windshield
Defroster
(Windshield Glass)
W-B
(*27)
A105
(E) Washer Hose
Assembly
W-B
(*1,*3,*4,*25 *7 *18)
A90
(GND) Brake Fluid Level
Warning Switch
(Brake Master
Cylinder
Reservoir Assembly)
W-B
(*4)
A96
(E2) Heater Pump
Assembly
W-B
(*4)
A97
(E) Heater & Accessory
Assembly
W-B
(*1,*3,*4,*2 *7 *18)
A7
(GND1) Brake Actuator
Assembly
1 B
1 A
A47(A),A48(B)
Short Connector
W-B
(*1, *3, *4)
W-B
(*2 *17,*2 *28 *17,*5)
A6
(GND2) Brake Actuator
Assembly
W-B
(*2 *17,*2 *28 *17,*5)
(GND1)
W-B

*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*7 :w/ Pre-Crash Safety System
*9 :w/ Heated Windshield Defroster
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*24 :w/ Urea SCR
*25 :From Jun. 2015 Production
*26 :w/ Front Window Deicer
*27 :w/ Washer Nozzle Heater System
*28 :w/o Pre-Crash Safety System

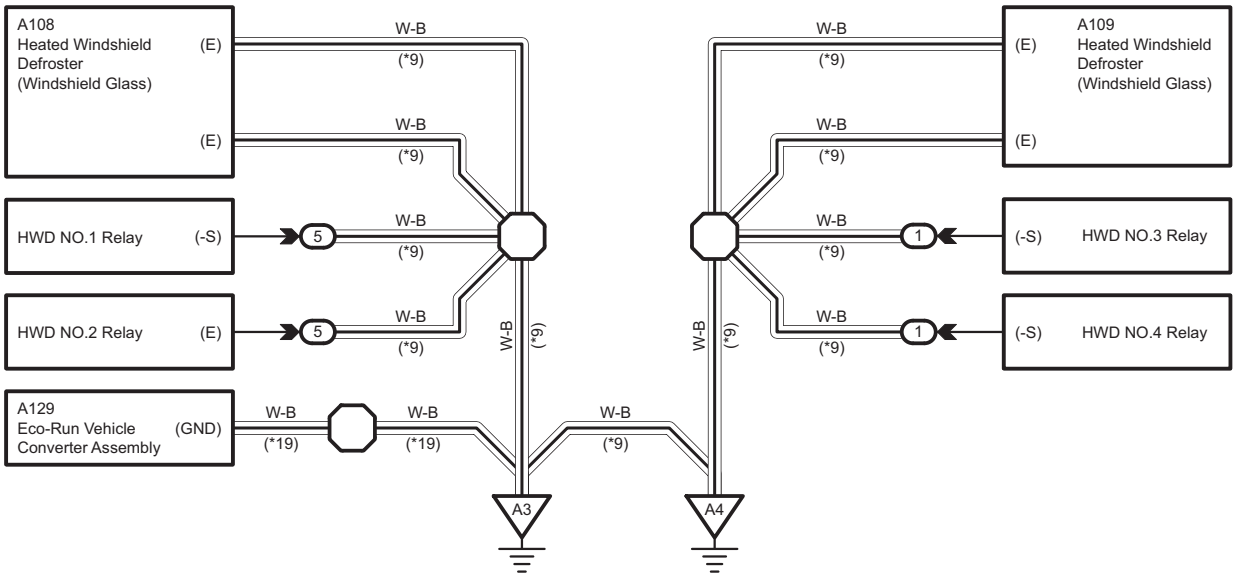


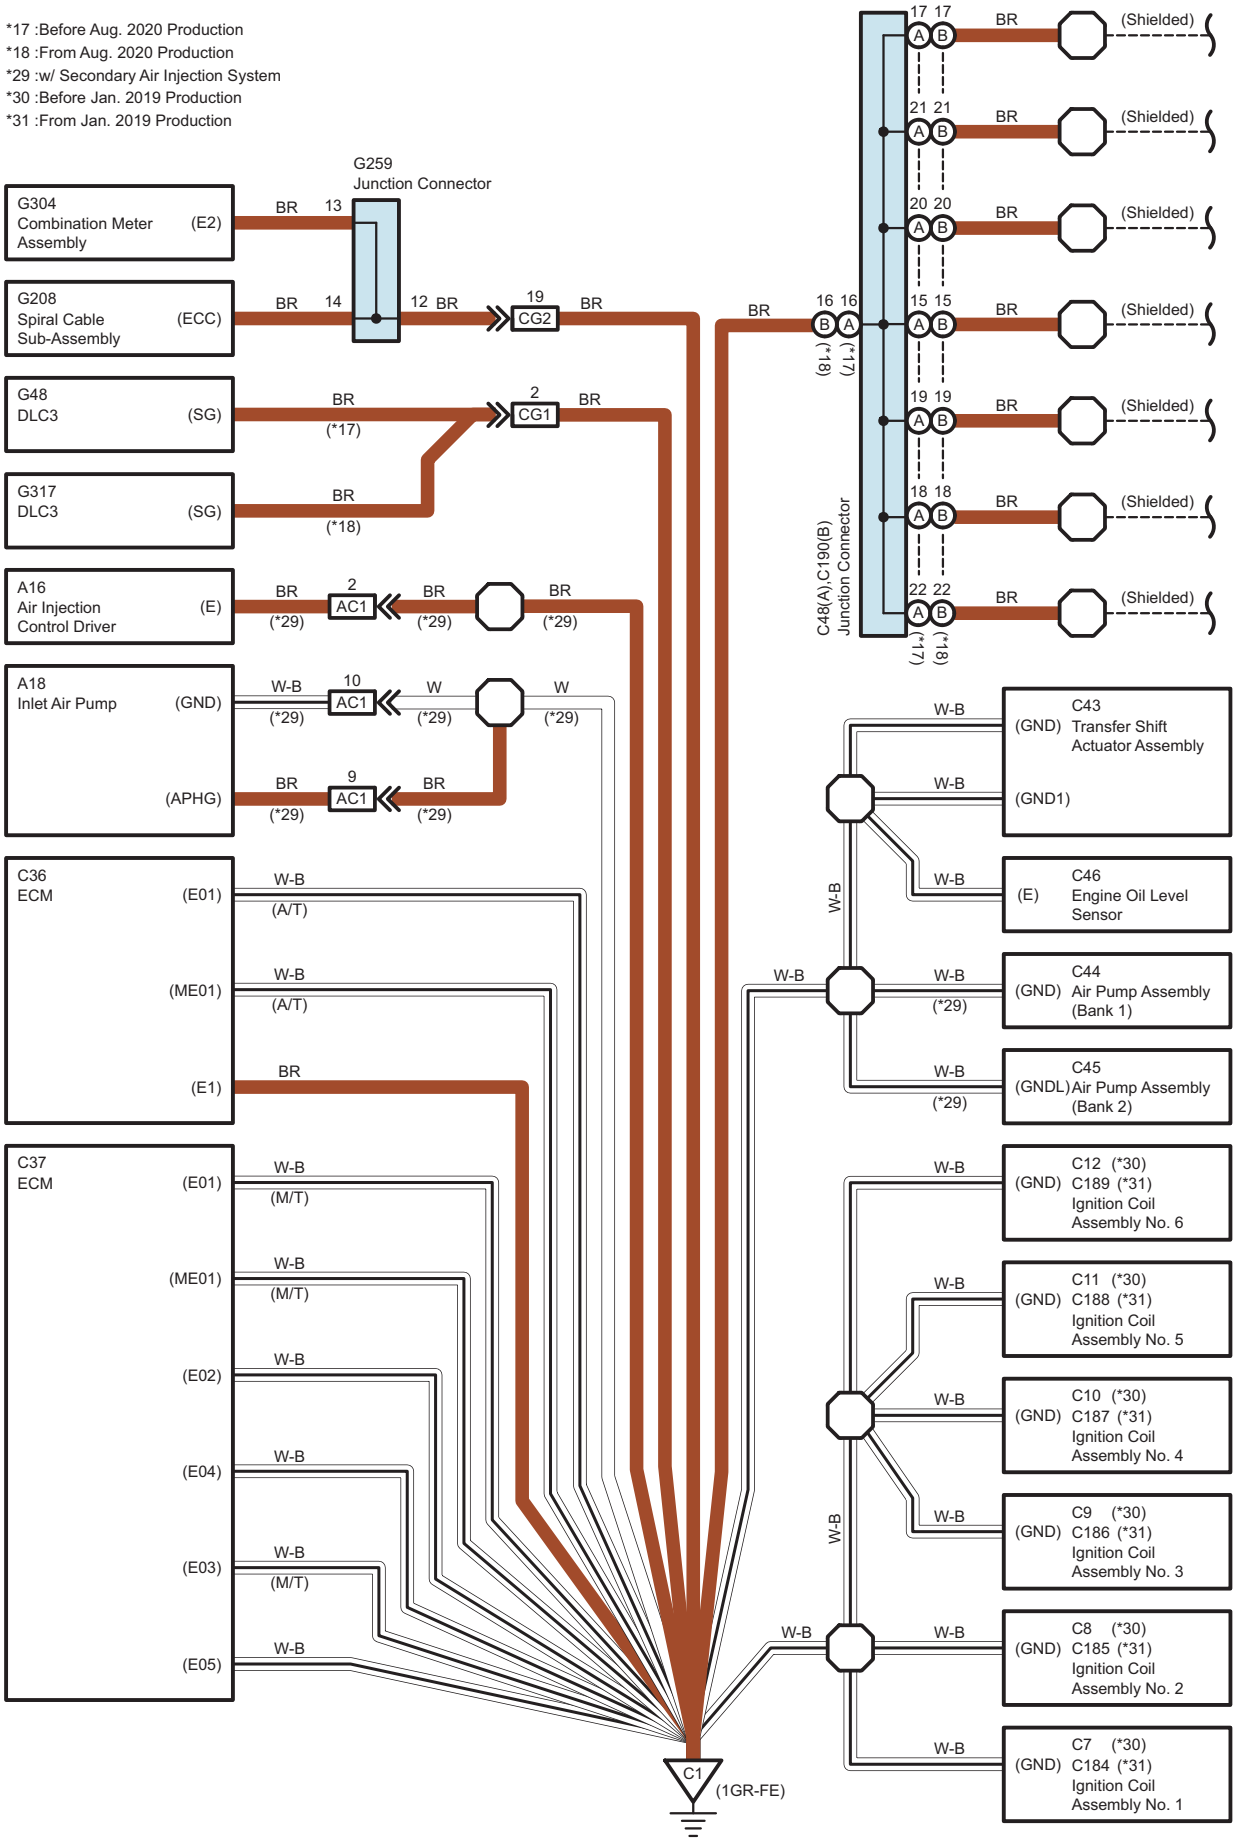

*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*29 :w/ Secondary Air Injection System
*30 :Before Jan. 2019 Production
*31 :From Jan. 2019 Production
G259
Junction Connector
G304
Combination Meter Assembly
(E2)
G208
Spiral Cable Sub-Assembly
(ECC)
G48
DLC3
(SG)
G317
DLC3
(SG)
A16
Air Injection Control Driver
(E)
A18
Inlet Air Pump
(GND)
(APHG)
C36
ECM
(E01)
(ME01)
(E1)
C37
ECM
(E01)
(ME01)
(E02)
(E04)
(E03)
(E05)
CG1
CG2
AC1
C48(A),C190(B)
Junction Connector
(Shielded)
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
C46
Engine Oil Level Sensor
(E)
C44
Air Pump Assembly (Bank 1)
(GND)
C45
Air Pump Assembly (Bank 2)
(GNDL)
C12 (*30)
C189 (*31)
Ignition Coil Assembly No. 6
C11 (*30)
C188 (*31)
Ignition Coil Assembly No. 5
C10 (*30)
C187 (*31)
Ignition Coil Assembly No. 4
C9 (*30)
C186 (*31)
Ignition Coil Assembly No. 3
C8 (*30)
C185 (*31)
Ignition Coil Assembly No. 2
C7 (*30)
C184 (*31)
Ignition Coil Assembly No. 1
C1
(1GR-FE)

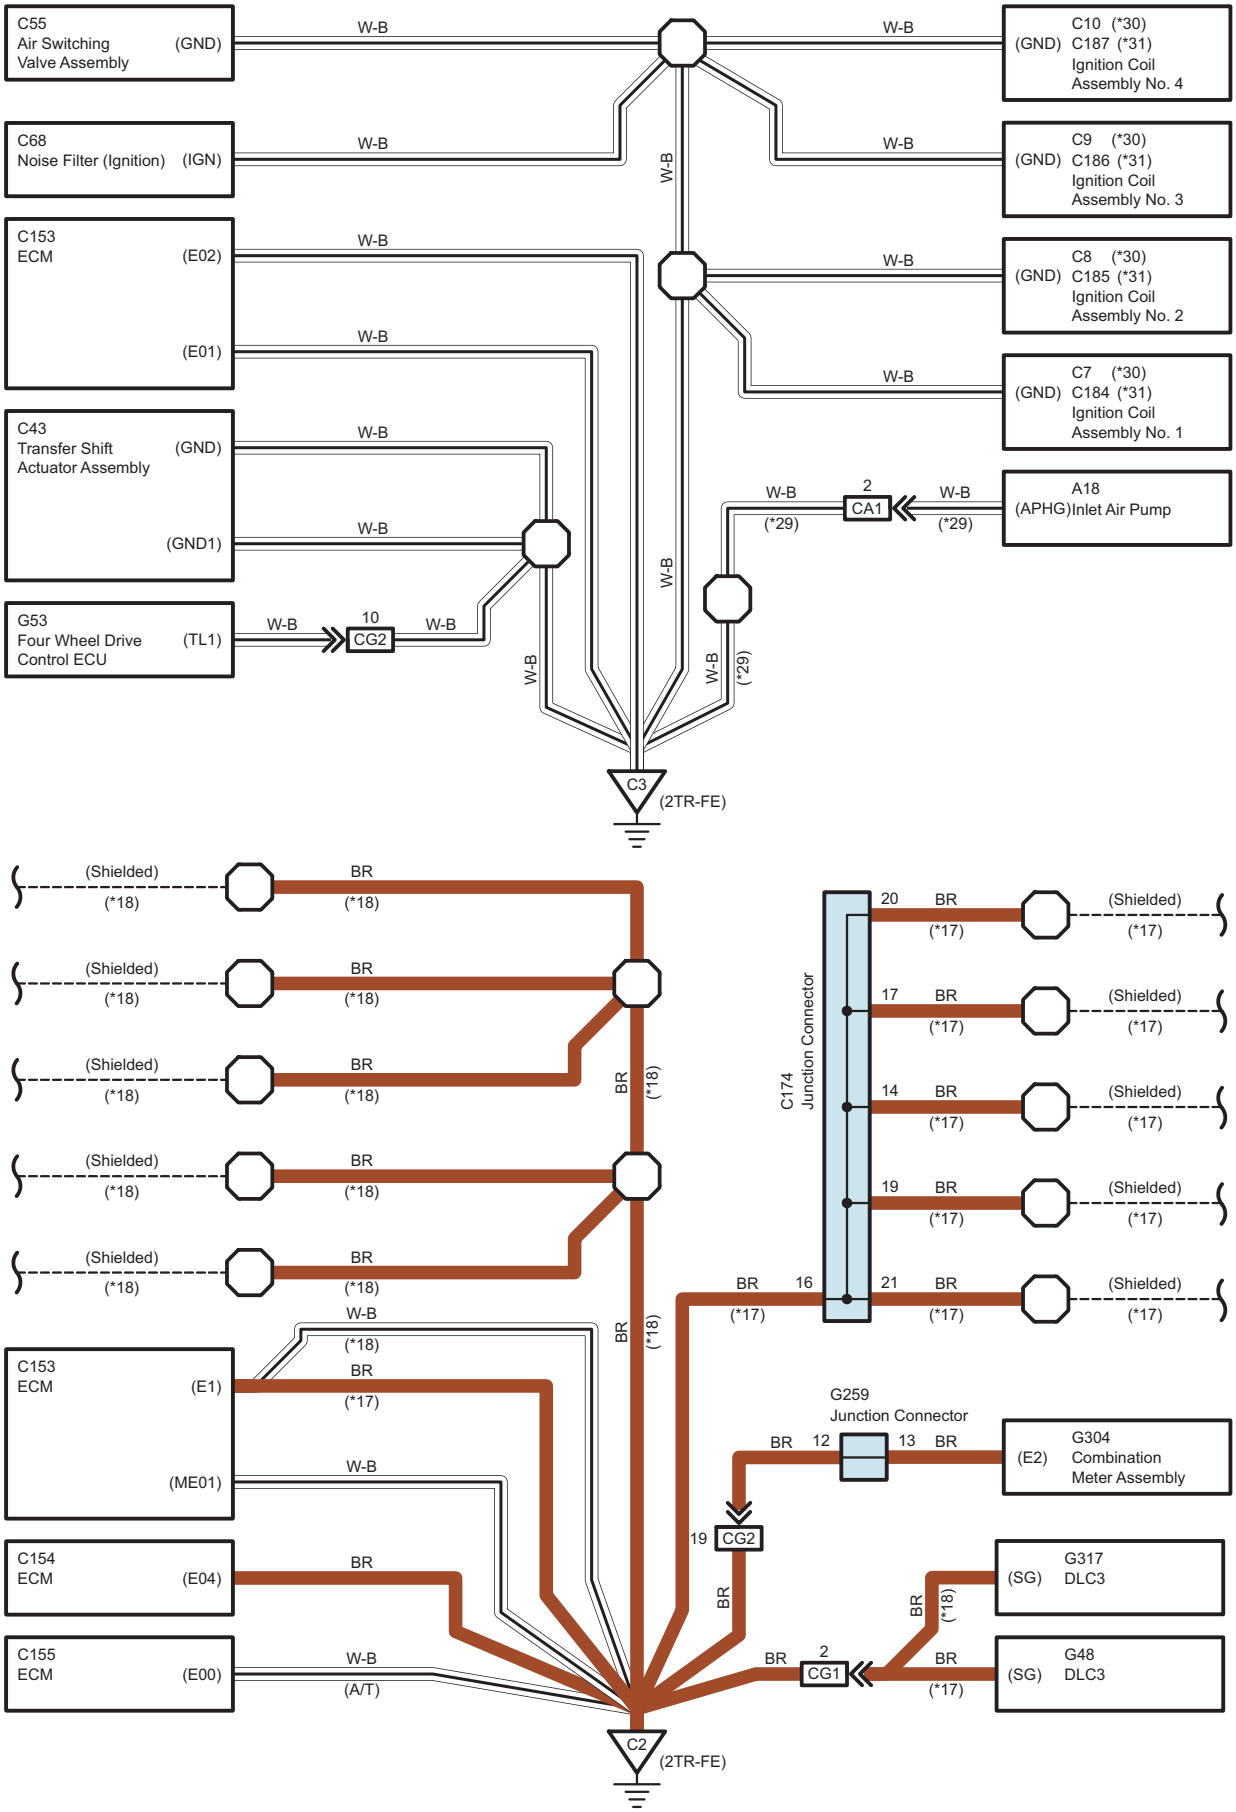
C55
Air Switching Valve Assembly
(GND)
C68
Noise Filter (Ignition)
(IGN)
C153
ECM
(E02)
(E01)
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
G53
Four Wheel Drive Control ECU
(TL1)
W-B
10
CG2
C3
(2TR-FE)
C10 (*30)
(GND) C187 (*31)
Ignition Coil Assembly No. 4
C9 (*30)
(GND) C186 (*31)
Ignition Coil Assembly No. 3
C8 (*30)
(GND) C185 (*31)
Ignition Coil Assembly No. 2
C7 (*30)
(GND) C184 (*31)
Ignition Coil Assembly No. 1
A18
(APHG) Inlet Air Pump
2
CA1
(*29)
(Shielded)
(*18)
BR
C174
Junction Connector
20
17
14
19
16
21
(*17)
C153
ECM
(E1)
(ME01)
C154
ECM
(E04)
C155
ECM
(E00)
(A/T)
G259
Junction Connector
12
13
G304
(E2)
Combination Meter Assembly
19
CG1
G317
(SG)
DLC3
G48
(SG)
DLC3
C2
(2TR-FE)

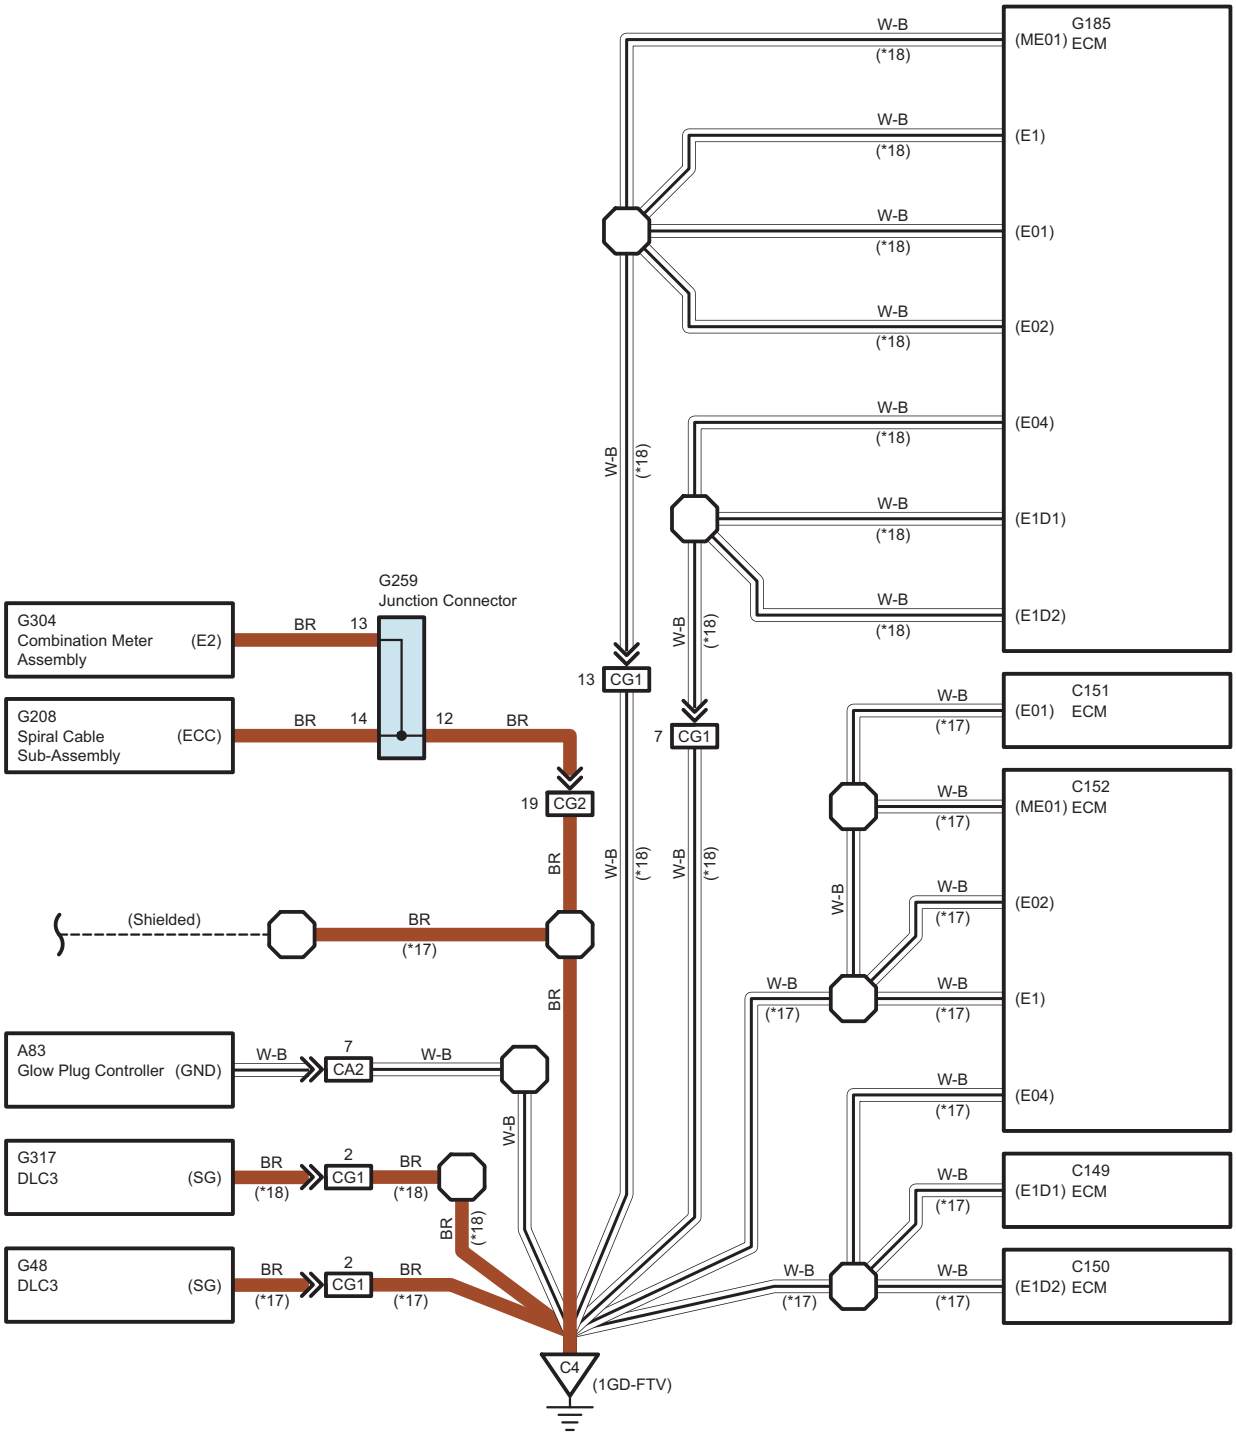

G185
(ME01) ECM
(E1)
(E01)
(E02)
(E04)
(E1D1)
(E1D2)
W-B
(*18)
C151
(E01) ECM
C152
(ME01) ECM
(*17)
C149
(E1D1) ECM
C150
(E1D2) ECM
G259
Junction Connector
G304
Combination Meter Assembly
(E2)
G208
Spiral Cable Sub-Assembly
(ECC)
BR
13
14
12
CG1
CG2
CA2
19
7
2
(Shielded)
A83
Glow Plug Controller
(GND)
G317
DLC3
(SG)
G48
DLC3
(SG)
C4
(1GD-FTV)


*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production

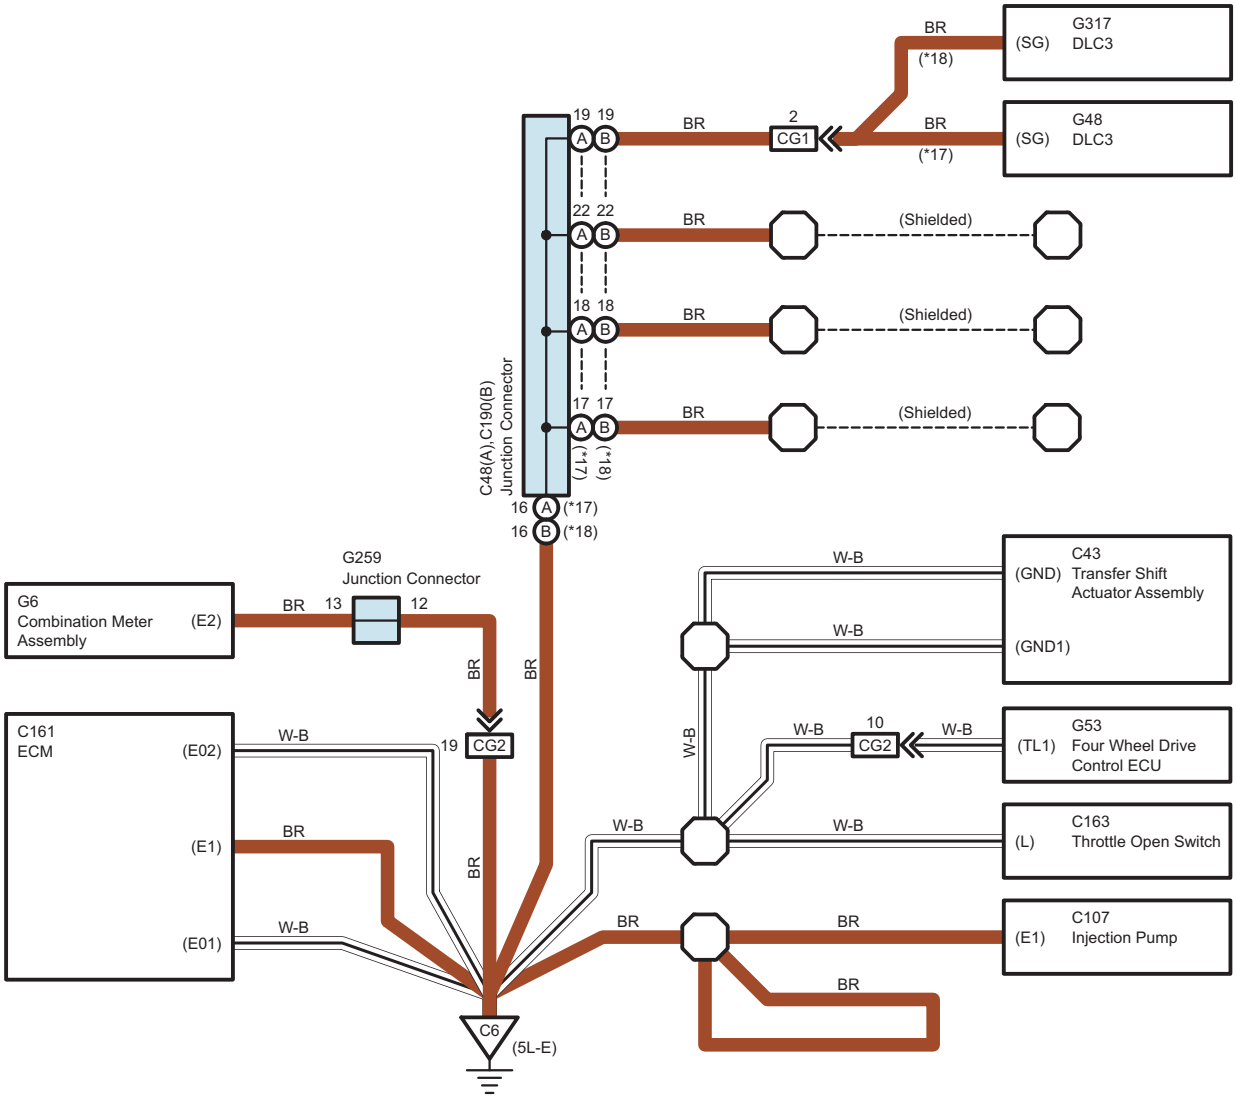


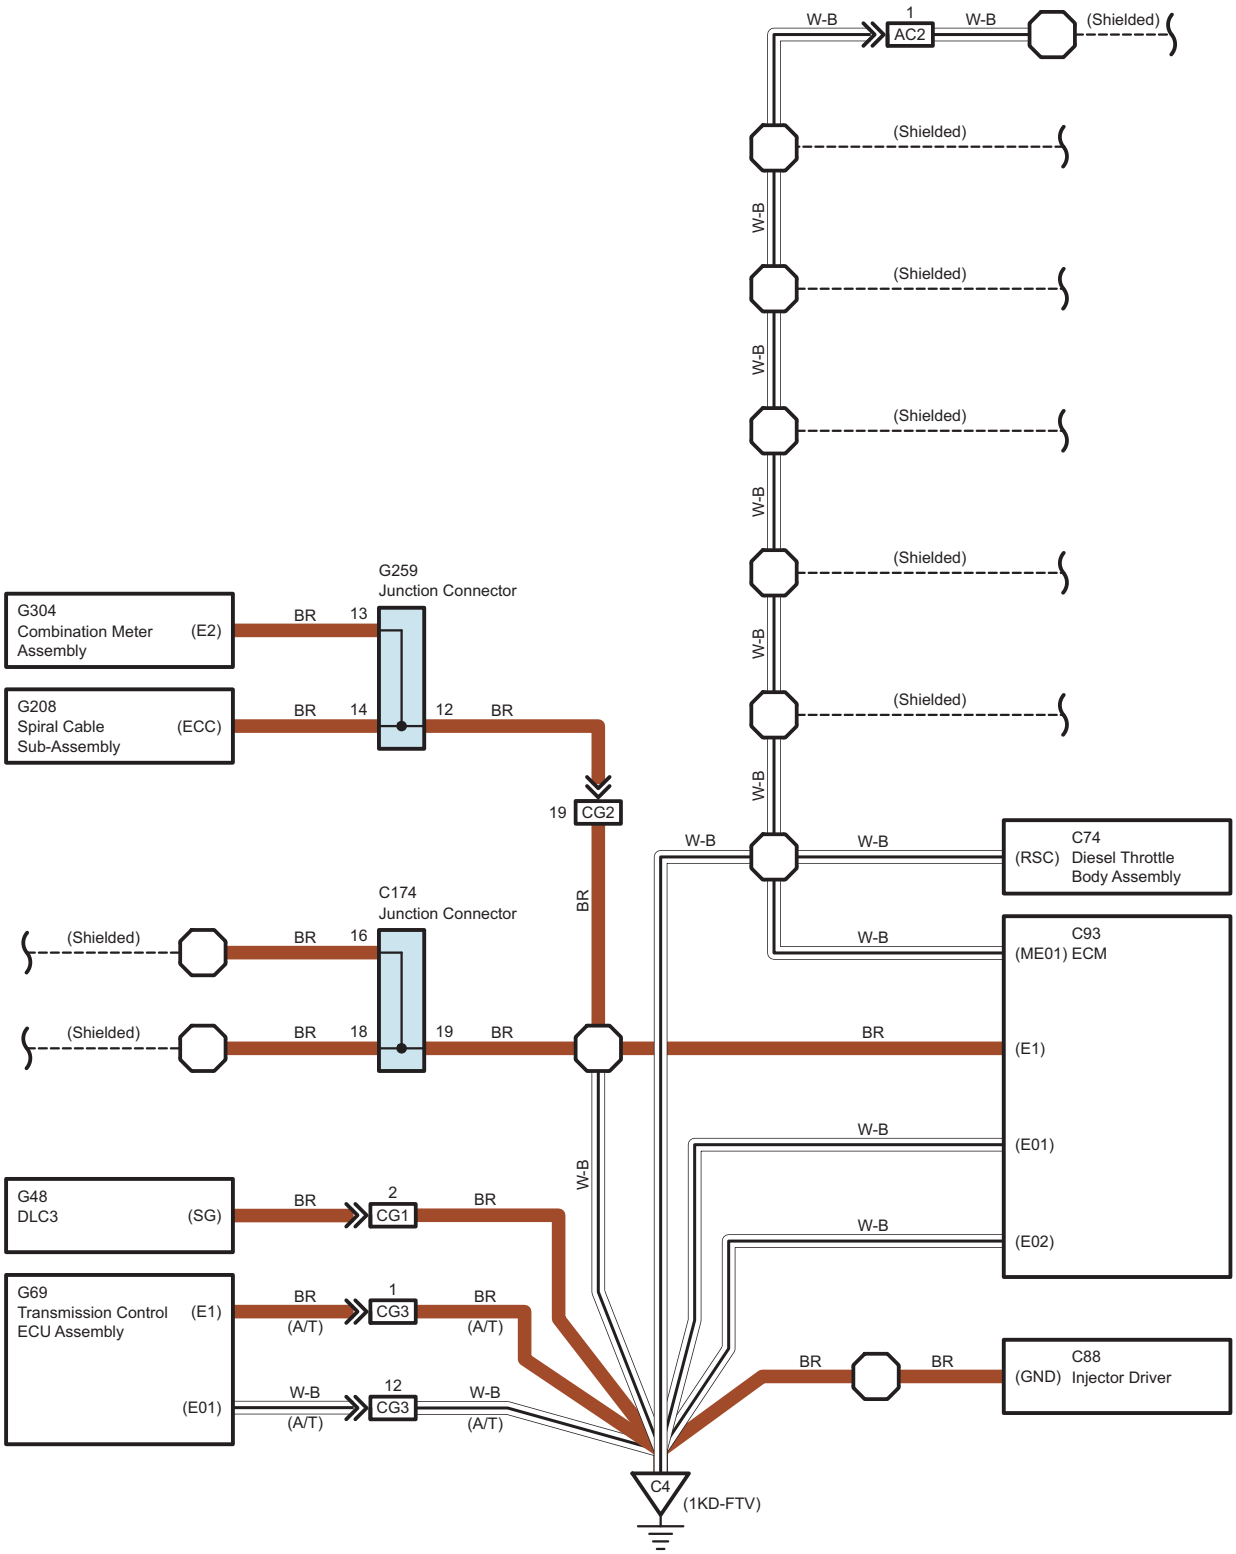
W-B
1
AC2
W-B
(Shielded)
(Shielded)
(Shielded)
(Shielded)
(Shielded)
(Shielded)
W-B
G259
Junction Connector
G304
Combination Meter
Assembly
(E2)
BR
13
G208
Spiral Cable
Sub-Assembly
(ECC)
BR
14
12
BR
19
CG2
BR
C74
(RSC)
Diesel Throttle
Body Assembly
C174
Junction Connector
(Shielded)
BR
16
(Shielded)
BR
18
19
BR
C93
(ME01)
ECM
(E1)
(E01)
(E02)
G48
DLC3
(SG)
BR
2
CG1
BR
G69
Transmission Control
ECU Assembly
(E1)
(E01)
BR
(A/T)
1
CG3
BR
(A/T)
W-B
(A/T)
12
CG3
W-B
(A/T)
BR
BR
C88
(GND)
Injector Driver
C4
(1KD-FTV)

*4 :1GD-FTV
*6 :Except 5L-E
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*30 :Before Jan. 2019 Production
*31 :From Jan. 2019 Production
*32 :Audioless Type
*33 :Radio & Display Receiver Assembly Type
*34 :Navigation Receiver Assembly Type
*35 :w/ Navigation System
*36 :w/ Stereo Component Amplifier Assembly
*37 :JBL Type
*38 :PIONEER Type
*39 :w/ Entry & Start System
*40 :w/ Power Tilt and Power Telescopic

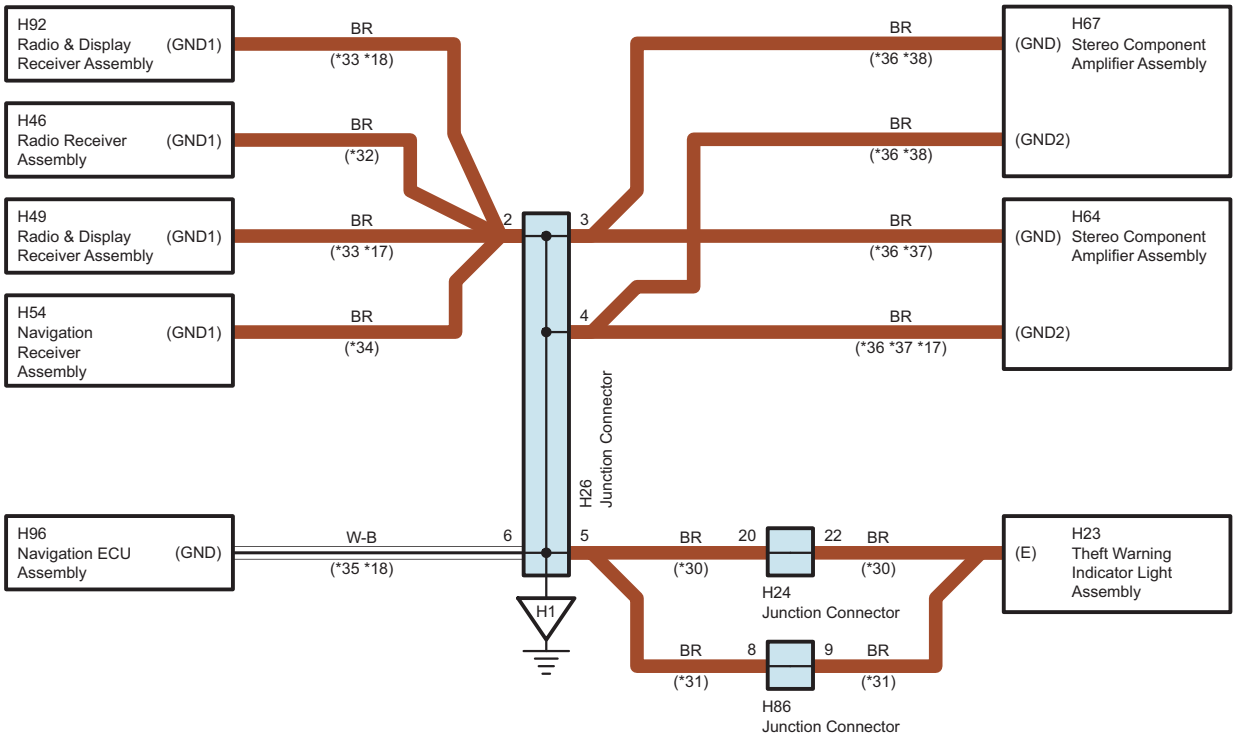


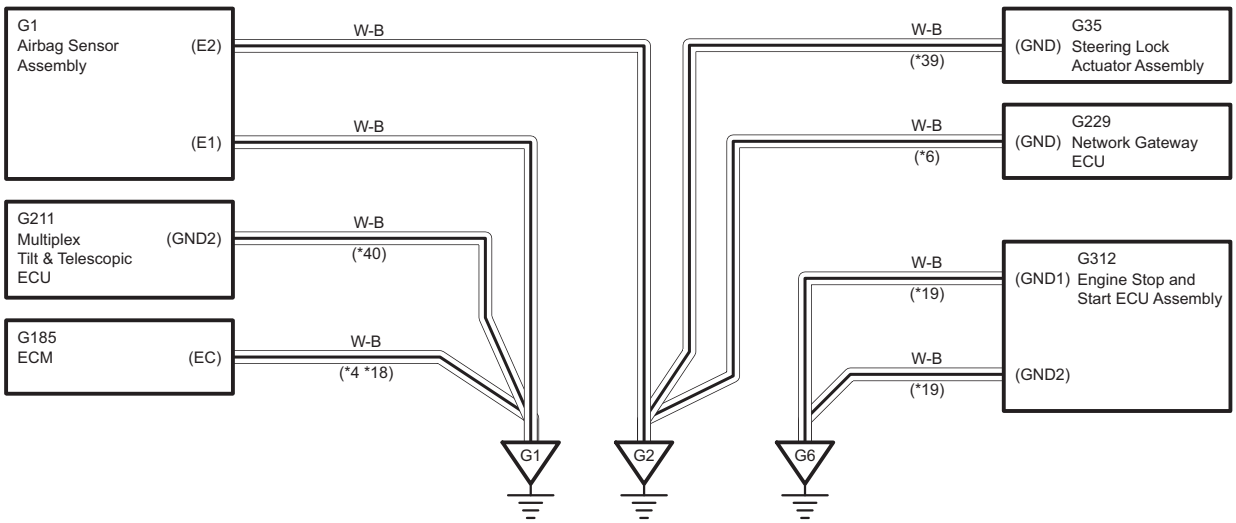

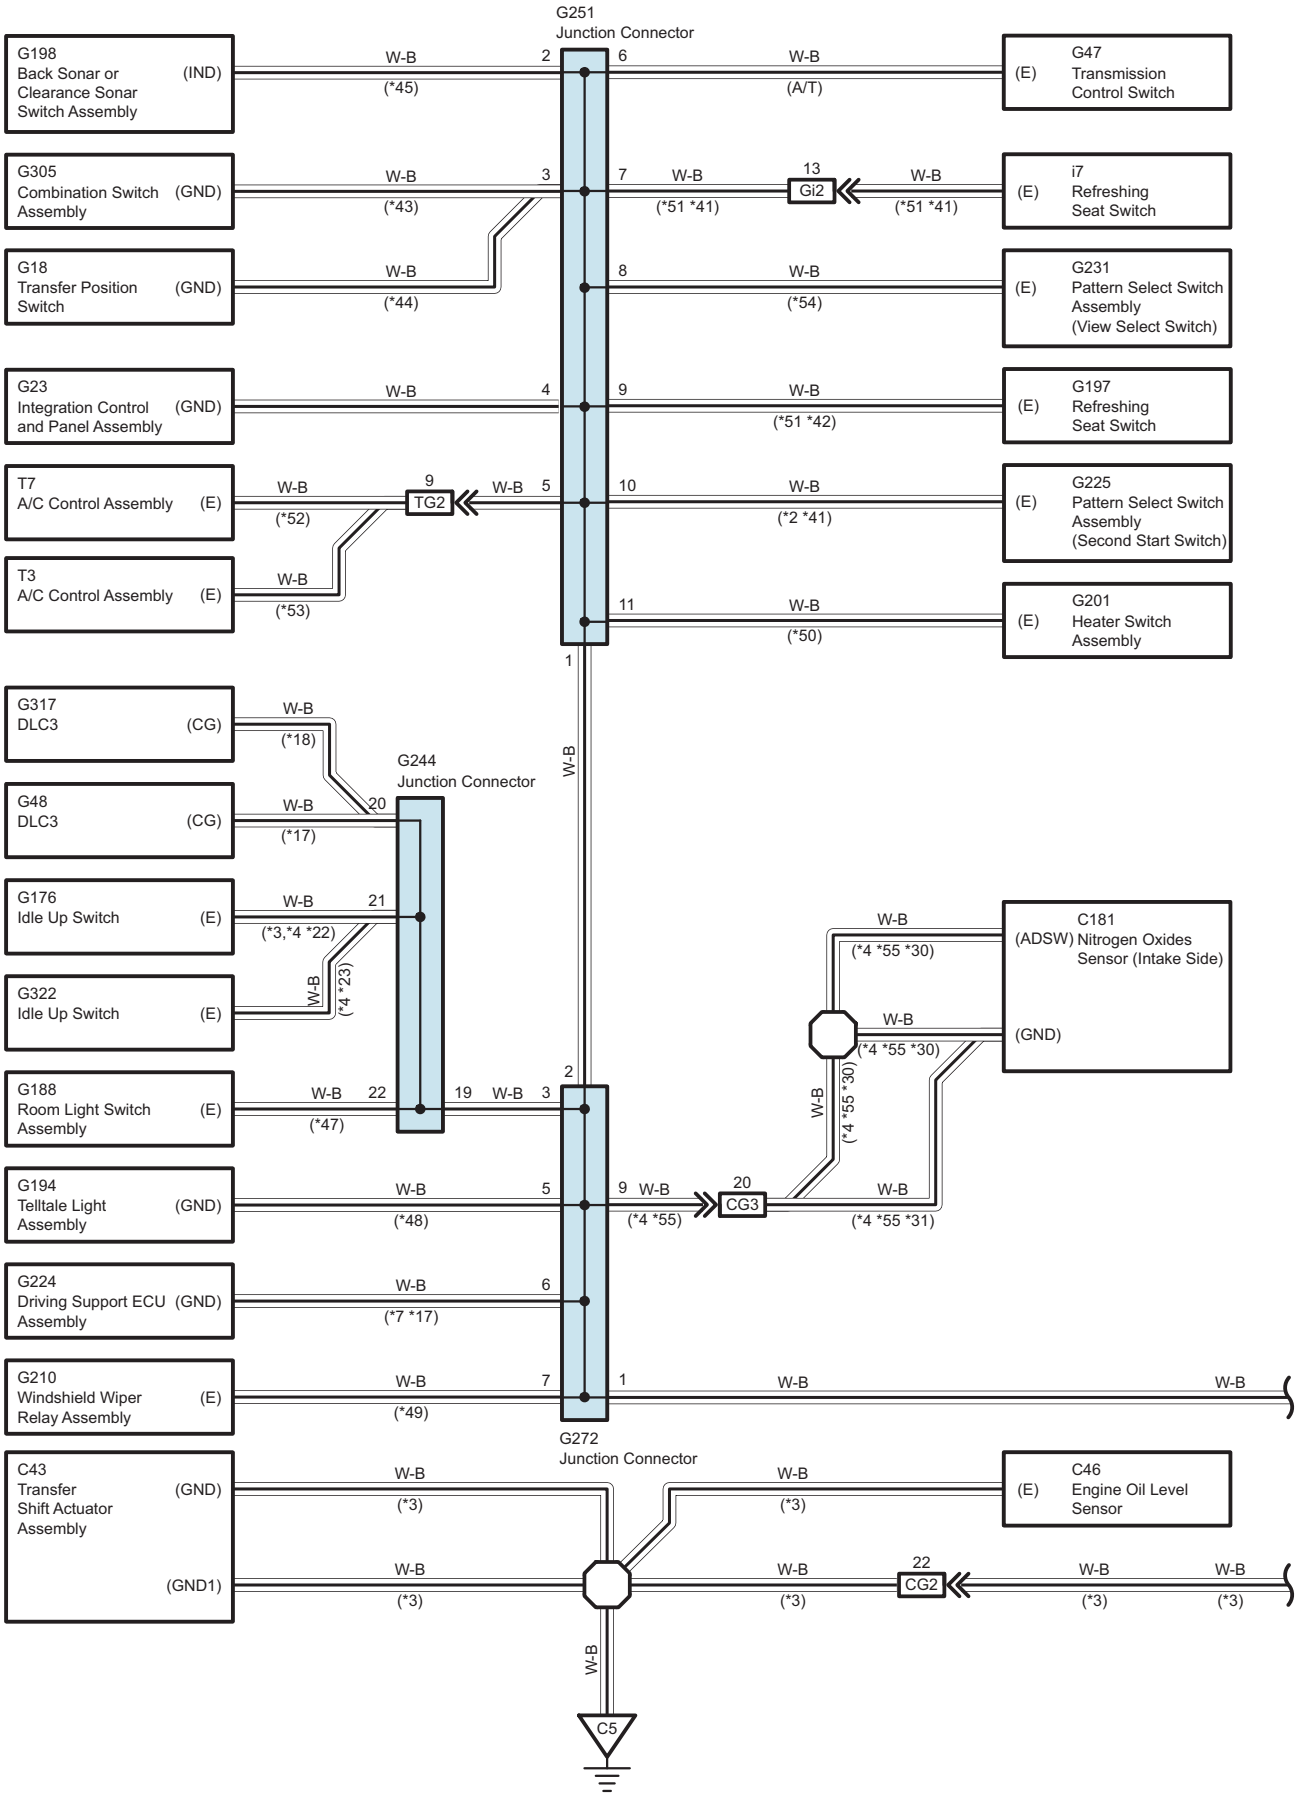

G251
Junction Connector
G198
Back Sonar or Clearance Sonar Switch Assembly
(IND)
G305
Combination Switch Assembly
(GND)
G18
Transfer Position Switch
(GND)
G23
Integration Control and Panel Assembly
(GND)
T7
A/C Control Assembly
(E)
T3
A/C Control Assembly
(E)
G47
Transmission Control Switch
i7
Refreshing Seat Switch
G231
Pattern Select Switch Assembly (View Select Switch)
G197
Refreshing Seat Switch
G225
Pattern Select Switch Assembly (Second Start Switch)
G201
Heater Switch Assembly
TG2
Gi2
G317
DLC3
(CG)
G48
DLC3
(CG)
G176
Idle Up Switch
(E)
G322
Idle Up Switch
(E)
G244
Junction Connector
G188
Room Light Switch Assembly
(E)
G194
Telltale Light Assembly
(GND)
G224
Driving Support ECU Assembly
(GND)
G210
Windshield Wiper Relay Assembly
(E)
C181
Nitrogen Oxides Sensor (Intake Side)
(ADSW)
(GND)
CG3
G272
Junction Connector
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
C46
Engine Oil Level Sensor
(E)
CG2
C5
W-B
(*45)
(*43)
(*44)
(*52)
(*53)
(*18)
(*17)
(*3,*4 *22)
(*4 *23)
(*47)
(*48)
(*7 *17)
(*49)
(A/T)
(*51 *41)
(*54)
(*51 *42)
(*2 *41)
(*50)
(*4 *55 *30)
(*4 *55)
(*4 *55 *31)
(*3)


*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*7 :w/ Pre-Crash Safety System
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production
*30 :Before Jan. 2019 Production
*31 :From Jan. 2019 Production


*41 :A/T
*42 :M/T
*43 :w/ Crawl
*44 :w/o Crawl
*45 :w/ Back Sonar or Clearance Sonar Switch Assembly
*46 :w/ Double Locking
*47 :w/ Door Illumination
*48 :w/ Airbag Cut Off Switch Cylinder Sub-Assembly
*49 :w/ Auto Wiper
*50 :w/ Power Heater (Combustion Type)
*51 :w/ Seat Heater (Front)
*52 :w/ Seat Heater (Rear)
*53 :w/o Seat Heater (Rear)
*54 :w/ Panoramic View Monitor System
*55 :w/ Particulate Matter Sensor

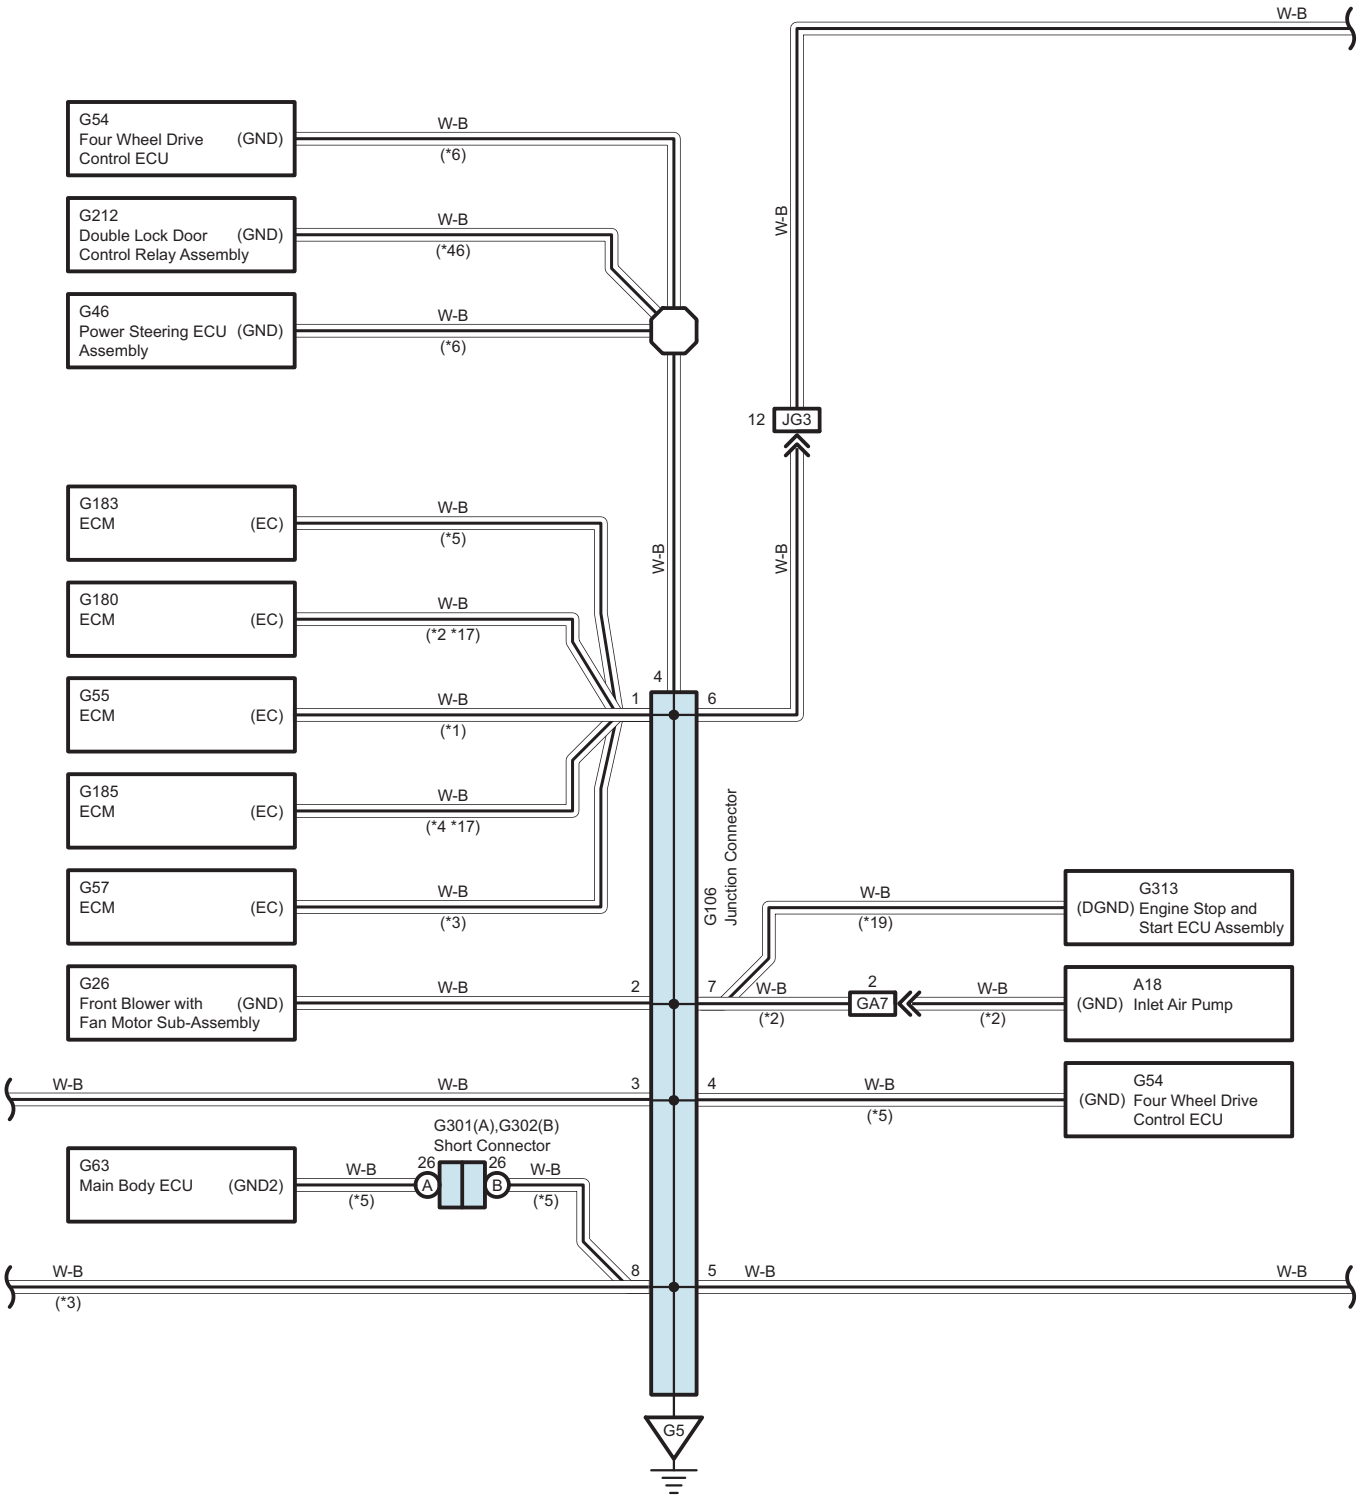


*5 :5L-E
*6 :Except 5L-E
*40 :w/ Power Tilt and Power Telescopic
*46 :w/ Double Locking
*56 :w/ Rear Seat Entertainment
*57 :w/ Automatic Glare-Resistant EC Mirror
*58 :w/ Automatic Retractable Mirror
*59 :w/o Automatic Retractable Mirror
*60 :w/ PTC Heater
*61 :w/ Intrusion Sensor
*62 :w/ Curtain Shield Airbag
*63 :w/o Power Tilt and Power Telescopic
*64 :w/ Sliding Roof

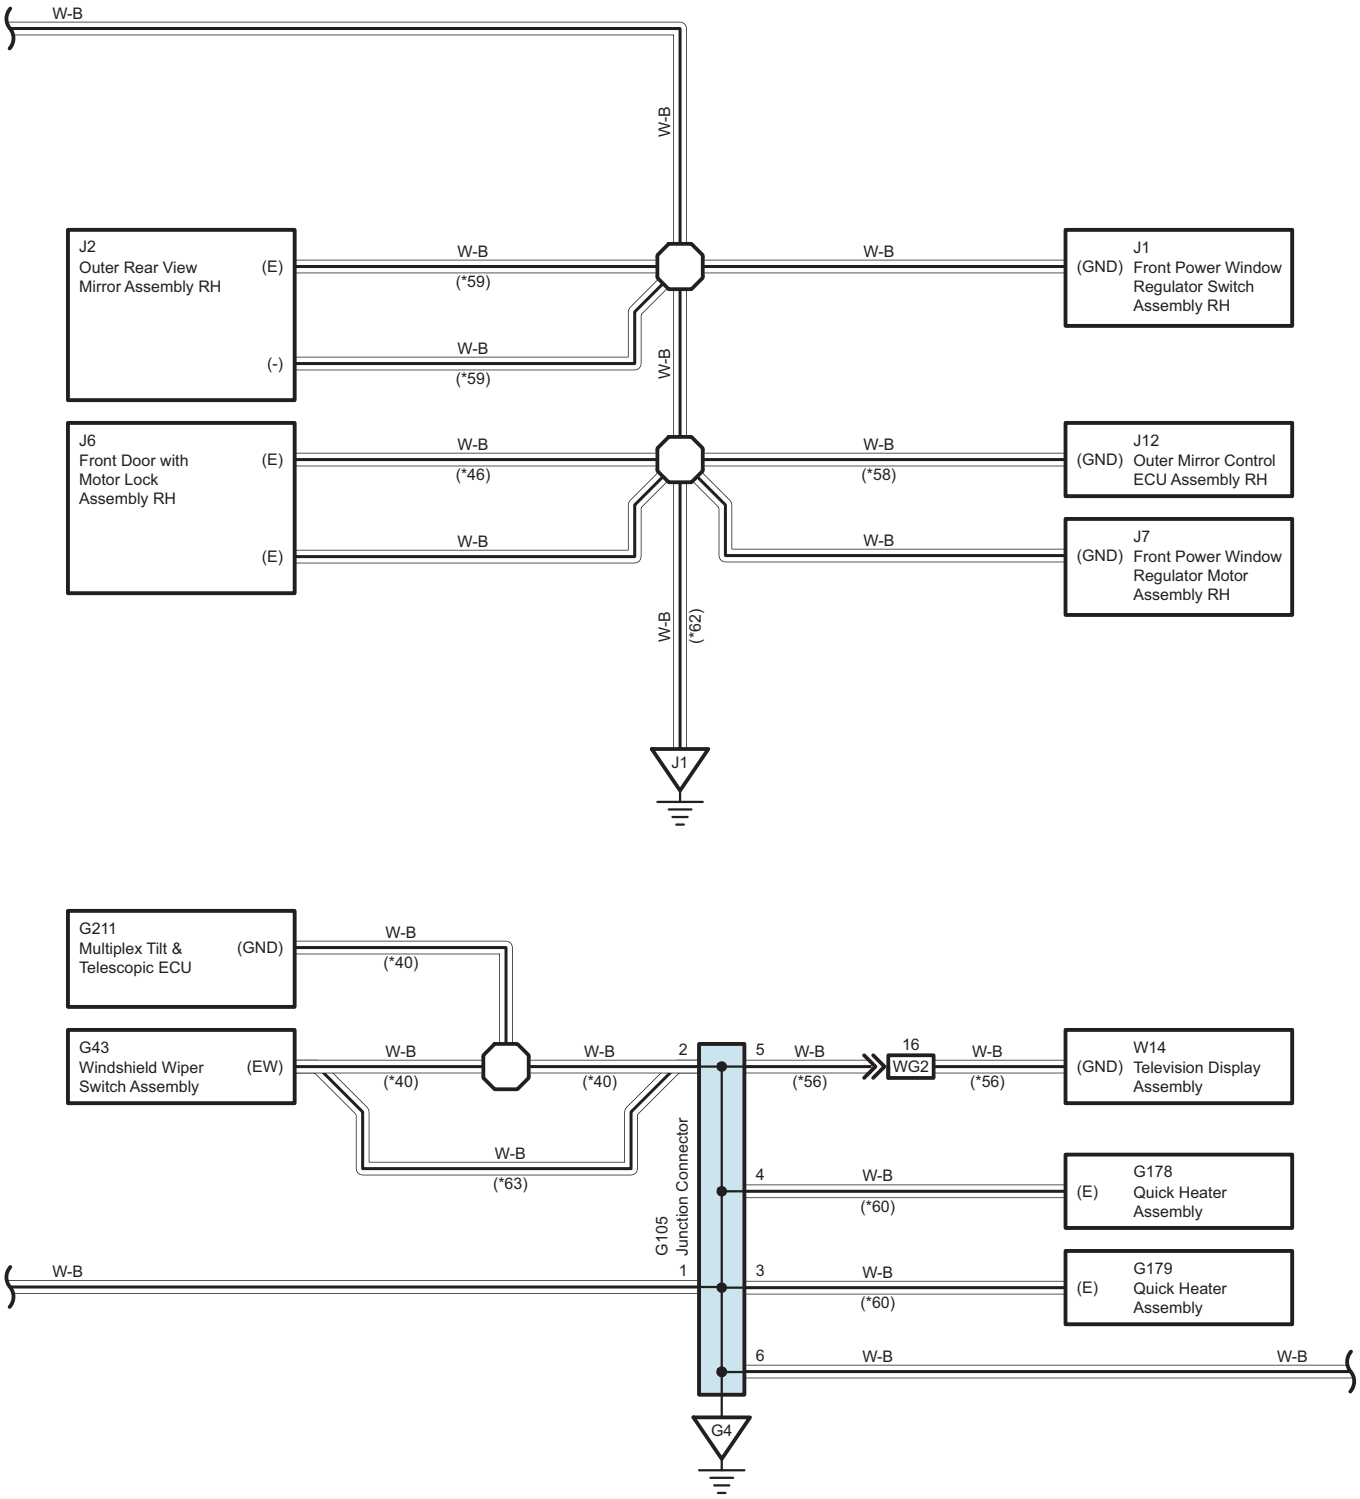


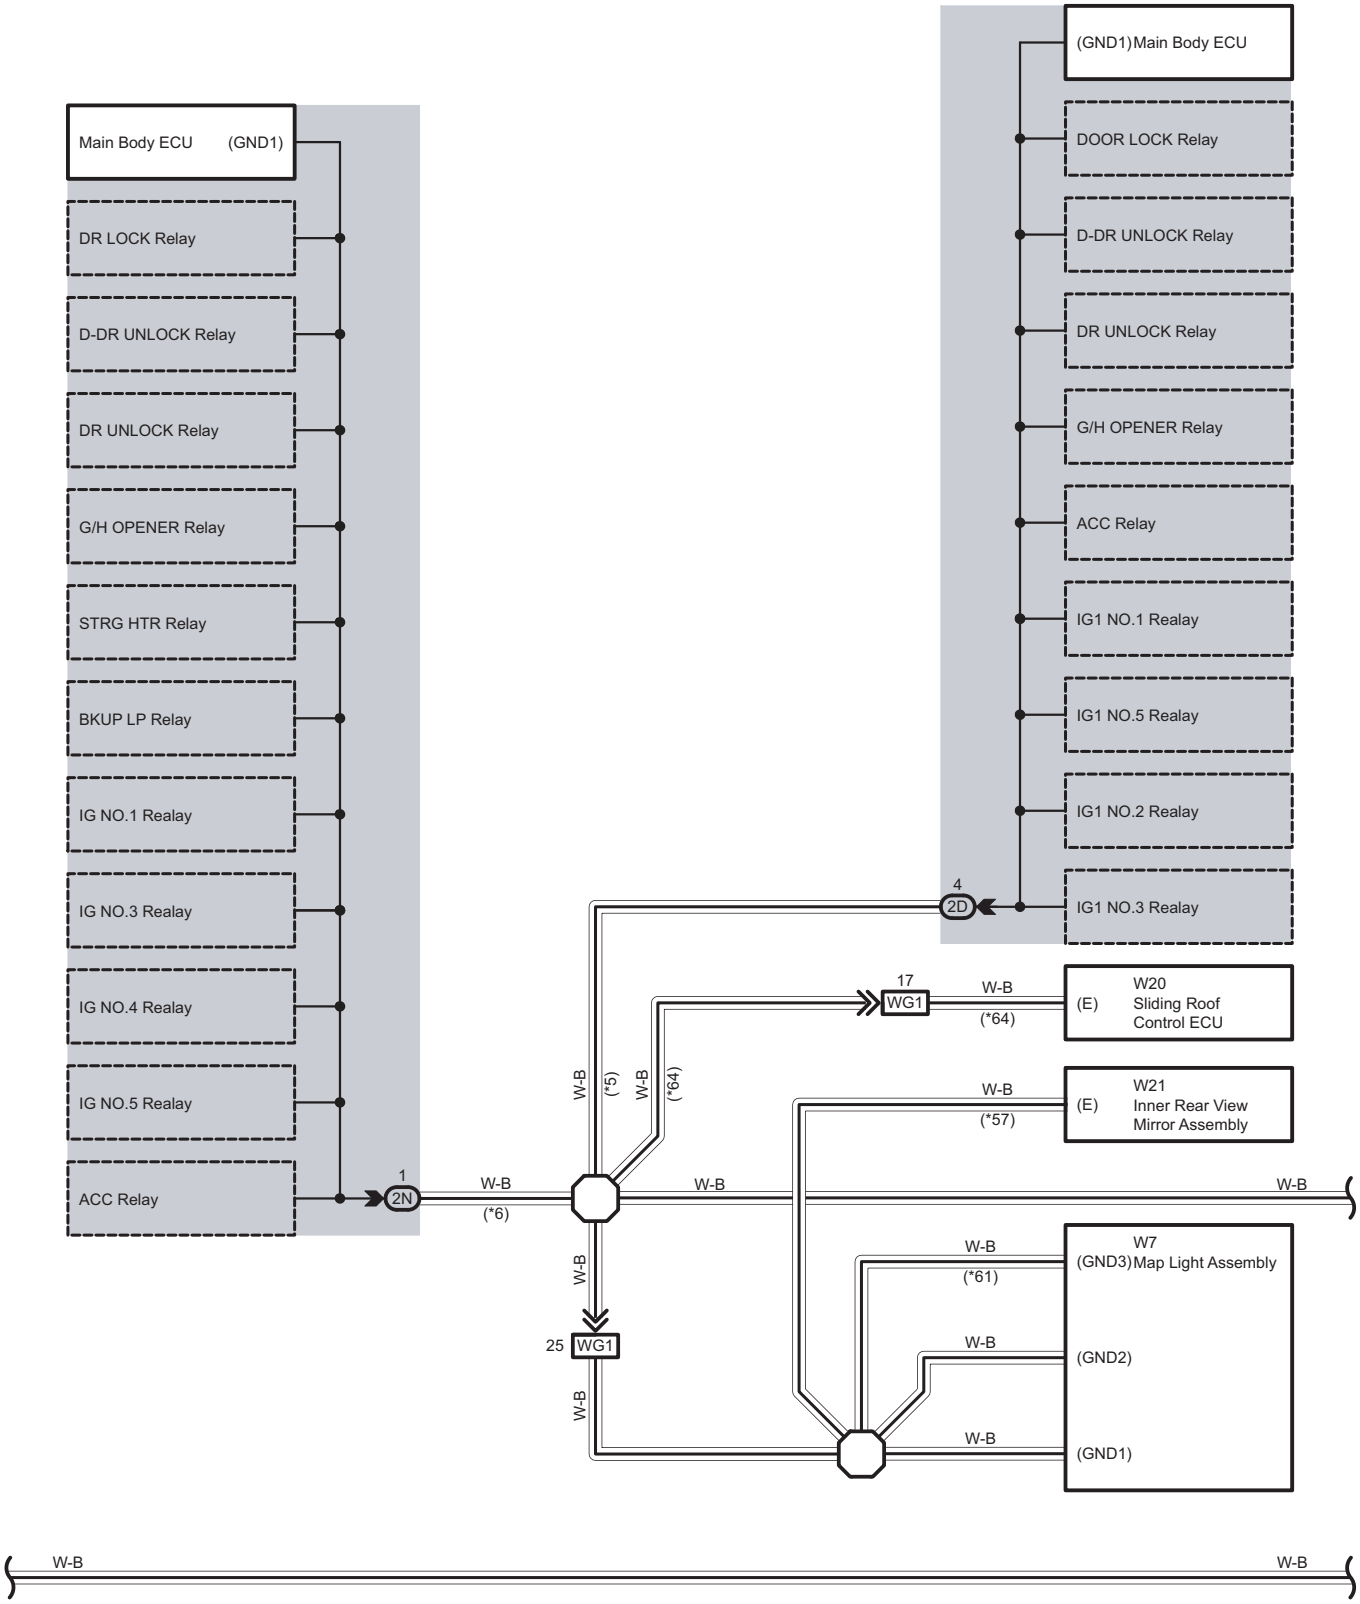

Main Body ECU (GND1)
DR LOCK Relay
D-DR UNLOCK Relay
DR UNLOCK Relay
G/H OPENER Relay
STRG HTR Relay
BKUP LP Relay
IG NO.1 Realay
IG NO.3 Realay
IG NO.4 Realay
IG NO.5 Realay
ACC Relay
1
2N
W-B
(*6)
(GND1) Main Body ECU
DOOR LOCK Relay
D-DR UNLOCK Relay
DR UNLOCK Relay
G/H OPENER Relay
ACC Relay
IG1 NO.1 Realay
IG1 NO.5 Realay
IG1 NO.2 Realay
IG1 NO.3 Realay
4
2D
17
WG1
W-B
(*64)
(E)
W20
Sliding Roof
Control ECU
W-B
(*5)
W-B
(*64)
W-B
(*57)
(E)
W21
Inner Rear View
Mirror Assembly
W-B
W-B
W-B
W-B
(*61)
(GND3)
W7
Map Light Assembly
25
WG1
W-B
(GND2)
W-B
W-B
(GND1)
W-B
W-B

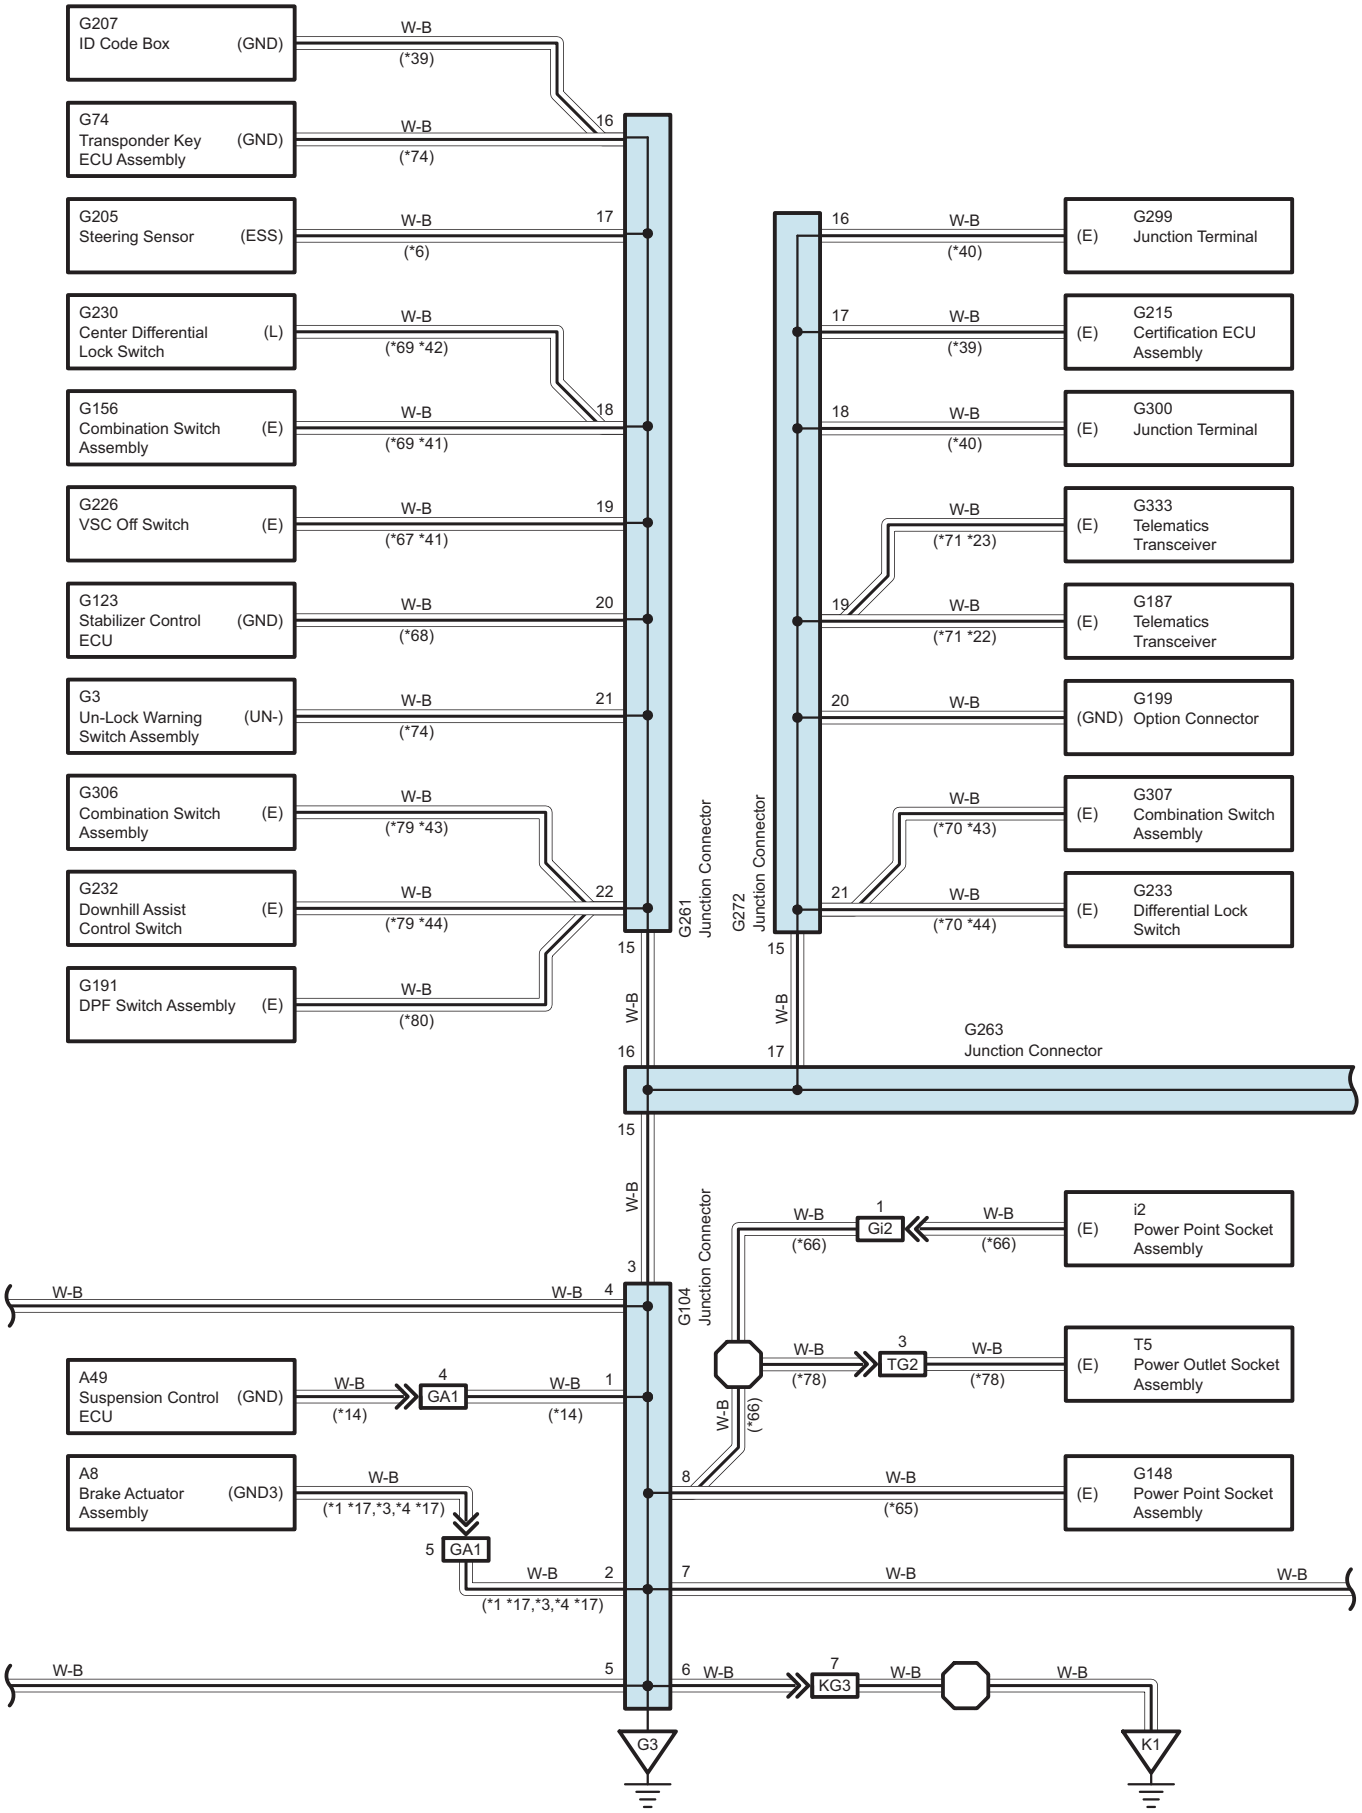
G207
ID Code Box
(GND)
W-B
(*39)
G74
Transponder Key ECU Assembly
(GND)
W-B
(*74)
G205
Steering Sensor
(ESS)
W-B
(*6)
G230
Center Differential Lock Switch
(L)
W-B
(*69 *42)
G156
Combination Switch Assembly
(E)
W-B
(*69 *41)
G226
VSC Off Switch
(E)
W-B
(*67 *41)
G123
Stabilizer Control ECU
(GND)
W-B
(*68)
G3
Un-Lock Warning Switch Assembly
(UN-)
W-B
(*74)
G306
Combination Switch Assembly
(E)
W-B
(*79 *43)
G232
Downhill Assist Control Switch
(E)
W-B
(*79 *44)
G191
DPF Switch Assembly
(E)
W-B
(*80)
G261 Junction Connector
G272 Junction Connector
G263 Junction Connector
G104 Junction Connector
G299
Junction Terminal
(E)
G215
Certification ECU Assembly
(E)
G300
Junction Terminal
(E)
G333
Telematics Transceiver
(E)
G187
Telematics Transceiver
(E)
G199
Option Connector
(GND)
G307
Combination Switch Assembly
(E)
G233
Differential Lock Switch
(E)
i2
Power Point Socket Assembly
(E)
T5
Power Outlet Socket Assembly
(E)
G148
Power Point Socket Assembly
(E)
A49
Suspension Control ECU
(GND)
W-B
(*14)
GA1
A8
Brake Actuator Assembly
(GND3)
W-B
(*1 *17,*3,*4 *17)
GA1
W-B
(*1 *17,*3,*4 *17)
Gi2
W-B
(*66)
TG2
W-B
(*78)
W-B
(*66)
W-B
(*65)
KG3
W-B
G3
K1

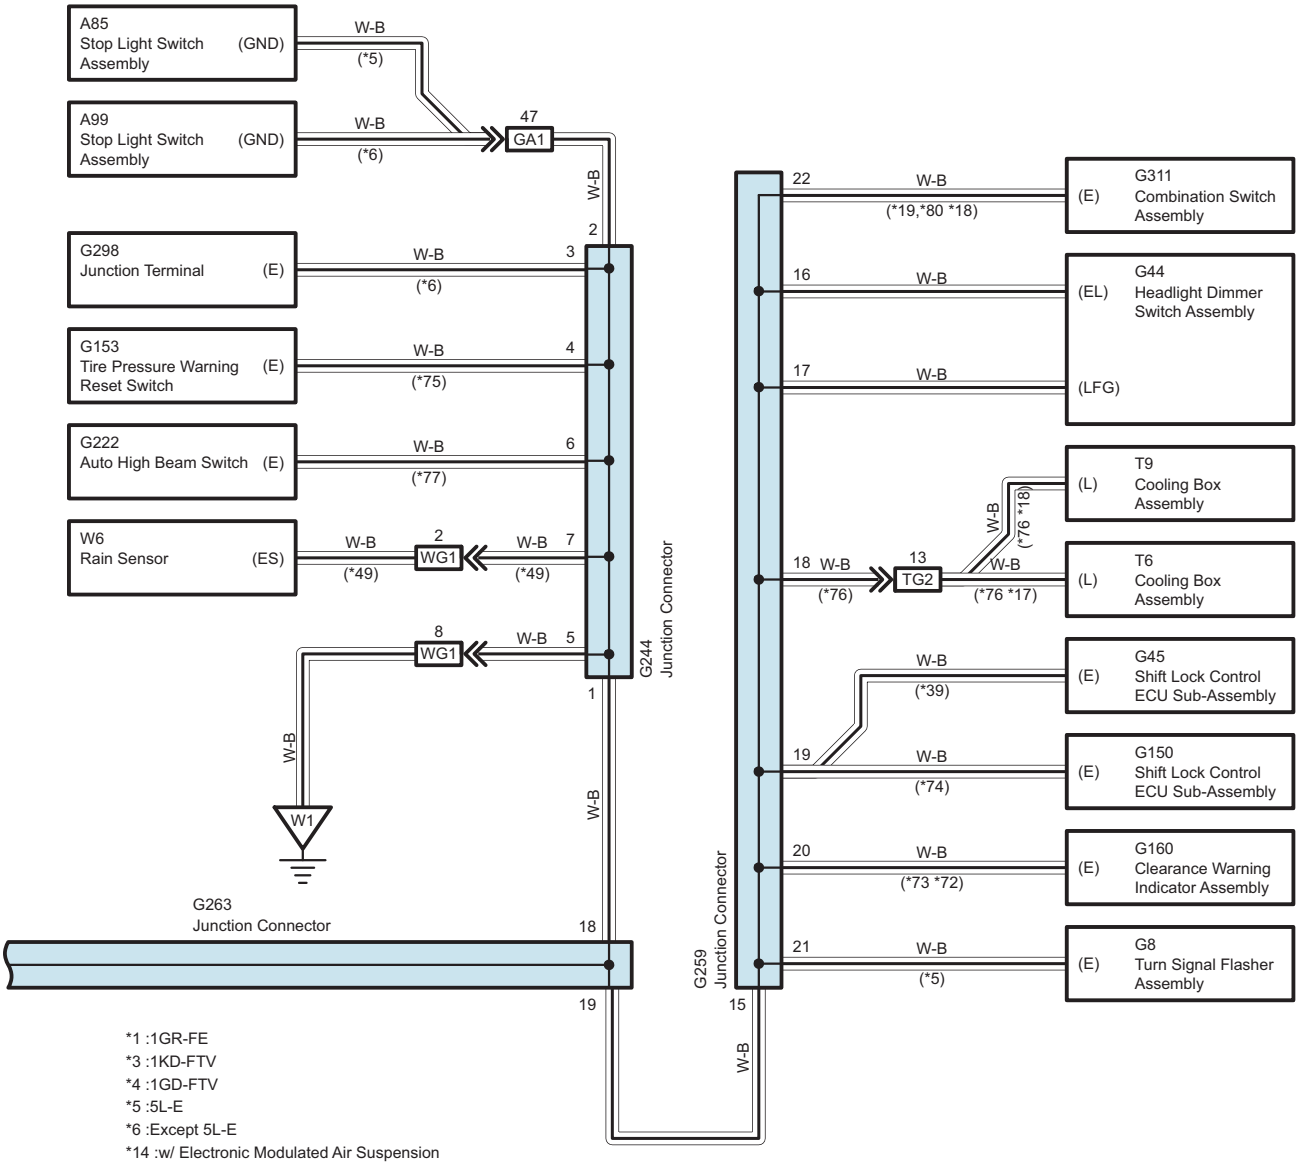



*1 :1GR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*14 :w/ Electronic Modulated Air Suspension
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production
*39 :w/ Entry & Start System
*40 :w/ Power Tilt and Power Telescopic
*41 :A/T
*42 :M/T
*43 :w/ Crawl
*44 :w/o Crawl
*49 :w/ Auto Wiper
*65 :Bench Seat
*66 :Separate Seat
*67 :w/ VSC
*68 :w/ Kinetic Dynamic Suspension System
*69 :w/ Center Differential Lock
*70 :w/ Rear Differential Lock
*71 :w/ Telematics System
*72 :w/ Clearance Warning Indicator Assembly
*73 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
*74 :w/o Entry & Start System
*75 :w/ Tire Pressure Warning System
*76 :w/ Cool Box
*77 :w/ Automatic High Beam System
*78 :w/ Center Power Outlet Socket
*79 :w/ Downhill Assist Control
*80 :w/ DPF Switch Assembly



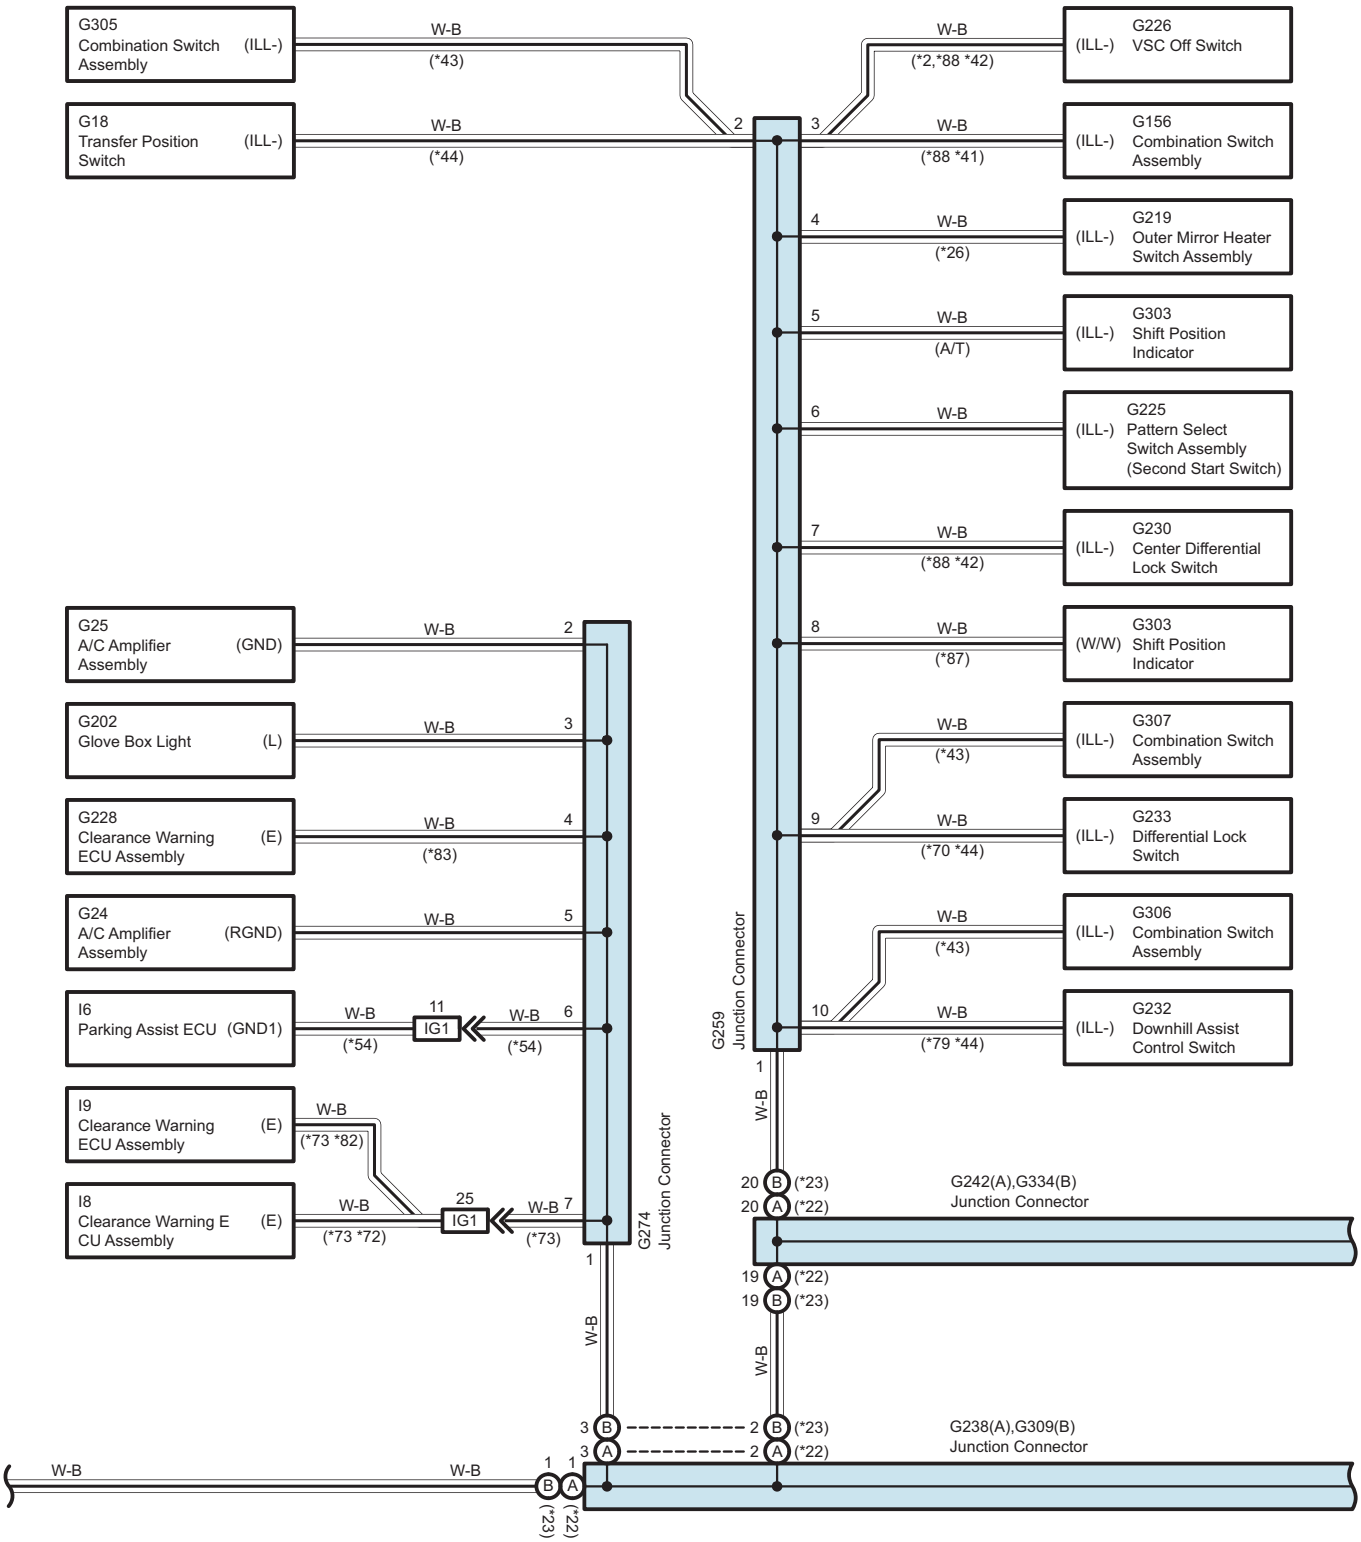

G305
Combination Switch Assembly
(ILL-)
G18
Transfer Position Switch
(ILL-)
G226
(ILL-) VSC Off Switch
G156
(ILL-) Combination Switch Assembly
G219
(ILL-) Outer Mirror Heater Switch Assembly
G303
(ILL-) Shift Position Indicator
G225
(ILL-) Pattern Select Switch Assembly (Second Start Switch)
G230
(ILL-) Center Differential Lock Switch
G303
(W/W) Shift Position Indicator
G307
(ILL-) Combination Switch Assembly
G233
(ILL-) Differential Lock Switch
G306
(ILL-) Combination Switch Assembly
G232
(ILL-) Downhill Assist Control Switch
G25
A/C Amplifier Assembly
(GND)
G202
Glove Box Light
(L)
G228
Clearance Warning ECU Assembly
(E)
G24
A/C Amplifier Assembly
(RGND)
I6
Parking Assist ECU
(GND1)
I9
Clearance Warning ECU Assembly
(E)
I8
Clearance Warning E CU Assembly
(E)
IG1
G259 Junction Connector
G274 Junction Connector
G242(A),G334(B) Junction Connector
G238(A),G309(B) Junction Connector
W-B
(*43)
(*44)
(*2,*88 *42)
(*88 *41)
(*26)
(A/T)
(*88 *42)
(*87)
(*43)
(*70 *44)
(*43)
(*79 *44)
(*83)
(*54)
(*73 *82)
(*73 *72)
(*73)
(*22)
(*23)


*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production
*26 :w/ Front Window Deicer
*32 :Audioless Type
*41 :A/T
*42 :M/T
*43 :w/ Crawl
*44 :w/o Crawl
*45 :w/ Back Sonar or Clearance Sonar Switch Assembly
*47 :w/ Door Illumination
*50 :w/ Power Heater (Combustion Type)
*54 :w/ Panoramic View Monitor System
*70 :w/ Rear Differential Lock
*72 :w/ Clearance Warning Indicator Assembly
*73 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
*77 :w/ Automatic High Beam System
*79 :w/ Downhill Assist Control
*81 :w/ Steering Pad Switch Assembly
*82 :w/o Clearance Warning Indicator Assembly
*83 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
*84 :w/ Headlight Cleaner
*85 :w/ Heated Steering Wheel System
*86 :w/ Climate Control Seat
*87 :w/ Drive Mode Select Switch
*88 :1GR-FE,1KD-FTV,1GD-FTV

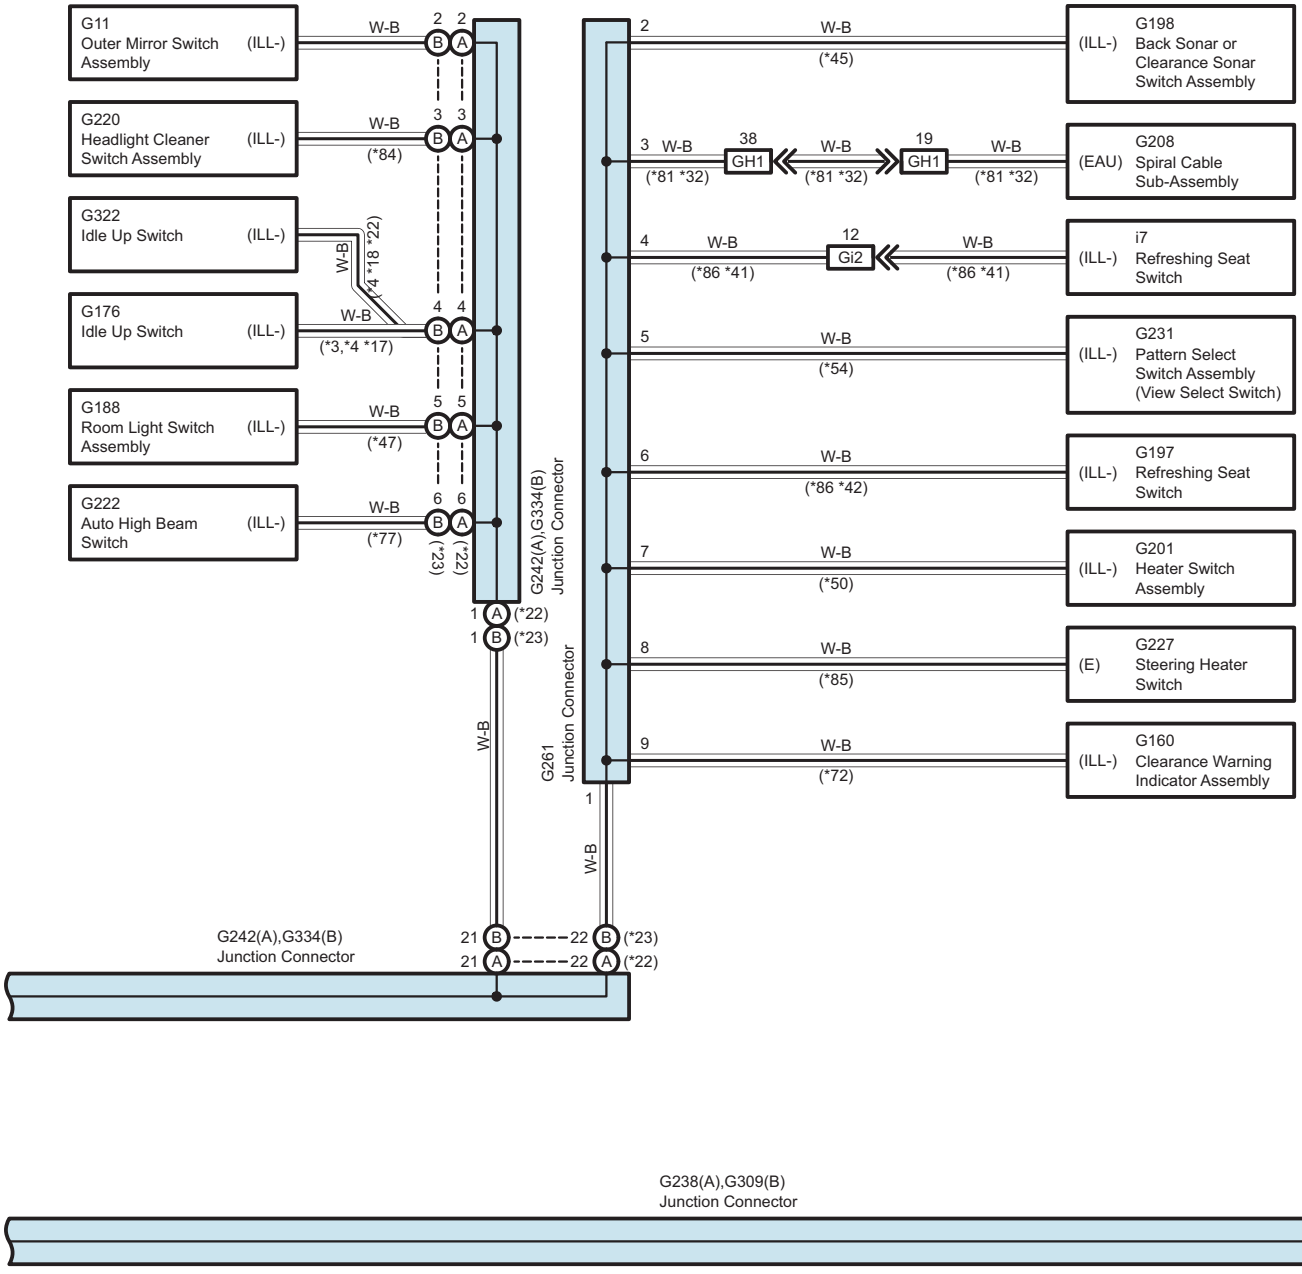

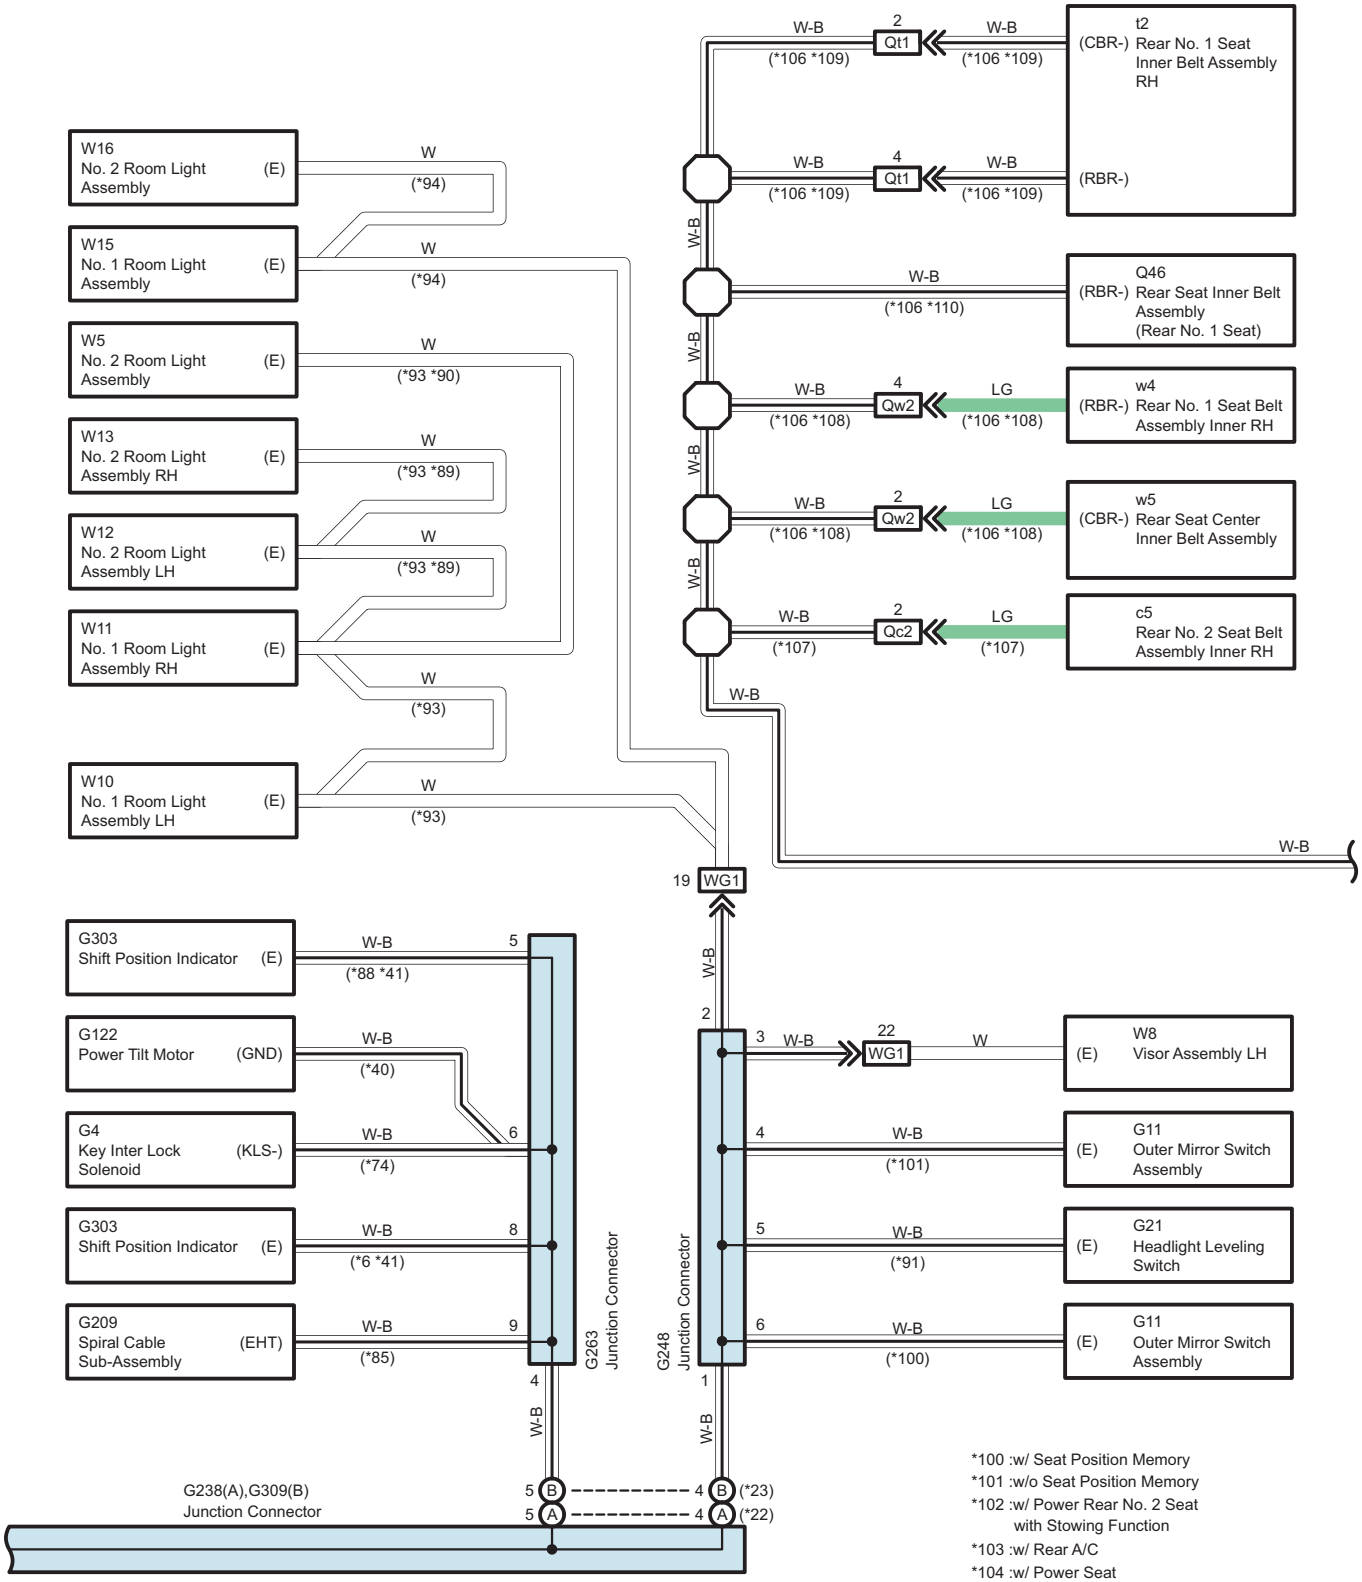



*5 :5L-E
*6 :Except 5L-E
*15 :w/ Power Outlet (220V)
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production
*40 :w/ Power Tilt and Power Telescopic
*41 :A/T
*52 :w/ Seat Heater (Rear)
*74 :w/o Entry & Start System
*78 :w/ Center Power Outlet Socket
*85 :w/ Heated Steering Wheel System
*86 :w/ Climate Control Seat
*88 :1GR-FE,1KD-FTV,1GD-FTV
*89 :5-Door
*90 :3-Door
*91 :w/ Headlight Beam Level Control (Manual)
*92 :w/ Rear Fog Light
*93 :w/ Reading Light
*94 :w/o Reading Light
*95 :w/ Glass Hatch Opener
*96 :w/o Glass Hatch Opener
*97 :w/ Seat Heater
*98 :w/o Seat Heater
*99 :w/o Climate Control Seat
*100 :w/ Seat Position Memory
*101 :w/o Seat Position Memory
*102 :w/ Power Rear No. 2 Seat with Stowing Function
*103 :w/ Rear A/C
*104 :w/ Power Seat (Front Passenger's Seat)
*105 :w/o Power Seat (Front Passenger's Seat)
*106 :w/ Rear No. 1 Seat Belt Warning System
*107 :w/ Rear No. 2 Seat Belt Warning System
*108 :Slide Walk-in Seat Type
*109 :Double-folding Seat Type
*110 :Tumble Seat Type

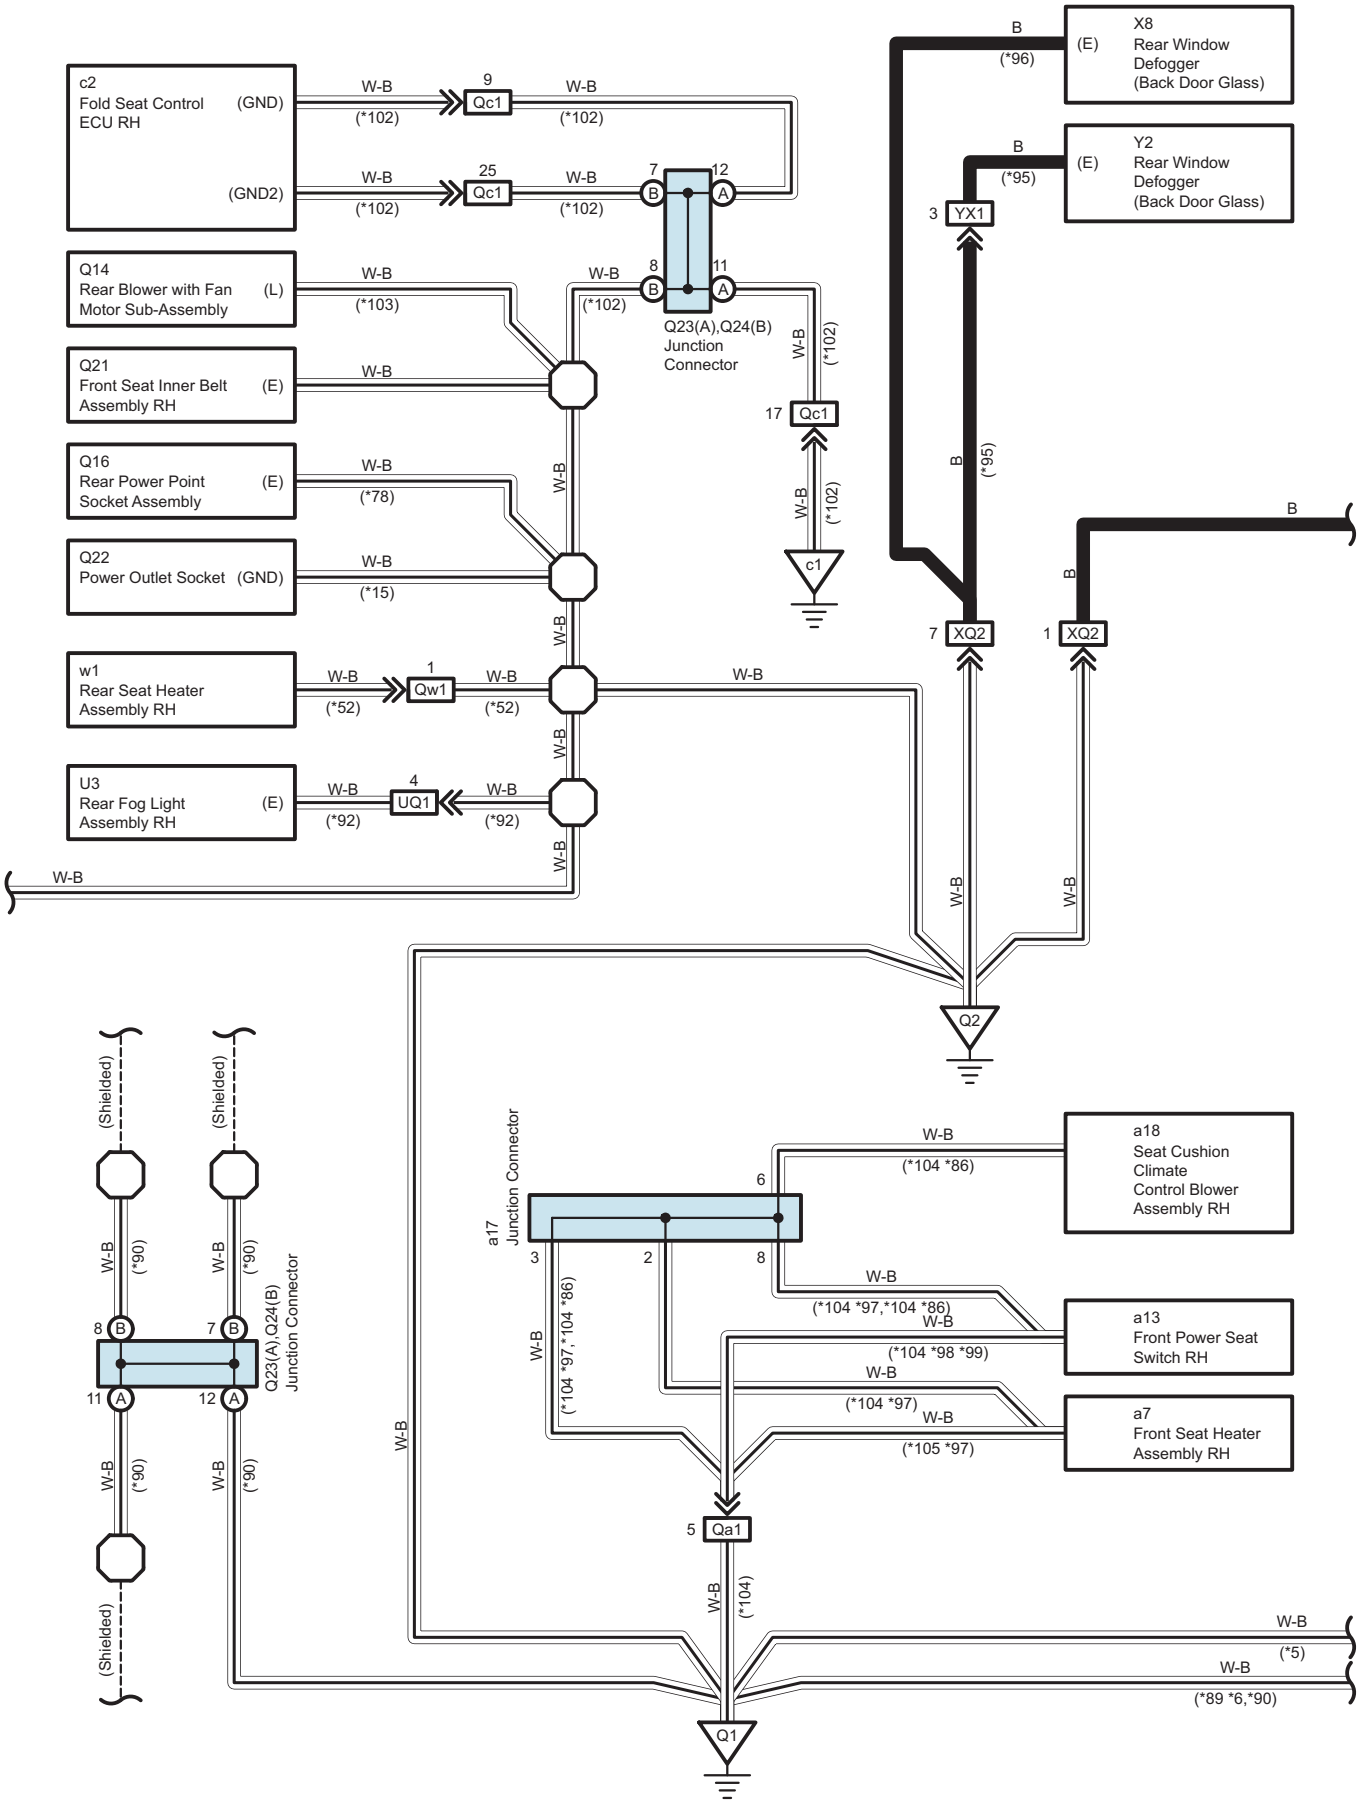
c2
Fold Seat Control ECU RH
(GND)
(GND2)
W-B
(*102)
9
Qc1
25
Qc1
Q14
Rear Blower with Fan Motor Sub-Assembly
(L)
W-B
(*103)
Q21
Front Seat Inner Belt Assembly RH
(E)
Q16
Rear Power Point Socket Assembly
(E)
(*78)
Q22
Power Outlet Socket
(GND)
(*15)
w1
Rear Seat Heater Assembly RH
(*52)
1
Qw1
U3
Rear Fog Light Assembly RH
(E)
(*92)
4
UQ1
Q23(A),Q24(B) Junction Connector
7
12
8
11
17
c1
B
(*96)
X8
(E)
Rear Window Defogger (Back Door Glass)
(*95)
Y2
3
YX1
7
XQ2
1
XQ2
Q2
(Shielded)
a17 Junction Connector
6
3
2
8
a18
Seat Cushion Climate Control Blower Assembly RH
(*104 *86)
(*104 *97,*104 *86)
a13
Front Power Seat Switch RH
(*104 *98 *99)
(*104 *97)
a7
Front Seat Heater Assembly RH
(*105 *97)
5
Qa1
(*104)
(*5)
(*89 *6,*90)
Q1

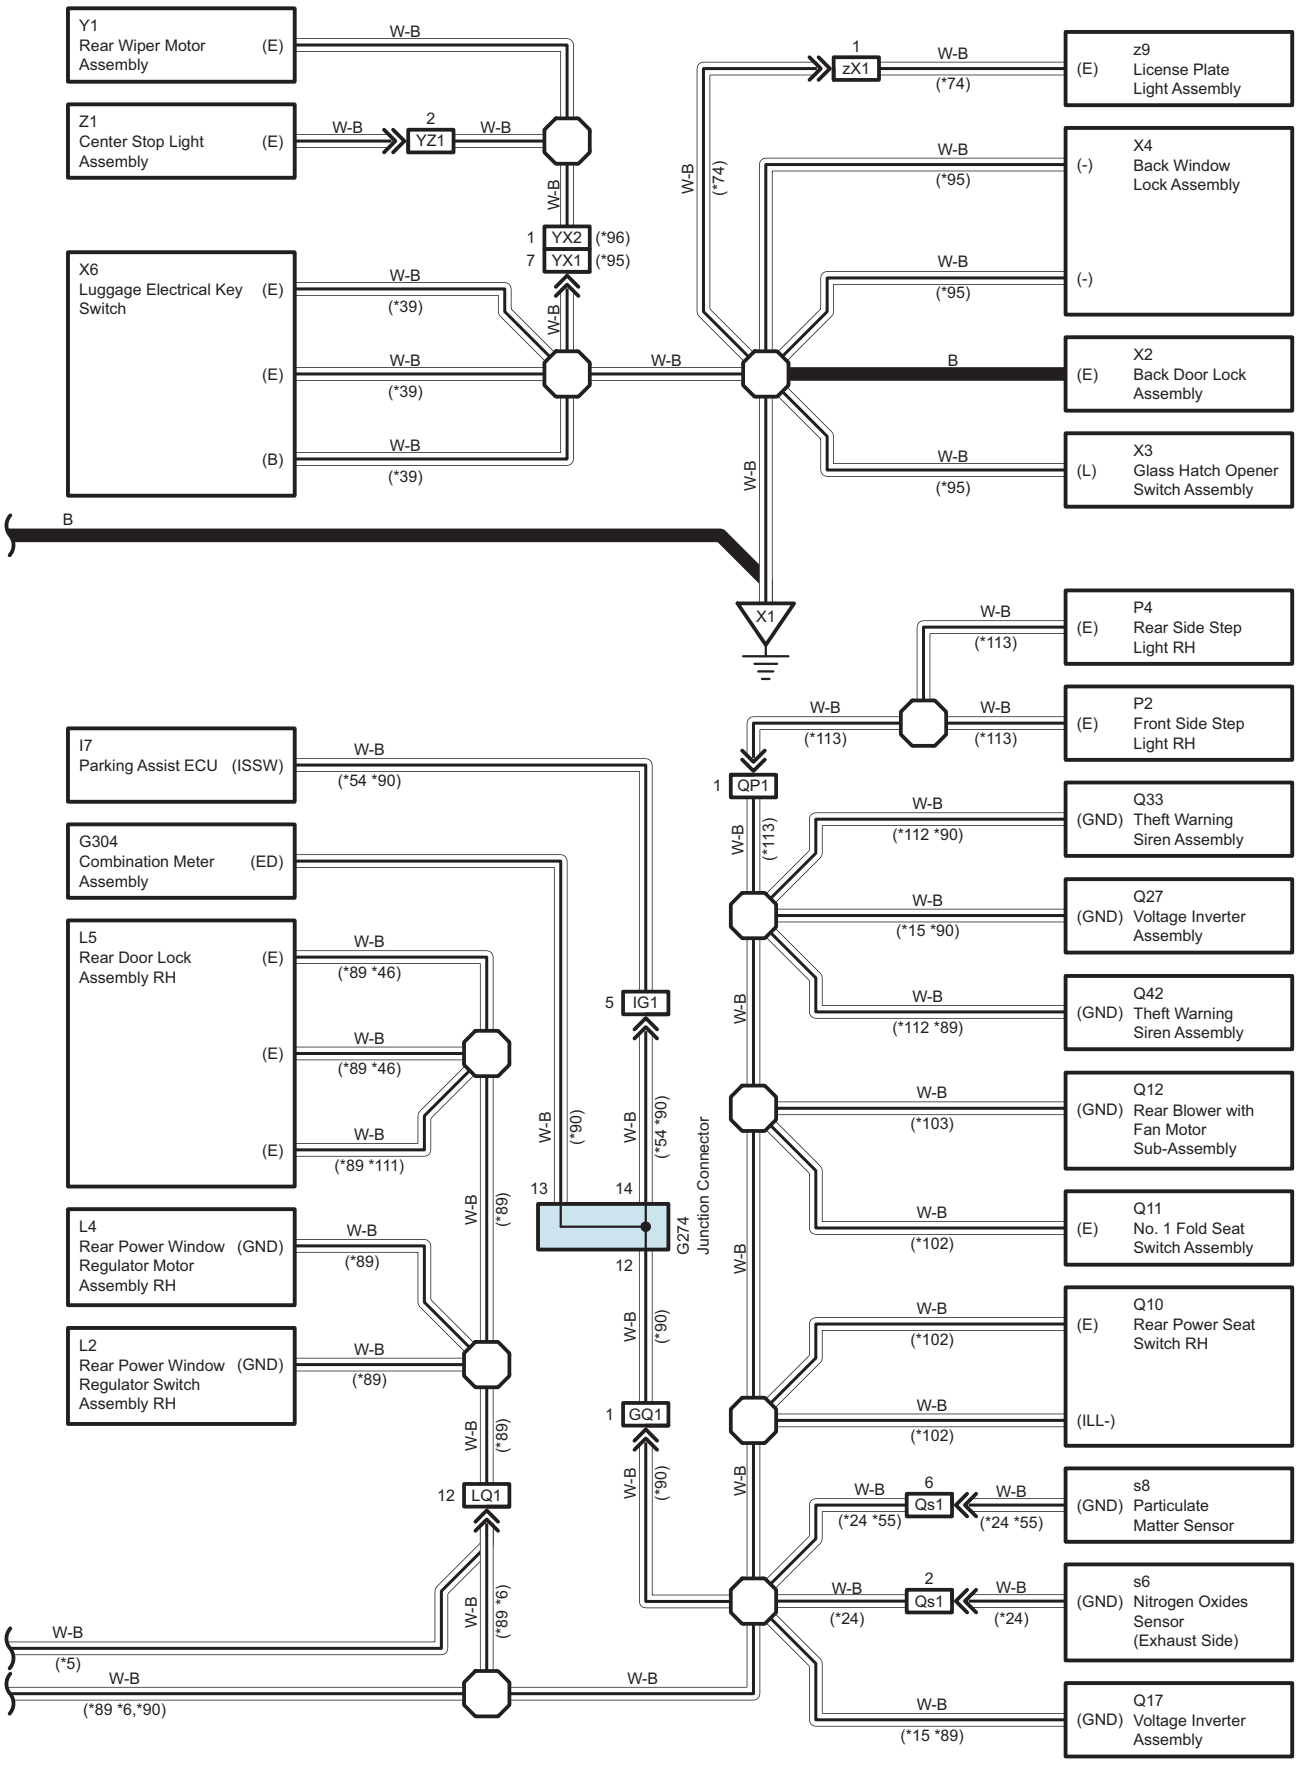

Y1
Rear Wiper Motor Assembly (E)
Z1
Center Stop Light Assembly (E)
X6
Luggage Electrical Key Switch (E)
(E)
(B)
W-B
(*39)
2 YZ1
1 YX2 (*96)
7 YX1 (*95)
1 zX1
(*74)
z9
(E) License Plate Light Assembly
X4
(-) Back Window Lock Assembly
(-)
(*95)
X2
(E) Back Door Lock Assembly
X3
(L) Glass Hatch Opener Switch Assembly
B
X1
P4
(E) Rear Side Step Light RH
(*113)
P2
(E) Front Side Step Light RH
I7
Parking Assist ECU (ISSW)
(*54 *90)
G304
Combination Meter Assembly (ED)
L5
Rear Door Lock Assembly RH
(*89 *46)
(*89 *111)
L4
Rear Power Window Regulator Motor Assembly RH (GND)
L2
Rear Power Window Regulator Switch Assembly RH (GND)
(*89)
5 IG1
13 14 12
G274 Junction Connector
1 GQ1
12 LQ1
1 QP1
(*90)
(*54 *90)
(*89)
(*5)
(*89 *6,*90)
(*89 *6)
Q33
(GND) Theft Warning Siren Assembly
(*112 *90)
Q27
(GND) Voltage Inverter Assembly
(*15 *90)
Q42
(GND) Theft Warning Siren Assembly
(*112 *89)
Q12
(GND) Rear Blower with Fan Motor Sub-Assembly
(*103)
Q11
(E) No. 1 Fold Seat Switch Assembly
(*102)
Q10
(E) Rear Power Seat Switch RH
(ILL-)
6 Qs1
(*24 *55)
s8
(GND) Particulate Matter Sensor
2 Qs1
(*24)
s6
(GND) Nitrogen Oxides Sensor (Exhaust Side)
Q17
(GND) Voltage Inverter Assembly
(*15 *89)


*1 :1GR-FE
*2 :2TR-FE
*3 :1KD-FTV
*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*14 :w/ Electronic Modulated Air Suspension
*15 :w/ Power Outlet (220V)
*24 :w/ Urea SCR
*39 :w/ Entry & Start System
*46 :w/ Double Locking
*54 :w/ Panoramic View Monitor System
*55 :w/ Particulate Matter Sensor
*74 :w/o Entry & Start System
*89 :5-Door
*90 :3-Door
*95 :w/ Glass Hatch Opener
*96 :w/o Glass Hatch Opener
*102 :w/ Power Rear No. 2 Seat with Stowing Function
*103 :w/ Rear A/C
*111 :w/o Double Locking
*112 :w/ Security Siren
*113 :w/ Foot Light

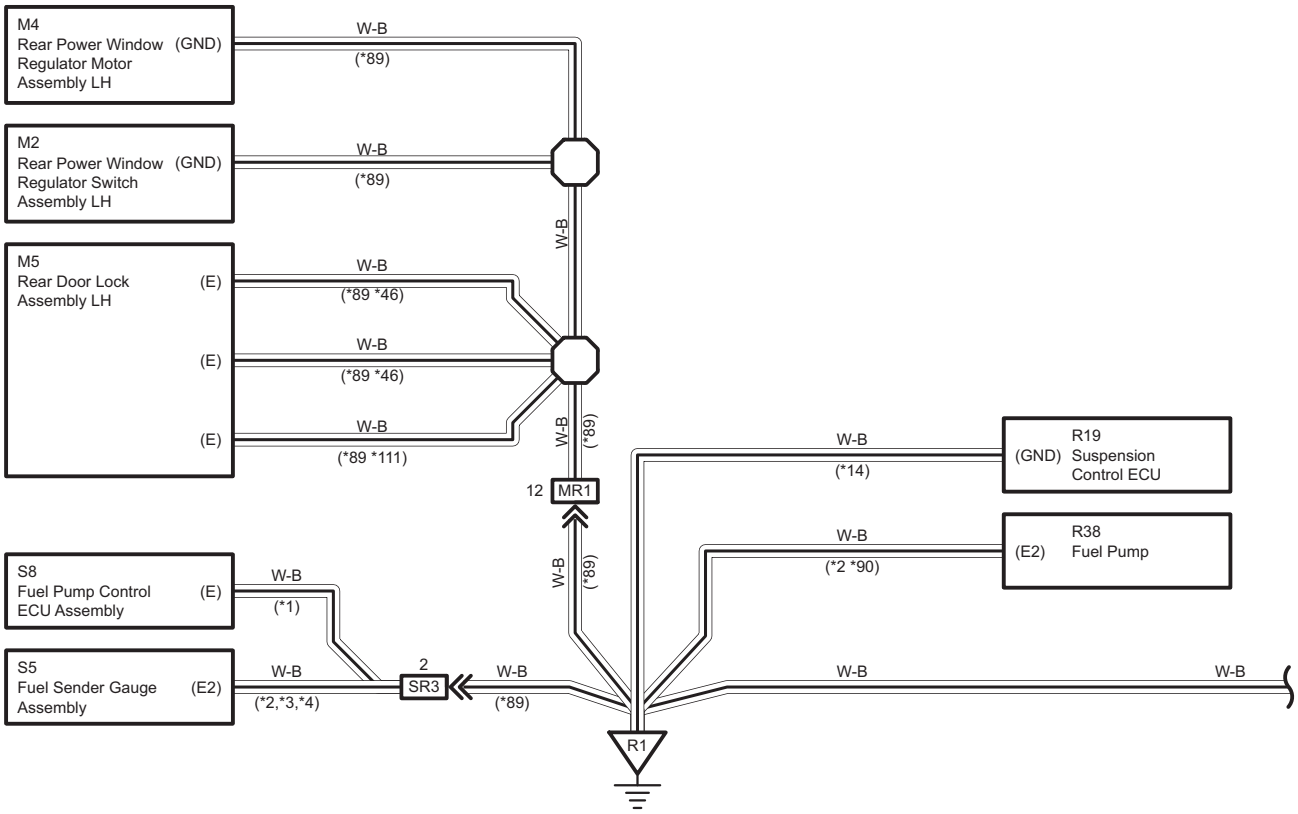

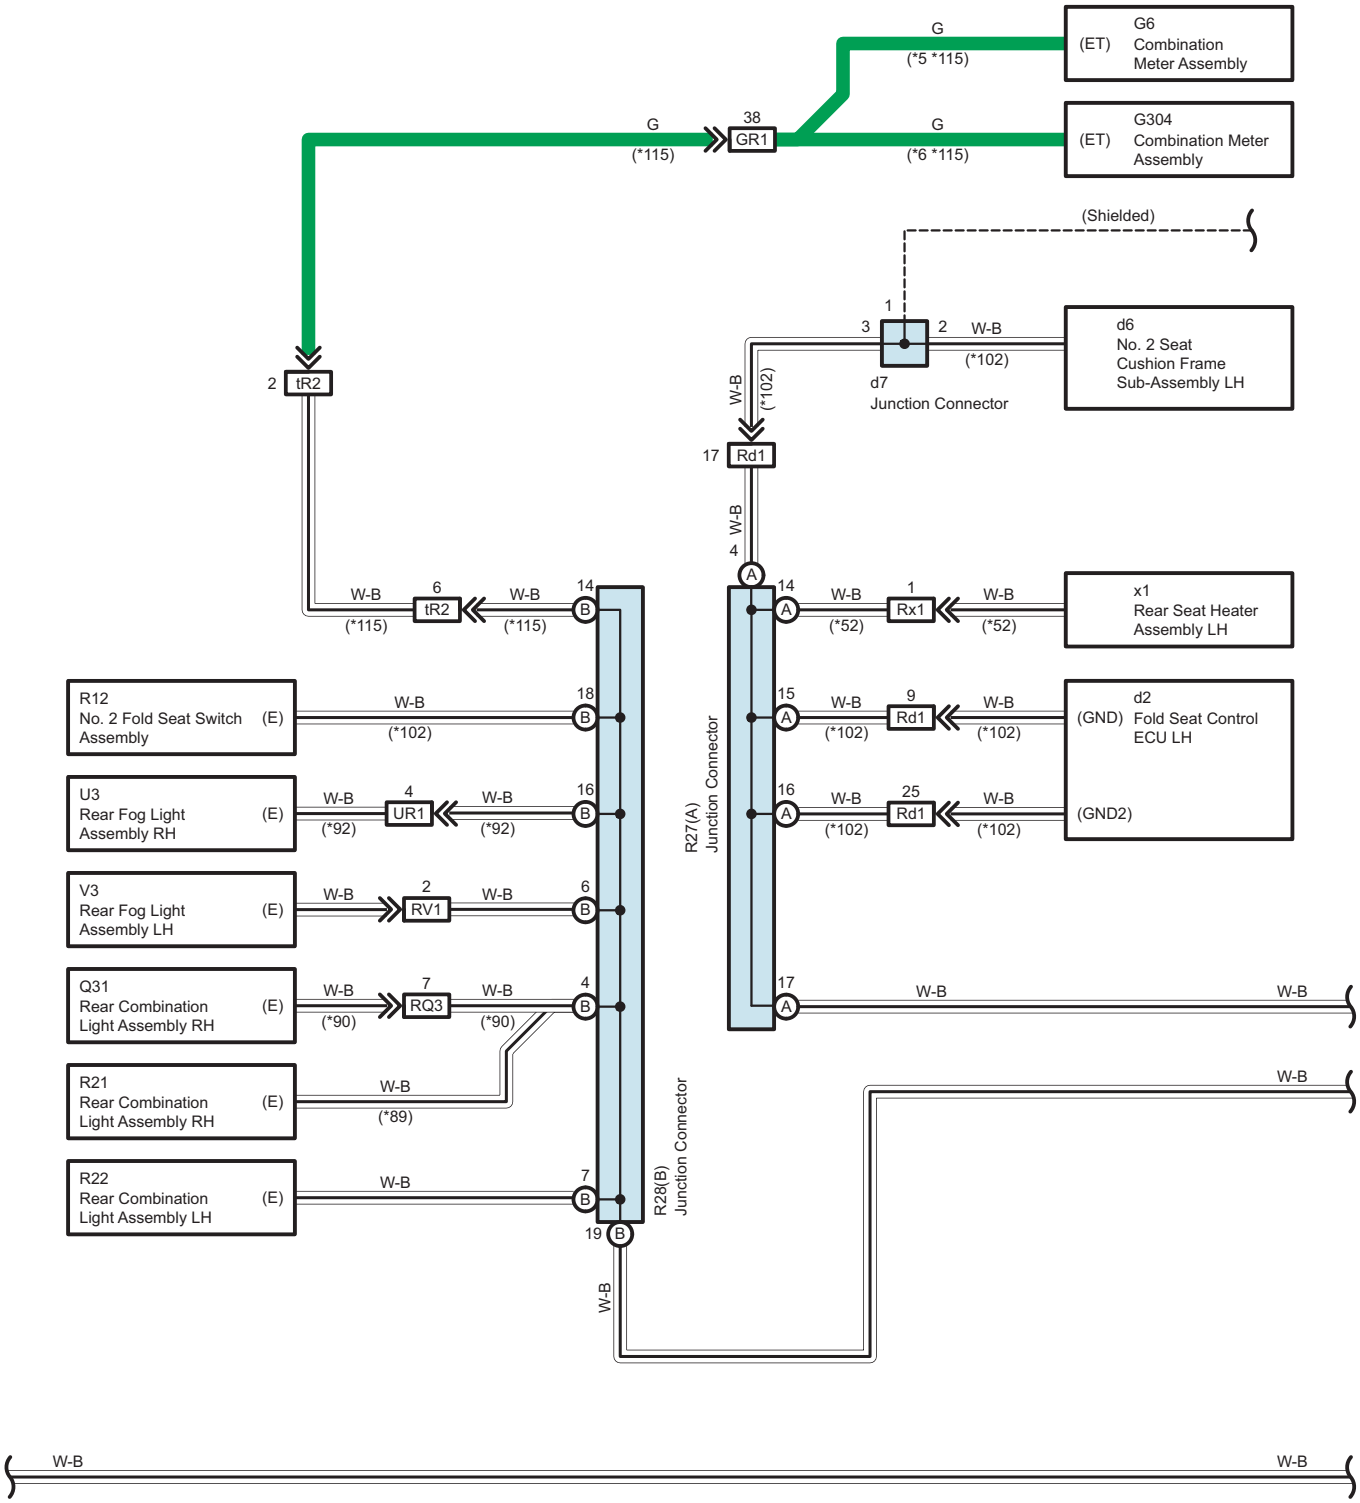

G6
(ET) Combination Meter Assembly
G304
(ET) Combination Meter Assembly
G
(*5 *115)
G
(*6 *115)
G
(*115)
38
GR1
(Shielded)
d6
No. 2 Seat Cushion Frame Sub-Assembly LH
d7
Junction Connector
W-B
(*102)
2 tR2
17 Rd1
4
x1
Rear Seat Heater Assembly LH
Rx1
(*52)
d2
(GND) Fold Seat Control ECU LH
(GND2)
R27(A)
Junction Connector
R28(B)
Junction Connector
R12
No. 2 Fold Seat Switch Assembly (E)
U3
Rear Fog Light Assembly RH (E)
V3
Rear Fog Light Assembly LH (E)
Q31
Rear Combination Light Assembly RH (E)
R21
Rear Combination Light Assembly RH (E)
R22
Rear Combination Light Assembly LH (E)
UR1
RV1
RQ3
Rd1
tR2
(*115)
(*92)
(*90)
(*89)

*4 :1GD-FTV
*5 :5L-E
*6 :Except 5L-E
*24 :w/ Urea SCR
*39 :w/ Entry & Start System
*52 :w/ Seat Heater (Rear)
*62 :w/ Curtain Shield Airbag
*74 :w/o Entry & Start System
*75 :w/ Tire Pressure Warning System
*86 :w/ Climate Control Seat
*89 :5-Door
*90 :3-Door
*92 :w/ Rear Fog Light
*97 :w/ Seat Heater
*98 :w/o Seat Heater
*99 :w/o Climate Control Seat
*100 :w/ Seat Position Memory
*101 :w/o Seat Position Memory
*102 :w/ Power Rear No. 2 Seat with Stowing Function
*114 :w/o Urea SCR
*115 :w/ Fuel Sub Tank
*116 :w/o Tire Pressure Warning System
*117 :Except 1GD-FTV
*118 :w/o Curtain Shield Airbag
*119 :w/ Power Seat (Driver's Seat Lumbar Support Control Only)
*120 :w/ Power Seat (Driver's Seat Except Lumbar Support Control Only)

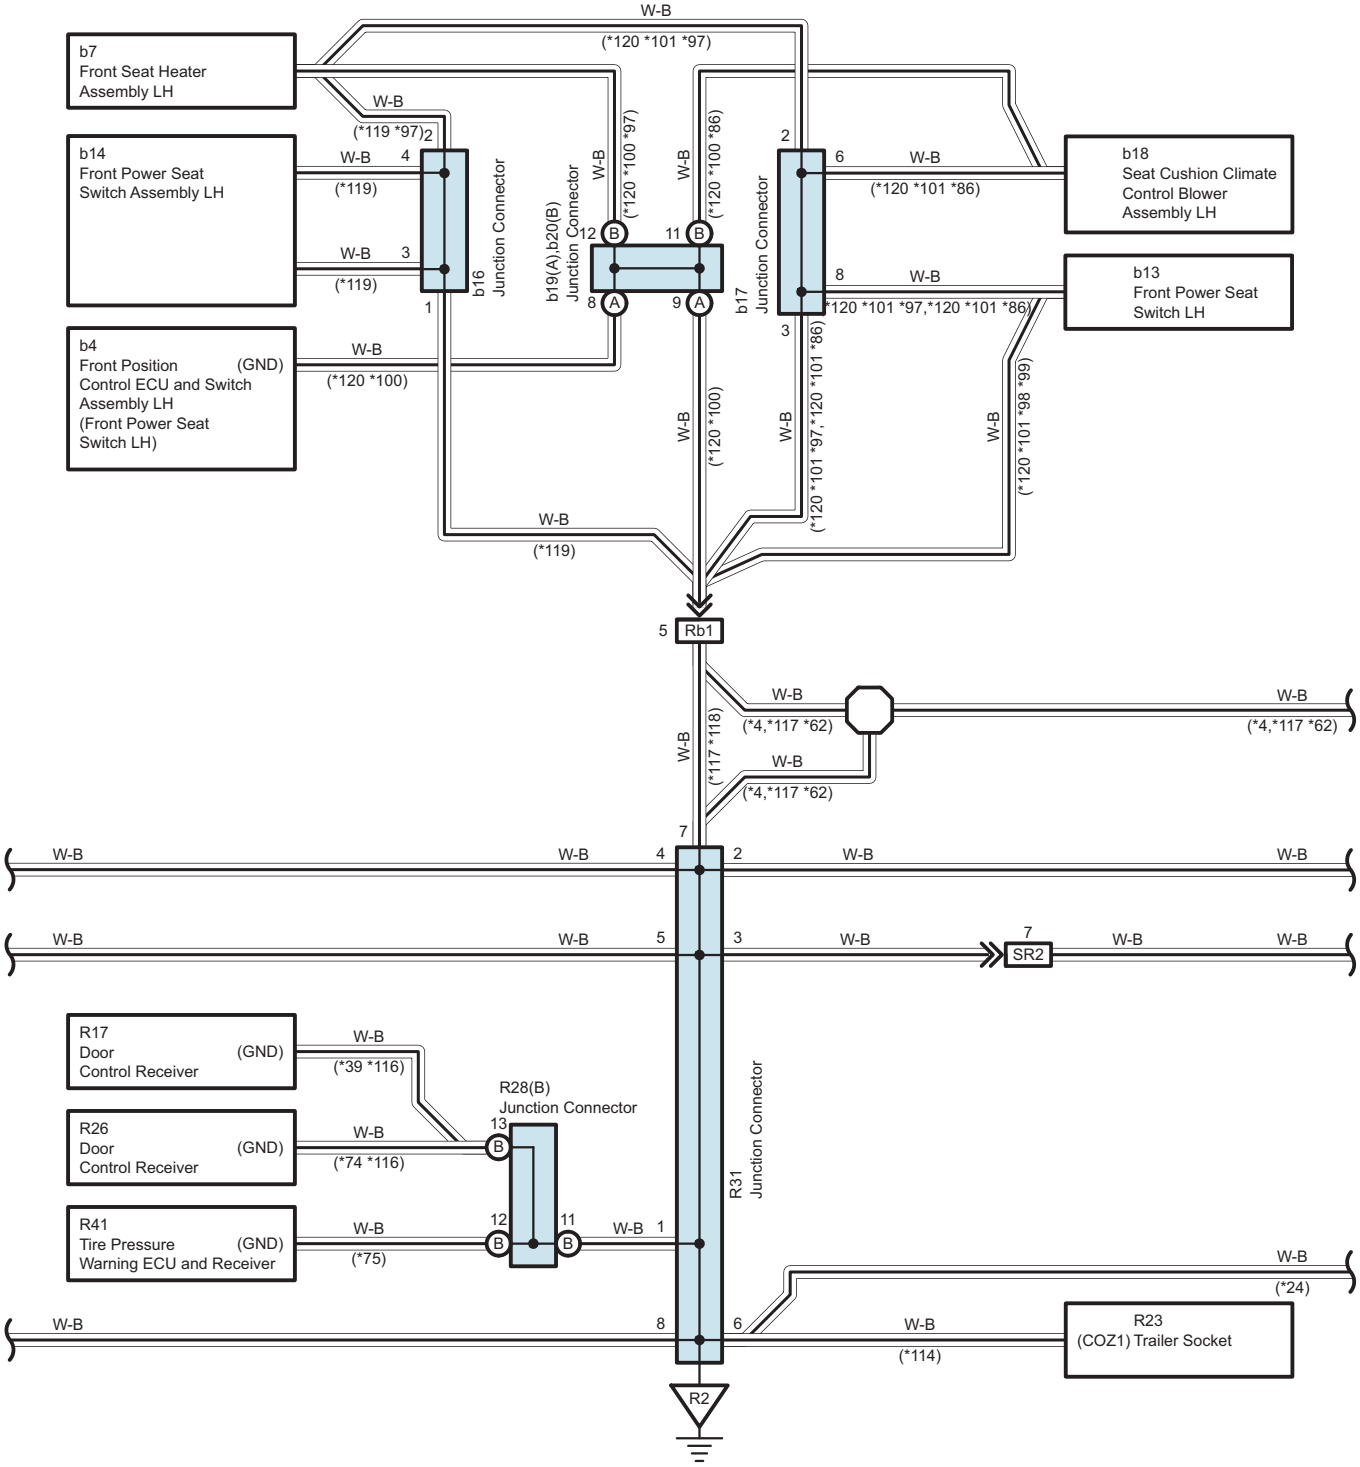

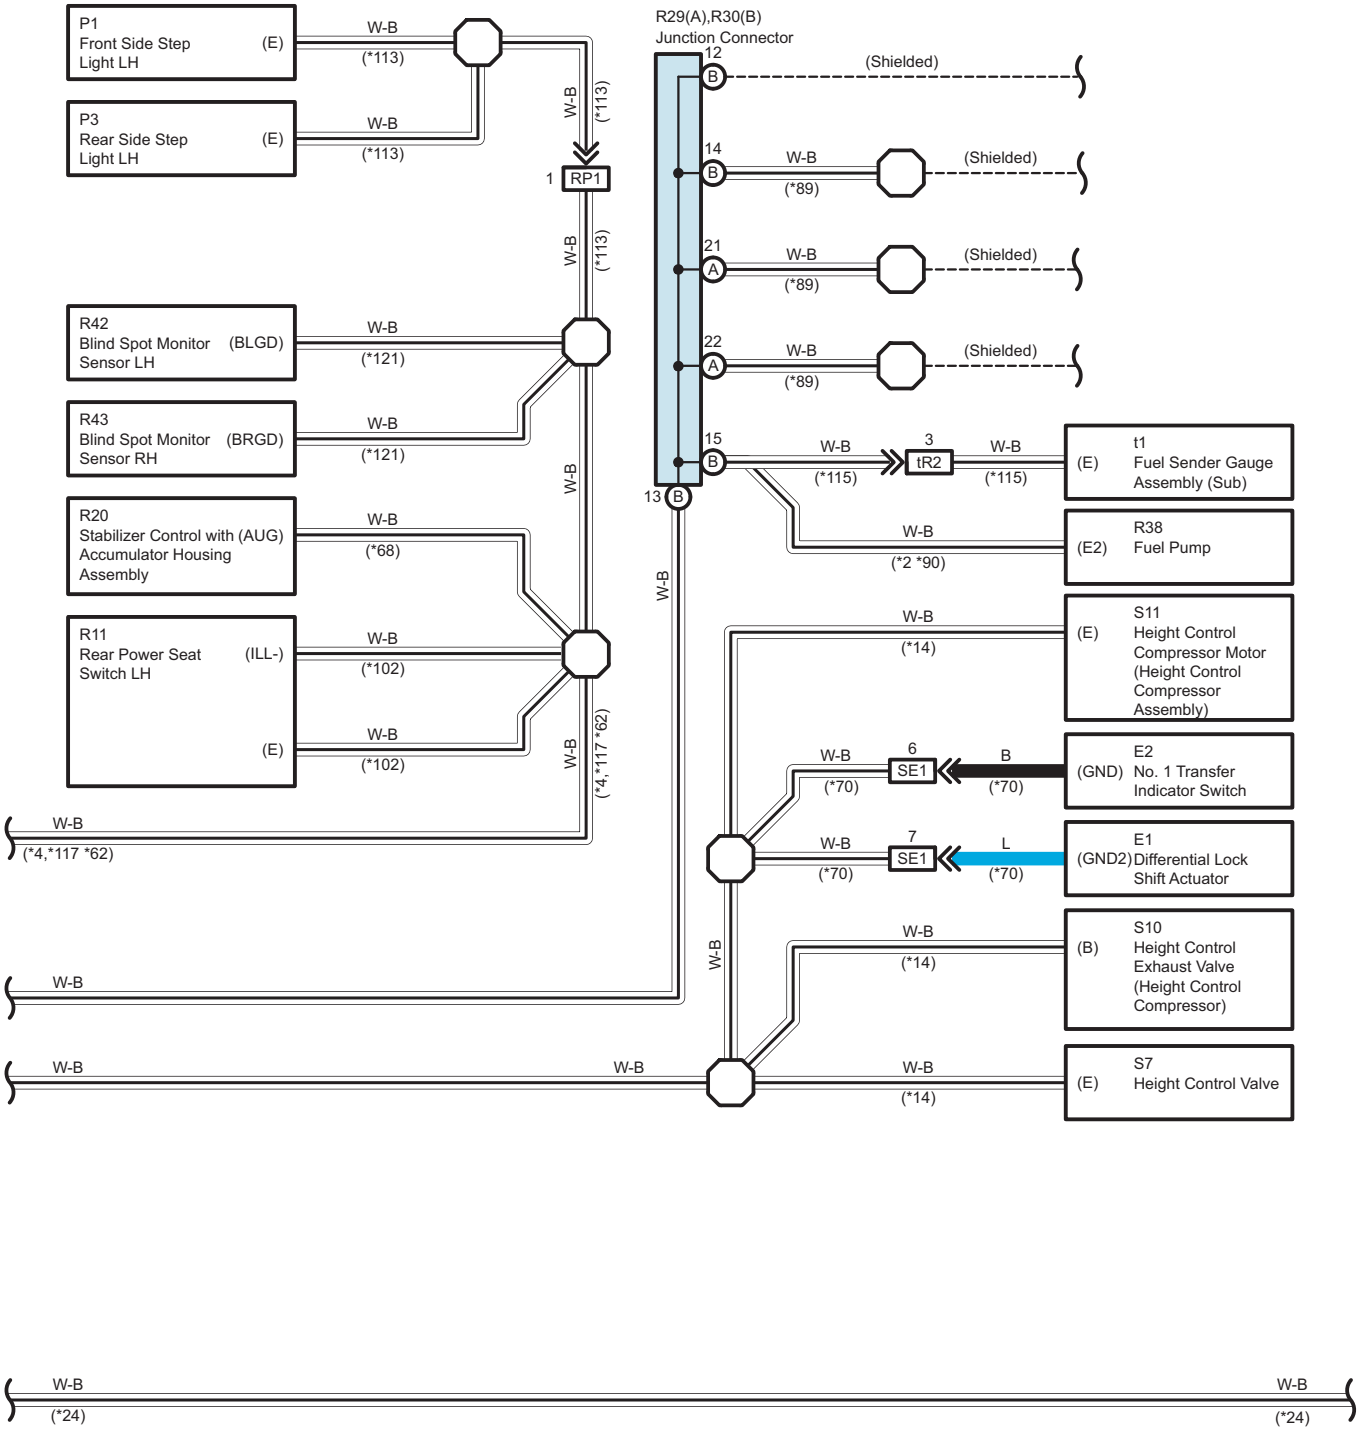
P1
Front Side Step Light LH
(E)
P3
Rear Side Step Light LH
(E)
W-B
(*113)
1 RP1
R42
Blind Spot Monitor Sensor LH
(BLGD)
R43
Blind Spot Monitor Sensor RH
(BRGD)
R20
Stabilizer Control with Accumulator Housing Assembly (AUG)
R11
Rear Power Seat Switch LH
(ILL-)
(E)
(*121)
(*68)
(*102)
(*4,*117 *62)
(*4,*117 *62)
R29(A),R30(B)
Junction Connector
12 B
14 B
21 A
22 A
15 B
13 B
(Shielded)
(*89)
3 tR2
(*115)
(E) t1 Fuel Sender Gauge Assembly (Sub)
(E2) R38 Fuel Pump
(*2 *90)
(*14)
(E) S11 Height Control Compressor Motor (Height Control Compressor Assembly)
6 SE1
B
(*70)
(GND) E2 No. 1 Transfer Indicator Switch
7 SE1
L
(GND2) E1 Differential Lock Shift Actuator
(B) S10 Height Control Exhaust Valve (Height Control Compressor)
(E) S7 Height Control Valve
(*24)

*2 :2TR-FE
*4 :1GD-FTV
*14 :w/ Electronic Modulated Air Suspension
*17 :Before Aug. 2020 Production
*24 :w/ Urea SCR
*62 :w/ Curtain Shield Airbag
*68 :w/ Kinetic Dynamic Suspension System
*70 :w/ Rear Differential Lock
*89 :5-Door
*90 :3-Door
*102 :w/ Power Rear No. 2 Seat with Stowing Function
*106 :w/ Rear No. 1 Seat Belt Warning System
*107 :w/ Rear No. 2 Seat Belt Warning System
*108 :Slide Walk-in Seat Type
*109 :Double-folding Seat Type
*110 :Tumble Seat Type
*113 :w/ Foot Light
*115 :w/ Fuel Sub Tank
*117 :Except 1GD-FTV
*121 :w/ Blind Spot Monitor System

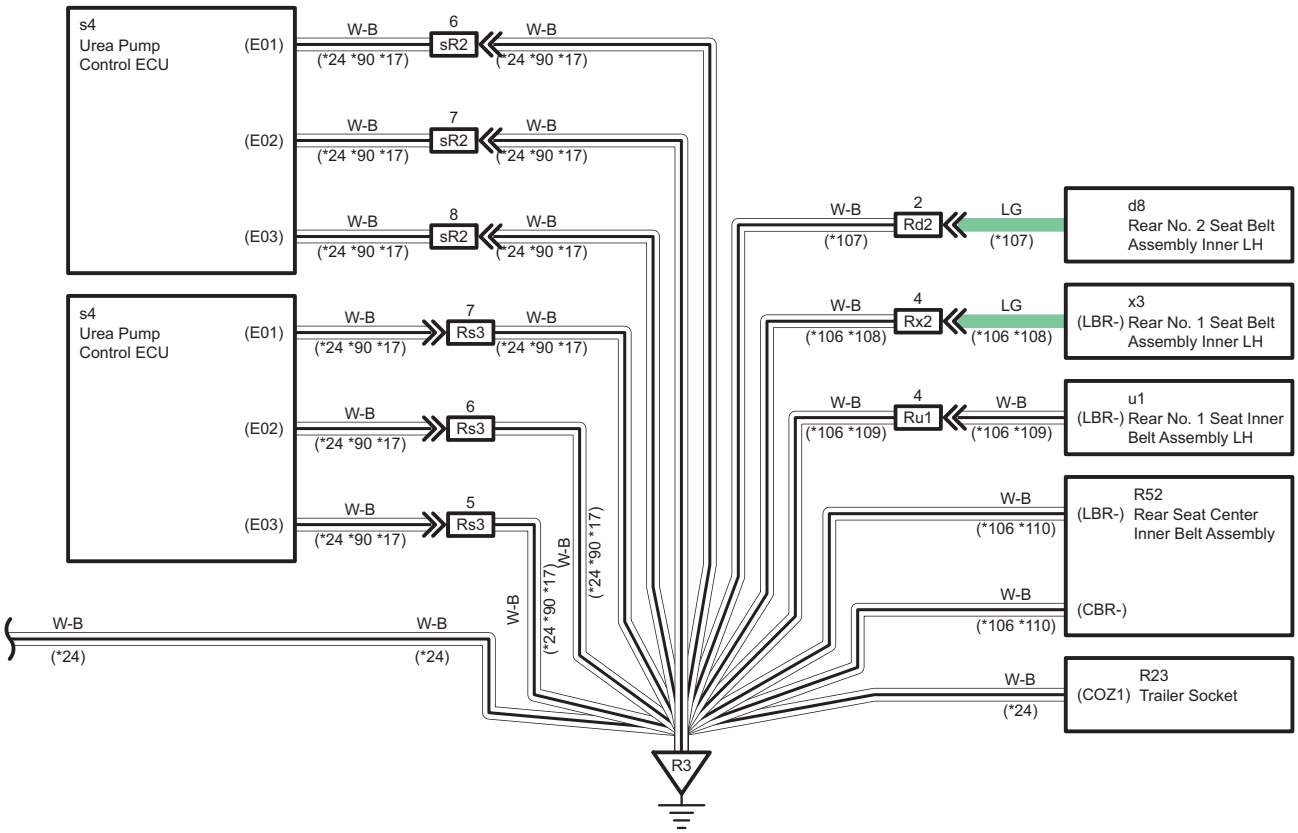

A47
Gray




90980-10945

A48
Gray




90980-10946

A68
Dark Gray

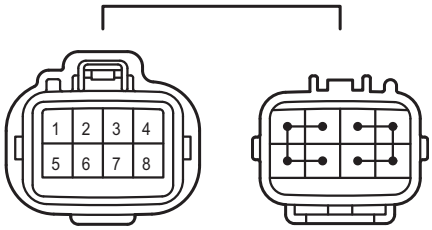


90980-10891

A70
White

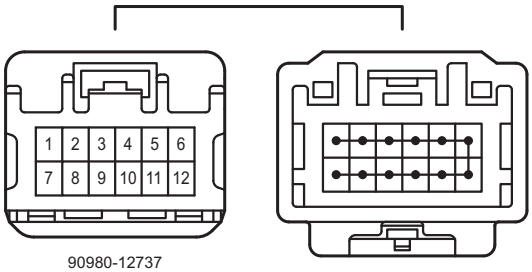


90980-12737

C48
White

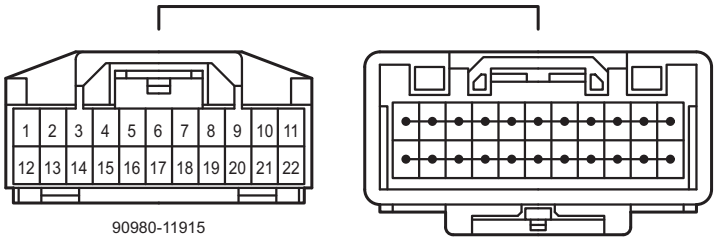


90980-11915

C174
Gray

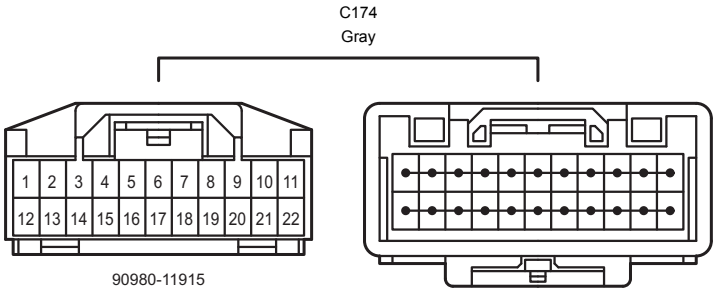


90980-11915

C190
White

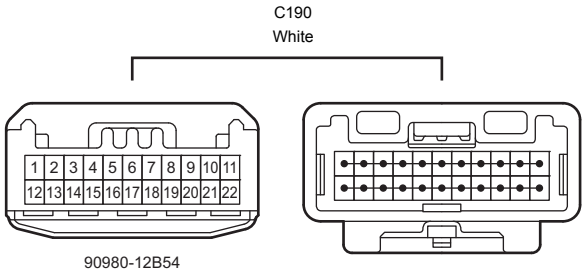


90980-12B54

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

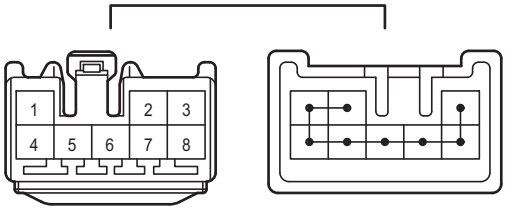


90980-11686

G105
White

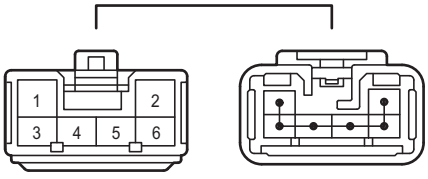


90980-10976

G106
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

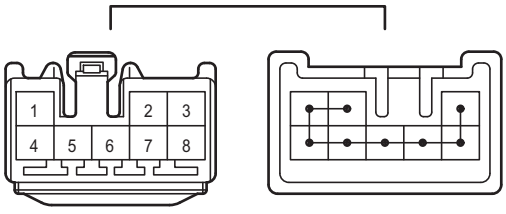


90980-11686

G238
Blue

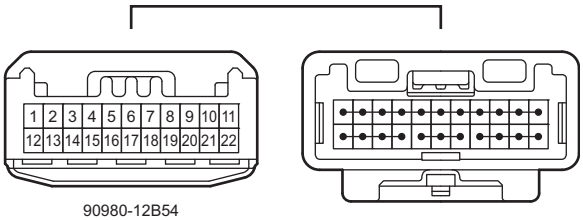


90980-12B54

G242
Blue

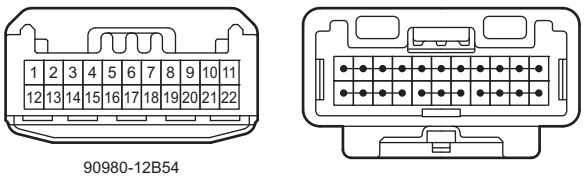


90980-12B54

G244
White

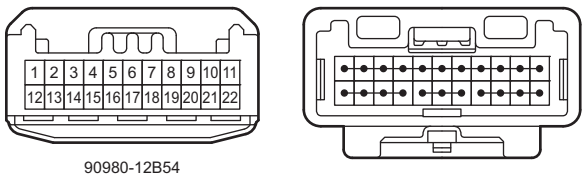


90980-12B54

G248
White

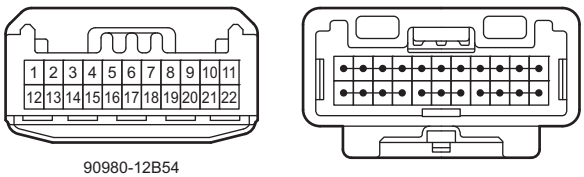


90980-12B54

G251
Blue

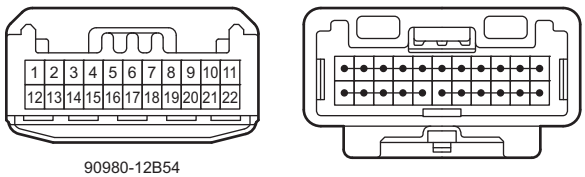


90980-12B54

G259
Blue

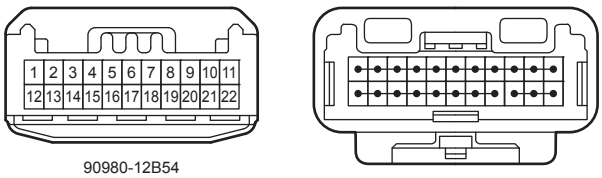


90980-12B54

G261
White

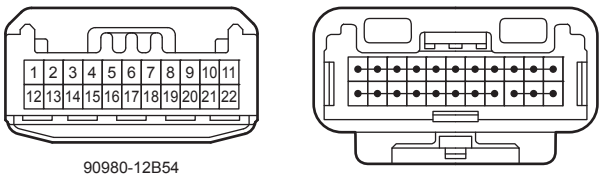


90980-12B54

G263
Blue

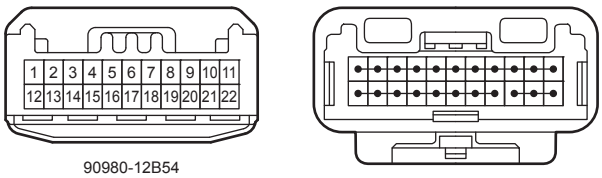


90980-12B54

G272
Gray

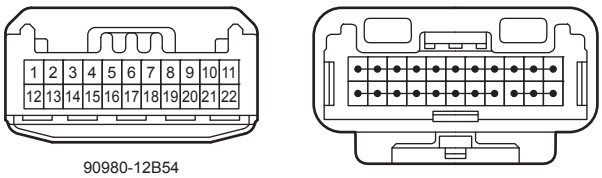


90980-12B54

G274
Blue

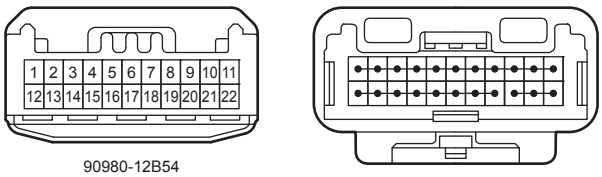


90980-12B54

G301
White

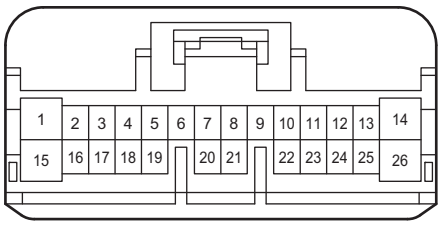


90980-12771

G302
White

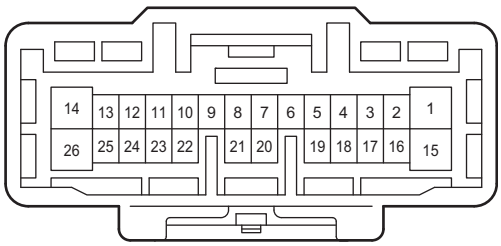


90980-12770

G309
Blue

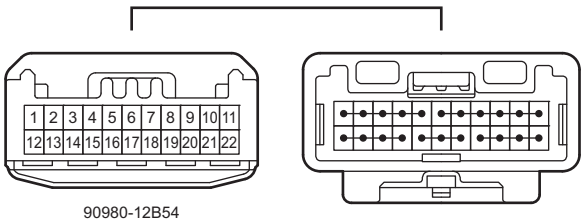


90980-12B54

G334
Blue

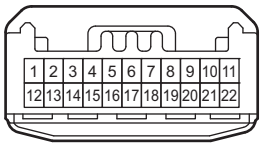


90980-12B54

H24
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

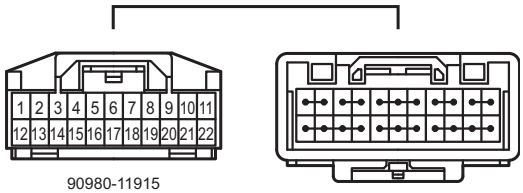


90980-11915

H26
White

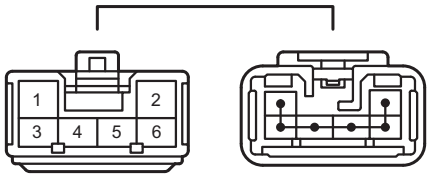


90980-10976

H86
Blue

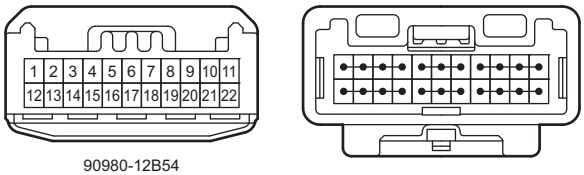


90980-12B54

Q23
White

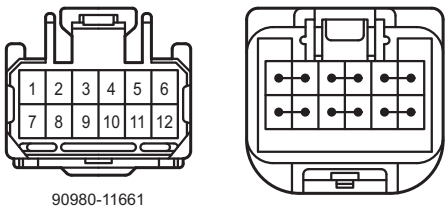


90980-11661

Q24
White

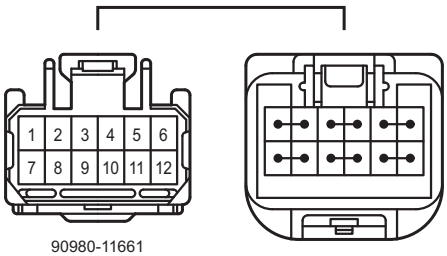


90980-11661

R27
Dark Gray

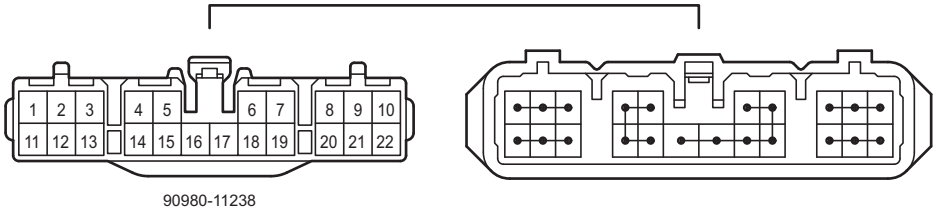


90980-11238

R28
White

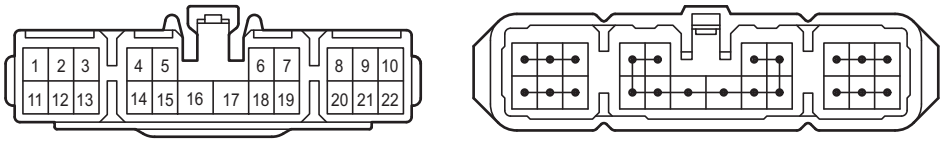


90980-10875

R29
Blue

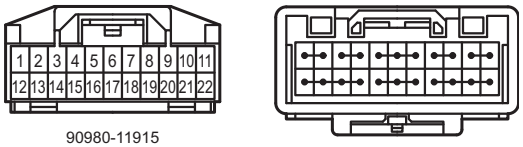


90980-11915

R30
Blue

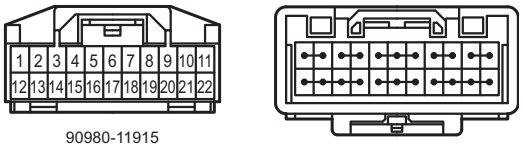


90980-11915

R31
White

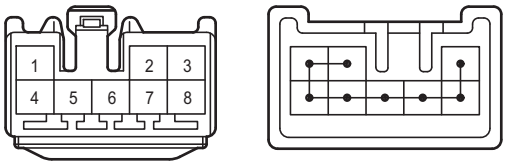

90980-11686

a17
White

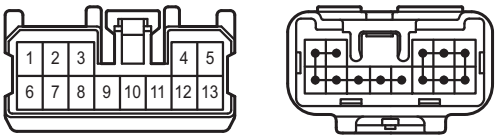


90980-12346

b16
Black




90980-11398

b17
White

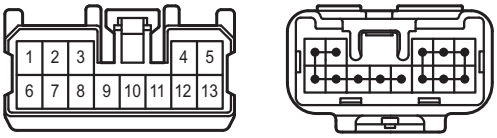


90980-12346

b19
White

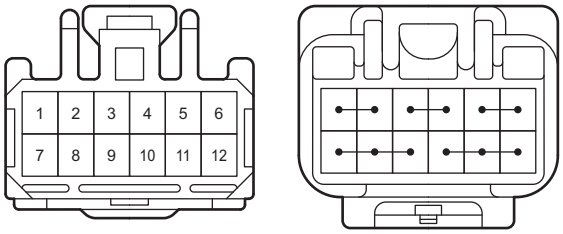

90980-11661

b20
Black

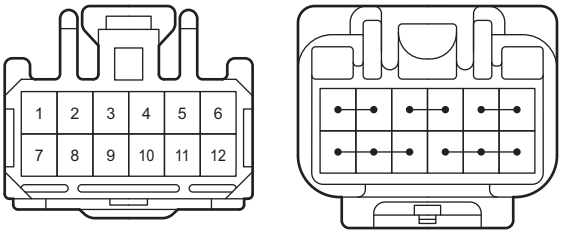


90980-11661

d7
Black




90980-11398

1A
White

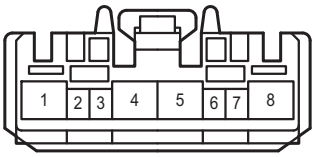

90980-12485

1B
White

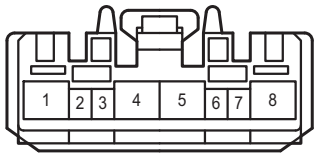


90980-12486

1U
White




90980-12A55

1W
White

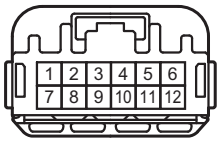


90980-12A91

2D
White

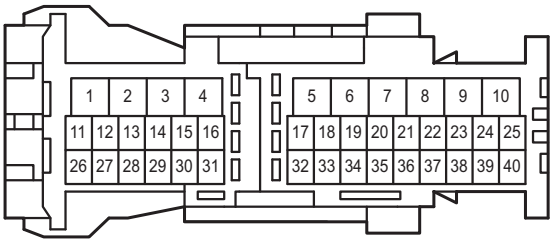


90980-12818

2N
White

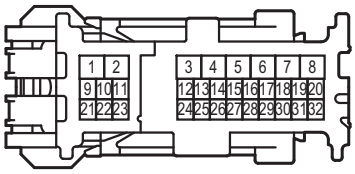

90980-12A48


AB1
White

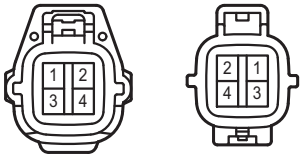

90980-10942

90980-10941


AB2
Gray

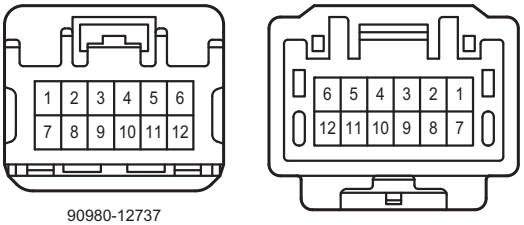

90980-12737

90980-12736

AC1
Black

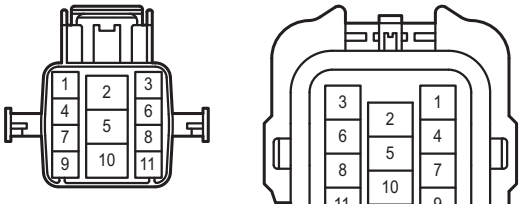

90980-11612

90980-11609


AC2
Dark Gray




90980-11242

90980-11241

BA2
Gray

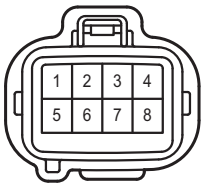


90980-10897

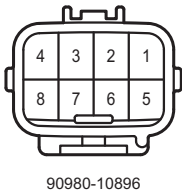


90980-10896

CA1
Black

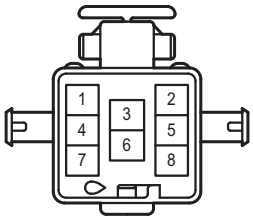


90980-11461

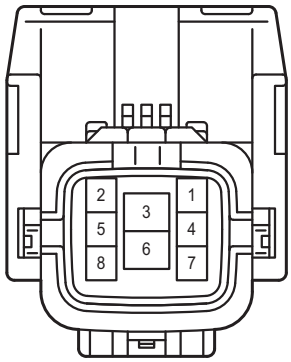


90980-11460

CA2
Black

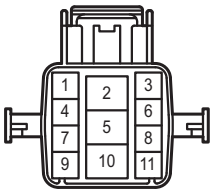


90980-11612

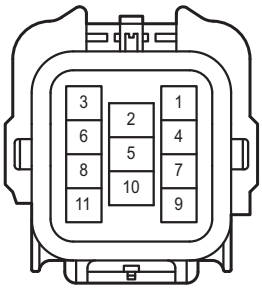


90980-11609

CG1
White

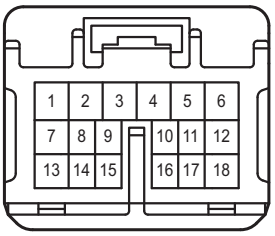


90980-12745

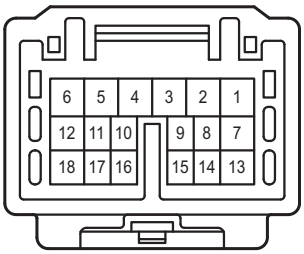


90980-12744

CG2
White

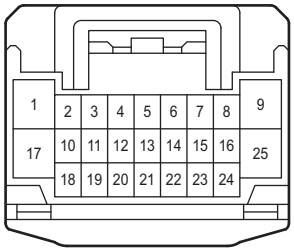


90980-12414

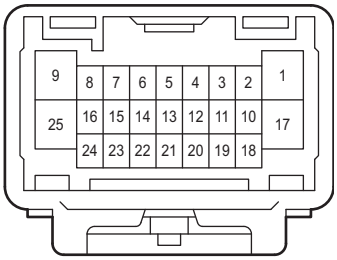


90980-12413

CG3
White

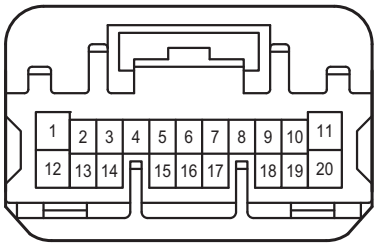


90980-12741

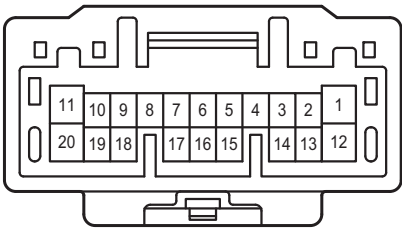


90980-12740

GA1
White

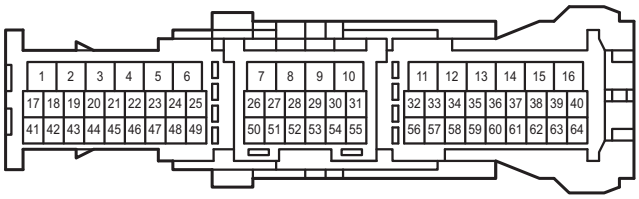


90980-12774

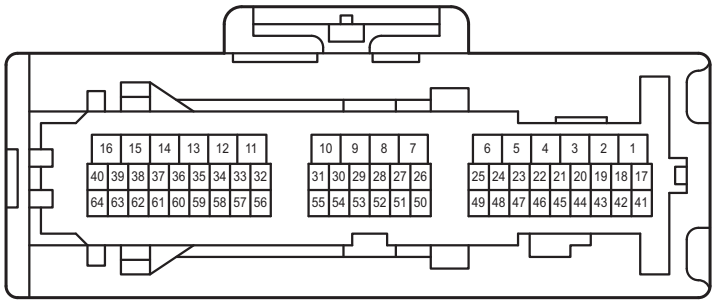


90980-12798

GA7
Black

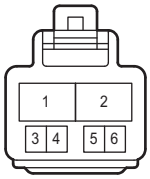


90980-10910

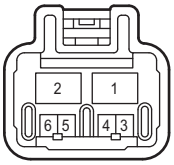


90980-10909

GH1
White

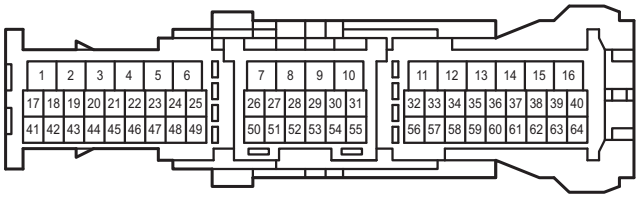


90980-12774

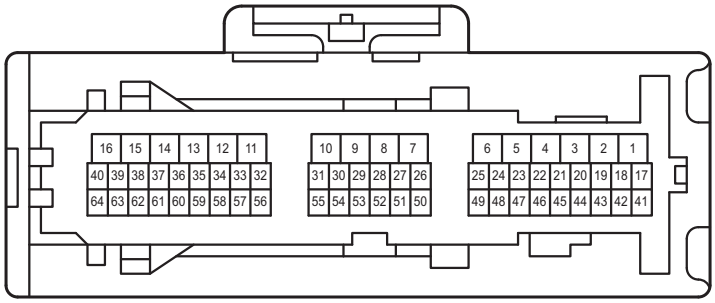


90980-12798

GQ1
White

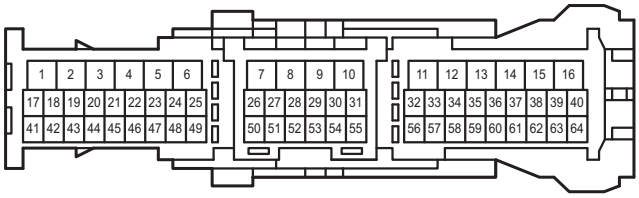


90980-12774

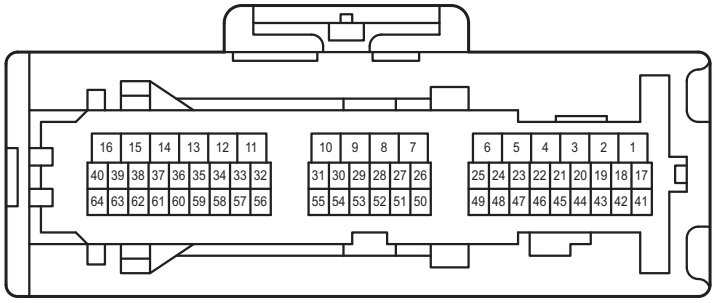


90980-12798

GR1
White

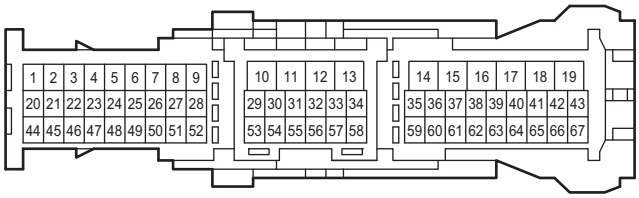


90980-12783

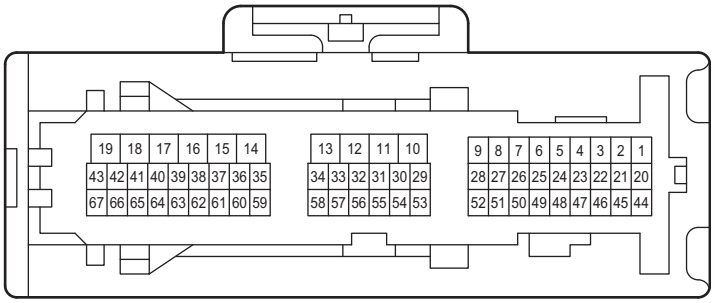


90980-12800

Gi2
White

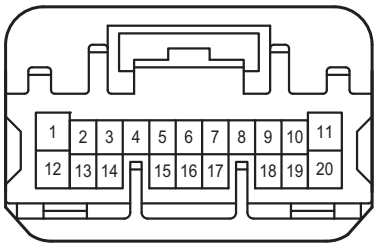


90980-12741

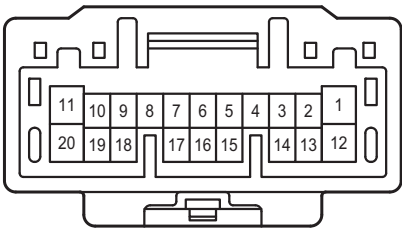


90980-12740

IG1
White

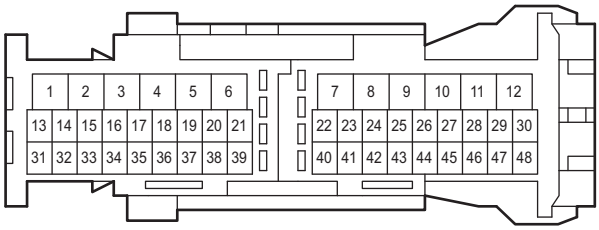


90980-12779

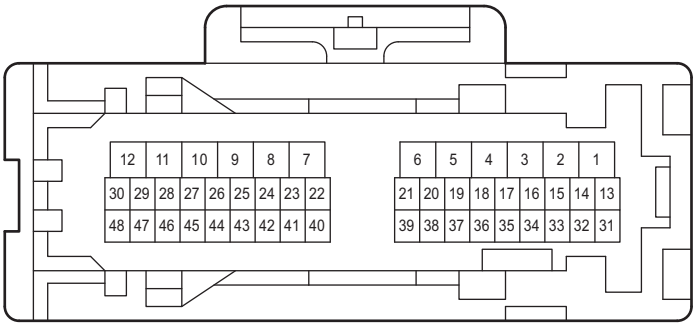


90980-12799

JG3
Black

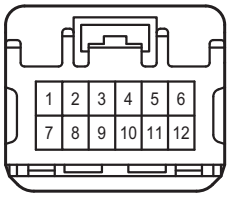


90980-12737

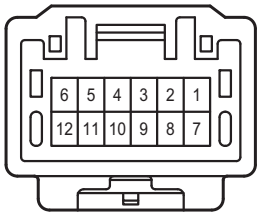


90980-12736

KG3
Black

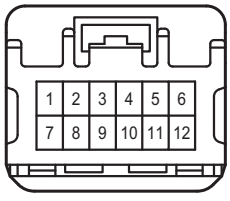


90980-12737

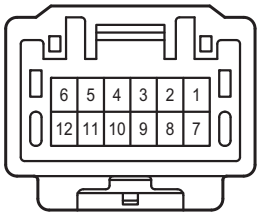


90980-12736

LQ1
White

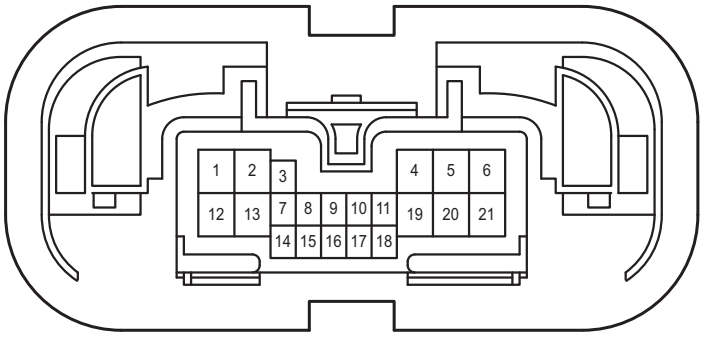


90980-12671

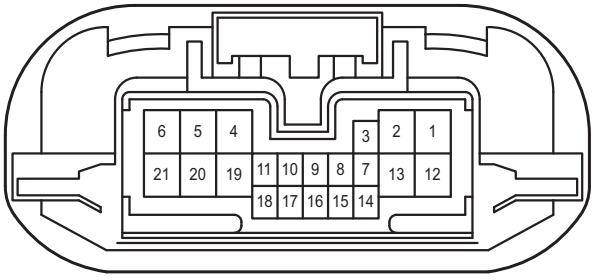


90980-12670

MR1
White

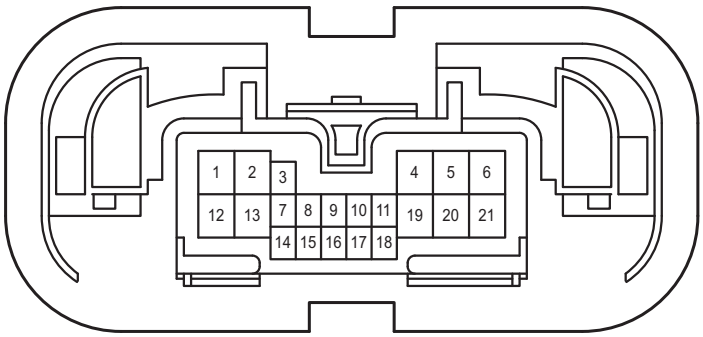


90980-12671

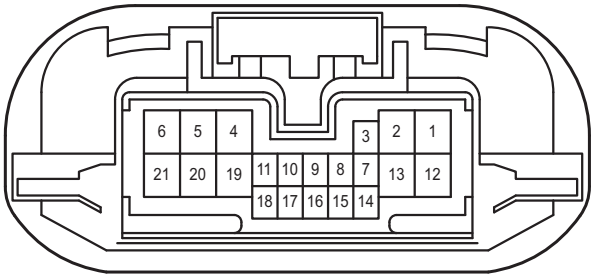


90980-12670

QP1
Gray

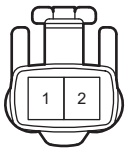


90980-11075

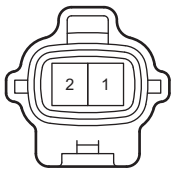


90980-11073

Qa1
White

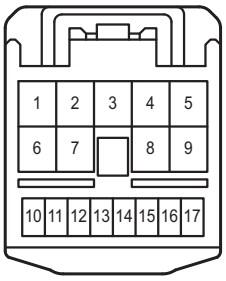


90980-12374

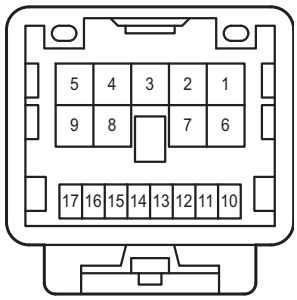

90980-12373


Qc1
White

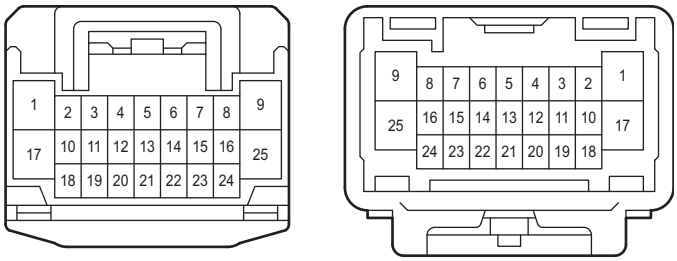

90980-12414

90980-12413


Qc2
Blue



90980-11156

90980-11155


Qs1
Black

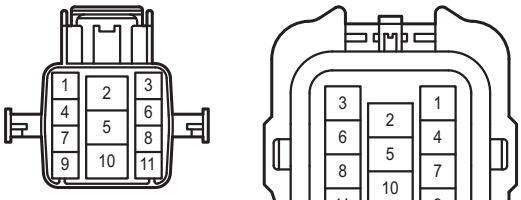

90980-11612

90980-11609


Qt1
Gray

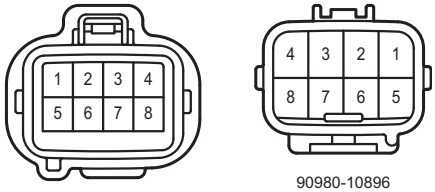

90980-10897

90980-10896


Qw1
White

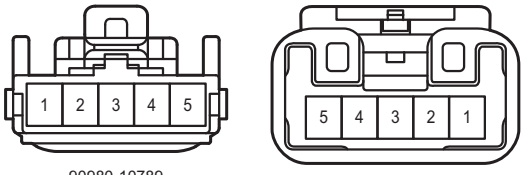

90980-10789

90980-11085


Qw2
Gray White

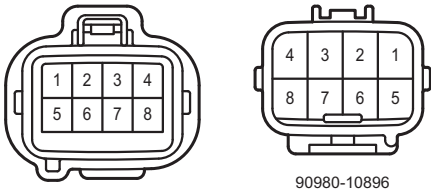

90980-10897

90980-10896


RP1
Gray

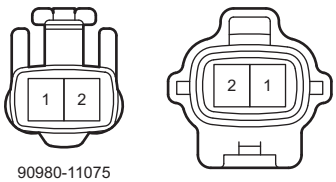

90980-11075

90980-11073


RQ3
White

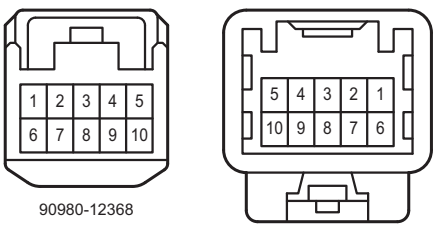

90980-12368

90980-12367


RV1
White

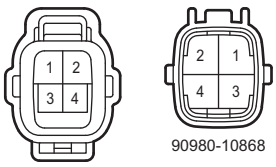


90980-10869

90980-10868

Rb1
White

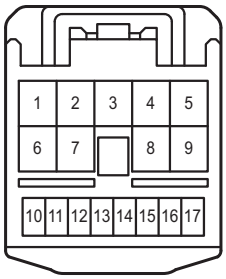


90980-12374

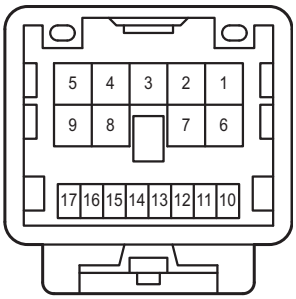


90980-12373

Rd1
White

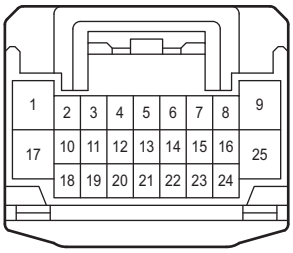


90980-12414

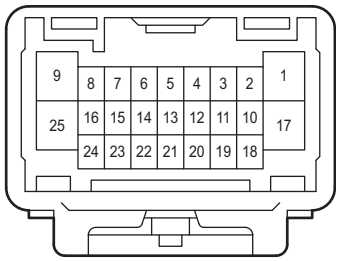

90980-12413


Rd2
Blue



90980-11156

90980-11155


Rs3
Gray

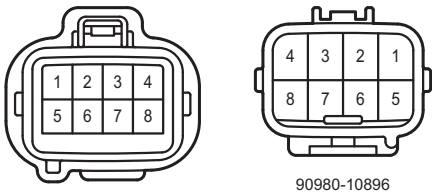

90980-10897

90980-10896


Ru1
Gray

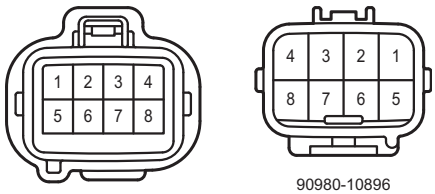

90980-10897

90980-10896


Rx1
White

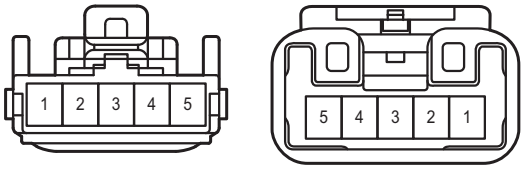

90980-10789

90980-11085


Rx2
Gray White

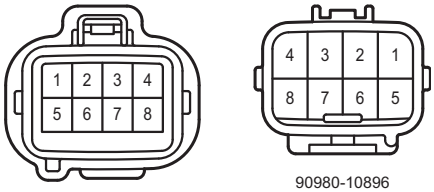

90980-10897

90980-10896


SE1
Gray

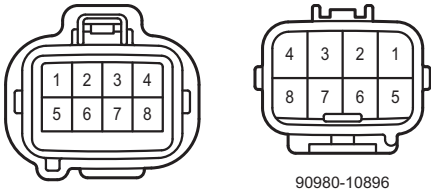

90980-10897

90980-10896

SR2
White

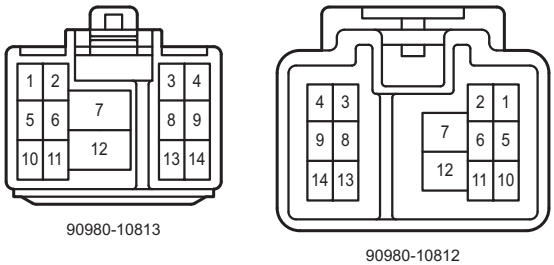

90980-10813

90980-10812

SR3
White




90980-10942




90980-10941

TG2
White

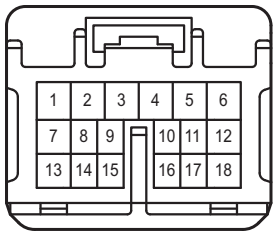

90980-12745

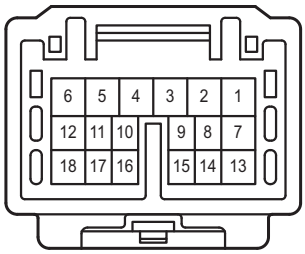

90980-12744

UQ1
Gray



90980-11194



90980-11193

UR1
Gray




90980-11194




90980-11193

WG1
White

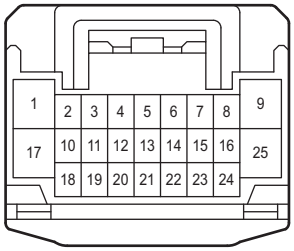


90980-12414

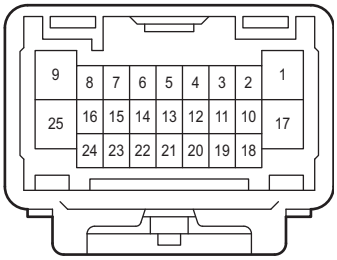


90980-12413

WG2
White

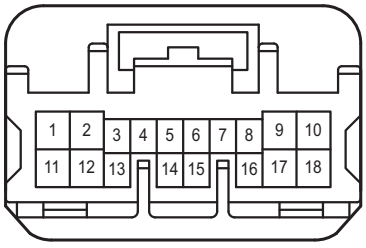


90980-12739

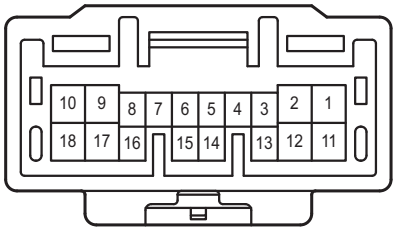


90980-12738

XQ2
White

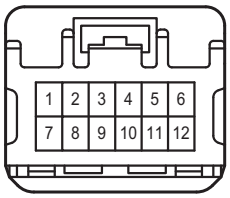


90980-12737

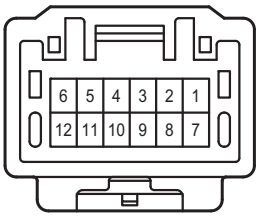


90980-12736

YX1
White

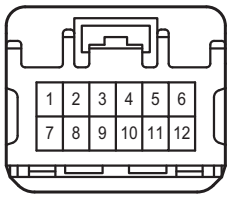


90980-12737

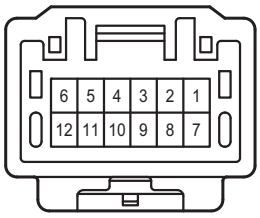


90980-12736

YX2
White

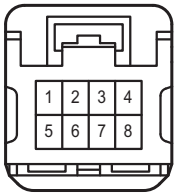

90980-12735

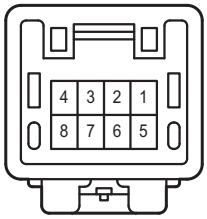


90980-12734

YZ1
White




90980-11003

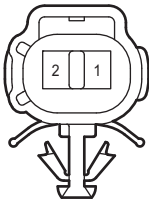


90980-11002

sR2
Gray

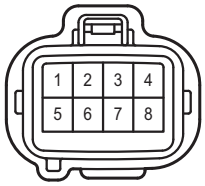

90980-10897

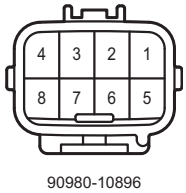

90980-10896

tR2
Gray



90980-11194



90980-11193

zX1
Dark Gray



90980-11194



90980-11193