




*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*6 :w/ Pre-Crash Safety System
*7 :Halogen Type
*8 :w/ Headlight Cleaner
*9 :w/ Front Fog Light
*10 :Halogen Headlight
*11 :LED Headlight
*12 :w/ Door Control Battery
*13 :Pressure Switch Type
*14 :w/ Electronic Modulated Air Suspension
*15 :w/ Power Outlet (220V)
*16 :Water-cooled Type Intercooler
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*20 :Before Apr. 2021 Production
*21 :From Apr. 2021 Production
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production

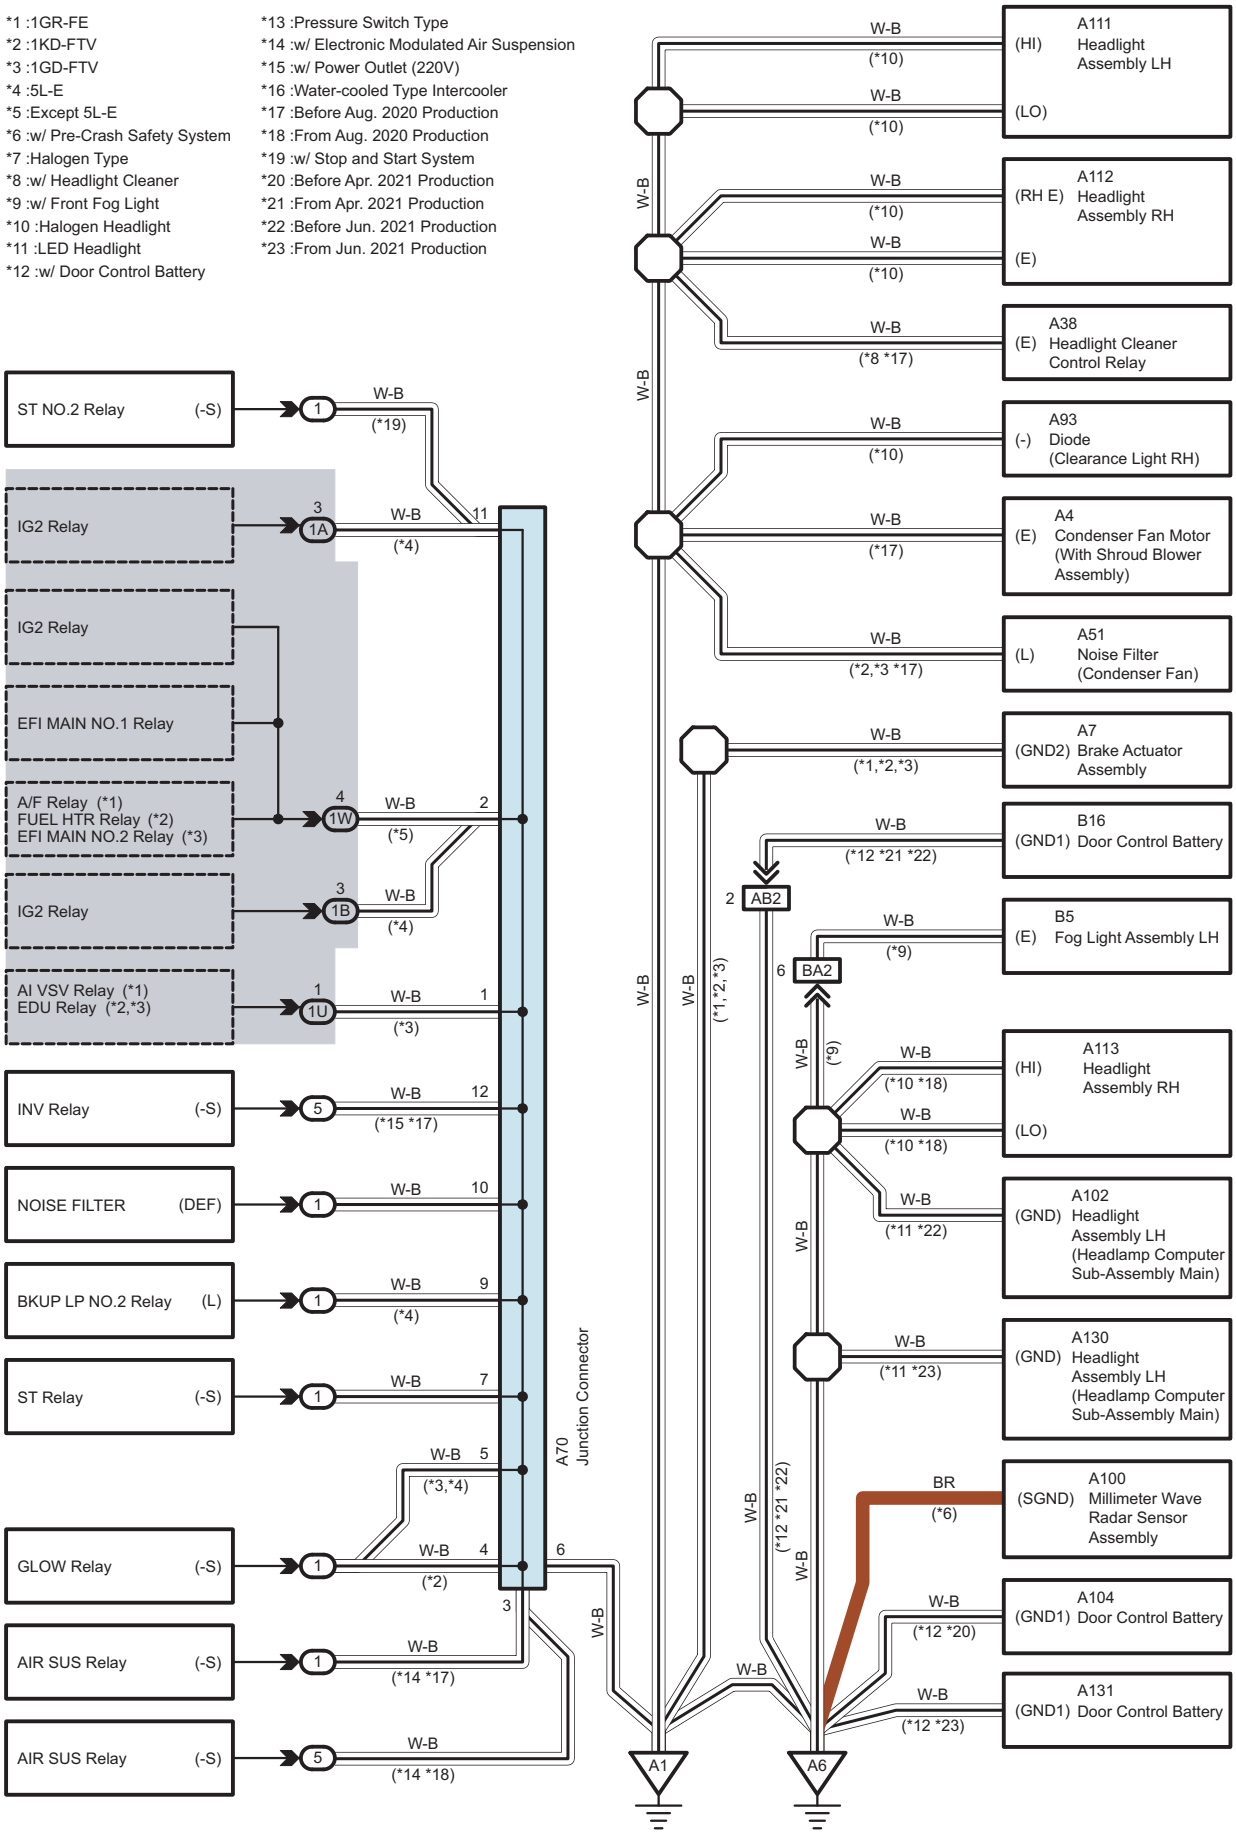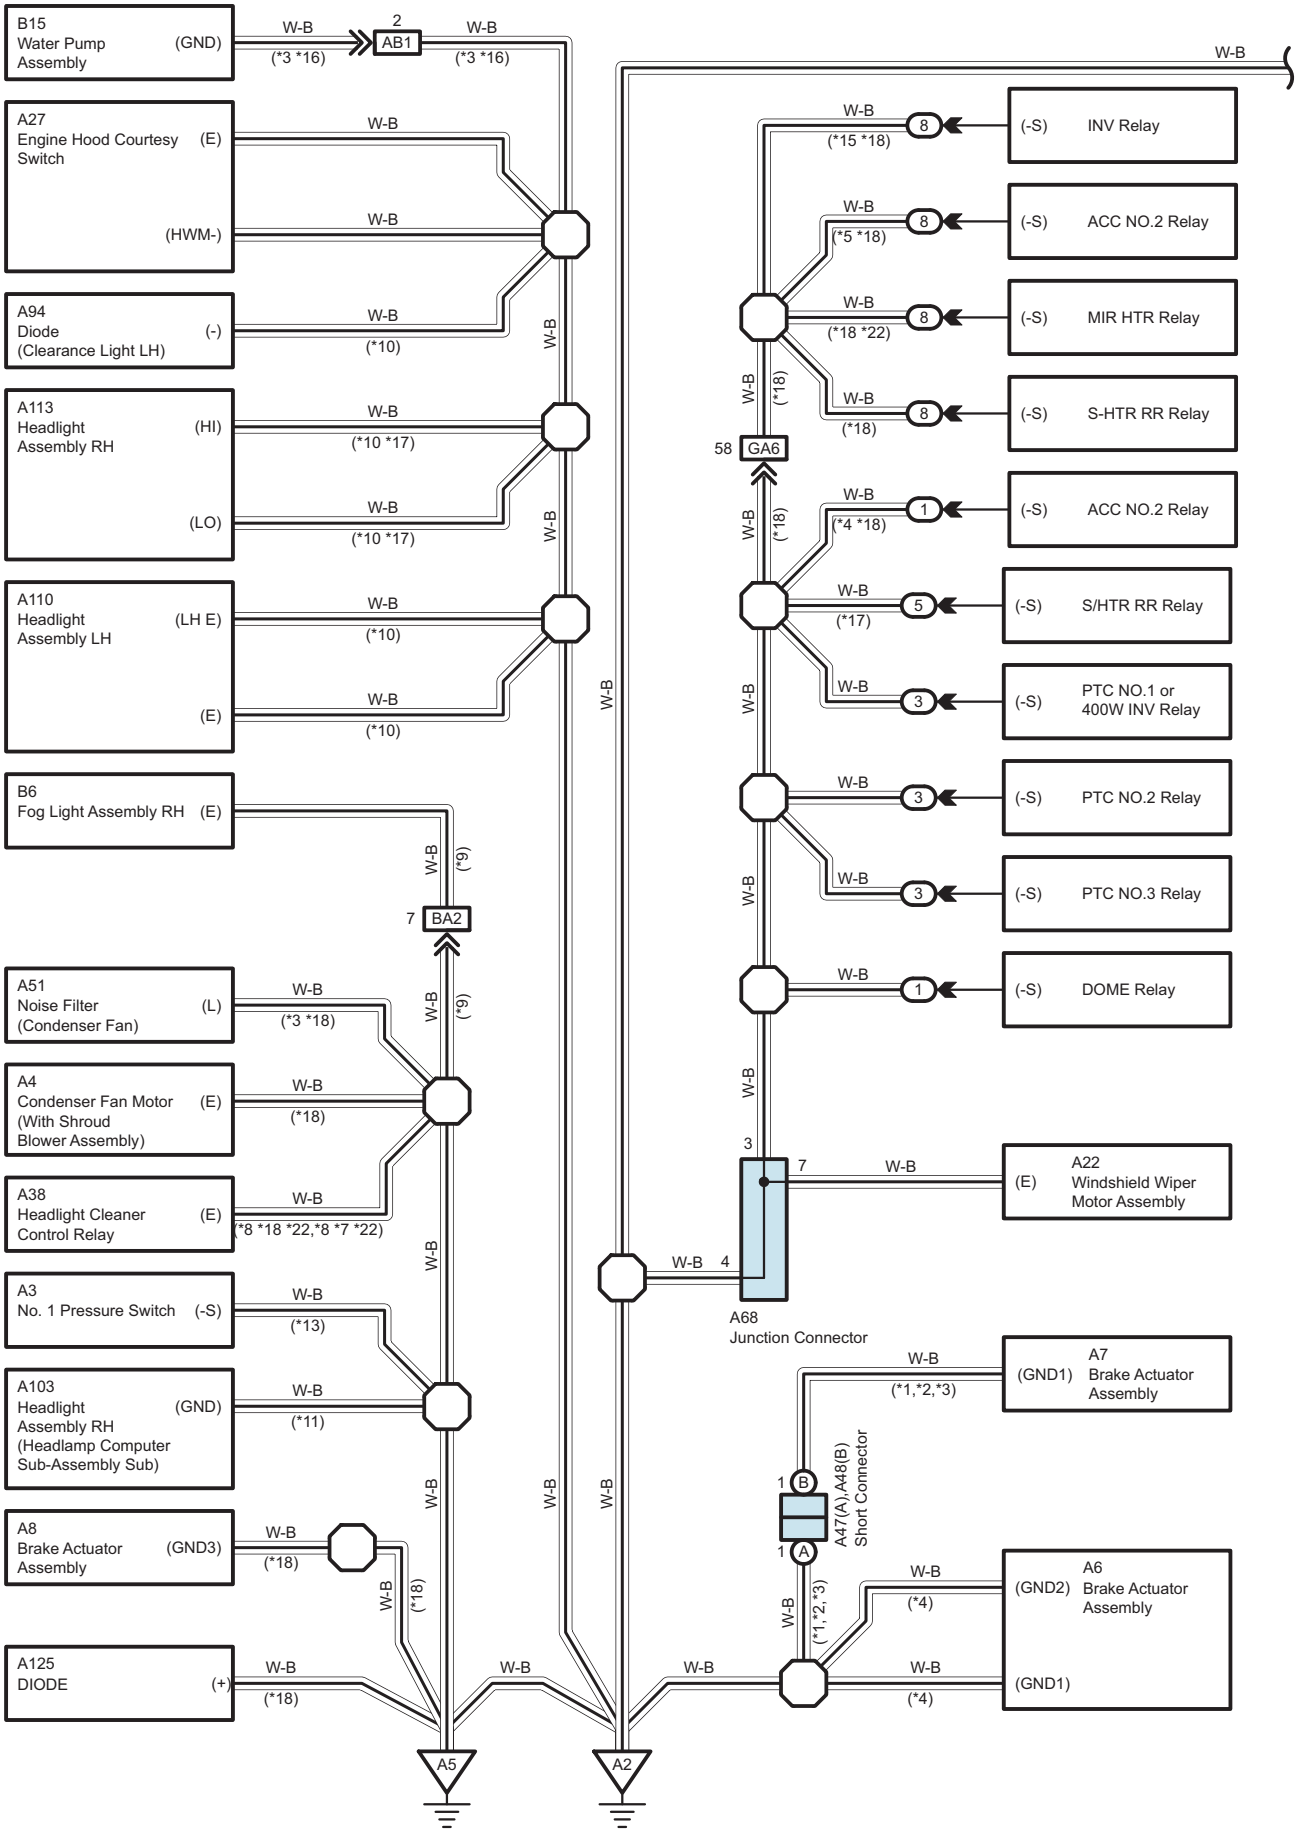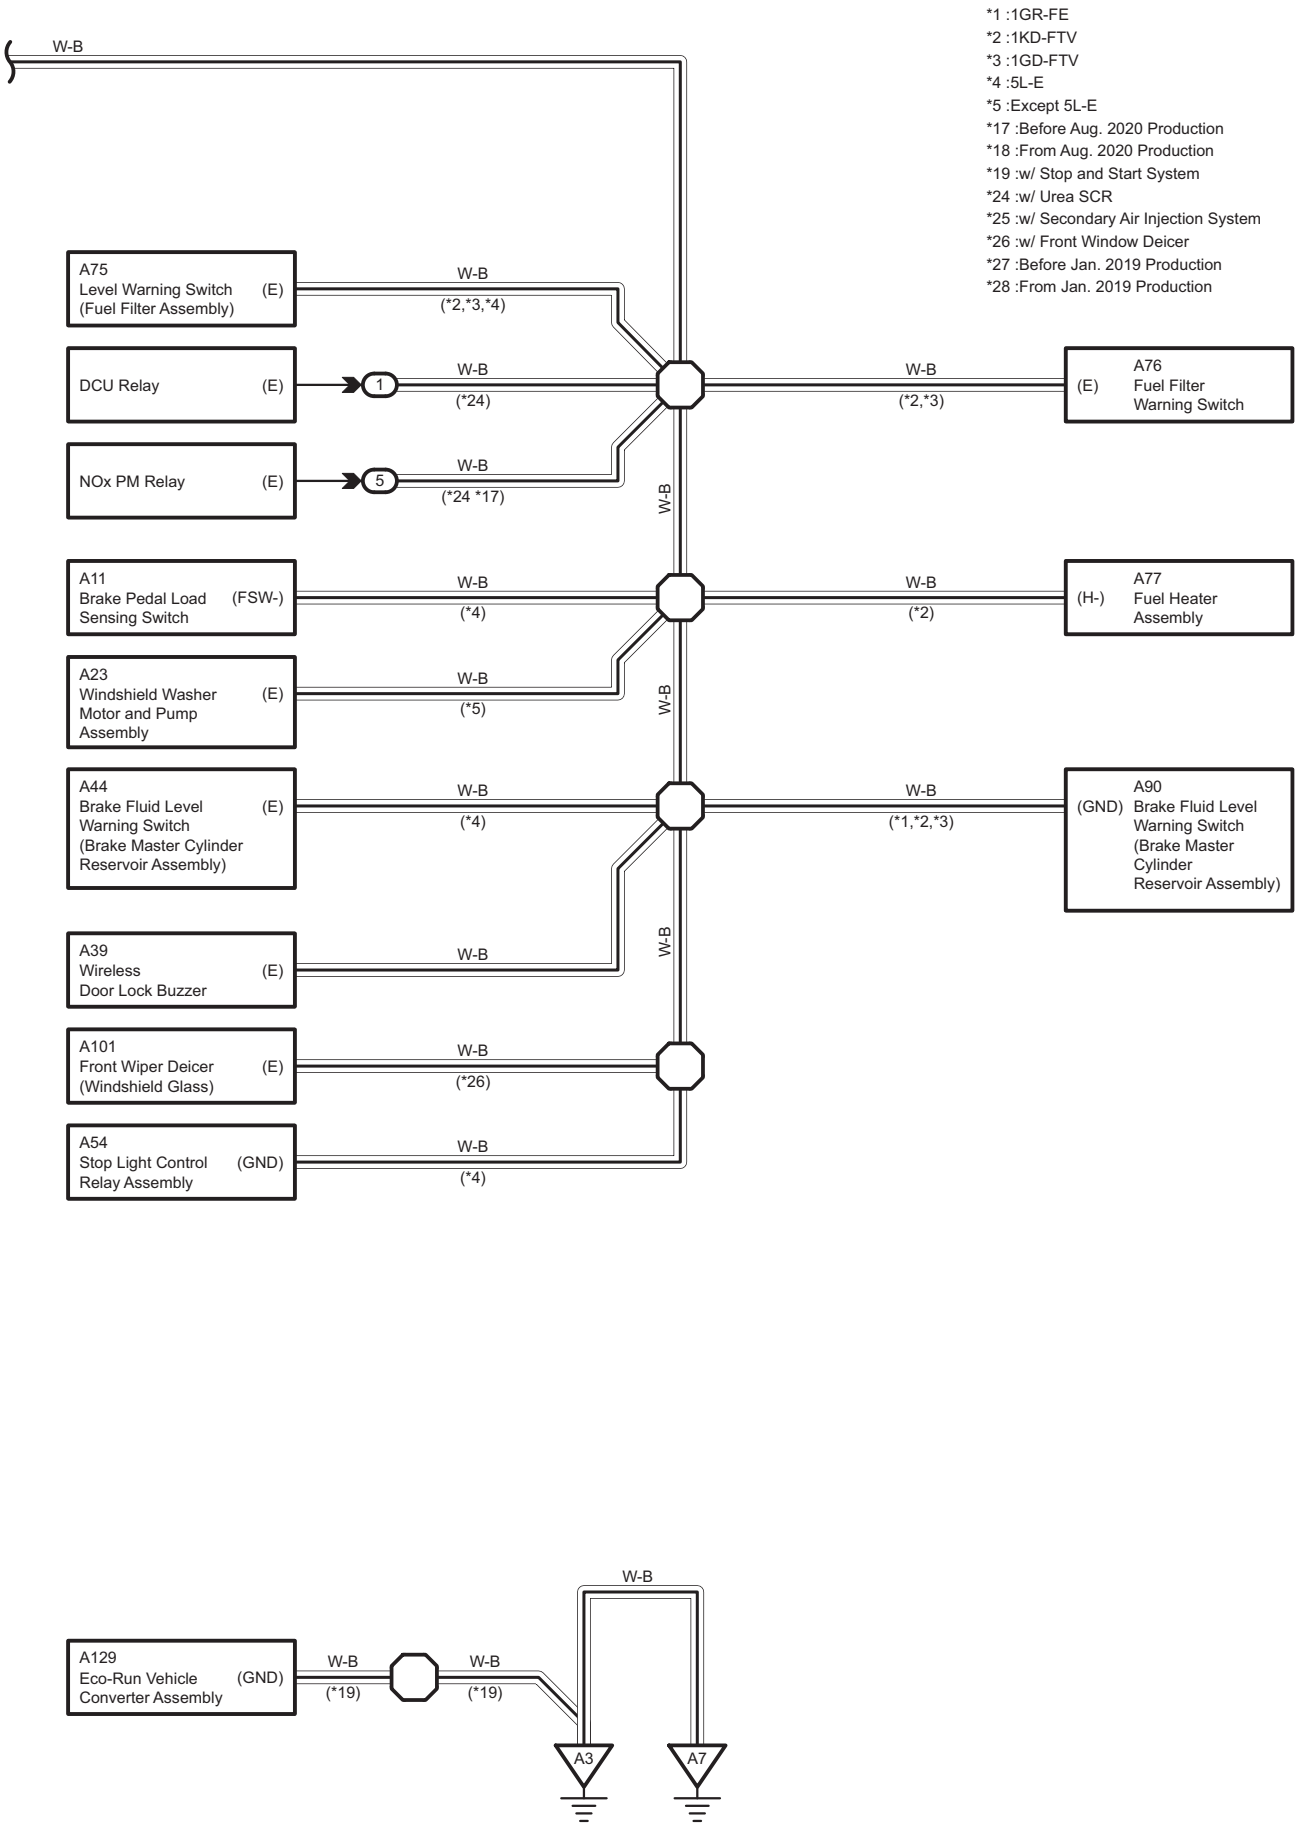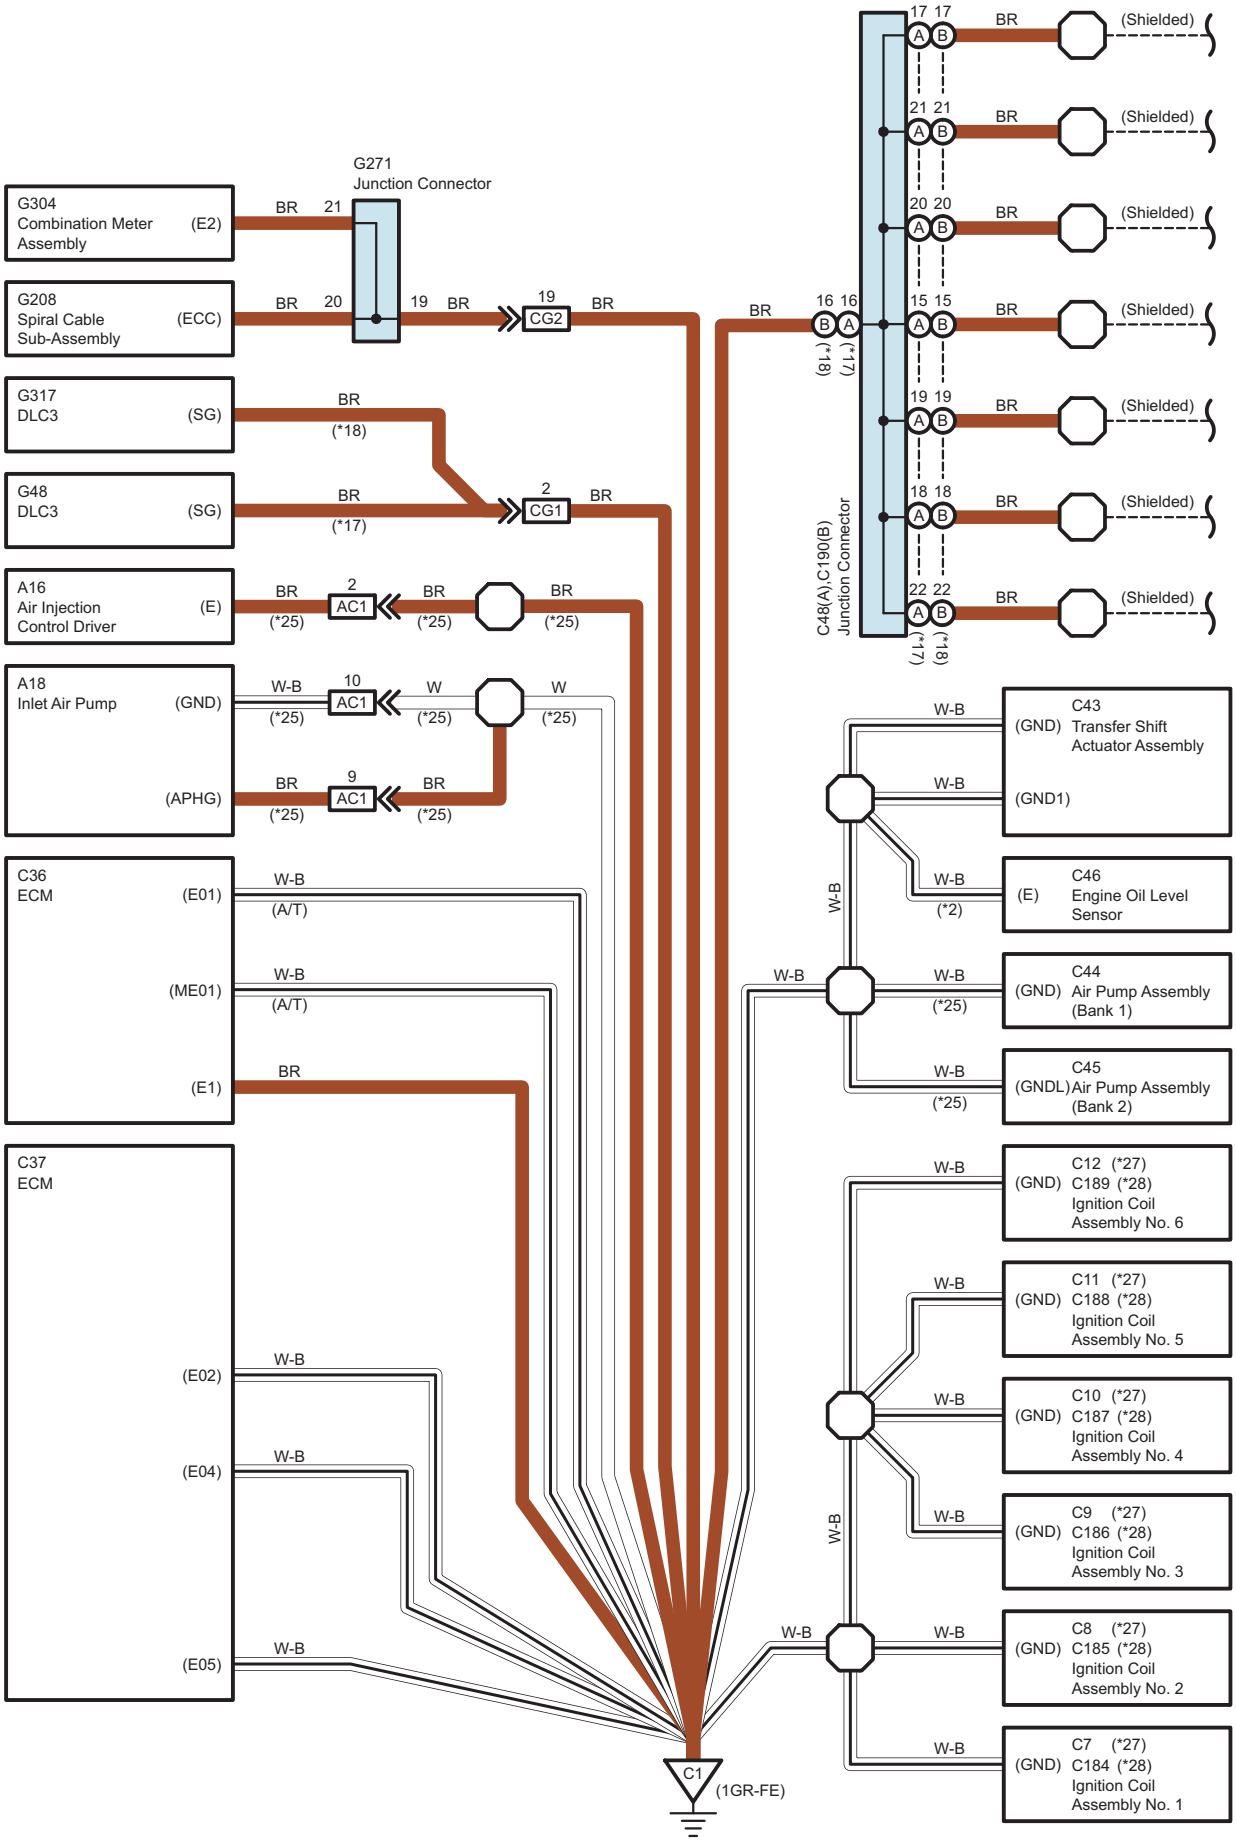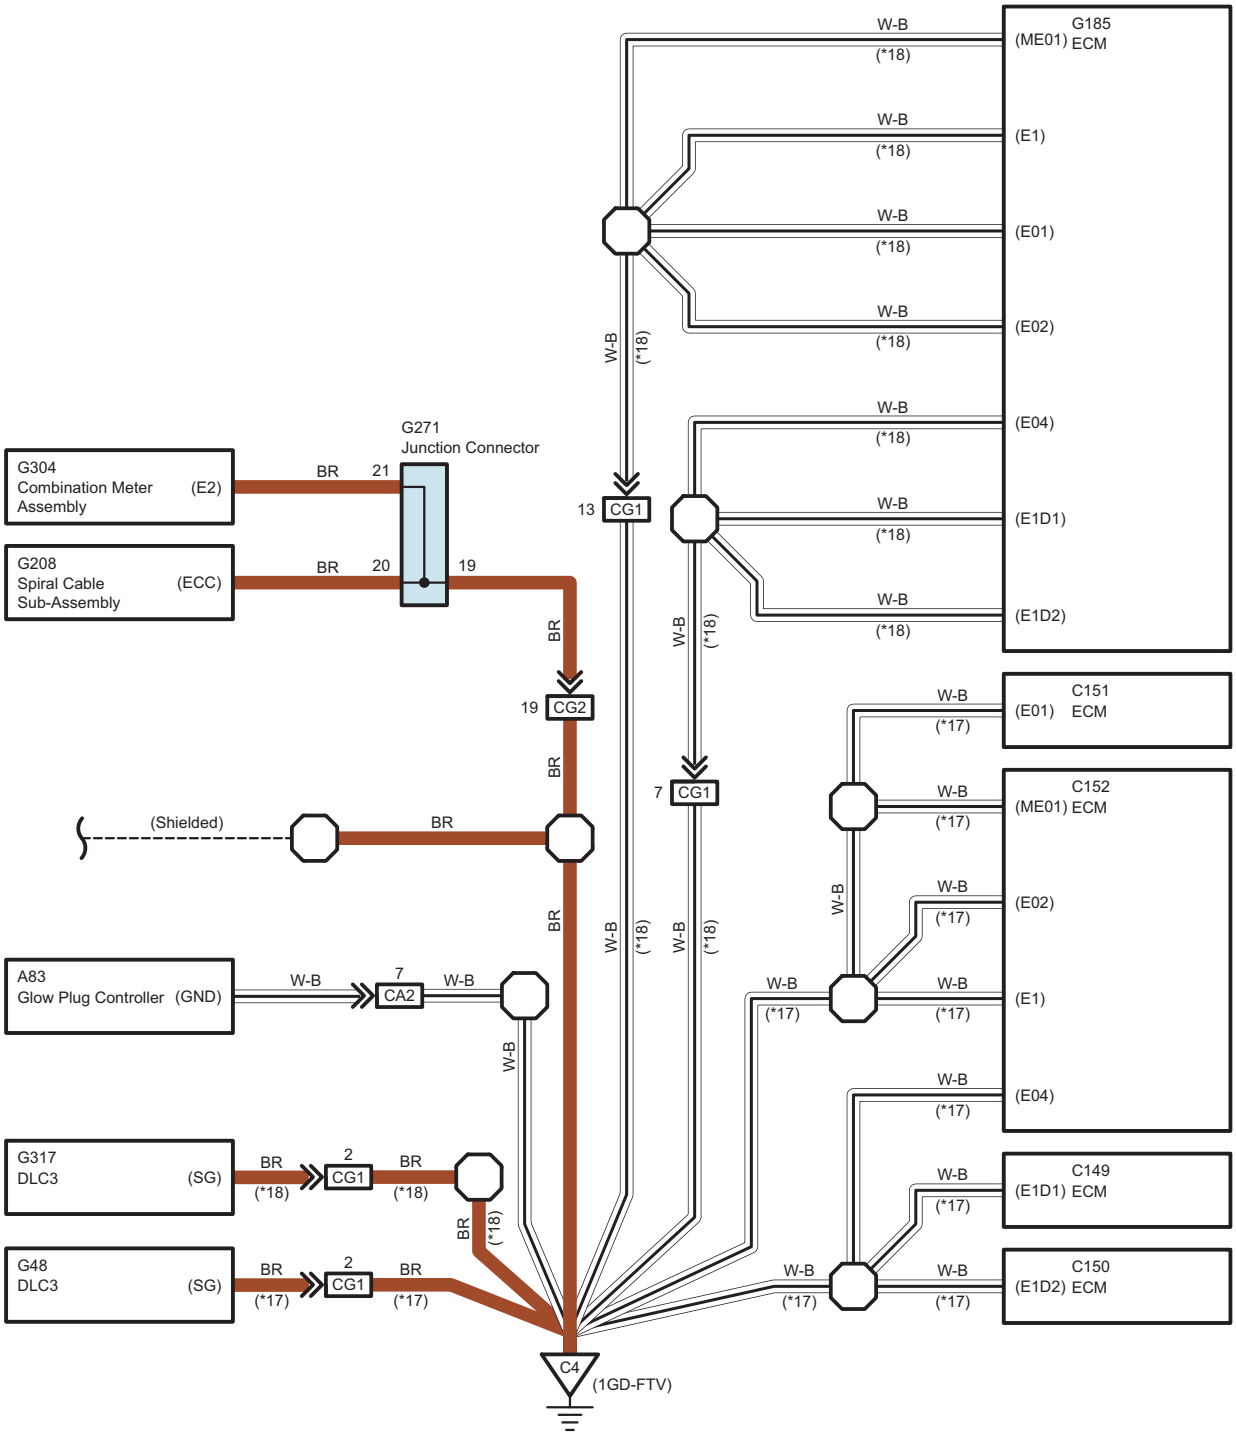



B15
Water Pump Assembly
(GND)
W-B
(*3 *16)
2
AB1
W-B
(*3 *16)
A27
Engine Hood Courtesy Switch
(E)
(HWM-)
W-B
A94
Diode
(Clearance Light LH)
(-)
(*10)
A113
Headlight Assembly RH
(HI)
(LO)
(*10 *17)
A110
Headlight Assembly LH
(LH E)
(E)
(*10)
B6
Fog Light Assembly RH
(E)
(*9)
7
BA2
A51
Noise Filter
(Condenser Fan)
(L)
(*3 *18)
A4
Condenser Fan Motor
(With Shroud Blower Assembly)
(E)
(*18)
A38
Headlight Cleaner Control Relay
(E)
(*8 *18 *22,*8 *7 *22)
A3
No. 1 Pressure Switch
(-S)
(*13)
A103
Headlight Assembly RH
(Headlamp Computer Sub-Assembly Sub)
(GND)
(*11)
A8
Brake Actuator Assembly
(GND3)
(*18)
A125
DIODE
(+)
A5
A2
W-B
(*15 *18)
8
(-S)
INV Relay
(*5 *18)
ACC NO.2 Relay
(*18 *22)
MIR HTR Relay
(*18)
S-HTR RR Relay
58
GA6
(*4 *18)
1
(*17)
5
S/HTR RR Relay
3
PTC NO.1 or 400W INV Relay
PTC NO.2 Relay
PTC NO.3 Relay
DOME Relay
A68
Junction Connector
A22
Windshield Wiper Motor Assembly
A7
Brake Actuator Assembly
(GND1)
(*1,*2,*3)
A47(A),A48(B)
Short Connector
A6
Brake Actuator Assembly
(GND2)
(*4)



*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*24 :w/ Urea SCR
*25 :w/ Secondary Air Injection System
*26 :w/ Front Window Deicer
*27 :Before Jan. 2019 Production
*28 :From Jan. 2019 Production
W-B
A75
Level Warning Switch (E)
(Fuel Filter Assembly)
W-B
(*2,*3,*4)
DCU Relay (E)
1
W-B
(*24)
NOx PM Relay (E)
5
W-B
(*24 *17)
W-B
W-B
(*2,*3)
A76
(E) Fuel Filter
Warning Switch
A11
Brake Pedal Load (FSW-)
Sensing Switch
W-B
(*4)
W-B
(*2)
A77
(H-) Fuel Heater
Assembly
A23
Windshield Washer (E)
Motor and Pump
Assembly
W-B
(*5)
W-B
A44
Brake Fluid Level (E)
Warning Switch
(Brake Master Cylinder
Reservoir Assembly)
W-B
(*4)
W-B
(*1,*2,*3)
A90
(GND) Brake Fluid Level
Warning Switch
(Brake Master
Cylinder
Reservoir Assembly)
A39
Wireless (E)
Door Lock Buzzer
W-B
W-B
A101
Front Wiper Deicer (E)
(Windshield Glass)
W-B
(*26)
A54
Stop Light Control (GND)
Relay Assembly
W-B
(*4)
A129
Eco-Run Vehicle (GND)
Converter Assembly
W-B
(*19)
W-B
(*19)
W-B
A3
A7


G304
Combination Meter Assembly
(E2)
G208
Spiral Cable Sub-Assembly
(ECC)
G317
DLC3
(SG)
G48
DLC3
(SG)
A16
Air Injection Control Driver
(E)
A18
Inlet Air Pump
(GND)
(APHG)
C36
ECM
(E01)
(ME01)
(E1)
C37
ECM
(E02)
(E04)
(E05)
G271
Junction Connector
CG1
CG2
AC1
C48(A),C190(B)
Junction Connector
(Shielded)
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
C46
Engine Oil Level Sensor
(E)
C44
Air Pump Assembly (Bank 1)
C45
Air Pump Assembly (Bank 2)
(GNDL)
C12 (*27)
C189 (*28)
Ignition Coil Assembly No. 6
C11 (*27)
C188 (*28)
Ignition Coil Assembly No. 5
C10 (*27)
C187 (*28)
Ignition Coil Assembly No. 4
C9 (*27)
C186 (*28)
Ignition Coil Assembly No. 3
C8 (*27)
C185 (*28)
Ignition Coil Assembly No. 2
C7 (*27)
C184 (*28)
Ignition Coil Assembly No. 1
C1
(1GR-FE)



G185
(ME01) ECM
(E1)
(E01)
(E02)
(E04)
(E1D1)
(E1D2)
W-B
(*18)
G271
Junction Connector
G304
Combination Meter Assembly
(E2)
G208
Spiral Cable Sub-Assembly
(ECC)
BR
21
20
19
13 CG1
19 CG2
7 CG1
(Shielded)
C151
(E01) ECM
C152
(ME01) ECM
(E02)
(E1)
(E04)
(*17)
A83
Glow Plug Controller (GND)
7
CA2
G317
DLC3
(SG)
2
CG1
(*18)
C149
(E1D1) ECM
G48
DLC3
(SG)
(*17)
C150
(E1D2) ECM
C4
(1GD-FTV)


*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production

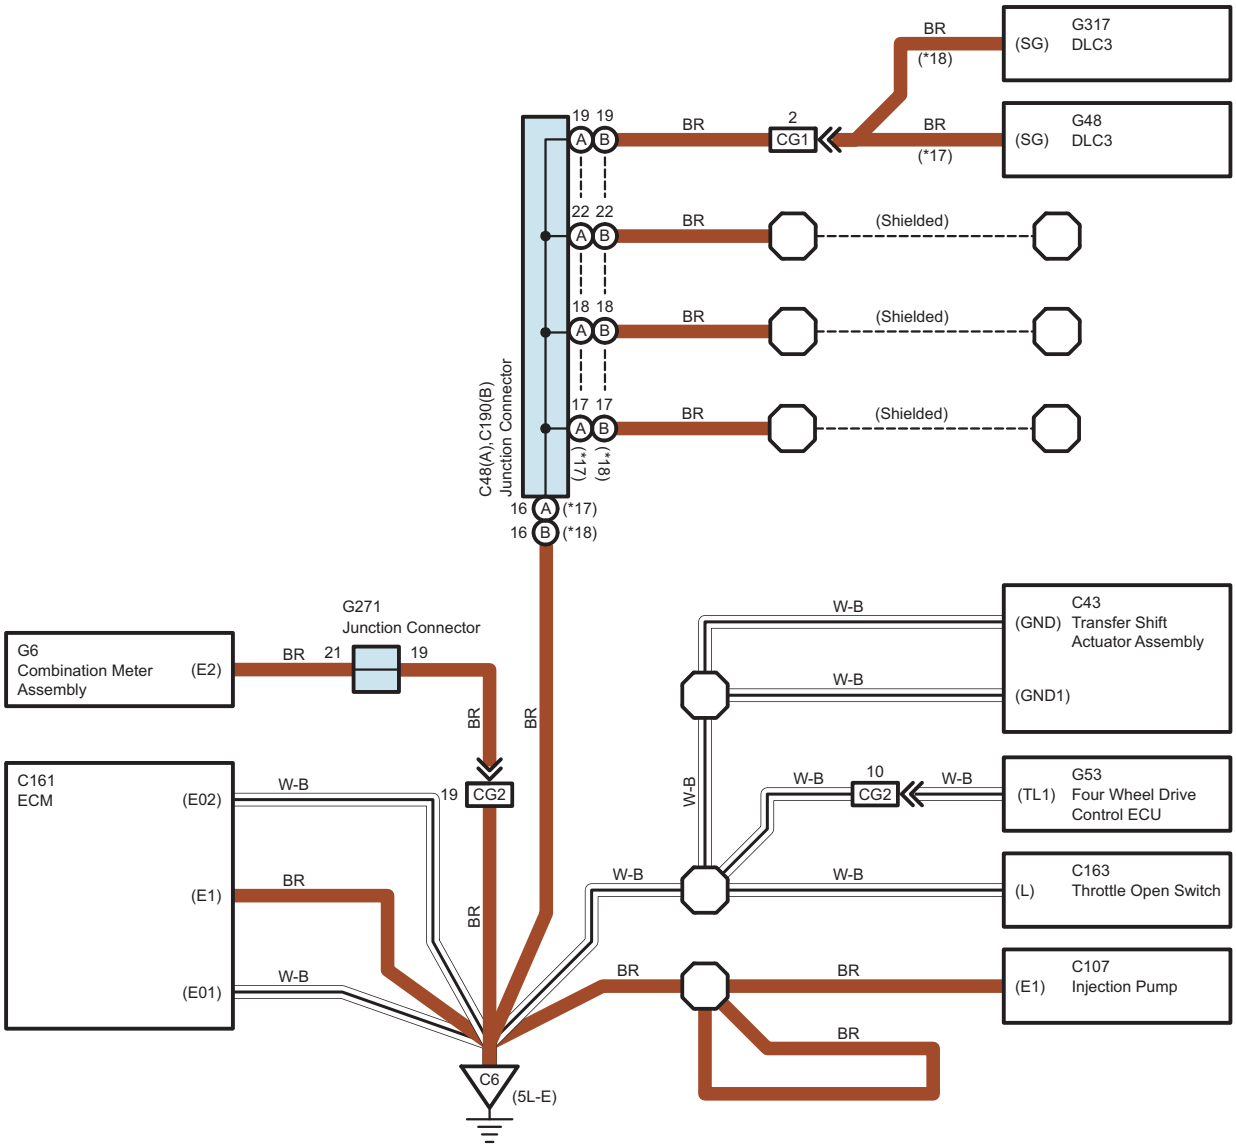

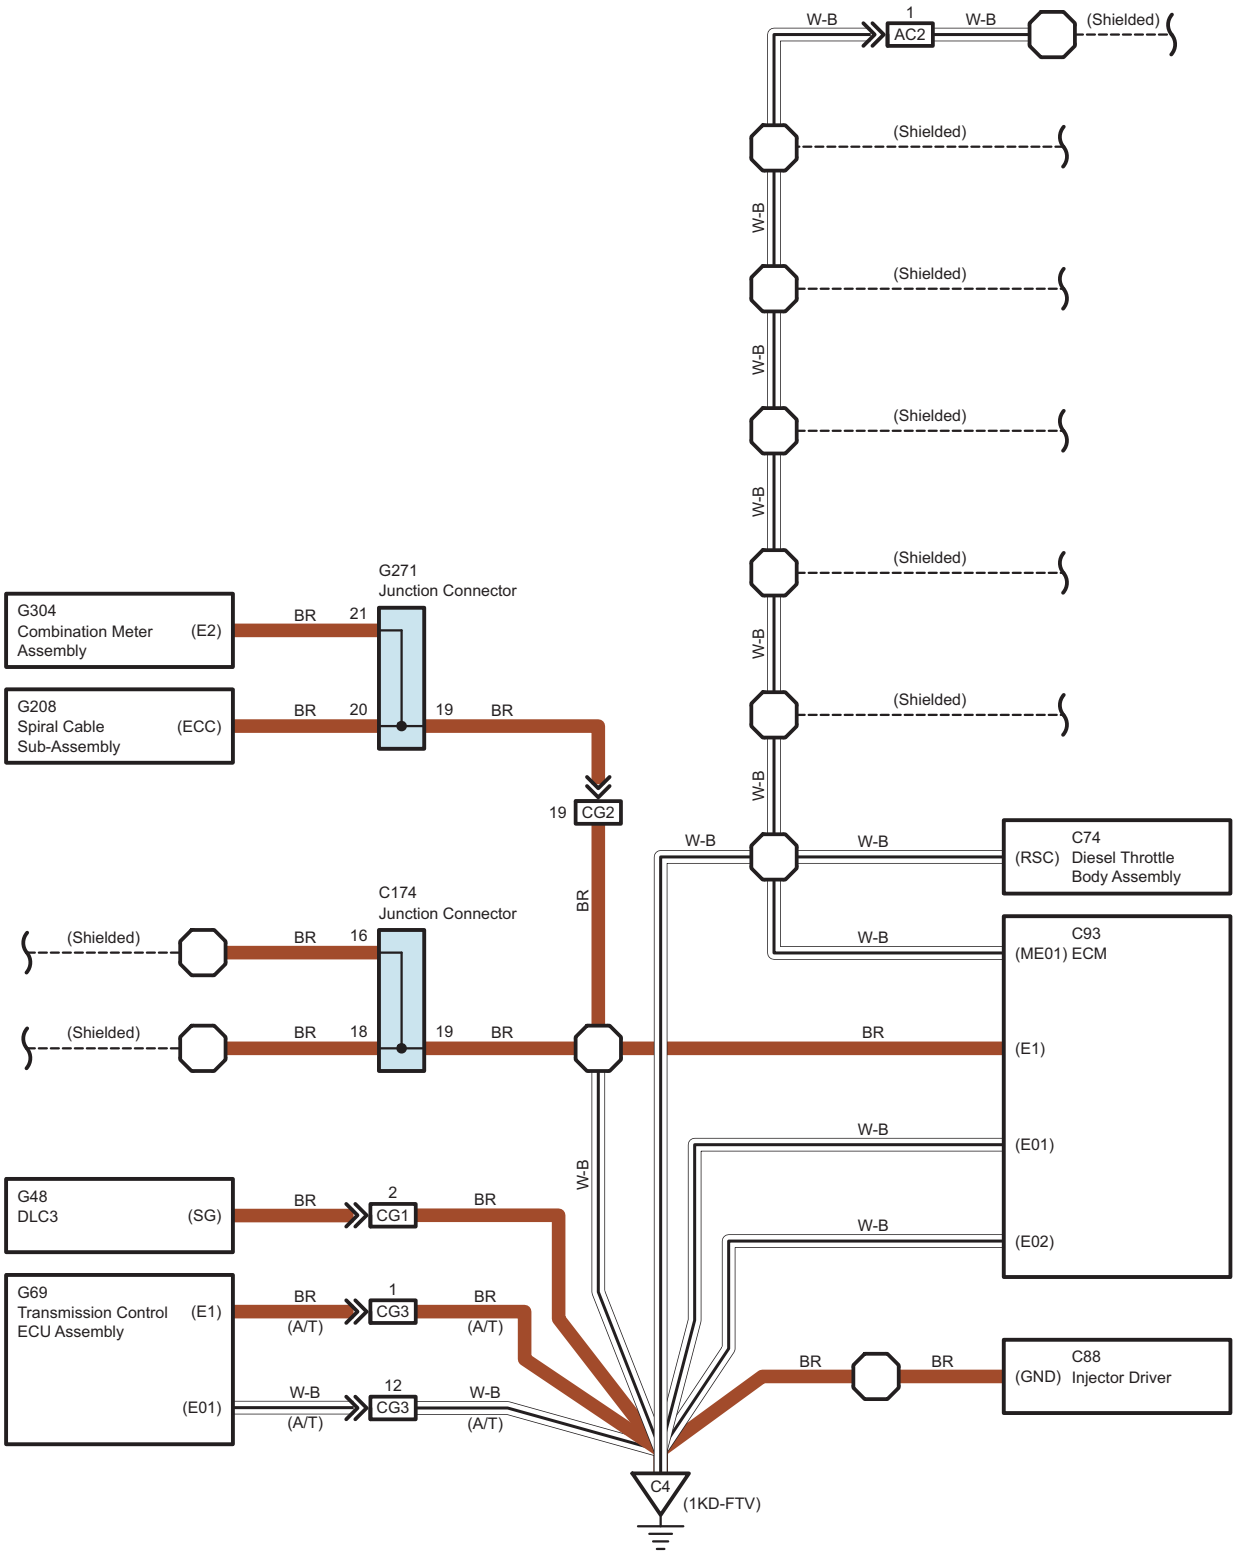

W-B
1
AC2
W-B
(Shielded)
(Shielded)
(Shielded)
(Shielded)
(Shielded)
(Shielded)
G271
Junction Connector
G304
Combination Meter
Assembly
(E2)
BR
21
G208
Spiral Cable
Sub-Assembly
(ECC)
BR
20
19
BR
19
CG2
C74
(RSC)
Diesel Throttle
Body Assembly
C174
Junction Connector
(Shielded)
BR
16
(Shielded)
BR
18
19
BR
C93
(ME01)
ECM
(E1)
(E01)
(E02)
G48
DLC3
(SG)
BR
2
CG1
BR
G69
Transmission Control
ECU Assembly
(E1)
(E01)
BR
(A/T)
1
CG3
BR
(A/T)
W-B
(A/T)
12
CG3
W-B
(A/T)
C88
(GND)
Injector Driver
C4
(1KD-FTV)


*3 :1GD-FTV
*5 :Except 5L-E
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*27 :Before Jan. 2019 Production
*28 :From Jan. 2019 Production
*29 :Audioless Type
*30 :Radio & Display Receiver Assembly Type
*31 :Navigation Receiver Assembly Type
*32 :w/ Navigation System
*33 :w/ Stereo Component Amplifier Assembly
*34 :JBL Type
*35 :PIONEER Type
*36 :w/ Entry & Start System
*37 :w/ Power Tilt and Power Telescopic

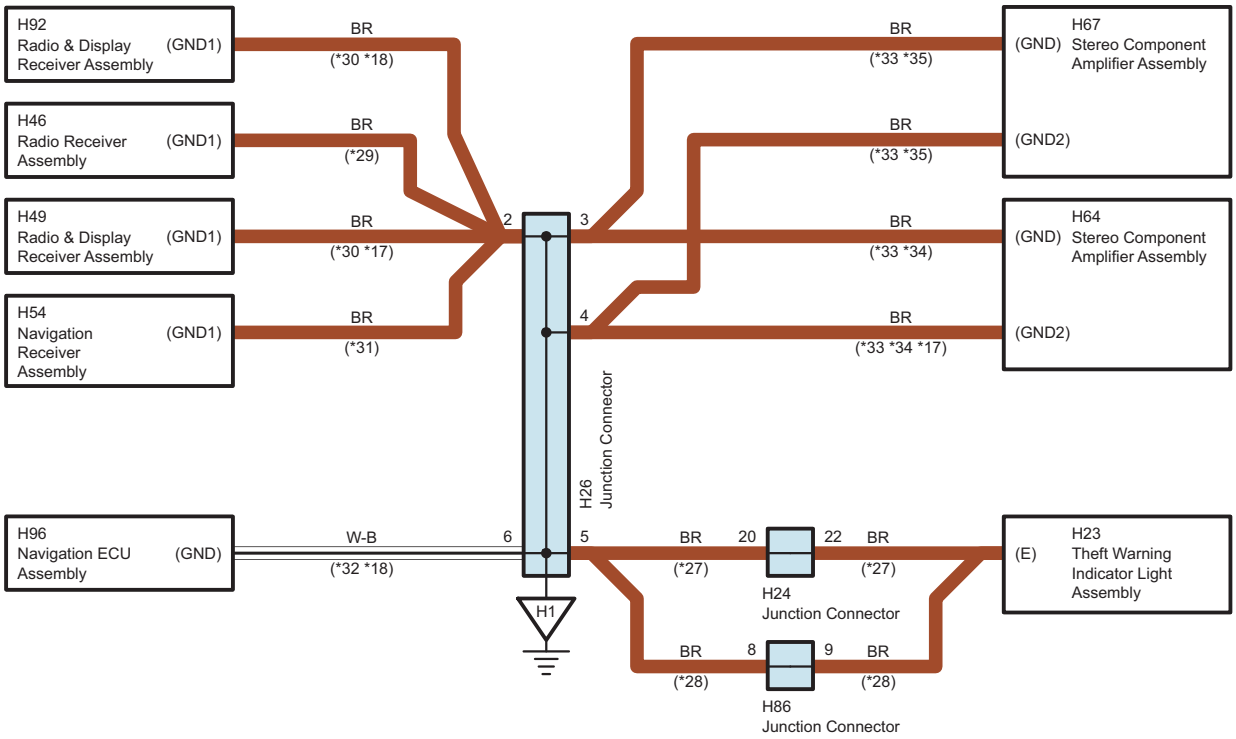


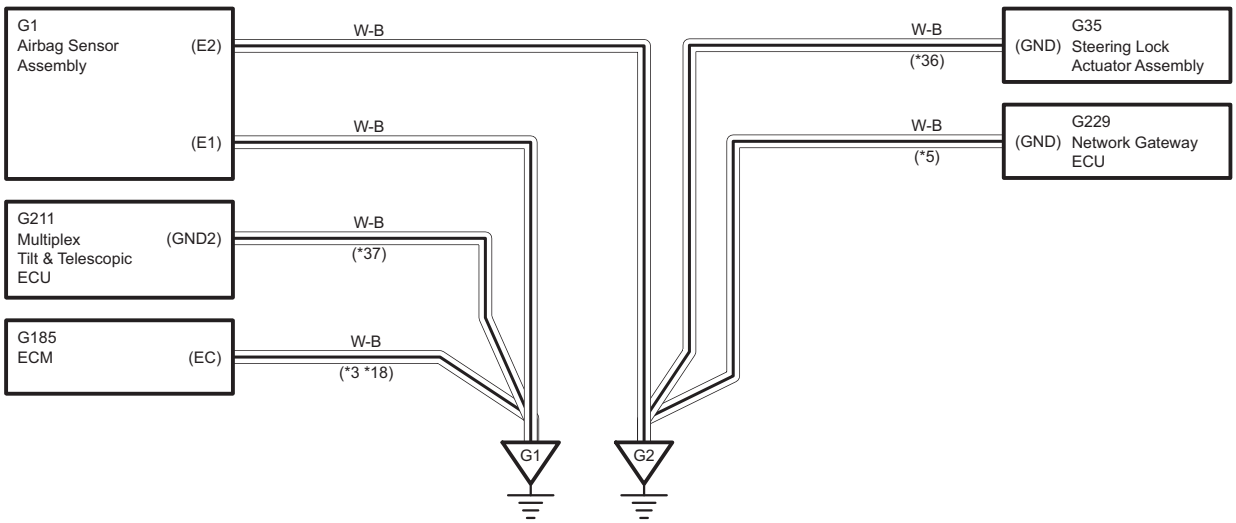


*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*6 :w/ Pre-Crash Safety System
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production
*27 :Before Jan. 2019 Production
*28 :From Jan. 2019 Production
*36 :w/ Entry & Start System
*38 :A/T
*39 :M/T
*40 :w/ Crawl
*41 :w/o Crawl
*42 :w/ Back Sonar or Clearance Sonar Switch Assembly
*43 :w/ Double Locking
*44 :w/ Door Illumination
*45 :w/ Airbag Cut Off Switch Cylinder Sub-Assembly
*46 :w/ Automatic Retractable Mirror
*47 :w/o Automatic Retractable Mirror
*48 :w/ Auto Wiper
*49 :w/ Cool Box
*50 :w/ Seat Heater (Front)
*51 :w/ Seat Heater (Rear)
*52 :w/o Seat Heater (Rear)
*53 :w/ Panoramic View Monitor System
*54 :w/ Curtain Shield Airbag
*55 :w/ Particulate Matter Sensor

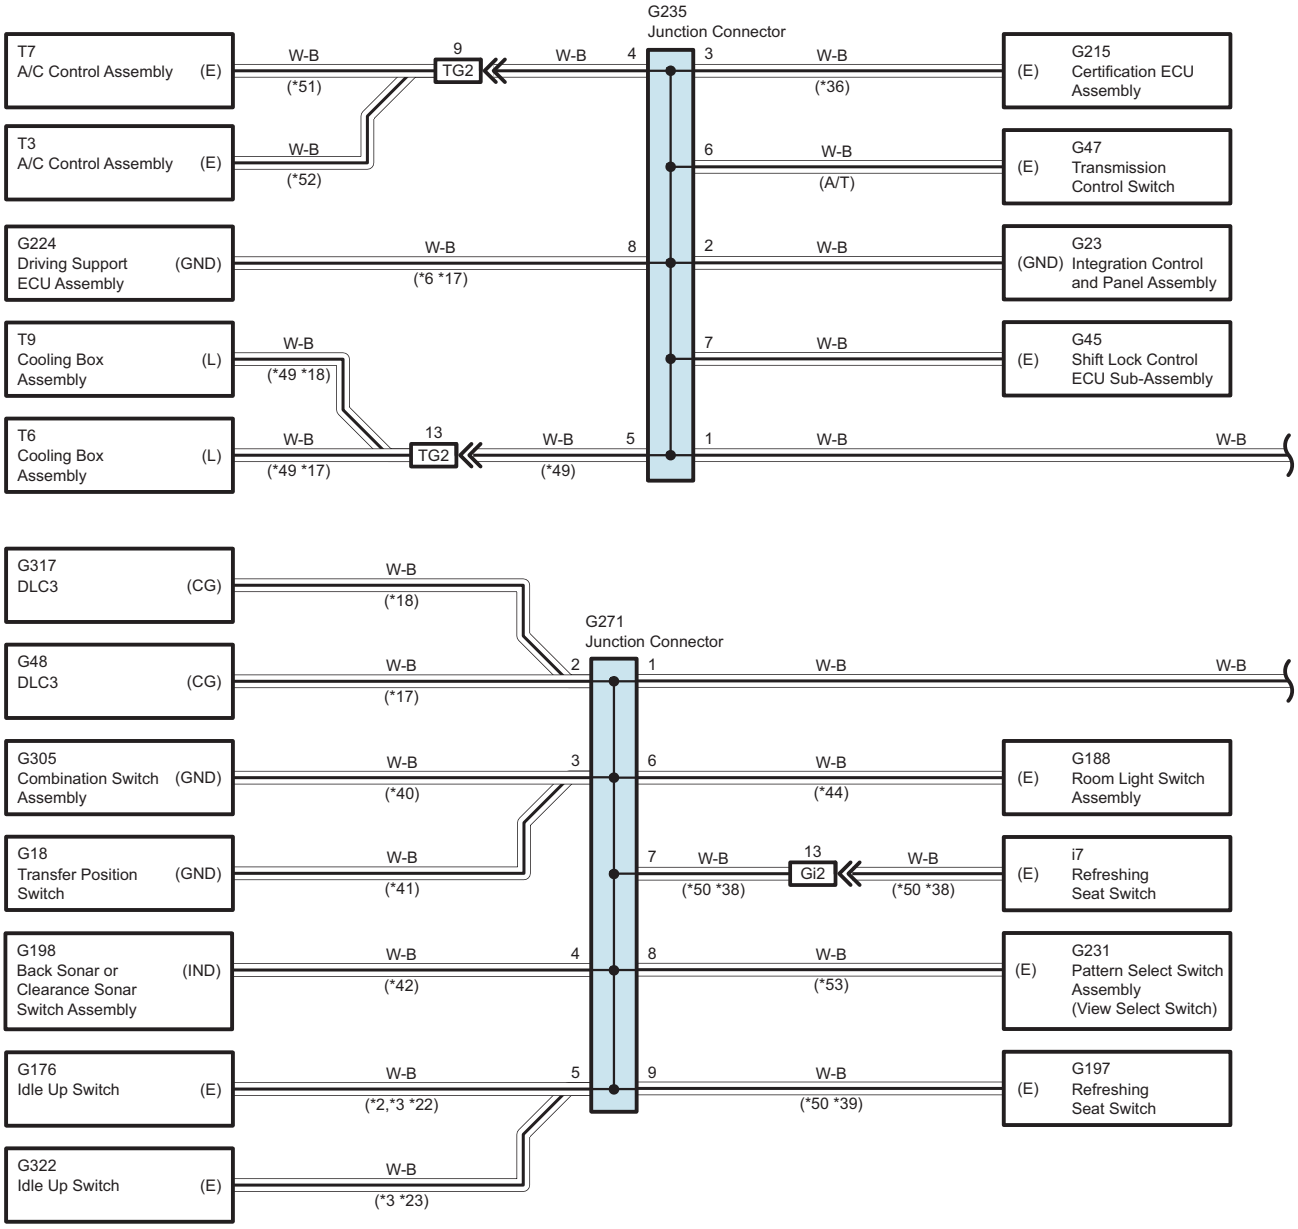


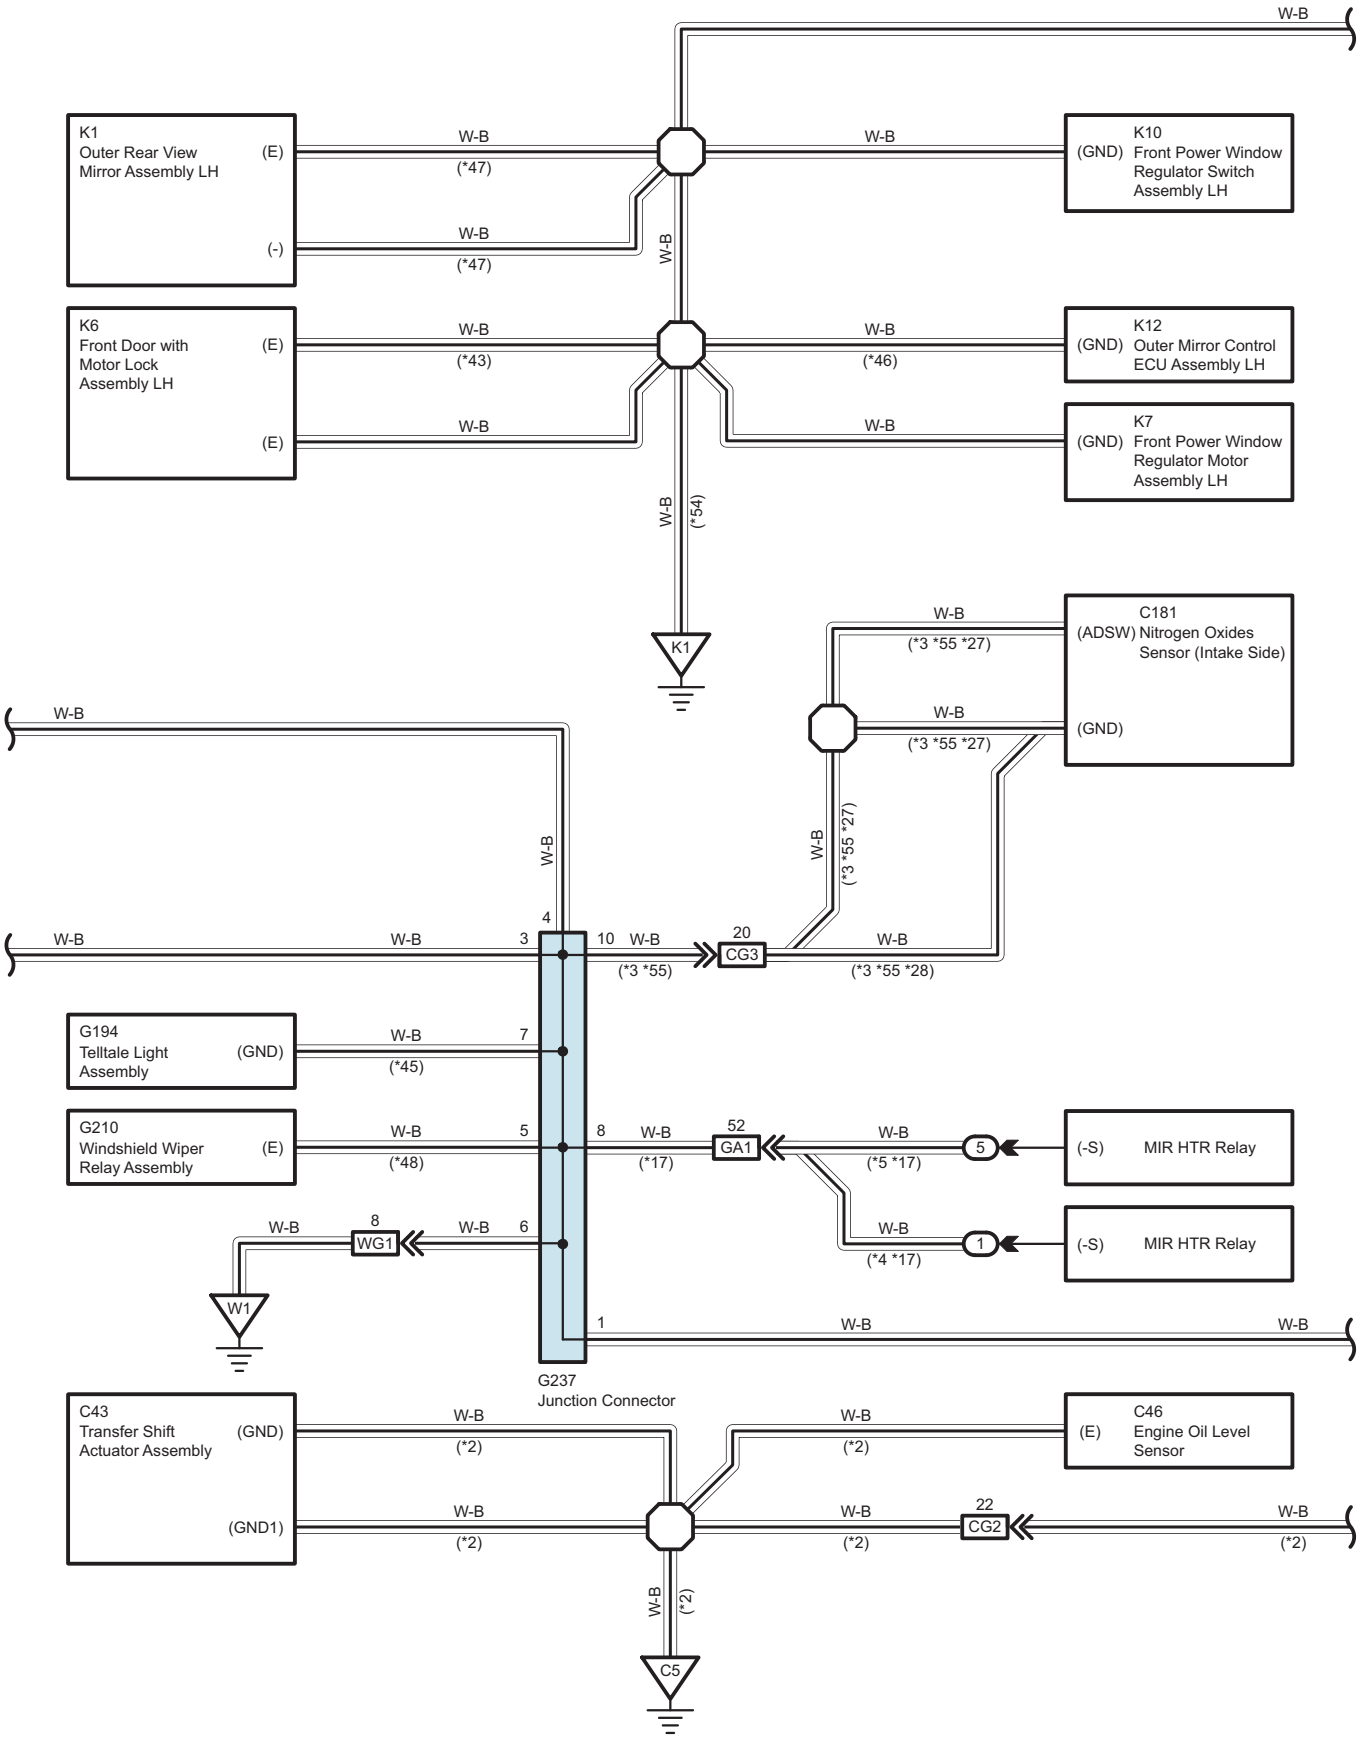

W-B
K1
Outer Rear View Mirror Assembly LH
(E)
(-)
W-B
(*47)
W-B
(*47)
W-B
W-B
K10
(GND) Front Power Window Regulator Switch Assembly LH
K6
Front Door with Motor Lock Assembly LH
(E)
(E)
W-B
(*43)
W-B
W-B
(*46)
W-B
W-B
K12
(GND) Outer Mirror Control ECU Assembly LH
K7
(GND) Front Power Window Regulator Motor Assembly LH
W-B
(*54)
K1
C181
(ADSW) Nitrogen Oxides Sensor (Intake Side)
(GND)
W-B
(*3 *55 *27)
W-B
(*3 *55 *27)
W-B
(*3 *55 *27)
W-B
W-B
W-B
4
3
10
W-B
(*3 *55)
20
CG3
W-B
(*3 *55 *28)
G194
Telltale Light Assembly
(GND)
W-B
(*45)
7
G210
Windshield Wiper Relay Assembly
(E)
W-B
(*48)
5
8
W-B
(*17)
52
GA1
W-B
(*5 *17)
5
(-S) MIR HTR Relay
W-B
8
WG1
W-B
6
W-B
(*4 *17)
1
(-S) MIR HTR Relay
W1
1
W-B
W-B
G237
Junction Connector
C43
Transfer Shift Actuator Assembly
(GND)
(GND1)
W-B
(*2)
W-B
(*2)
W-B
(*2)
W-B
(*2)
C46
(E) Engine Oil Level Sensor
22
CG2
W-B
(*2)
W-B
(*2)
C5

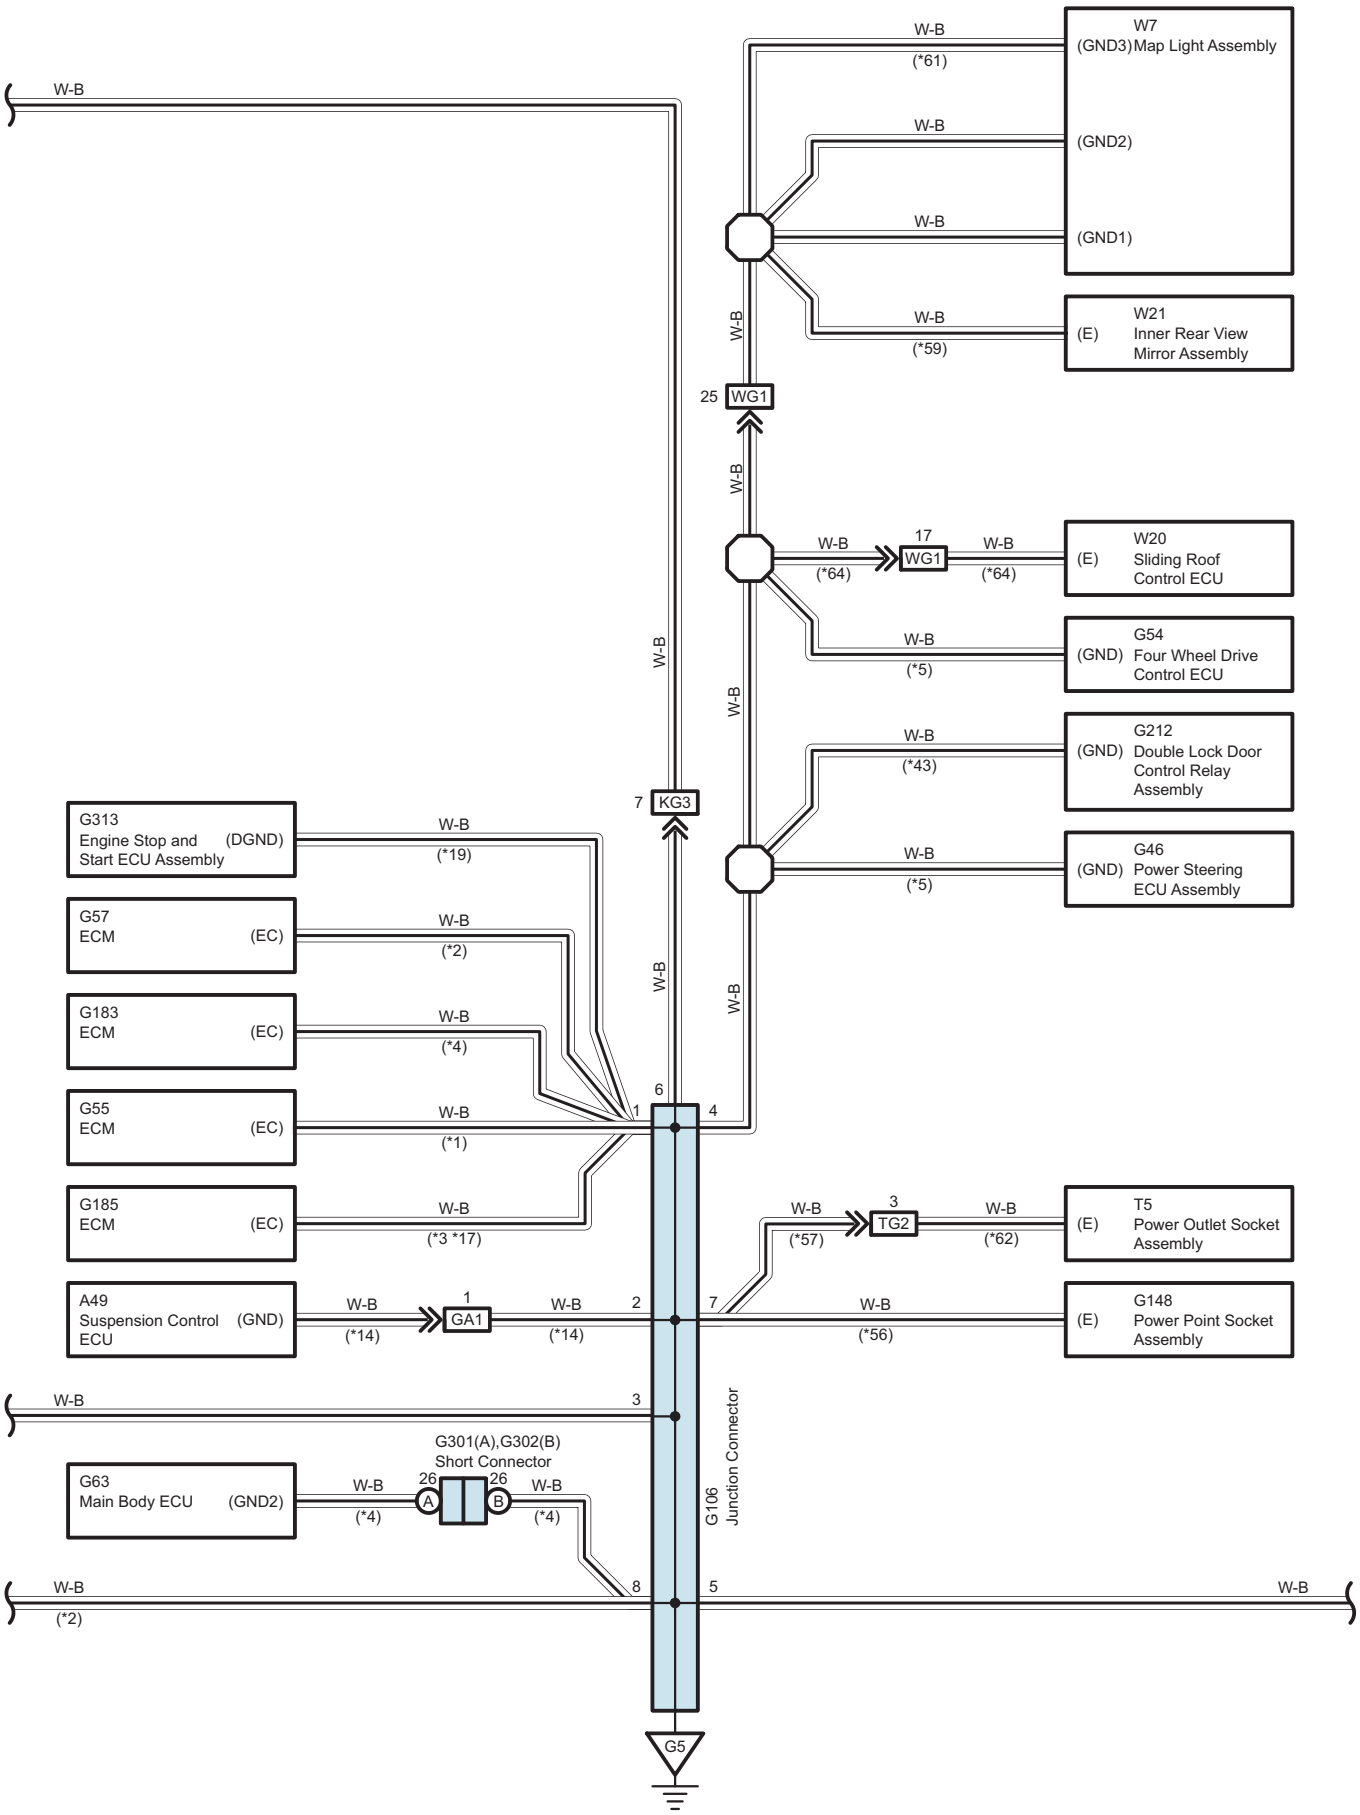

W-B
W-B
(*61)
W7
(GND3) Map Light Assembly
W-B
(GND2)
W-B
(GND1)
W-B
(*59)
(E) W21 Inner Rear View Mirror Assembly
W-B
25 WG1
W-B
W-B
(*64)
17 WG1
W-B
(*64)
(E) W20 Sliding Roof Control ECU
W-B
(*5)
(GND) G54 Four Wheel Drive Control ECU
W-B
W-B
(*43)
(GND) G212 Double Lock Door Control Relay Assembly
W-B
(*5)
(GND) G46 Power Steering ECU Assembly
7 KG3
G313 Engine Stop and Start ECU Assembly (DGND)
W-B
(*19)
G57 ECM (EC)
W-B
(*2)
G183 ECM (EC)
W-B
(*4)
G55 ECM (EC)
W-B
(*1)
G185 ECM (EC)
W-B
(*3 *17)
6
1
4
W-B
W-B
W-B
W-B
(*57)
3 TG2
W-B
(*62)
(E) T5 Power Outlet Socket Assembly
A49 Suspension Control ECU (GND)
W-B
(*14)
1 GA1
W-B
(*14)
2
7
W-B
(*56)
(E) G148 Power Point Socket Assembly
W-B
3
G301(A),G302(B) Short Connector
G63 Main Body ECU (GND2)
W-B
(*4)
26 A
26 B
W-B
(*4)
G106 Junction Connector
W-B
(*2)
8
5
W-B
G5


*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*14 :w/ Electronic Modulated Air Suspension
*17 :Before Aug. 2020 Production
*19 :w/ Stop and Start System
*37 :w/ Power Tilt and Power Telescopic
*43 :w/ Double Locking
*46 :w/ Automatic Retractable Mirror
*47 :w/o Automatic Retractable Mirror
*56 :Bench Seat
*57 :Separate Seat
*58 :w/ Rear Seat Entertainment
*59 :w/ Automatic Glare-Resistant EC Mirror
*60 :w/ PTC Heater
*61 :w/ Intrusion Sensor
*62 :w/ Center Power Outlet Socket
*63 :w/o Power Tilt and Power Telescopic
*64 :w/ Sliding Roof

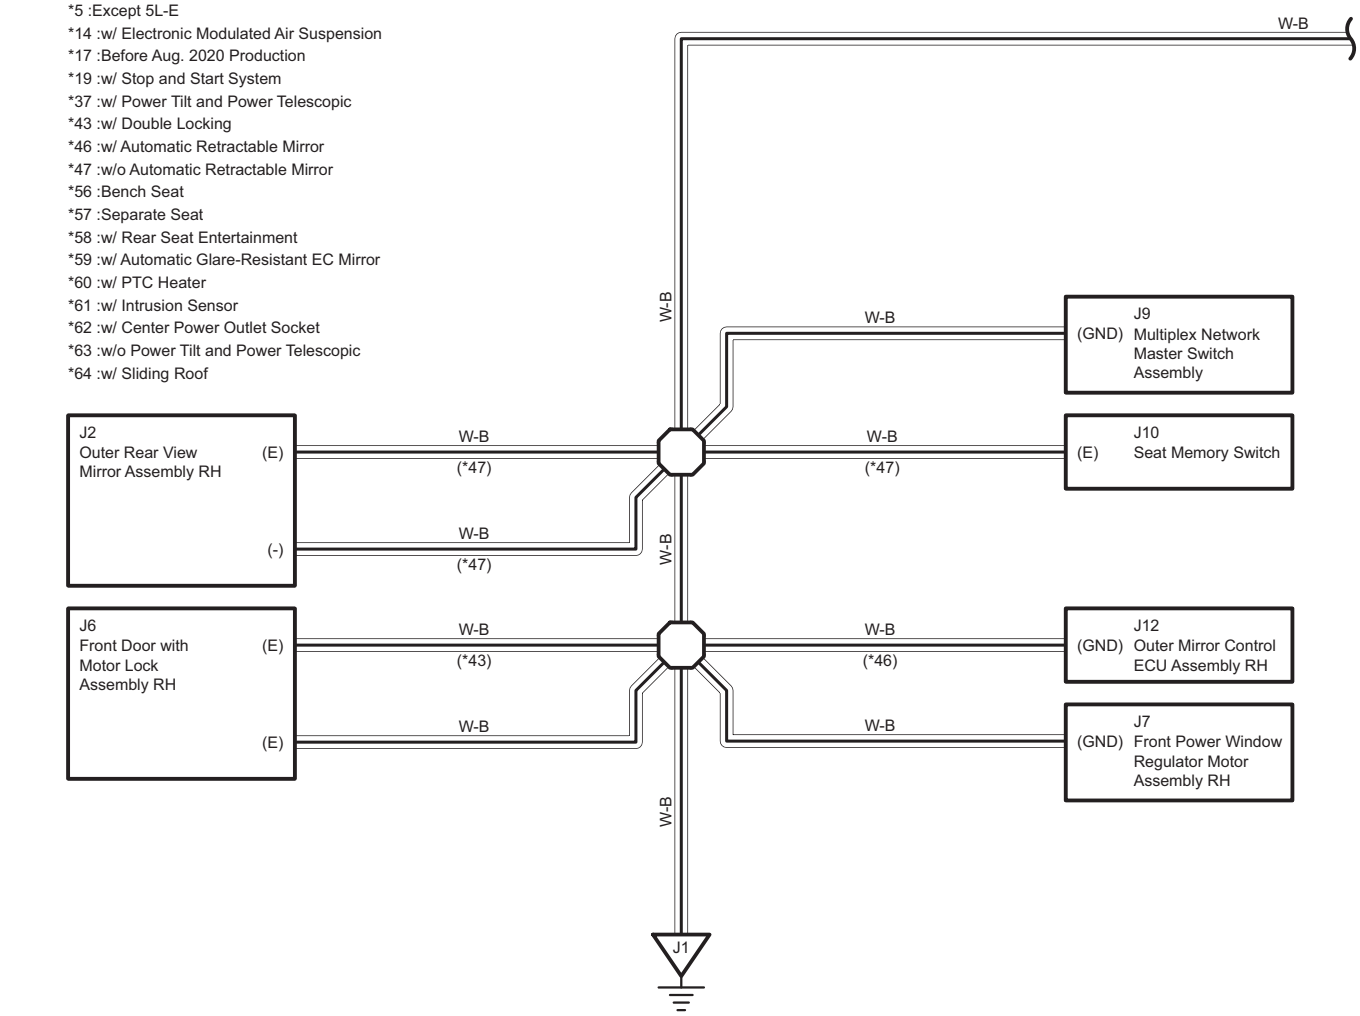


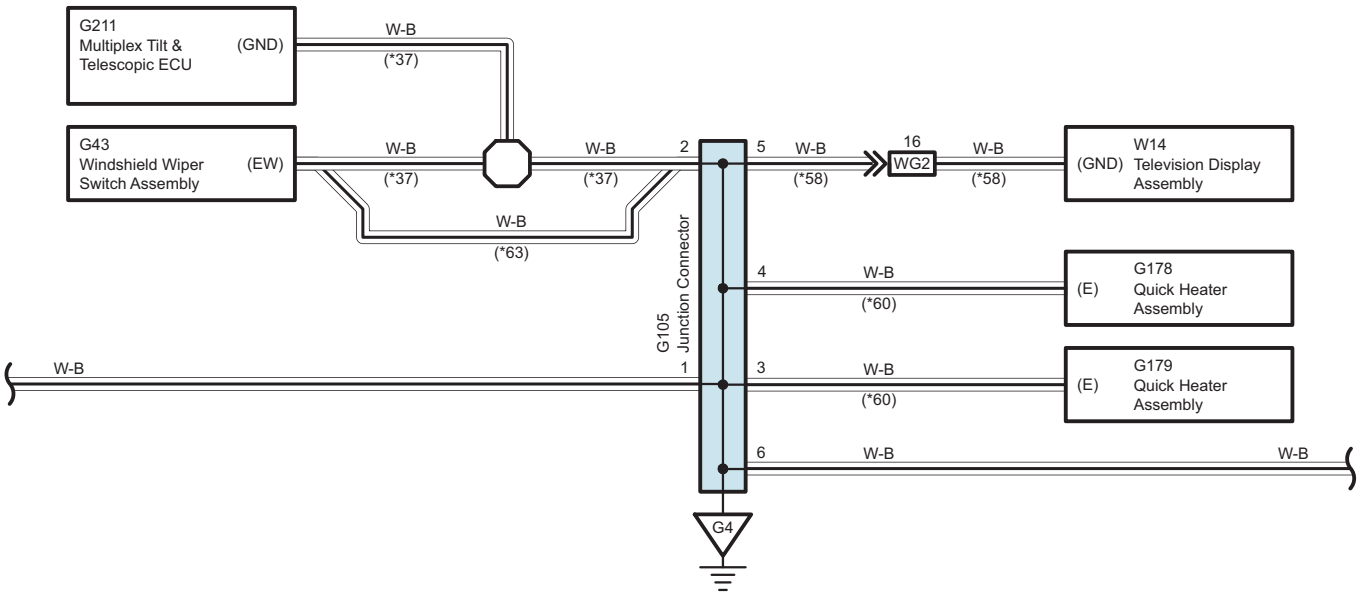

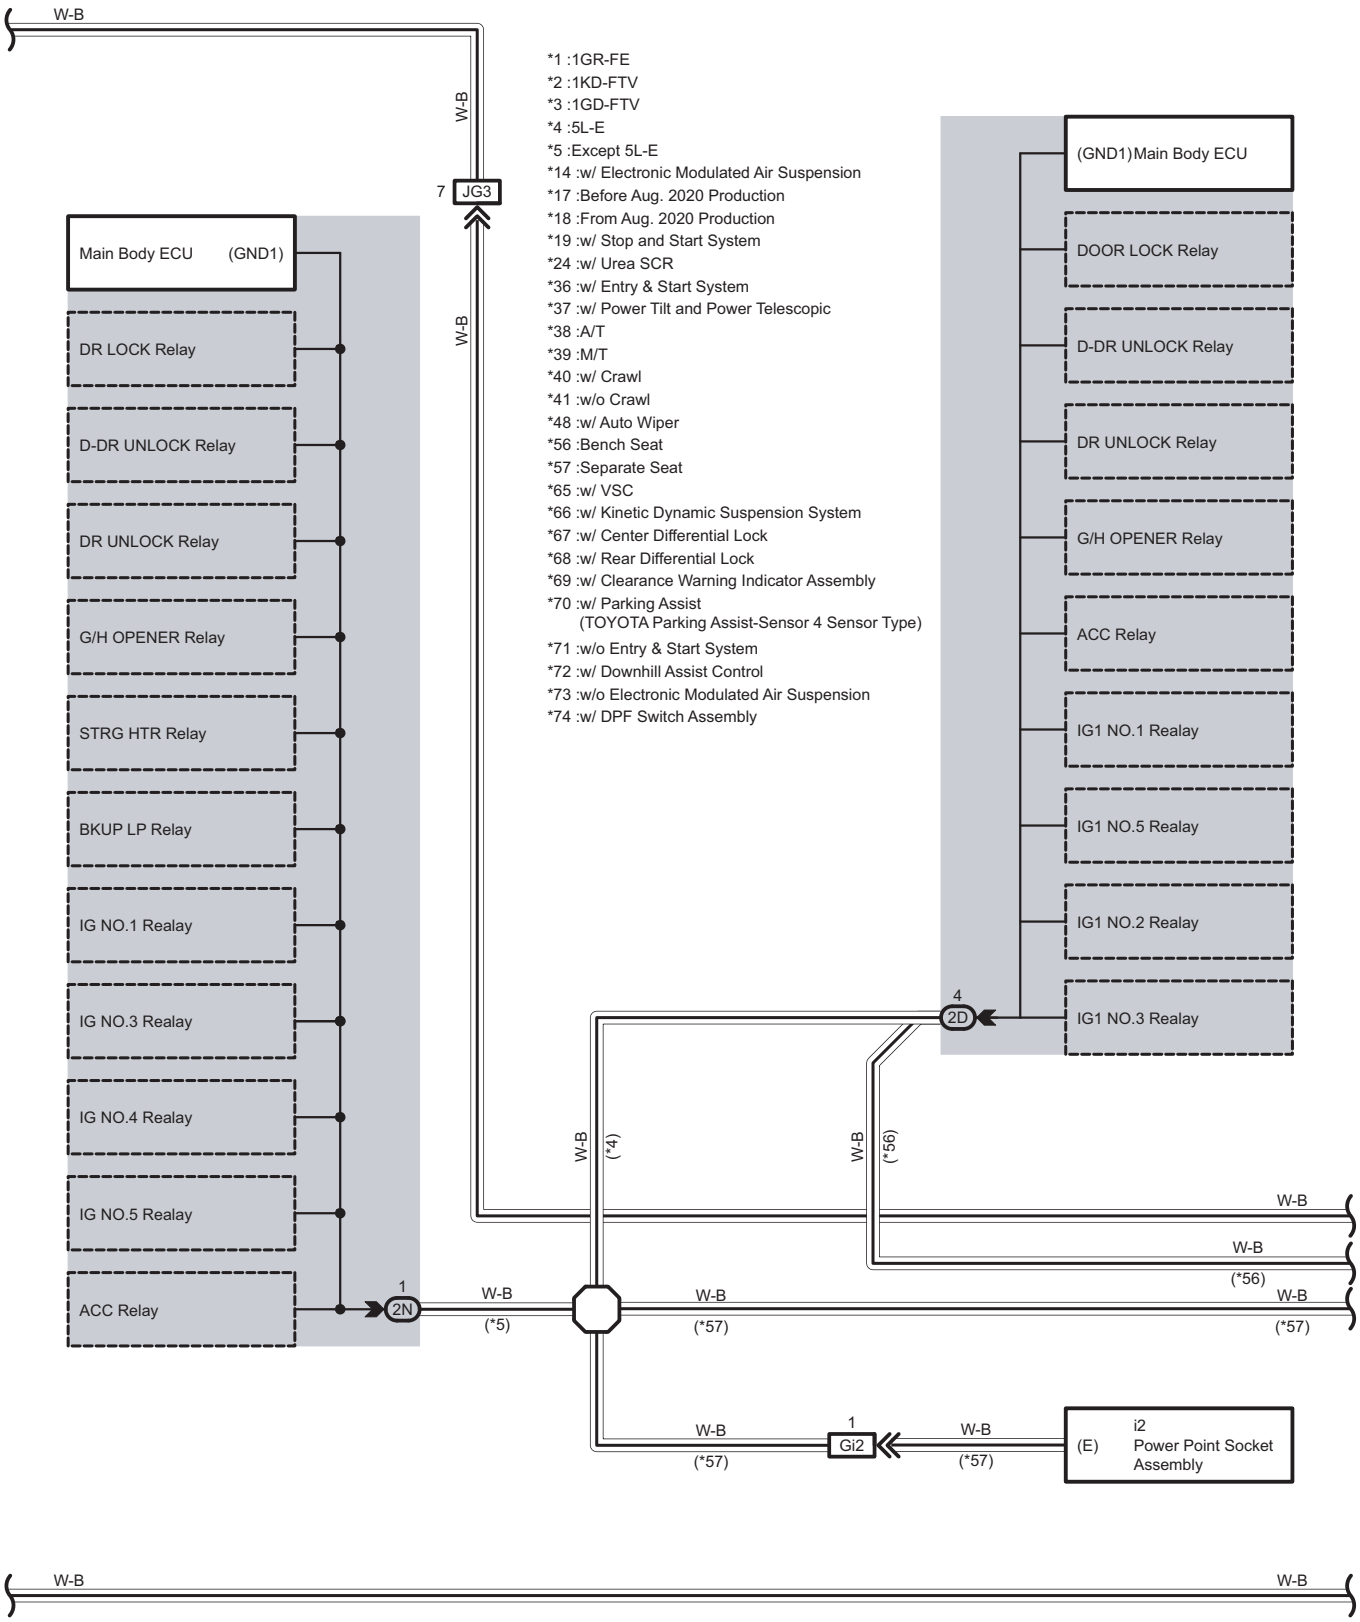

W-B
W-B
7
JG3
W-B
Main Body ECU (GND1)
DR LOCK Relay
D-DR UNLOCK Relay
DR UNLOCK Relay
G/H OPENER Relay
STRG HTR Relay
BKUP LP Relay
IG NO.1 Realay
IG NO.3 Realay
IG NO.4 Realay
IG NO.5 Realay
ACC Relay
1
2N
W-B
(*5)
*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*14 :w/ Electronic Modulated Air Suspension
*17 :Before Aug. 2020 Production
*18 :From Aug. 2020 Production
*19 :w/ Stop and Start System
*24 :w/ Urea SCR
*36 :w/ Entry & Start System
*37 :w/ Power Tilt and Power Telescopic
*38 :A/T
*39 :M/T
*40 :w/ Crawl
*41 :w/o Crawl
*48 :w/ Auto Wiper
*56 :Bench Seat
*57 :Separate Seat
*65 :w/ VSC
*66 :w/ Kinetic Dynamic Suspension System
*67 :w/ Center Differential Lock
*68 :w/ Rear Differential Lock
*69 :w/ Clearance Warning Indicator Assembly
*70 :w/ Parking Assist
(TOYOTA Parking Assist-Sensor 4 Sensor Type)
*71 :w/o Entry & Start System
*72 :w/ Downhill Assist Control
*73 :w/o Electronic Modulated Air Suspension
*74 :w/ DPF Switch Assembly
(GND1) Main Body ECU
DOOR LOCK Relay
D-DR UNLOCK Relay
DR UNLOCK Relay
G/H OPENER Relay
ACC Relay
IG1 NO.1 Realay
IG1 NO.5 Realay
IG1 NO.2 Realay
IG1 NO.3 Realay
4
2D
W-B
(*4)
W-B
(*56)
W-B
W-B
(*56)
W-B
W-B
(*57)
W-B
(*57)
W-B
(*57)
1
Gi2
W-B
(*57)
(E)
i2
Power Point Socket
Assembly
W-B
W-B

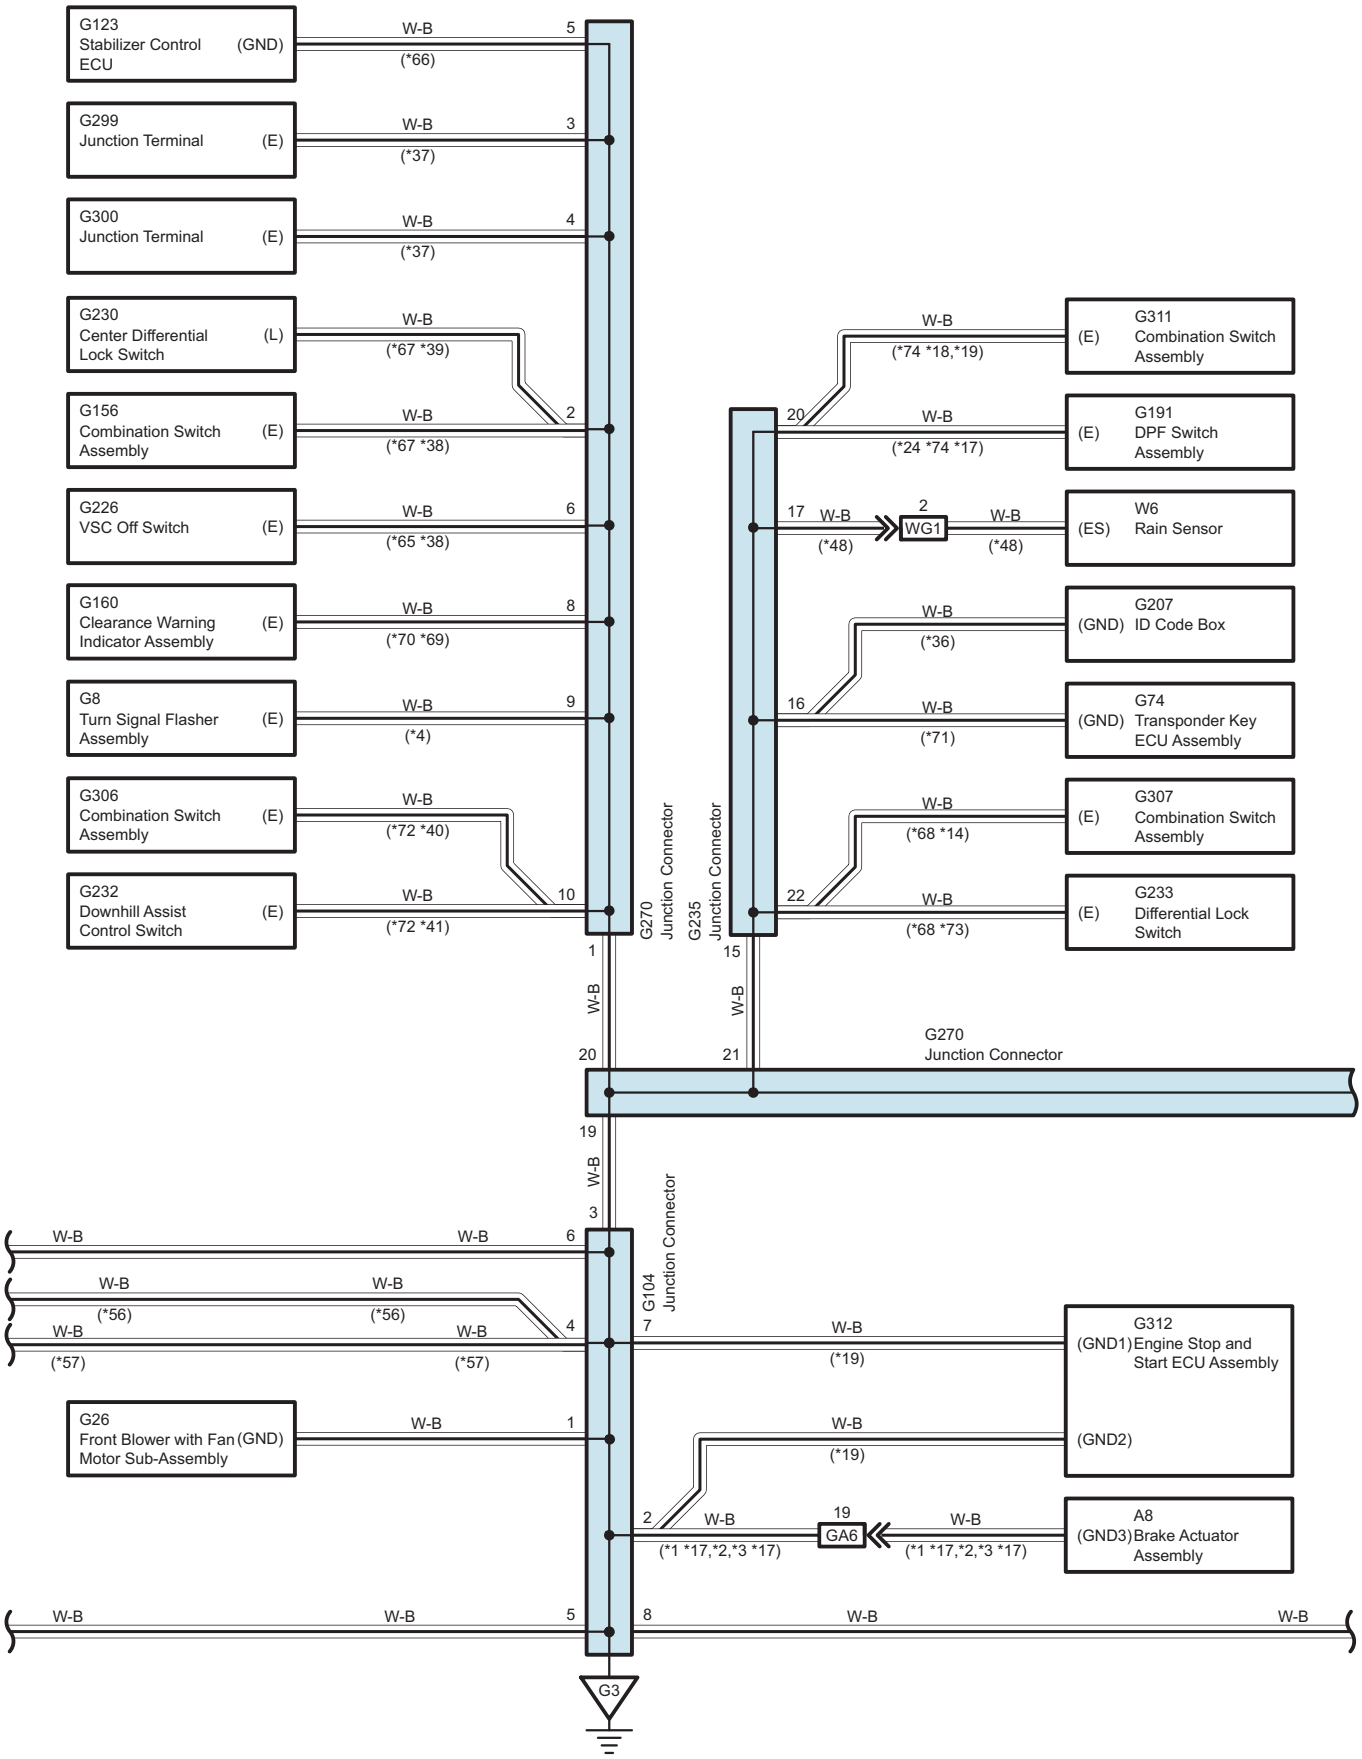

G123
Stabilizer Control ECU
(GND)
W-B
(*66)
5
G299
Junction Terminal
(E)
W-B
(*37)
3
G300
Junction Terminal
(E)
W-B
(*37)
4
G230
Center Differential Lock Switch
(L)
W-B
(*67 *39)
G156
Combination Switch Assembly
(E)
W-B
(*67 *38)
2
G226
VSC Off Switch
(E)
W-B
(*65 *38)
6
G160
Clearance Warning Indicator Assembly
(E)
W-B
(*70 *69)
8
G8
Turn Signal Flasher Assembly
(E)
W-B
(*4)
9
G306
Combination Switch Assembly
(E)
W-B
(*72 *40)
G232
Downhill Assist Control Switch
(E)
W-B
(*72 *41)
10
G270
Junction Connector
1
W-B
20
19
W-B
3
G104
Junction Connector
G235
Junction Connector
15
W-B
21
G270
Junction Connector
20
W-B
(*74 *18,*19)
G311
(E)
Combination Switch Assembly
20
W-B
(*24 *74 *17)
G191
(E)
DPF Switch Assembly
17
W-B
(*48)
2
WG1
W-B
(*48)
W6
(ES)
Rain Sensor
W-B
(*36)
G207
(GND)
ID Code Box
16
W-B
(*71)
G74
(GND)
Transponder Key ECU Assembly
W-B
(*68 *14)
G307
(E)
Combination Switch Assembly
22
W-B
(*68 *73)
G233
(E)
Differential Lock Switch
W-B
W-B
6
W-B
W-B
(*56)
(*56)
W-B
W-B
4
(*57)
(*57)
7
W-B
(*19)
G312
(GND1)
Engine Stop and Start ECU Assembly
W-B
(*19)
(GND2)
G26
Front Blower with Fan Motor Sub-Assembly
(GND)
W-B
1
2
W-B
19
GA6
W-B
(*1 *17,*2,*3 *17)
(*1 *17,*2,*3 *17)
A8
(GND3)
Brake Actuator Assembly
W-B
W-B
5
8
W-B
W-B
G3

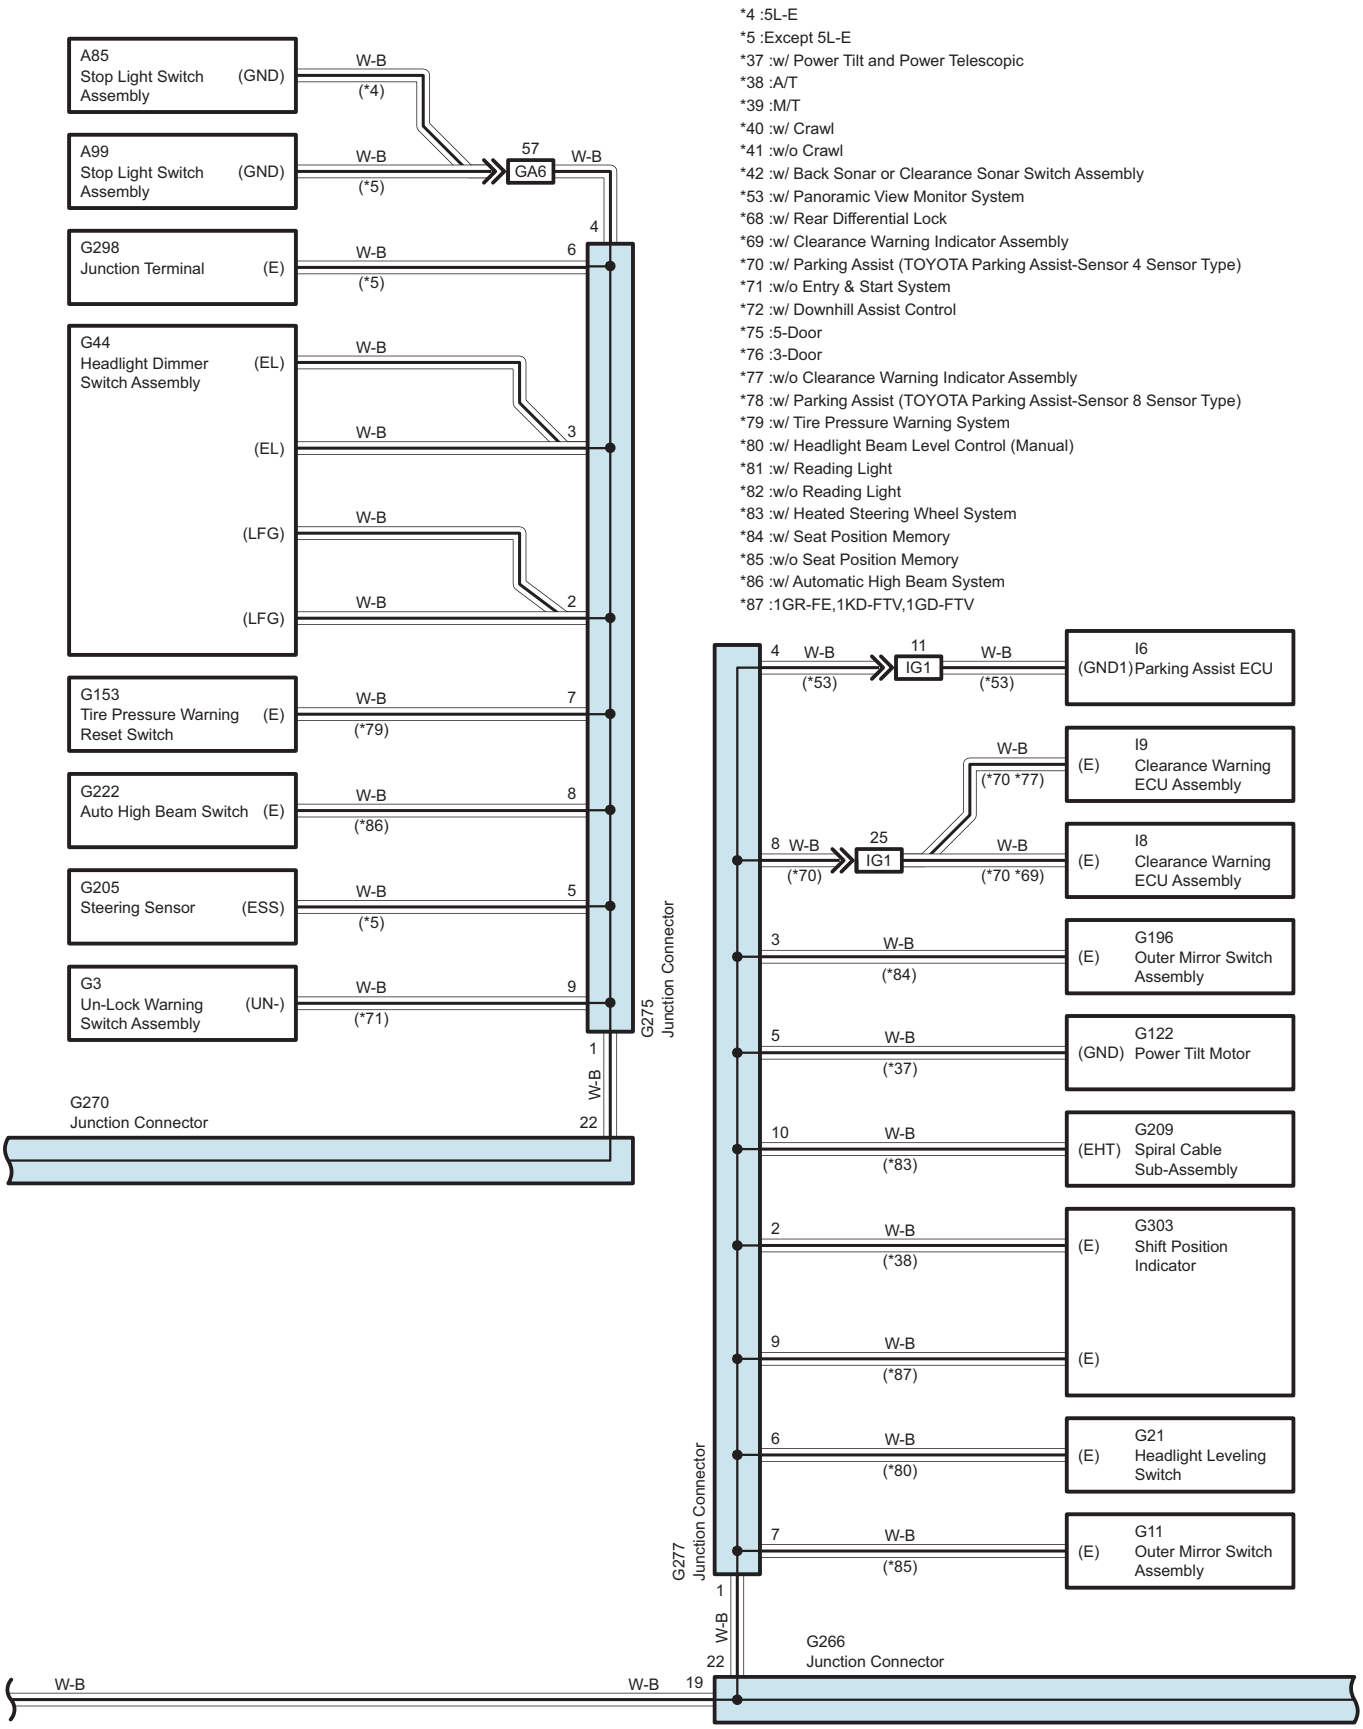

A85
Stop Light Switch Assembly
(GND)
W-B
(*4)
A99
Stop Light Switch Assembly
(GND)
W-B
(*5)
57
GA6
W-B
4
G298
Junction Terminal
(E)
W-B
(*5)
6
G44
Headlight Dimmer Switch Assembly
(EL)
W-B
(EL)
W-B
3
(LFG)
W-B
(LFG)
W-B
2
G153
Tire Pressure Warning Reset Switch
(E)
W-B
(*79)
7
G222
Auto High Beam Switch
(E)
W-B
(*86)
8
G205
Steering Sensor
(ESS)
W-B
(*5)
5
G3
Un-Lock Warning Switch Assembly
(UN-)
W-B
(*71)
9
G275
Junction Connector
1
W-B
22
G270
Junction Connector
*4 :5L-E
*5 :Except 5L-E
*37 :w/ Power Tilt and Power Telescopic
*38 :A/T
*39 :M/T
*40 :w/ Crawl
*41 :w/o Crawl
*42 :w/ Back Sonar or Clearance Sonar Switch Assembly
*53 :w/ Panoramic View Monitor System
*68 :w/ Rear Differential Lock
*69 :w/ Clearance Warning Indicator Assembly
*70 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 4 Sensor Type)
*71 :w/o Entry & Start System
*72 :w/ Downhill Assist Control
*75 :5-Door
*76 :3-Door
*77 :w/o Clearance Warning Indicator Assembly
*78 :w/ Parking Assist (TOYOTA Parking Assist-Sensor 8 Sensor Type)
*79 :w/ Tire Pressure Warning System
*80 :w/ Headlight Beam Level Control (Manual)
*81 :w/ Reading Light
*82 :w/o Reading Light
*83 :w/ Heated Steering Wheel System
*84 :w/ Seat Position Memory
*85 :w/o Seat Position Memory
*86 :w/ Automatic High Beam System
*87 :1GR-FE,1KD-FTV,1GD-FTV
4
W-B
(*53)
11
IG1
W-B
(*53)
I6
(GND1)
Parking Assist ECU
W-B
(*70 *77)
I9
(E)
Clearance Warning ECU Assembly
8
W-B
(*70)
25
IG1
W-B
(*70 *69)
I8
(E)
Clearance Warning ECU Assembly
3
W-B
(*84)
G196
(E)
Outer Mirror Switch Assembly
5
W-B
(*37)
G122
(GND)
Power Tilt Motor
10
W-B
(*83)
G209
(EHT)
Spiral Cable Sub-Assembly
2
W-B
(*38)
G303
(E)
Shift Position Indicator
9
W-B
(*87)
(E)
6
W-B
(*80)
G21
(E)
Headlight Leveling Switch
7
W-B
(*85)
G11
(E)
Outer Mirror Switch Assembly
G277
Junction Connector
1
W-B
22
G266
Junction Connector
W-B
W-B
19

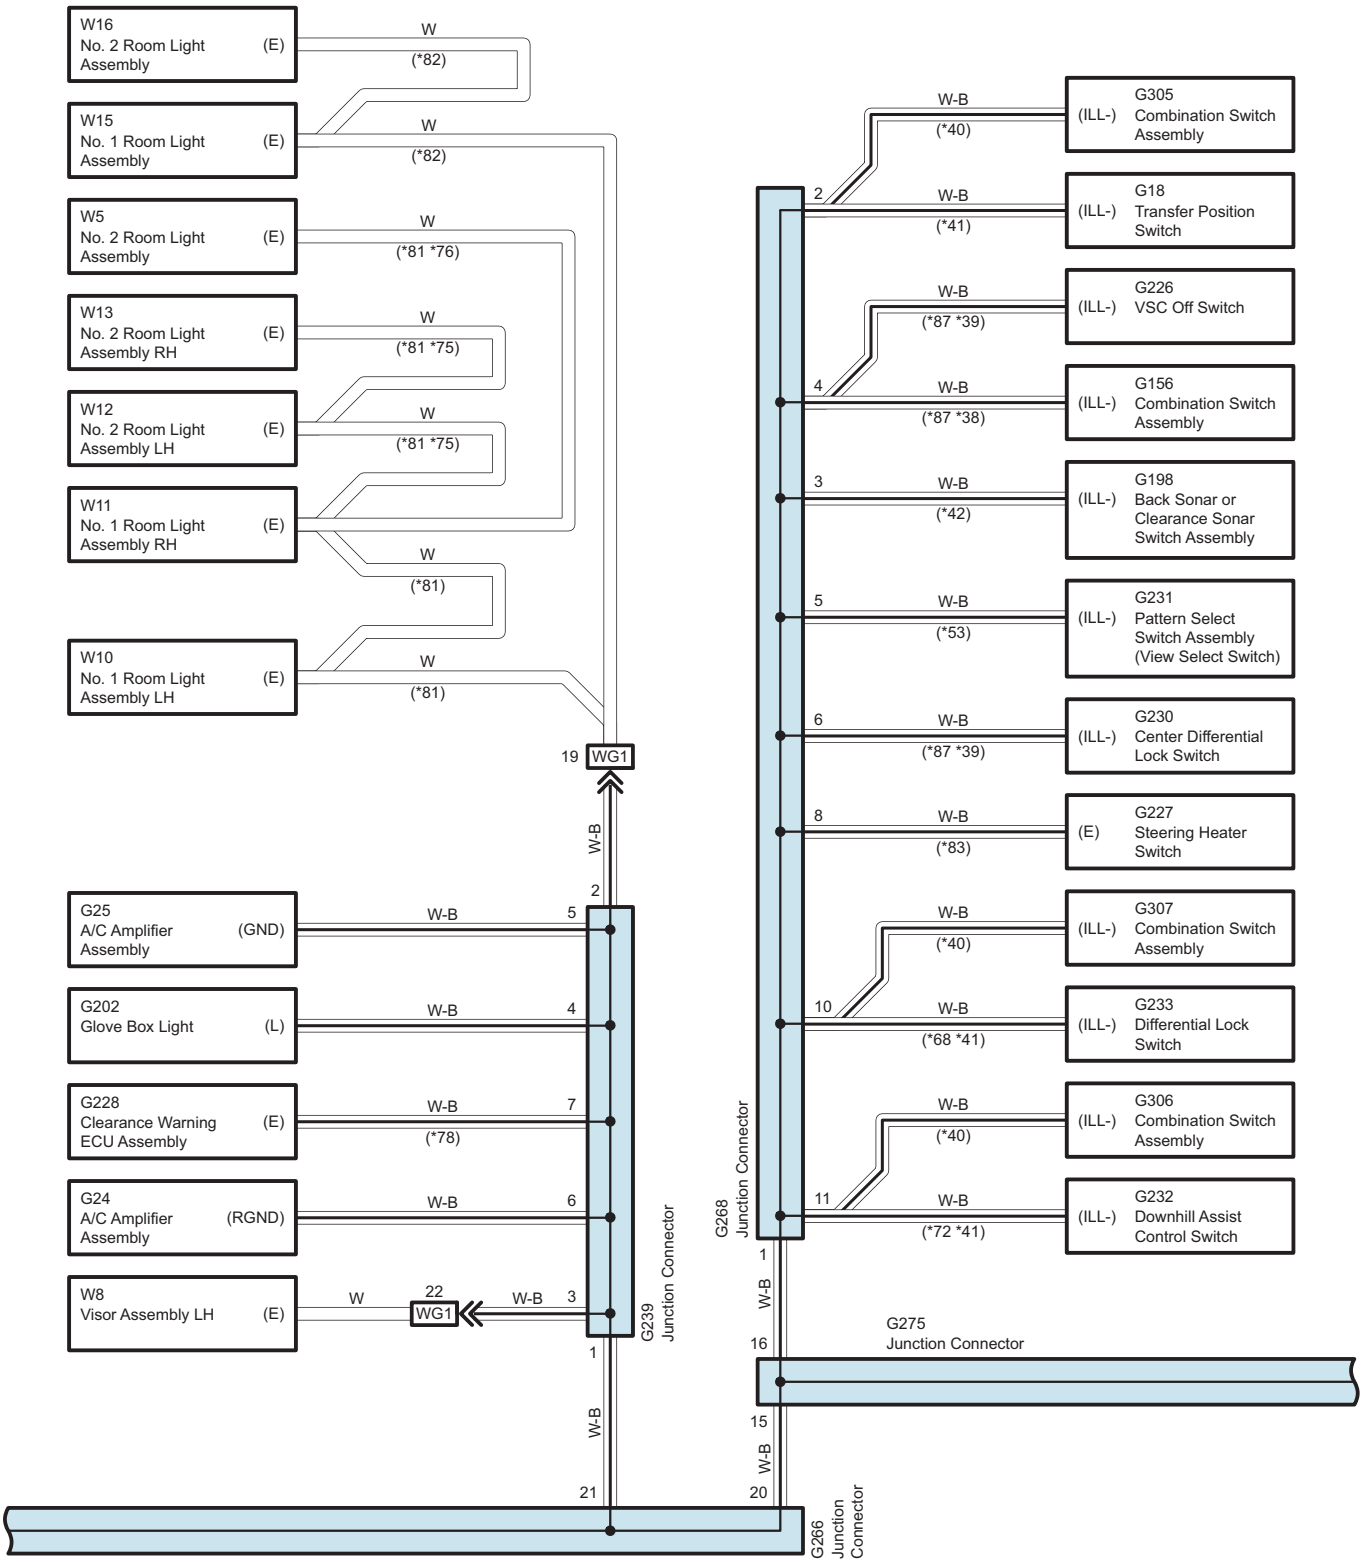
W16
No. 2 Room Light Assembly (E)
W15
No. 1 Room Light Assembly (E)
W5
No. 2 Room Light Assembly (E)
W13
No. 2 Room Light Assembly RH (E)
W12
No. 2 Room Light Assembly LH (E)
W11
No. 1 Room Light Assembly RH (E)
W10
No. 1 Room Light Assembly LH (E)
W
(*82)
(*81 *76)
(*81 *75)
(*81)
19 WG1
W-B
2
G25
A/C Amplifier Assembly (GND)
G202
Glove Box Light (L)
G228
Clearance Warning ECU Assembly (E)
G24
A/C Amplifier Assembly (RGND)
W8
Visor Assembly LH (E)
W-B
5
4
7
6
3
(*78)
22 WG1
G239 Junction Connector
1
21
G266 Junction Connector
G268 Junction Connector
2
4
3
5
6
8
10
11
1
16
15
20
G275 Junction Connector
G305 Combination Switch Assembly (ILL-)
G18 Transfer Position Switch (ILL-)
G226 VSC Off Switch (ILL-)
G156 Combination Switch Assembly (ILL-)
G198 Back Sonar or Clearance Sonar Switch Assembly (ILL-)
G231 Pattern Select Switch Assembly (View Select Switch) (ILL-)
G230 Center Differential Lock Switch (ILL-)
G227 Steering Heater Switch (E)
G307 Combination Switch Assembly (ILL-)
G233 Differential Lock Switch (ILL-)
G306 Combination Switch Assembly (ILL-)
G232 Downhill Assist Control Switch (ILL-)
(*40)
(*41)
(*87 *39)
(*87 *38)
(*42)
(*53)
(*83)
(*68 *41)
(*72 *41)


*2 :1KD-FTV
*3 :1GD-FTV
*8 :w/ Headlight Cleaner
*15 :w/ Power Outlet (220V)
*22 :Before Jun. 2021 Production
*23 :From Jun. 2021 Production
*26 :w/ Front Window Deicer
*29 :Audioless Type
*38 :A/T
*39 :M/T
*44 :w/ Door Illumination
*51 :w/ Seat Heater (Rear)
*62 :w/ Center Power Outlet Socket
*69 :w/ Clearance Warning Indicator Assembly
*84 :w/ Seat Position Memory
*85 :w/o Seat Position Memory
*86 :w/ Automatic High Beam System
*88 :w/ Steering Pad Switch Assembly
*89 :w/ Rear Fog Light
*90 :w/ Glass Hatch Opener
*91 :w/o Glass Hatch Opener
*92 :w/ Climate Control Seat
*93 :w/ Power Rear No. 2 Seat with Stowing Function
*94 :w/ Drive Mode Select Switch
*95 :w/ Rear A/C
*96 :w/ Rear No. 1 Seat Belt Warning System
*97 :w/ Rear No. 2 Seat Belt Warning System
*98 :Slide Walk-in Seat Type
*99 :Double-folding Seat Type
*100 :Tumble Seat Type

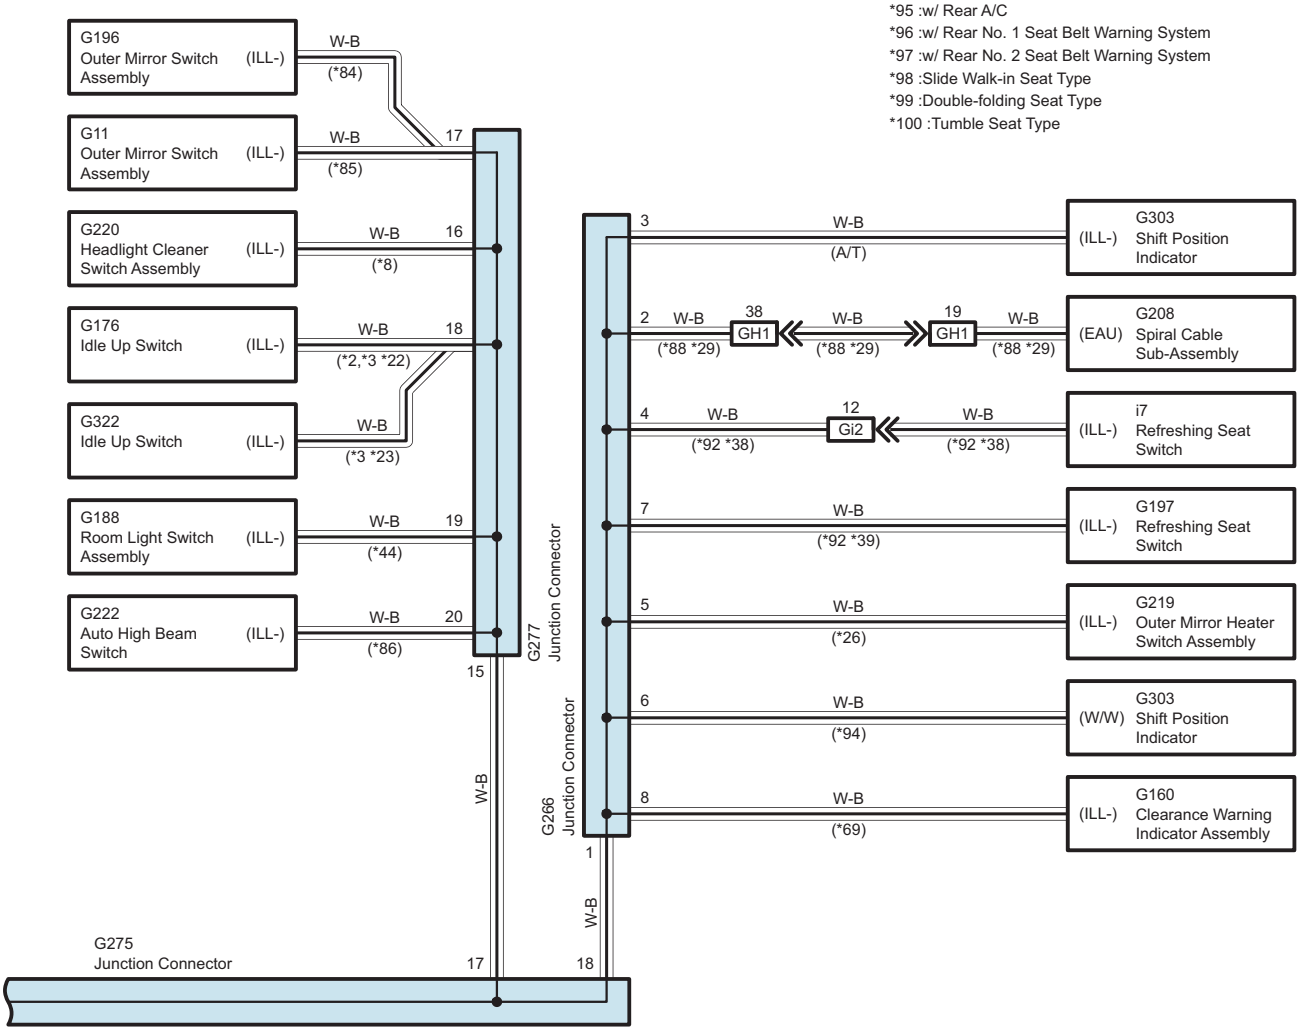


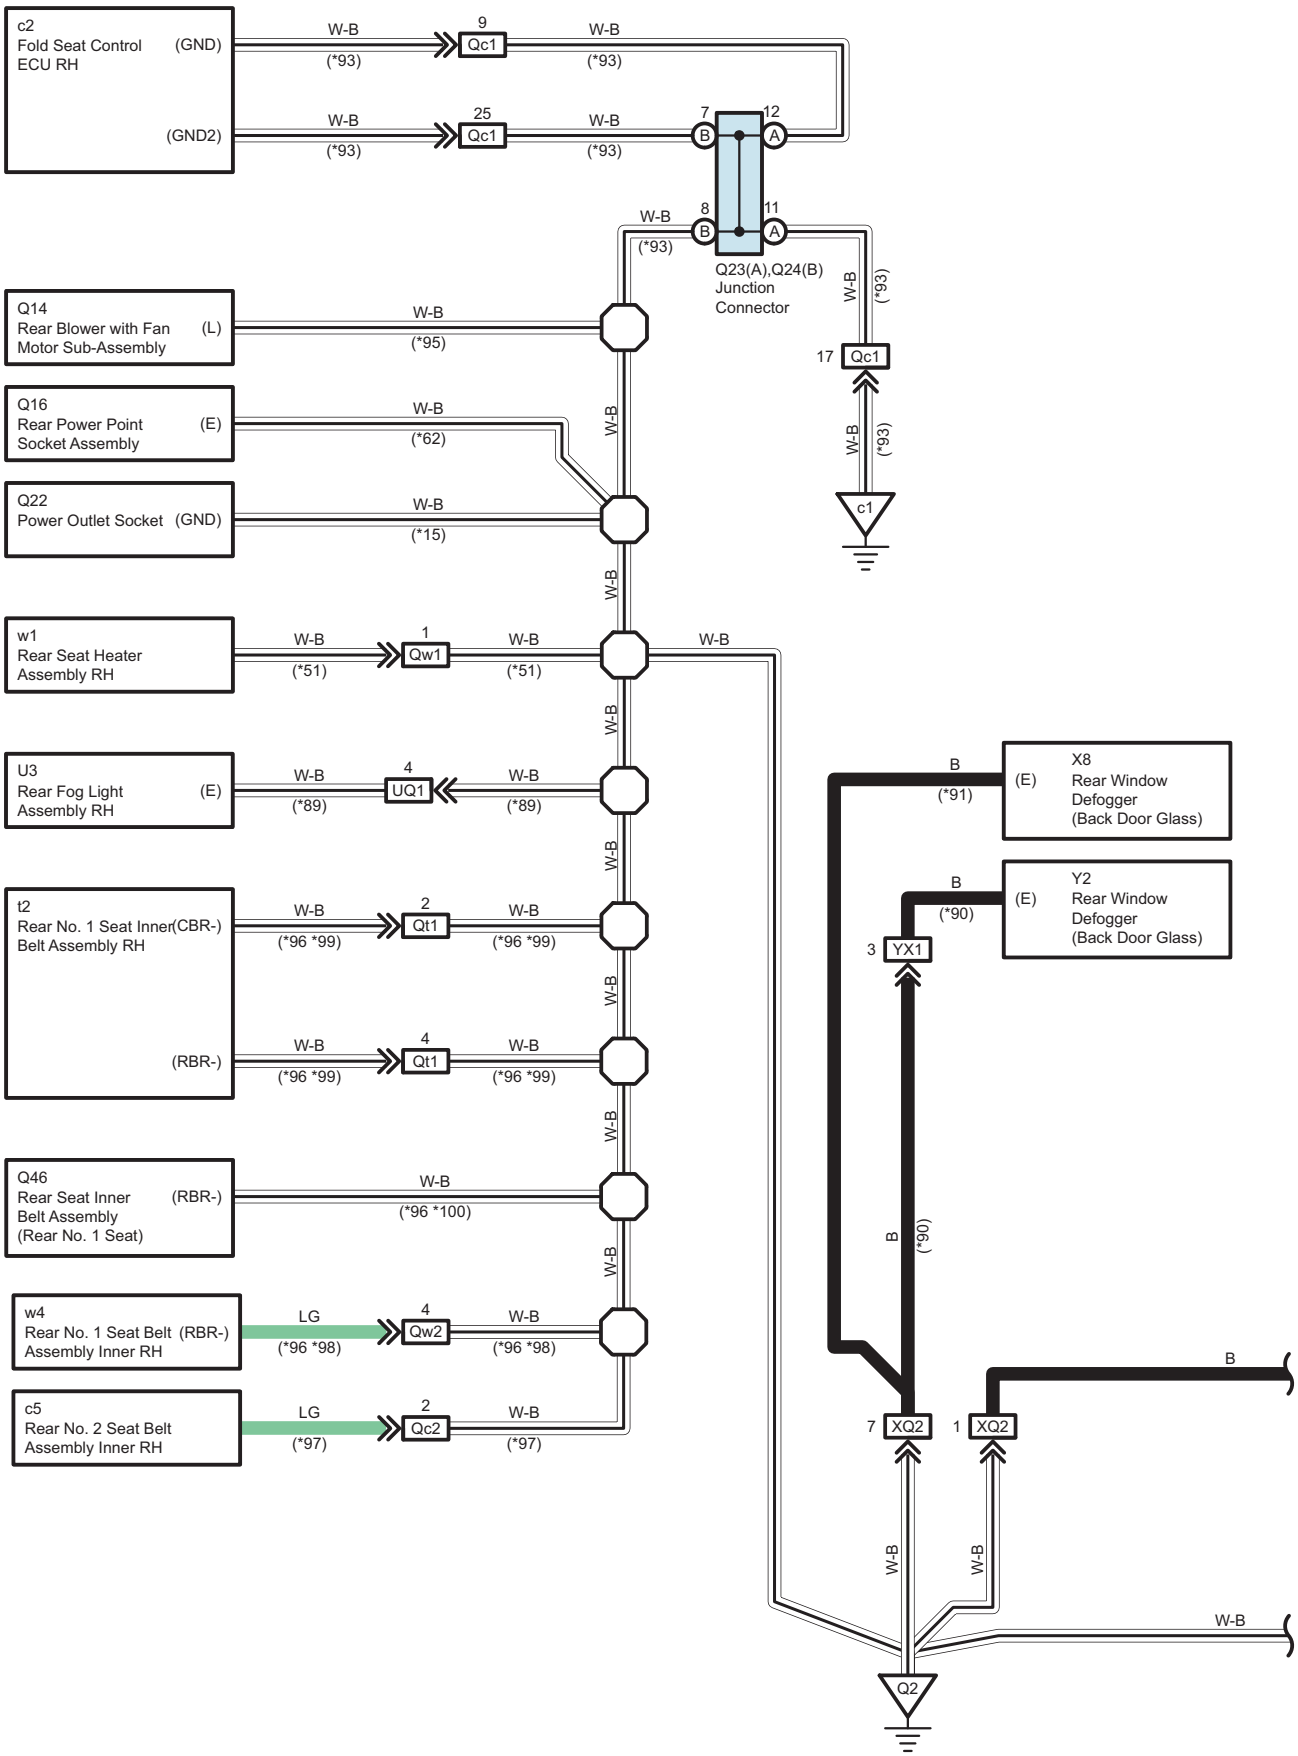
c2
Fold Seat Control ECU RH
(GND)
(GND2)
W-B
(*93)
9
25
Qc1
7
12
8
11
B
A
Q23(A),Q24(B) Junction Connector
17
c1
Q14
Rear Blower with Fan Motor Sub-Assembly
(L)
(*95)
Q16
Rear Power Point Socket Assembly
(E)
(*62)
Q22
Power Outlet Socket
(*15)
w1
Rear Seat Heater Assembly RH
(*51)
1
Qw1
U3
Rear Fog Light Assembly RH
(*89)
4
UQ1
t2
Rear No. 1 Seat Inner Belt Assembly RH
(CBR-)
(RBR-)
(*96 *99)
2
Qt1
Q46
Rear Seat Inner Belt Assembly (Rear No. 1 Seat)
(*96 *100)
w4
Rear No. 1 Seat Belt Assembly Inner RH
LG
(*96 *98)
Qw2
c5
Rear No. 2 Seat Belt Assembly Inner RH
(*97)
Qc2
B
(*91)
X8
Rear Window Defogger (Back Door Glass)
(*90)
Y2
3
YX1
(*96)
7
XQ2
1
Q2

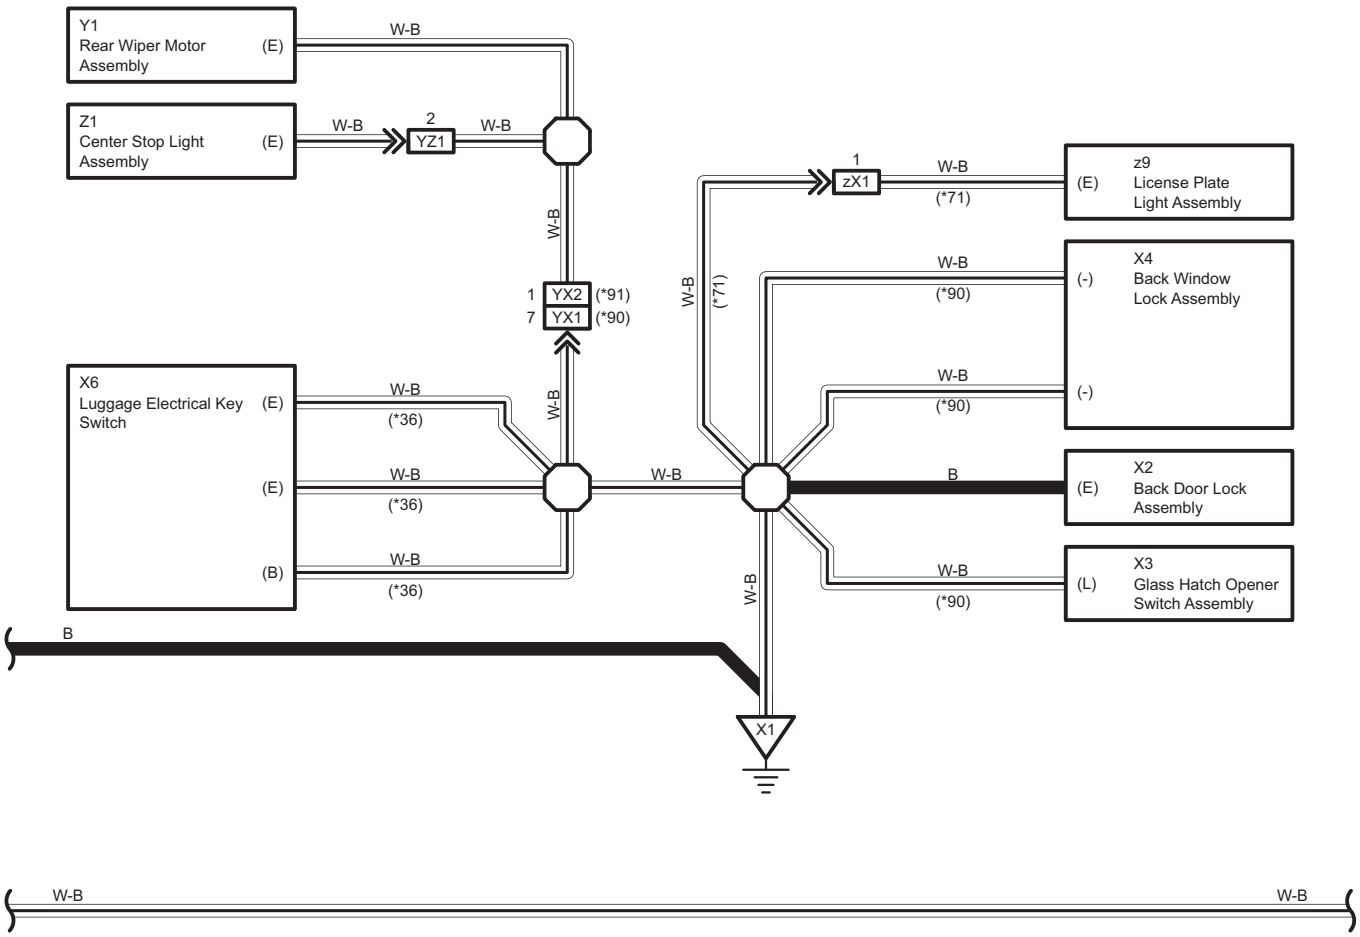

Y1
Rear Wiper Motor Assembly
(E)
W-B
Z1
Center Stop Light Assembly
(E)
W-B
2
YZ1
W-B
W-B
1
YX2
(*91)
7
YX1
(*90)
W-B
(*71)
1
zX1
W-B
(*71)
(E)
z9
License Plate Light Assembly
W-B
(*90)
(-)
X4
Back Window Lock Assembly
W-B
(*90)
(-)
X6
Luggage Electrical Key Switch
(E)
W-B
(*36)
W-B
W-B
B
(E)
X2
Back Door Lock Assembly
(E)
W-B
(*36)
(B)
W-B
(*36)
W-B
W-B
(*90)
(L)
X3
Glass Hatch Opener Switch Assembly
W-B
B
X1
W-B
W-B


*4 :5L-E
*5 :Except 5L-E
*36 :w/ Entry & Start System
*71 :w/o Entry & Start System
*75 :5-Door
*76 :3-Door
*84 :w/ Seat Position Memory
*85 :w/o Seat Position Memory
*90 :w/ Glass Hatch Opener
*91 :w/o Glass Hatch Opener
*92 :w/ Climate Control Seat
*101 :w/ Seat Heater
*102 :w/o Seat Heater
*103 :w/o Climate Control Seat
*104 :w/ Power Seat (Driver's Seat)
*105 :w/ Power Seat (Driver's Seat Lumbar Support Control Only)
*106 :w/ Power Seat (Driver's Seat Except Lumbar Support Control Only)

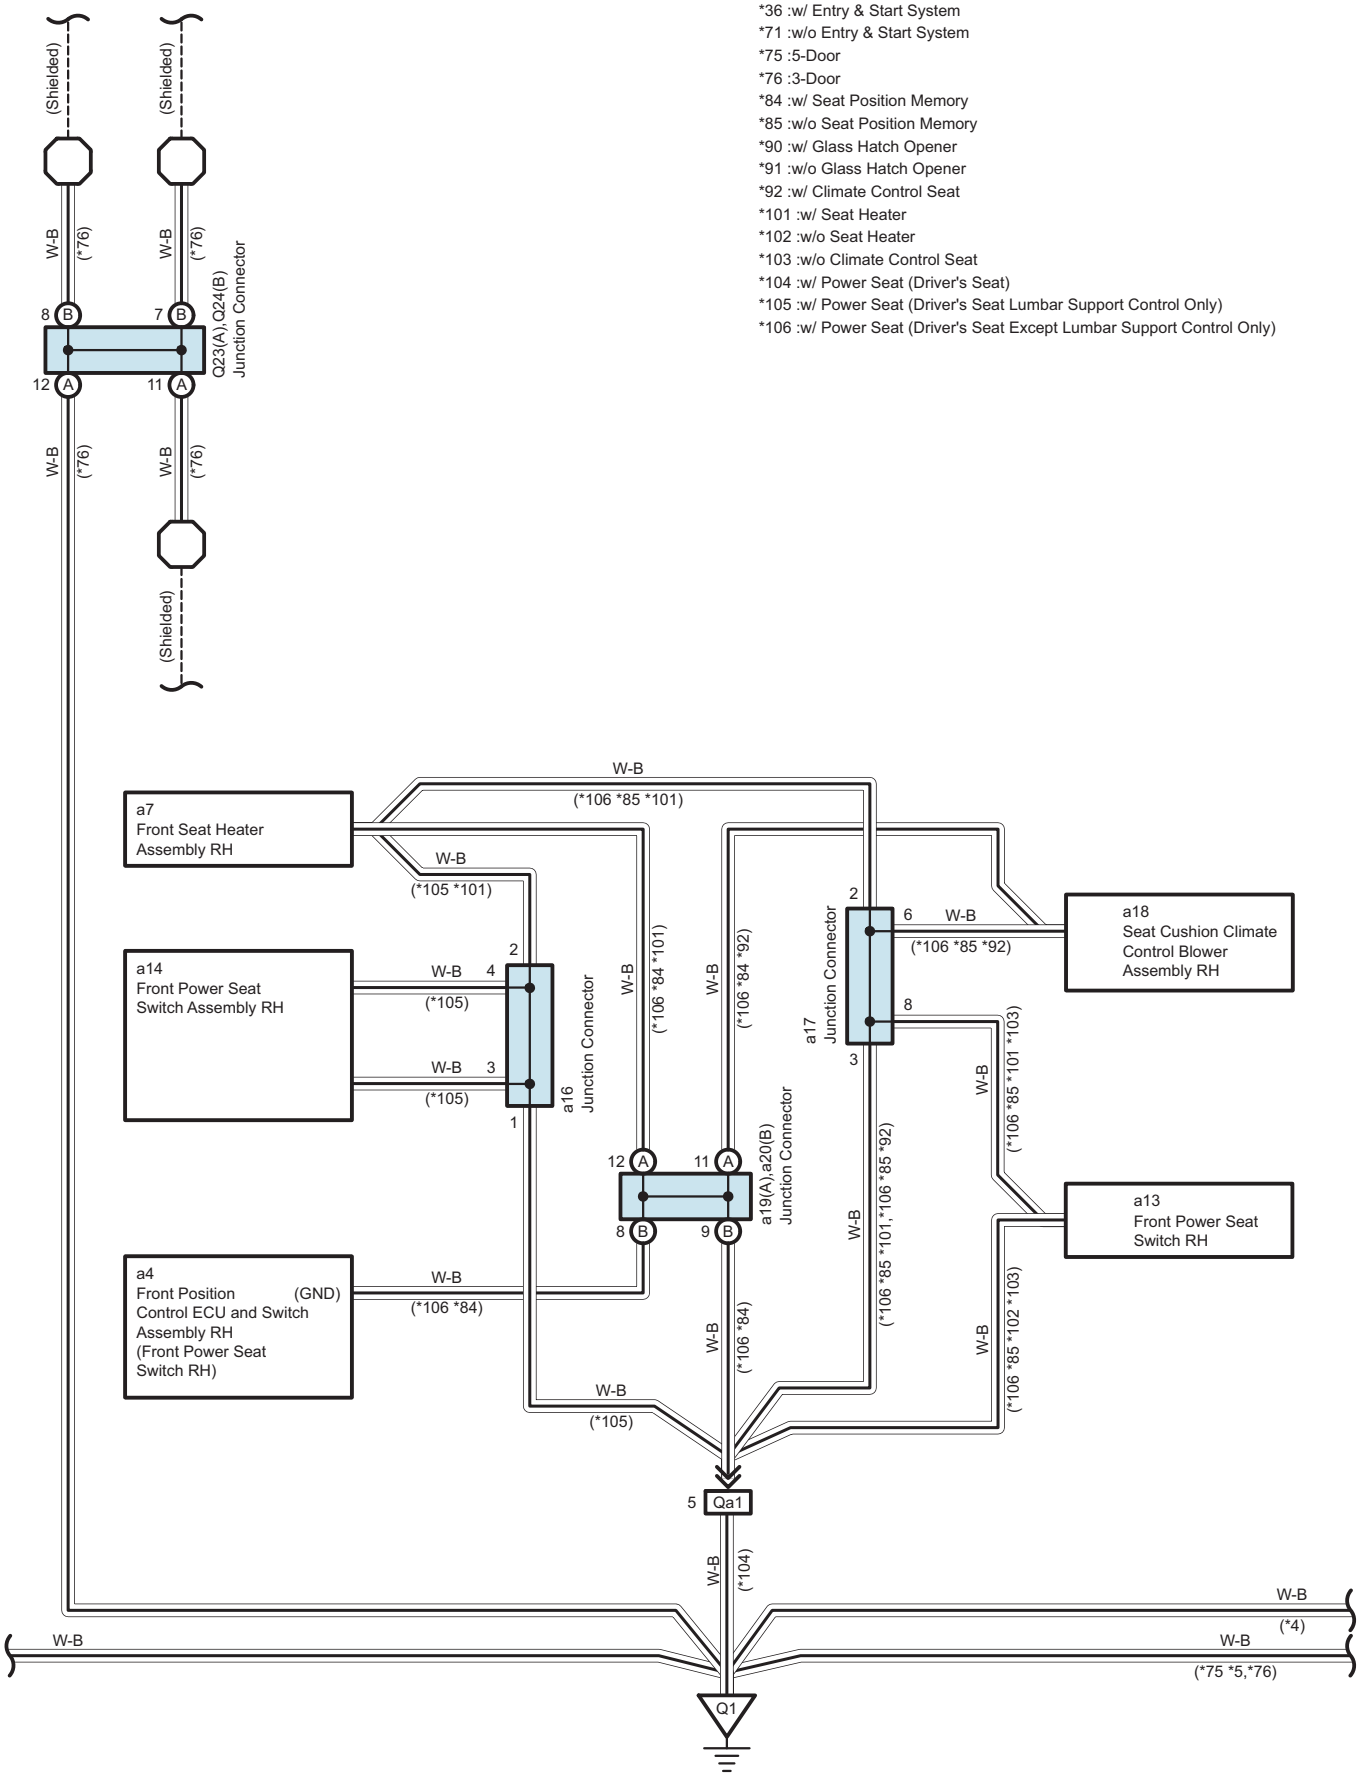

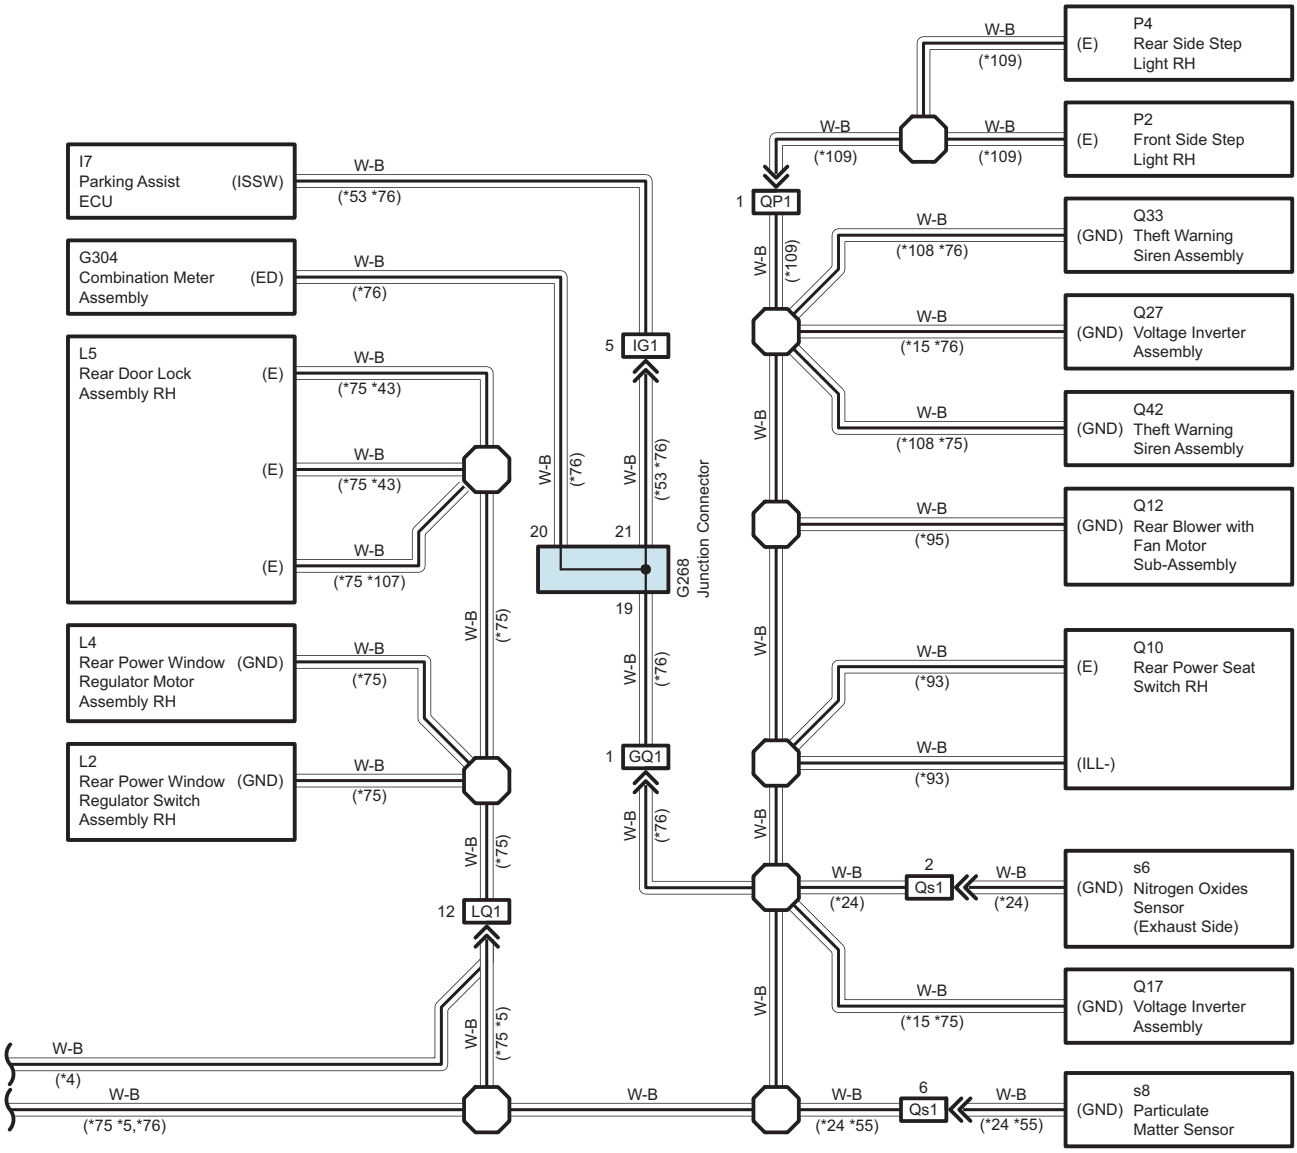

I7
Parking Assist ECU (ISSW)
G304
Combination Meter Assembly (ED)
L5
Rear Door Lock Assembly RH (E) (E) (E)
L4
Rear Power Window Regulator Motor Assembly RH (GND)
L2
Rear Power Window Regulator Switch Assembly RH (GND)
W-B
(*53 *76)
(*76)
(*75 *43)
(*75 *107)
(*75)
(*75 *5)
(*4)
(*75 *5,*76)
5 IG1
20
21
19
G268 Junction Connector
1 GQ1
12 LQ1
1 QP1
(*109)
(*108 *76)
(*15 *76)
(*108 *75)
(*95)
(*93)
2 Qs1
6 Qs1
(*24)
(*24 *55)
(*15 *75)
P4
(E) Rear Side Step Light RH
P2
(E) Front Side Step Light RH
Q33
(GND) Theft Warning Siren Assembly
Q27
(GND) Voltage Inverter Assembly
Q42
(GND) Theft Warning Siren Assembly
Q12
(GND) Rear Blower with Fan Motor Sub-Assembly
Q10
(E) Rear Power Seat Switch RH
(ILL-)
s6
(GND) Nitrogen Oxides Sensor (Exhaust Side)
Q17
(GND) Voltage Inverter Assembly
s8
(GND) Particulate Matter Sensor


*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*14 :w/ Electronic Modulated Air Suspension
*15 :w/ Power Outlet (220V)
*24 :w/ Urea SCR
*43 :w/ Double Locking
*53 :w/ Panoramic View Monitor System
*55 :w/ Particulate Matter Sensor
*75 :5-Door
*76 :3-Door
*93 :w/ Power Rear No. 2 Seat with Stowing Function
*95 :w/ Rear A/C
*107 :w/o Double Locking
*108 :w/ Security Siren
*109 :w/ Foot Light

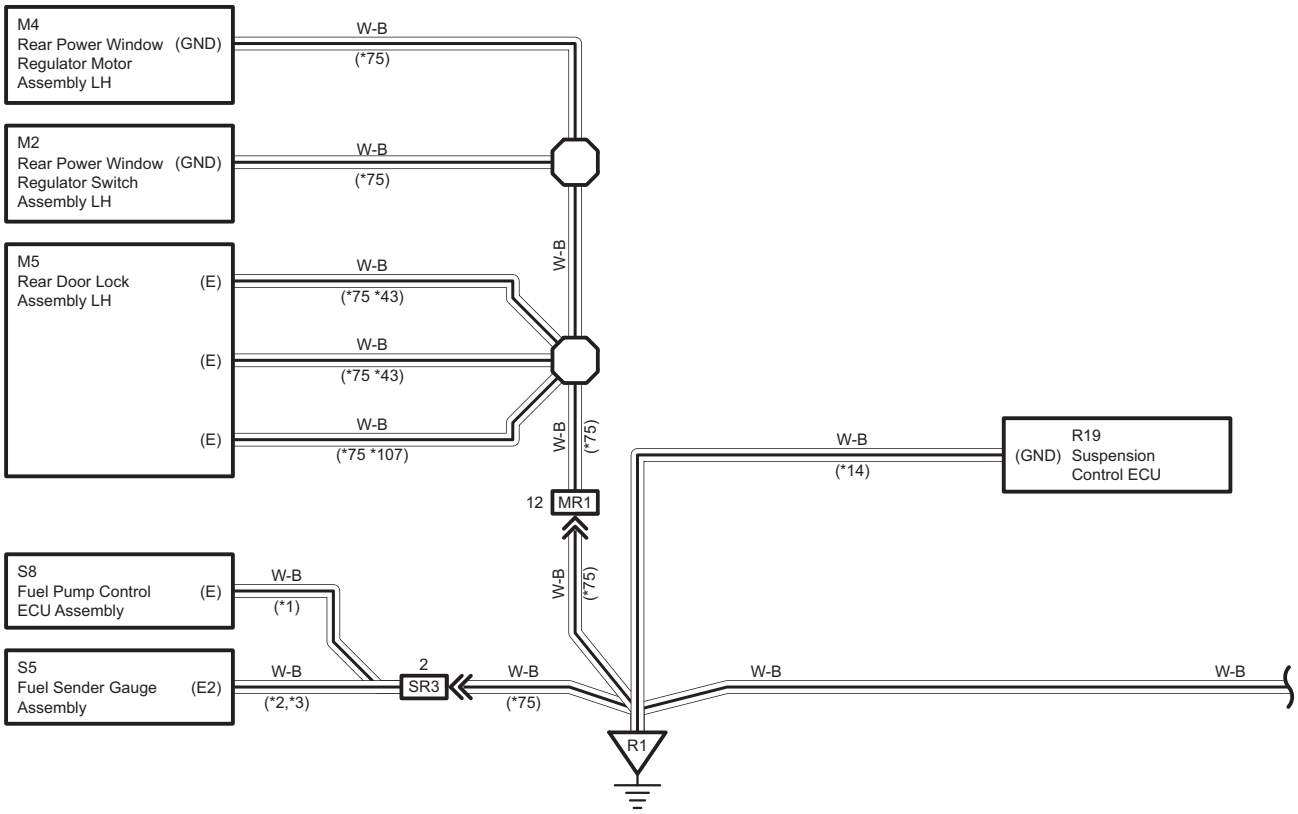

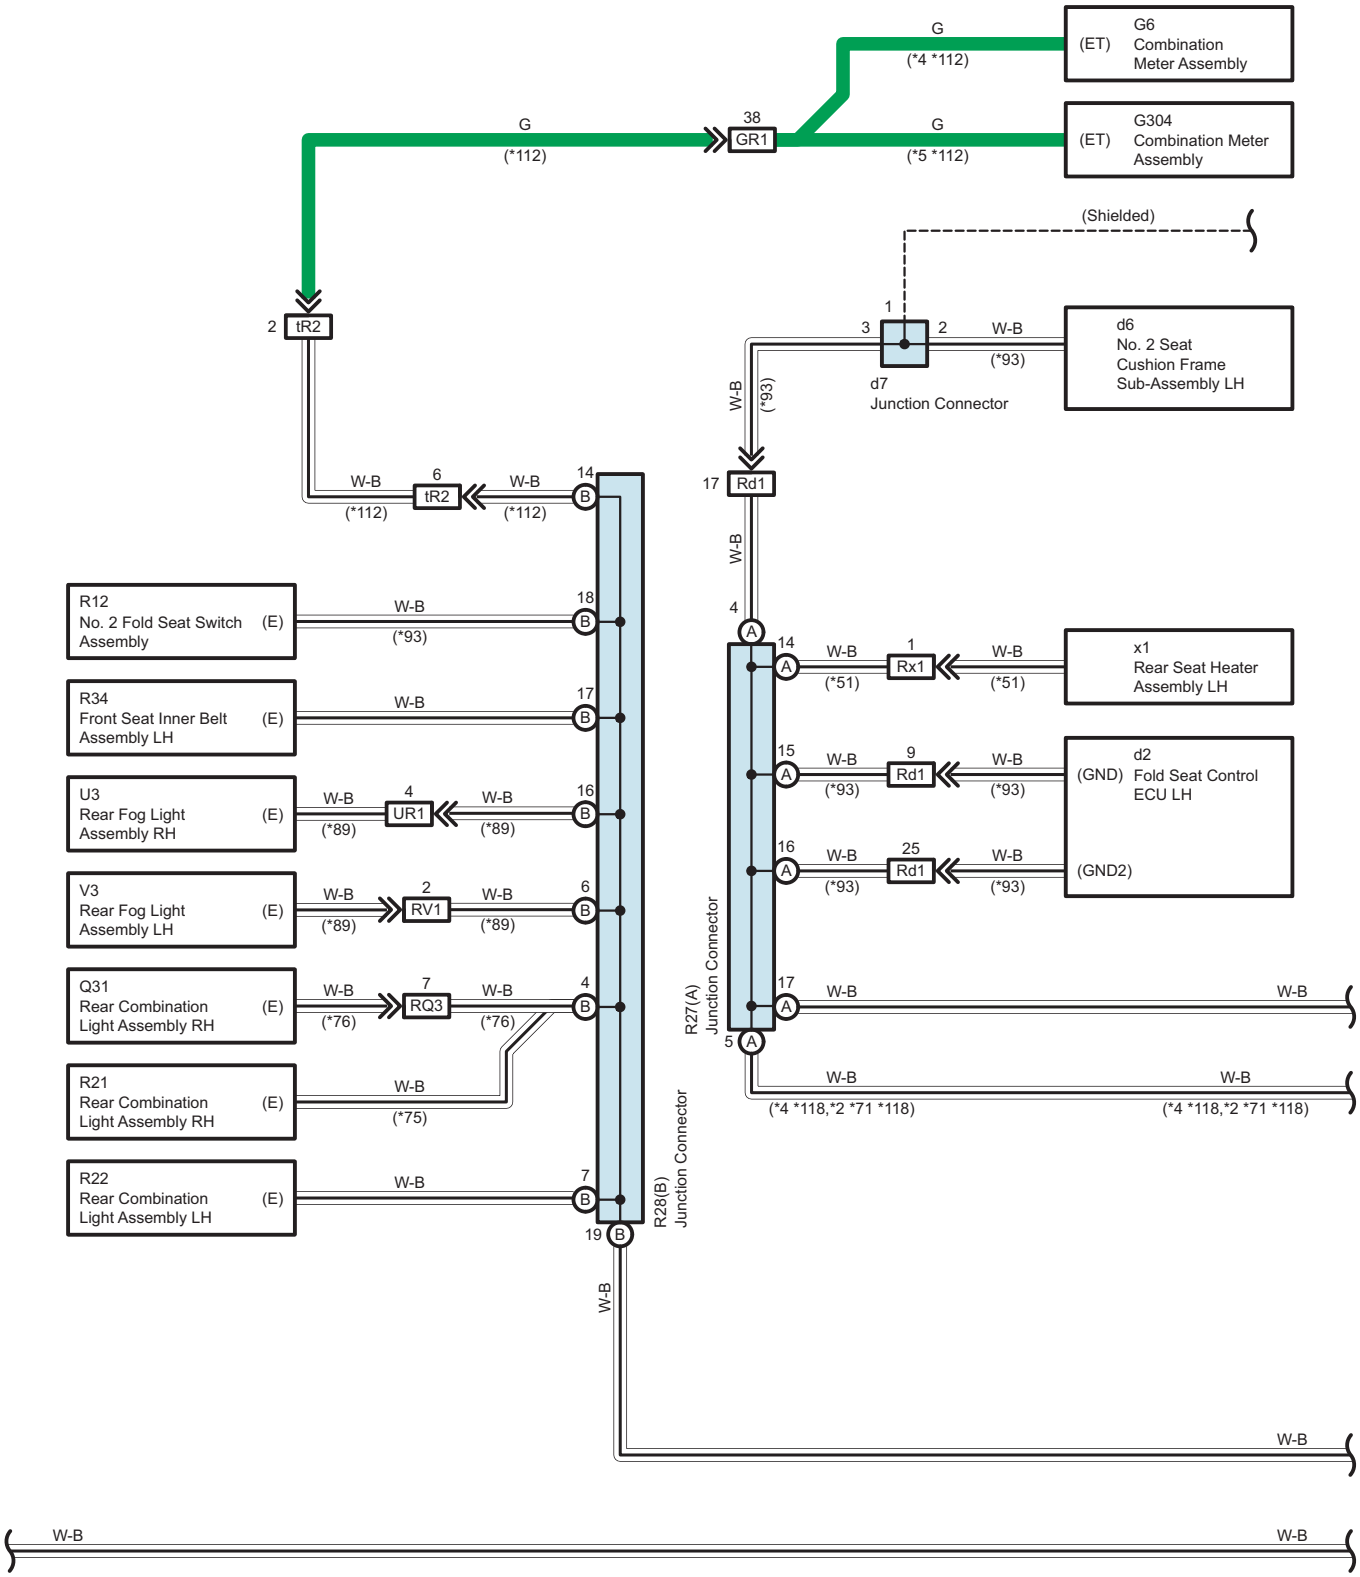
G
(*4 *112)
G6
(ET) Combination Meter Assembly
G
(*112)
38
GR1
G
(*5 *112)
G304
(ET) Combination Meter Assembly
(Shielded)
2
tR2
1
3
2
W-B
(*93)
d6
No. 2 Seat Cushion Frame Sub-Assembly LH
d7
Junction Connector
W-B
(*93)
W-B
(*112)
6
tR2
W-B
(*112)
14
B
17
Rd1
W-B
4
A
R12
No. 2 Fold Seat Switch Assembly
(E)
W-B
(*93)
18
B
R34
Front Seat Inner Belt Assembly LH
(E)
W-B
17
B
14
A
W-B
(*51)
1
Rx1
W-B
(*51)
x1
Rear Seat Heater Assembly LH
U3
Rear Fog Light Assembly RH
(E)
W-B
(*89)
4
UR1
W-B
(*89)
16
B
15
A
W-B
(*93)
9
Rd1
W-B
(*93)
d2
(GND) Fold Seat Control ECU LH
V3
Rear Fog Light Assembly LH
(E)
W-B
(*89)
2
RV1
W-B
(*89)
6
B
16
A
W-B
(*93)
25
Rd1
W-B
(*93)
(GND2)
Q31
Rear Combination Light Assembly RH
(E)
W-B
(*76)
7
RQ3
W-B
(*76)
4
B
R27(A) Junction Connector
17
A
W-B
W-B
R21
Rear Combination Light Assembly RH
(E)
W-B
(*75)
5
A
W-B
W-B
(*4 *118,*2 *71 *118)
(*4 *118,*2 *71 *118)
R22
Rear Combination Light Assembly LH
(E)
W-B
7
B
R28(B) Junction Connector
19
B
W-B
W-B
W-B
W-B


*1 :1GR-FE
*2 :1KD-FTV
*3 :1GD-FTV
*4 :5L-E
*5 :Except 5L-E
*24 :w/ Urea SCR
*36 :w/ Entry & Start System
*51 :w/ Seat Heater (Rear)
*54 :w/ Curtain Shield Airbag
*71 :w/o Entry & Start System
*75 :5-Door
*76 :3-Door
*79 :w/ Tire Pressure Warning System
*89 :w/ Rear Fog Light
*92 :w/ Climate Control Seat
*93 :w/ Power Rear No. 2 Seat with Stowing Function
*101 :w/ Seat Heater
*102 :w/o Seat Heater
*103 :w/o Climate Control Seat
*110 :2TR-FE
*111 :w/o Urea SCR
*112 :w/ Fuel Sub Tank
*113 :w/o Tire Pressure Warning System
*114 :Except 1GD-FTV
*115 :w/o Curtain Shield Airbag
*116 :w/ Power Seat (Front Passenger's Seat)
*117 :w/o Power Seat (Driver's Seat)
*118 :Before Aug. 2019 Production
*119 :From Aug. 2019 Production

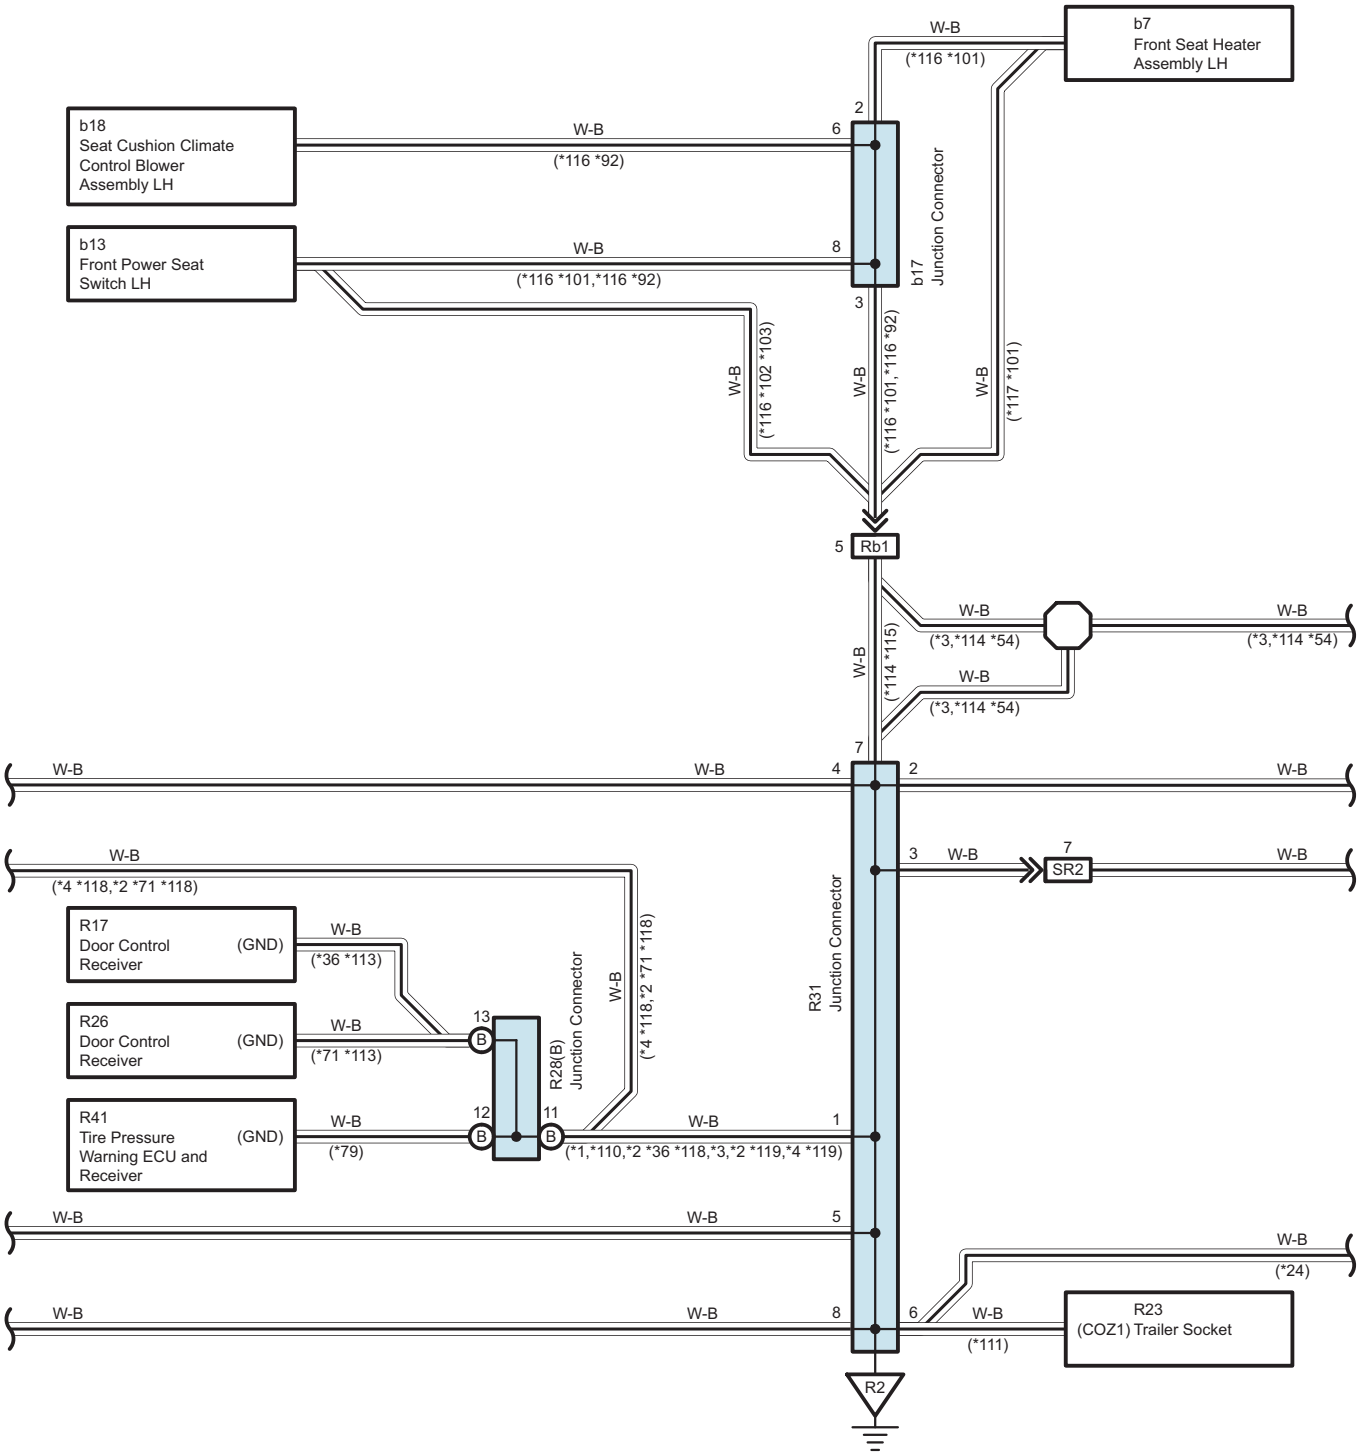

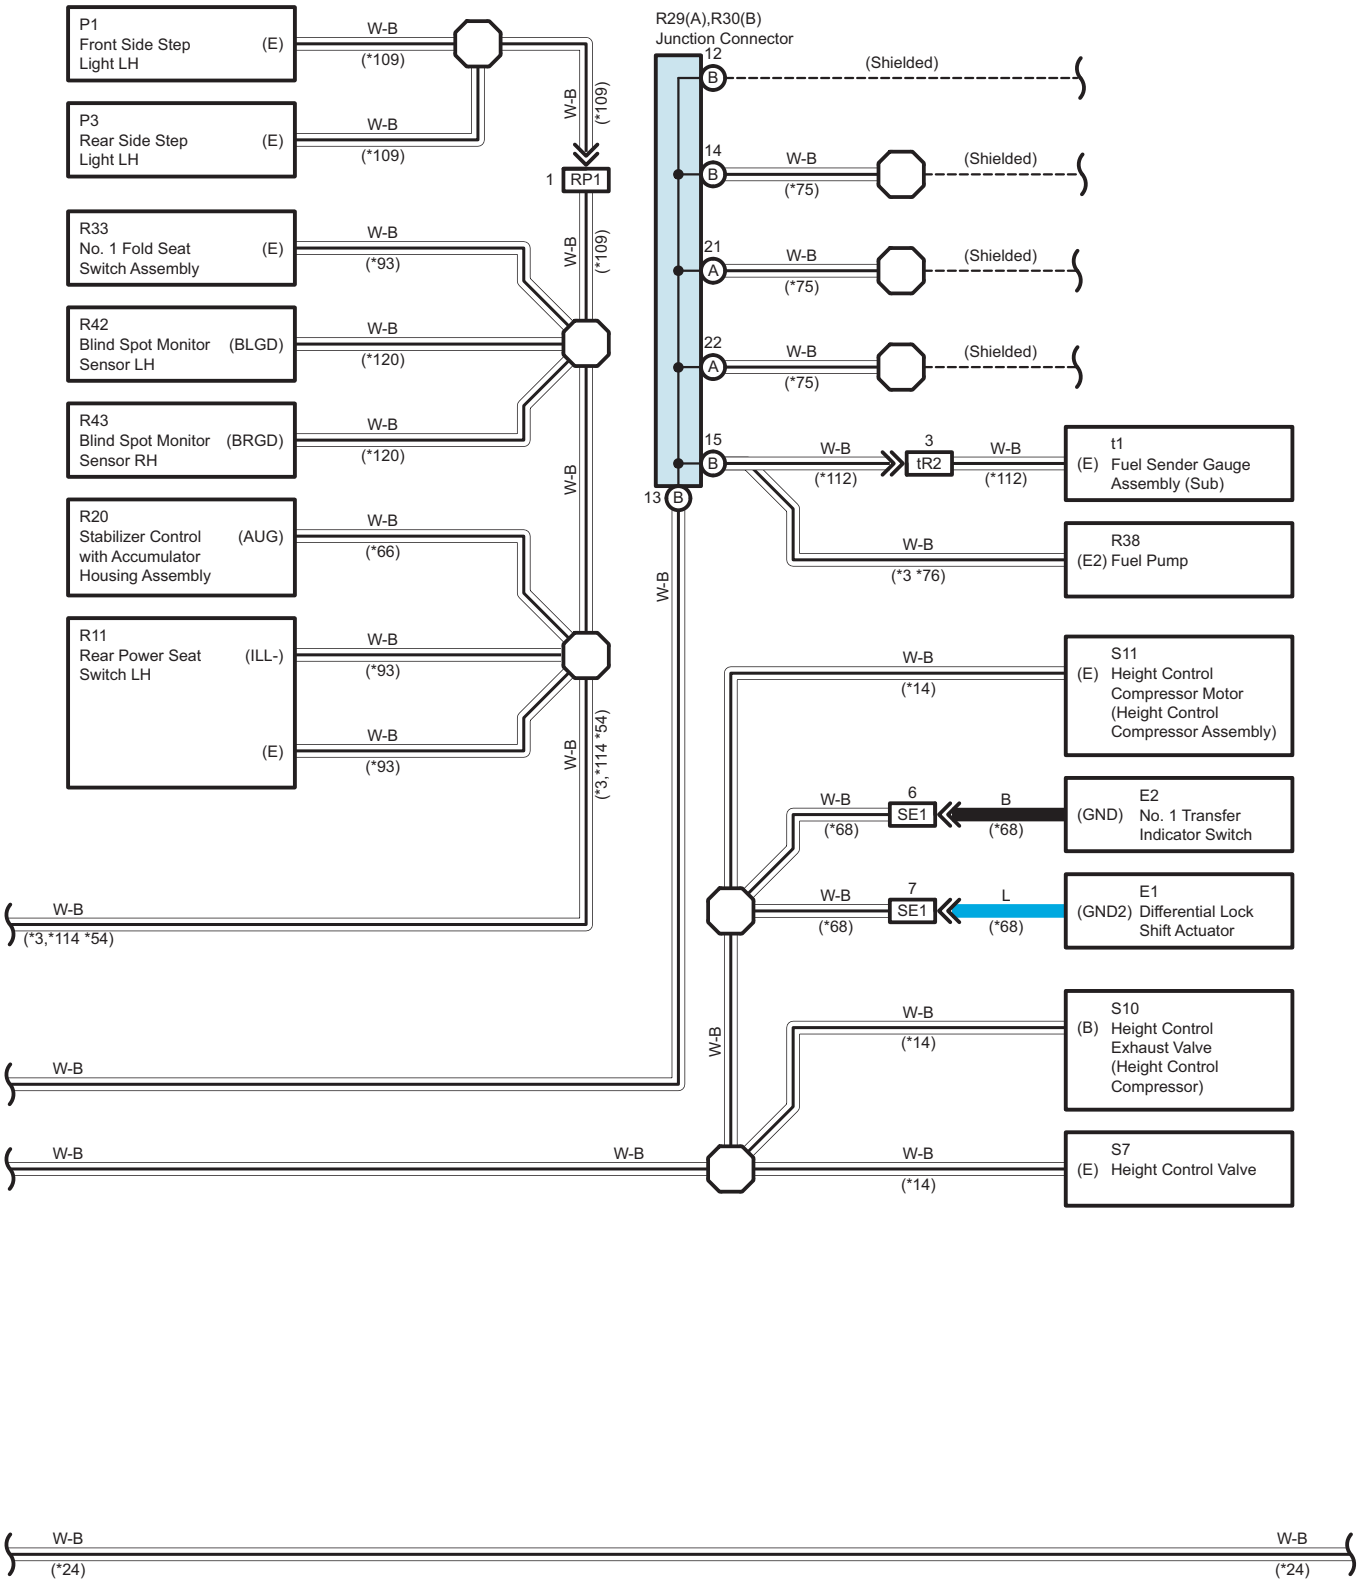
P1
Front Side Step Light LH (E)
P3
Rear Side Step Light LH (E)
R33
No. 1 Fold Seat Switch Assembly (E)
R42
Blind Spot Monitor Sensor LH (BLGD)
R43
Blind Spot Monitor Sensor RH (BRGD)
R20
Stabilizer Control with Accumulator Housing Assembly (AUG)
R11
Rear Power Seat Switch LH (ILL-)
(E)
W-B
(*109)
(*93)
(*120)
(*66)
(*3, *114 *54)
1 RP1
R29(A),R30(B)
Junction Connector
12 B
14 B
21 A
22 A
15 B
13 B
(Shielded)
(*75)
(*112)
3 tR2
t1
(E) Fuel Sender Gauge Assembly (Sub)
R38
(E2) Fuel Pump
(*3 *76)
S11
(E) Height Control Compressor Motor (Height Control Compressor Assembly)
(*14)
6 SE1
B
E2
(GND) No. 1 Transfer Indicator Switch
(*68)
7 SE1
L
E1
(GND2) Differential Lock Shift Actuator
S10
(B) Height Control Exhaust Valve (Height Control Compressor)
S7
(E) Height Control Valve

W-B
(*24)

*3 :1GD-FTV
*14 :w/ Electronic Modulated Air Suspension
*17 :Before Aug. 2020 Production
*24 :w/ Urea SCR
*54 :w/ Curtain Shield Airbag
*66 :w/ Kinetic Dynamic Suspension System
*68 :w/ Rear Differential Lock
*75 :5-Door
*76 :3-Door
*93 :w/ Power Rear No. 2 Seat with Stowing Function
*96 :w/ Rear No. 1 Seat Belt Warning System
*97 :w/ Rear No. 2 Seat Belt Warning System
*98 :Slide Walk-in Seat Type
*99 :Double-folding Seat Type
*100 :Tumble Seat Type
*109 :w/ Foot Light
*112 :w/ Fuel Sub Tank
*114 :Except 1GD-FTV
*120 :w/ Blind Spot Monitor System

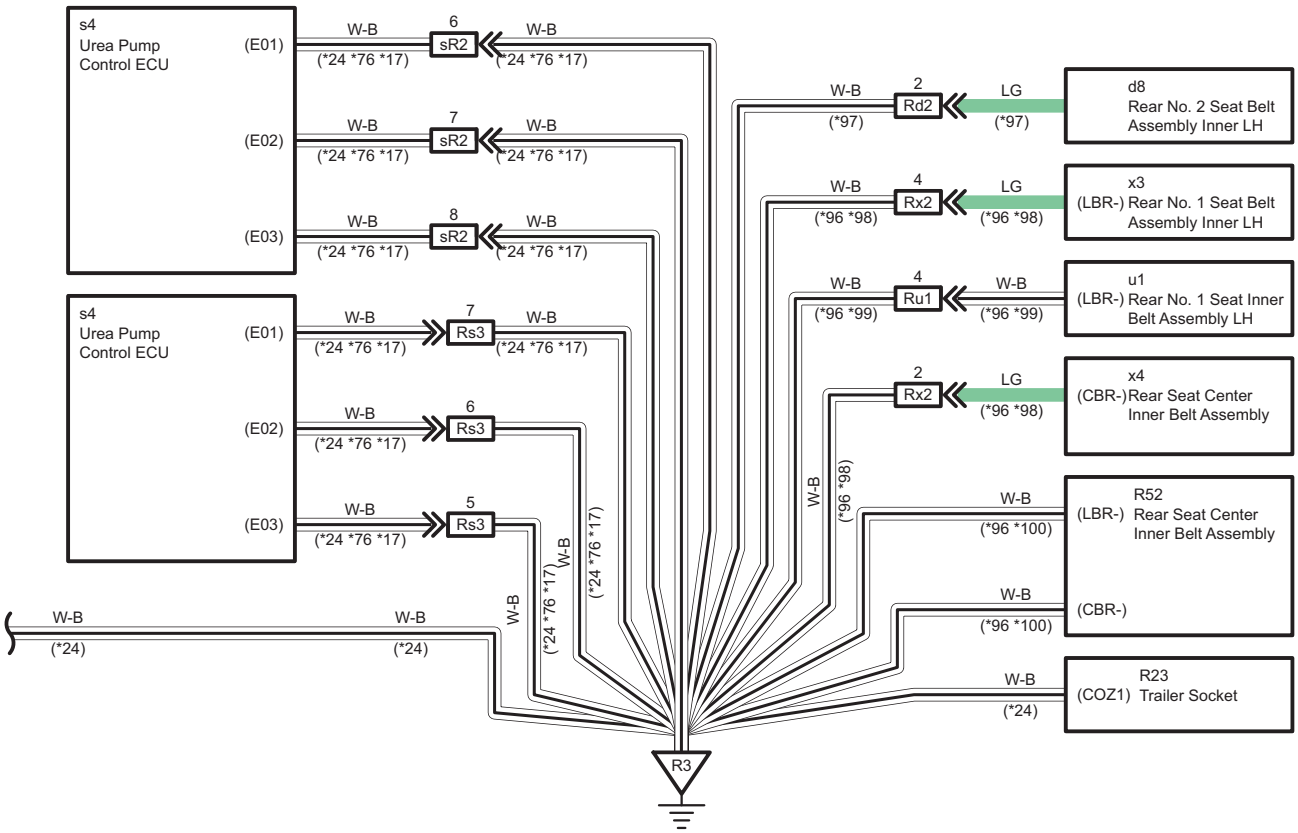

A47
Gray




90980-10945

A48
Gray




90980-10946

A68
Dark Gray

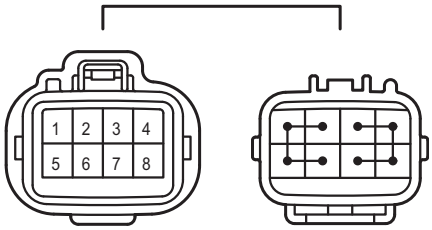


90980-10891

A70
White

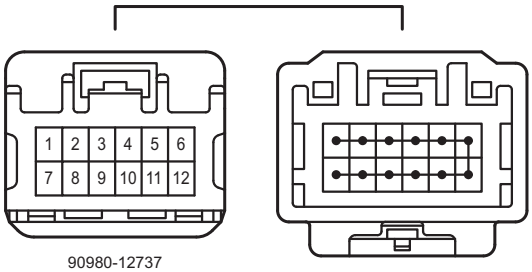


90980-12737

C48
White

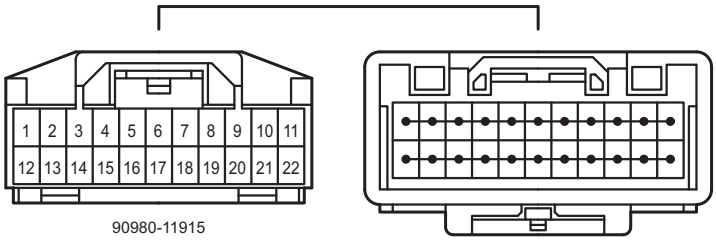


90980-11915

C174
Gray

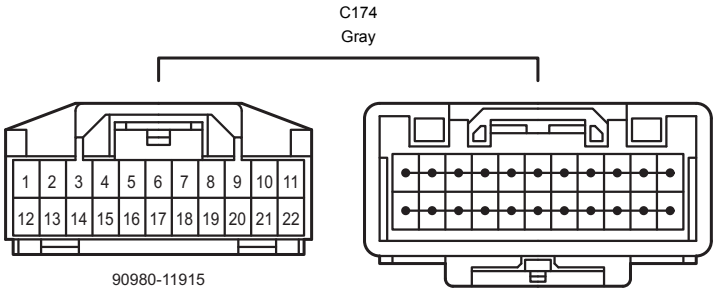


90980-11915

C190
White

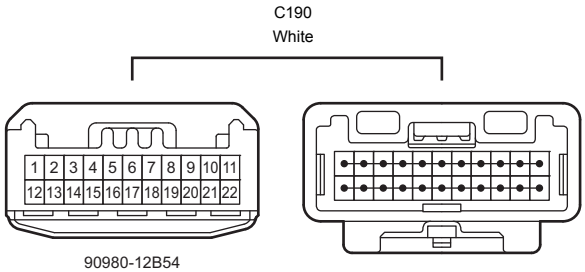


90980-12B54

G104
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

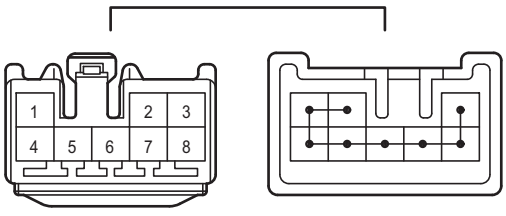


90980-11686

G105
White

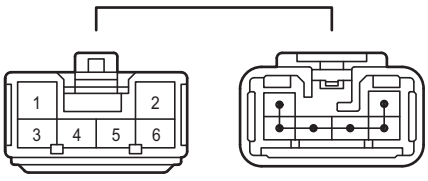


90980-10976

G106
White (Before Aug. 2017 Production) / Gray (From Aug. 2017 Production)

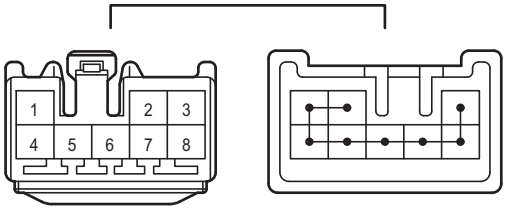


90980-11686

G235
Gray

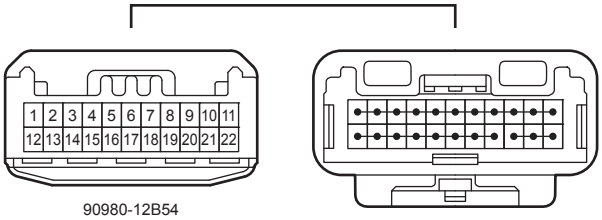


90980-12B54

G237
Blue

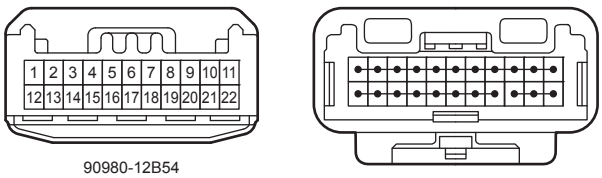


90980-12B54

G239
White

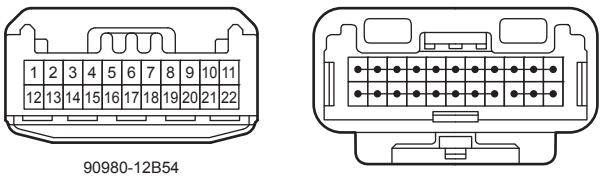


90980-12B54

G266
Blue

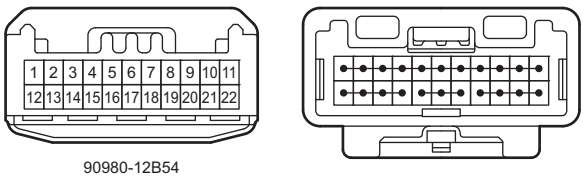


90980-12B54

G268
White

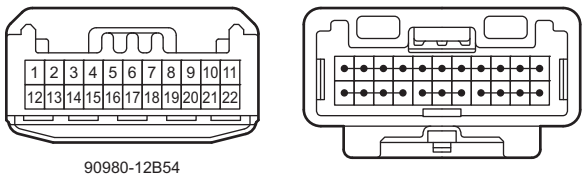


90980-12B54

G270
Blue

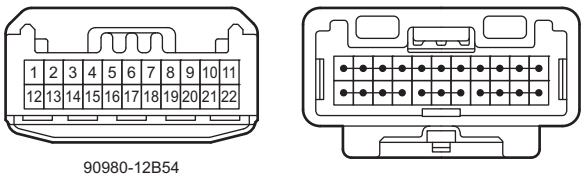


90980-12B54

G271
White

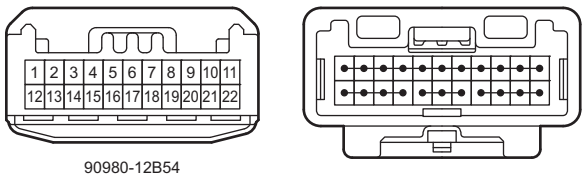


90980-12B54

G275
White

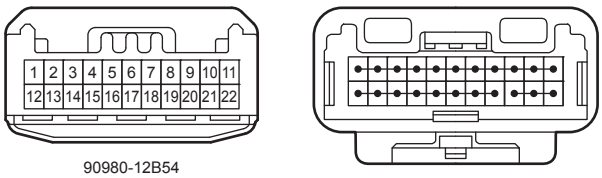


90980-12B54

G277
Blue

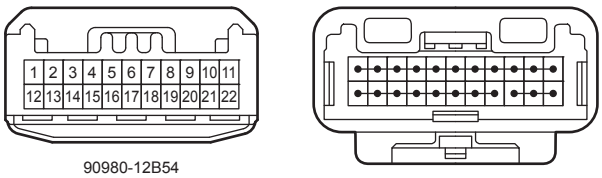


90980-12B54

G301
White

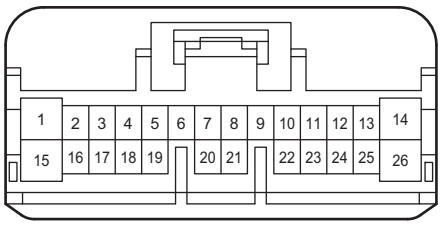


90980-12771

G302
White

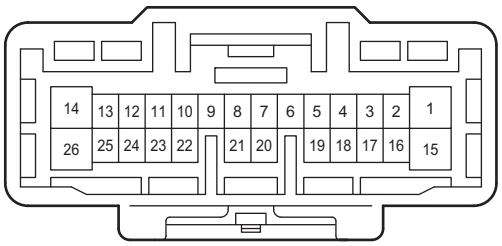

90980-12770

H24
White (Before Aug. 2017 Production) / Blue (From Aug. 2017 Production)

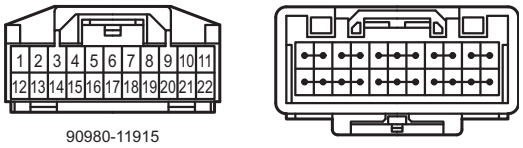


90980-11915

H26
White




90980-10976

H86
Blue

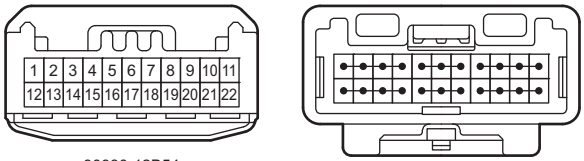


90980-12B54

Q23
White

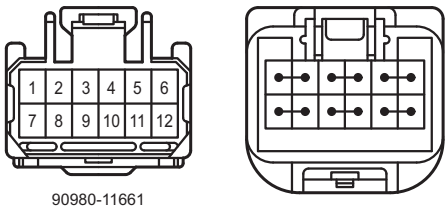


90980-11661

Q24
White

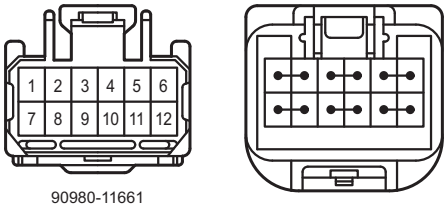


90980-11661

R27
Dark Gray

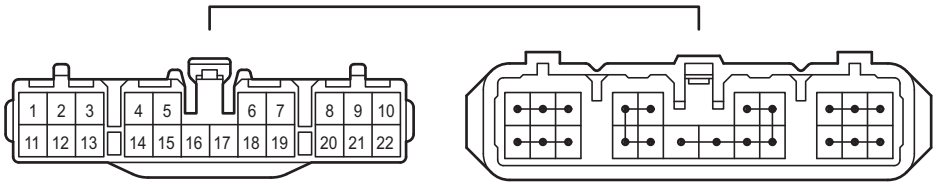


90980-11238

R28
White

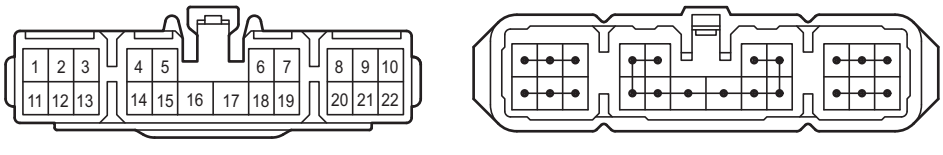


90980-10875

R29
Blue

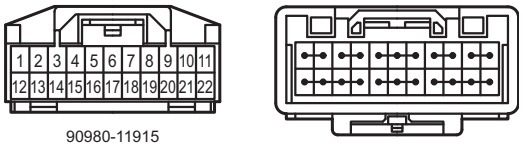


90980-11915

R30
Blue

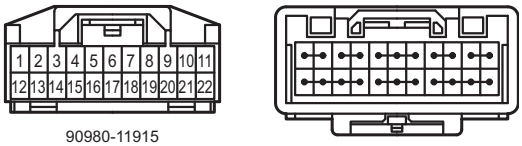

90980-11915

R31
White

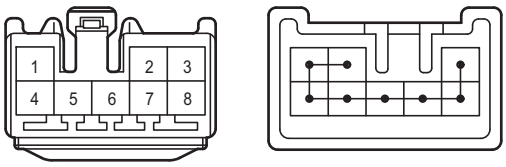


90980-11686

a16
Black




90980-11398

a17
White

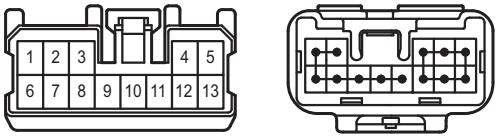


90980-12346

a19
Black

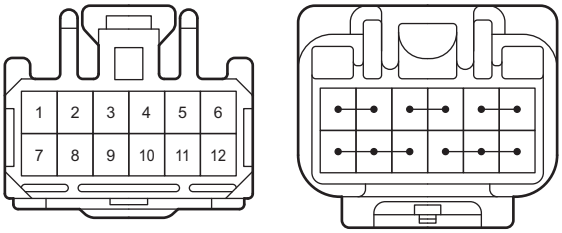


90980-11661

a20
White

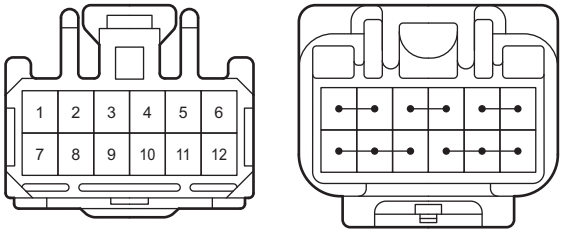


90980-11661

b17
White

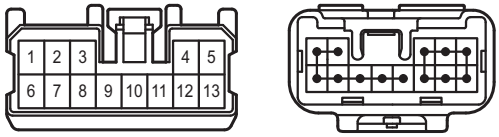


90980-12346

d7
Black

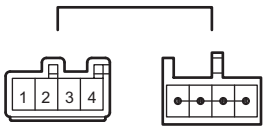


90980-11398

1A
White

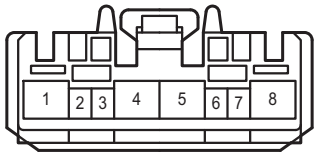

90980-12485

1B
White

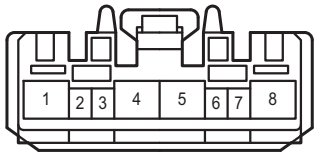


90980-12486

1U
White




90980-12A55

1W
White

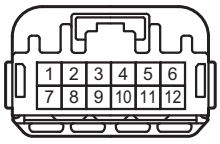


90980-12A91

2D
White

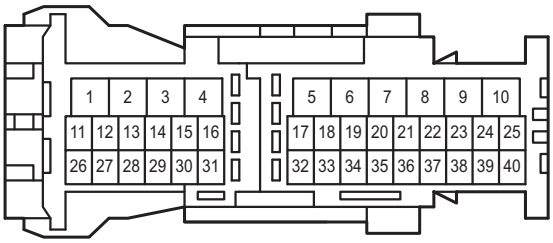


90980-12818

2N
White

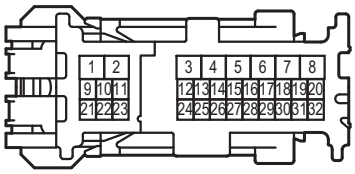

90980-12A48


AB1
White

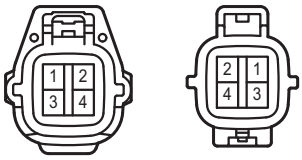

90980-10942

90980-10941


AB2
Gray

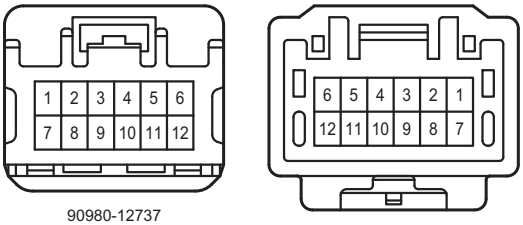

90980-12737

90980-12736

AC1
Black

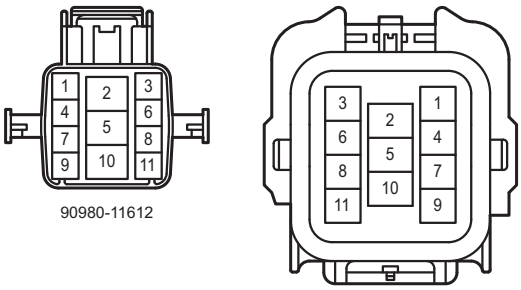

90980-11612

90980-11609


AC2
Dark Gray



90980-11242

90980-11241


BA2
Gray

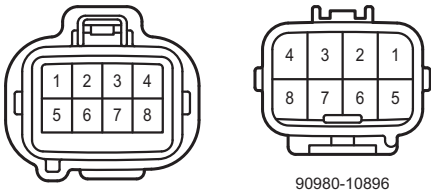

90980-10897

90980-10896


CA2
Black

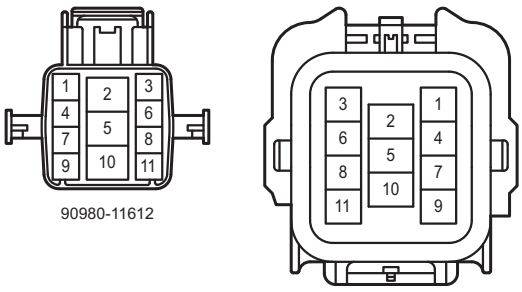


90980-11612

90980-11609

CG1
White

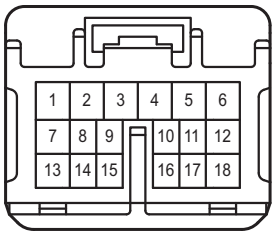


90980-12745

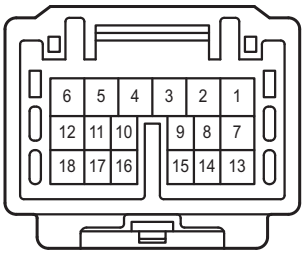


90980-12744

CG2
White

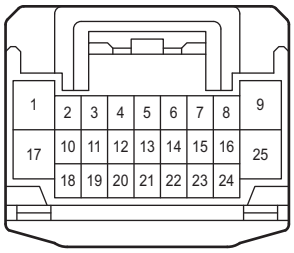


90980-12414

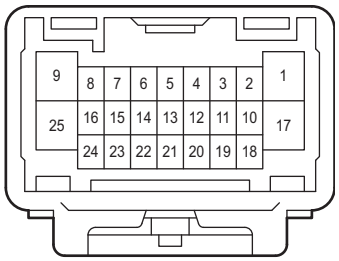


90980-12413

CG3
White

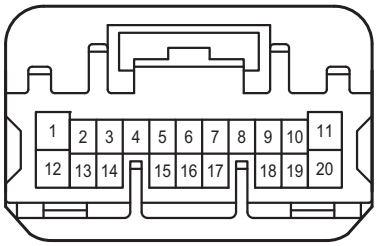


90980-12741

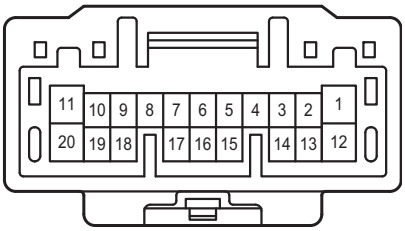


90980-12740

GA1
White

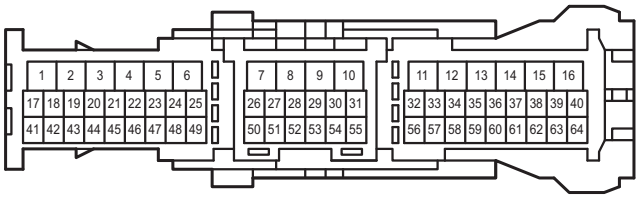


90980-12774

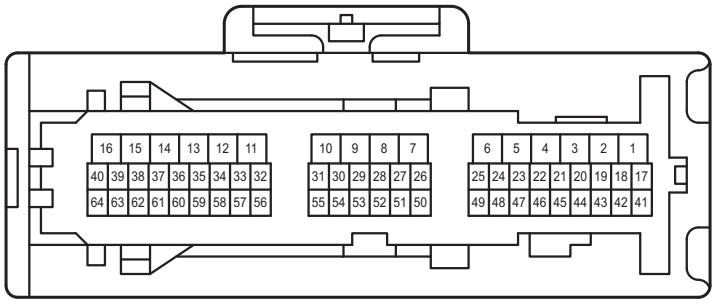


90980-12798

GA6
White

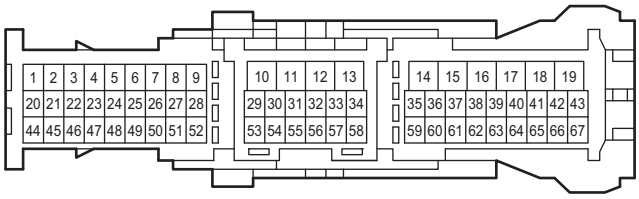


90980-12783

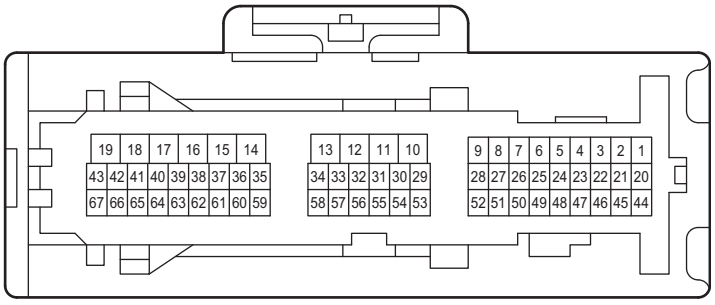


90980-12800

GH1
White

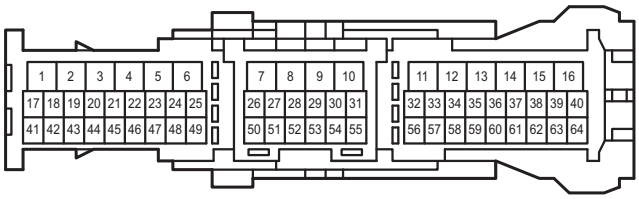


90980-12774

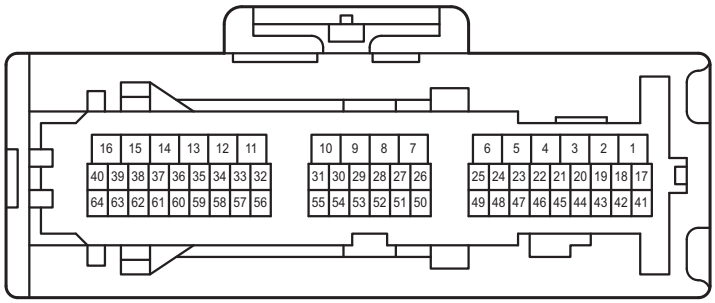


90980-12798

GQ1
White

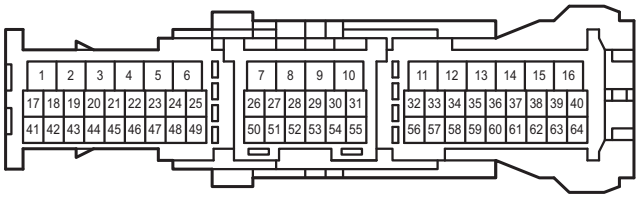


90980-12774

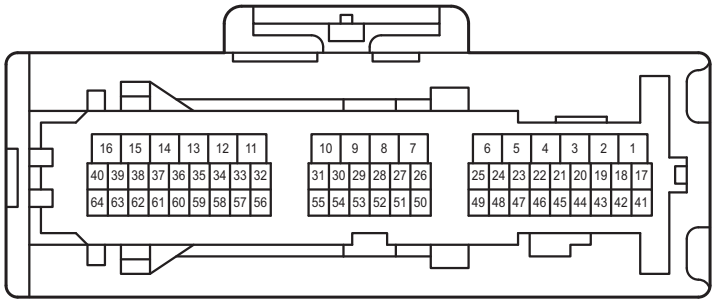


90980-12798

GR1
White

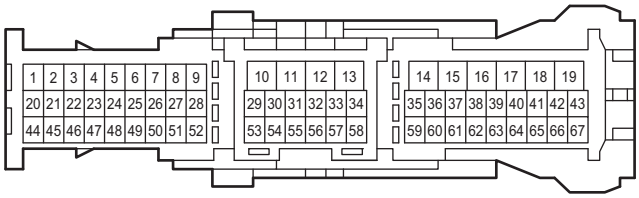


90980-12783

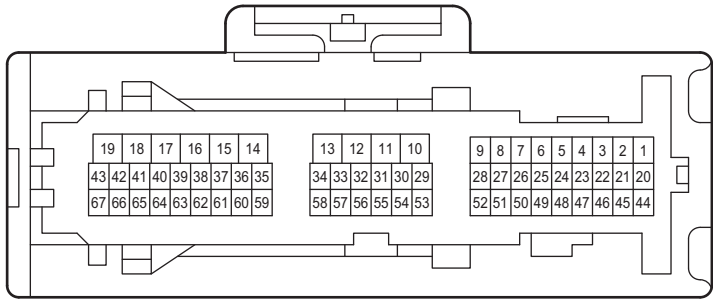


90980-12800

Gi2
White

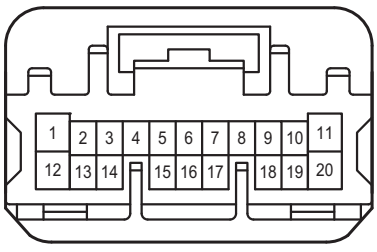


90980-12741

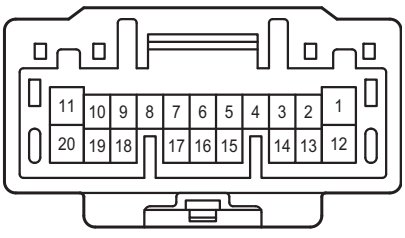


90980-12740

IG1
White

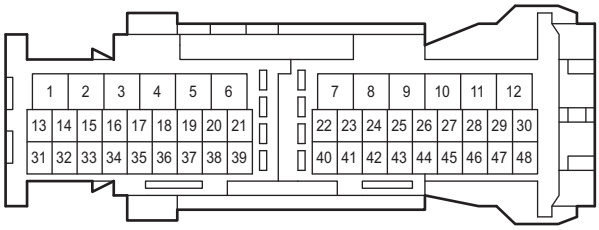


90980-12779

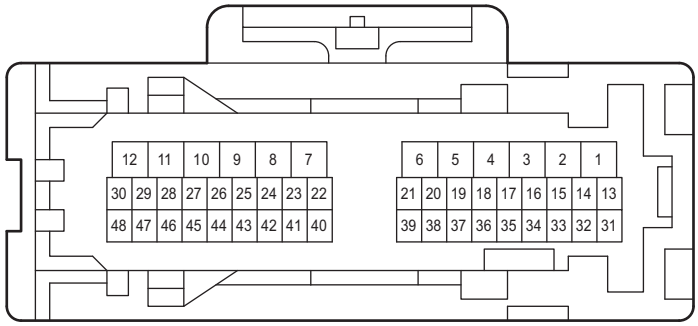


90980-12799

JG3
Black

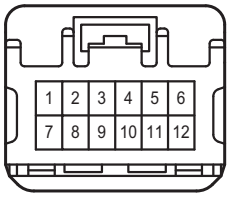


90980-12737

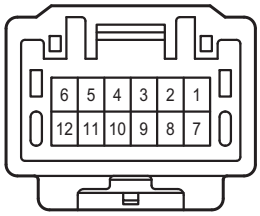


90980-12736

KG3
Black

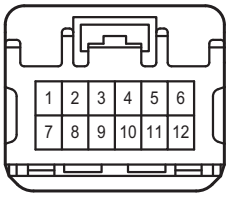


90980-12737

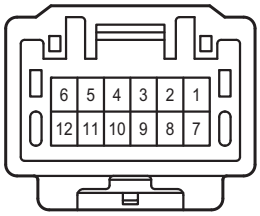


90980-12736

LQ1
White

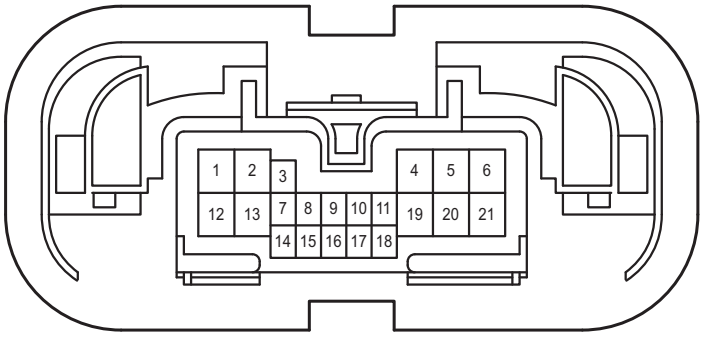


90980-12671

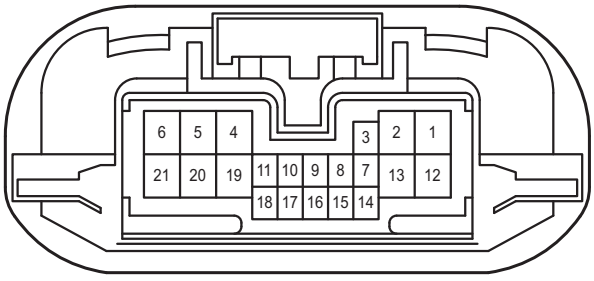


90980-12670

MR1
White

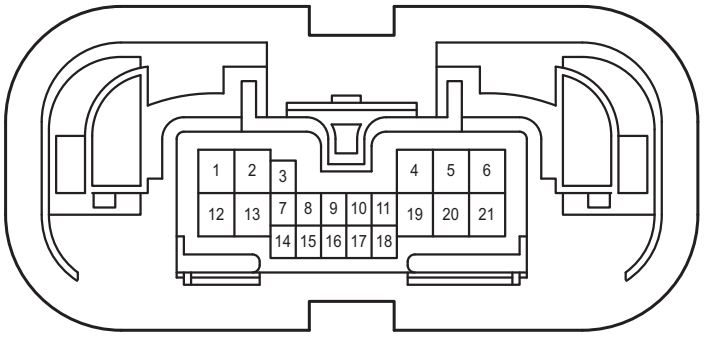


90980-12671

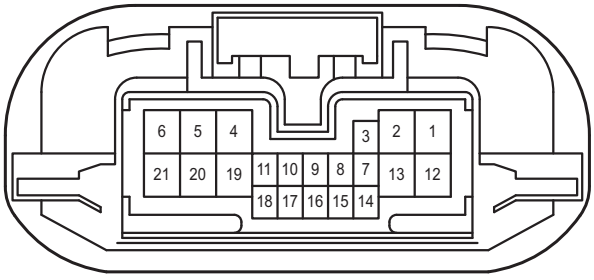


90980-12670

QP1
Gray

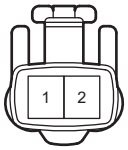


90980-11075

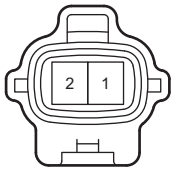


90980-11073

Qa1
White

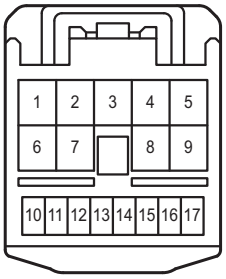


90980-12374

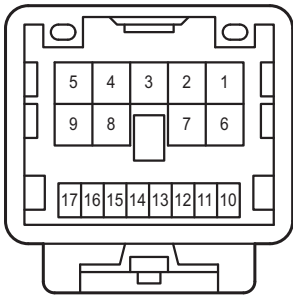


90980-12373

Qc1
White

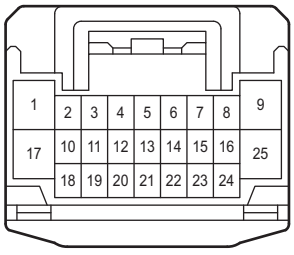

90980-12414

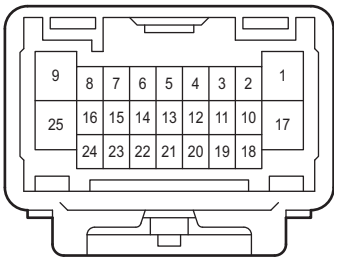

90980-12413

Qc2
Blue




90980-11156




90980-11155

Qs1
Black

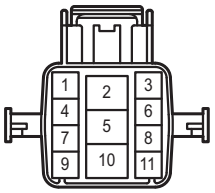


90980-11612

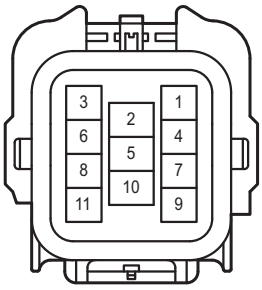


90980-11609

Qt1
Gray

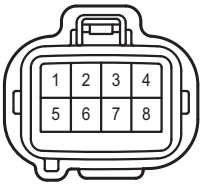


90980-10897

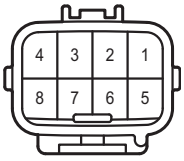


90980-10896

Qw1
White

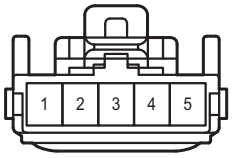


90980-10789

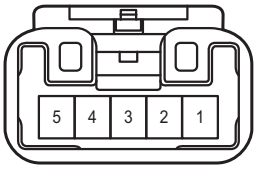


90980-11085

Qw2
Gray White

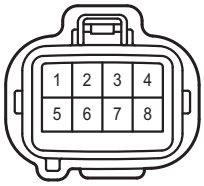


90980-10897

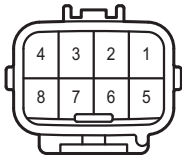


90980-10896

RP1
Gray

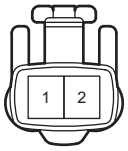


90980-11075

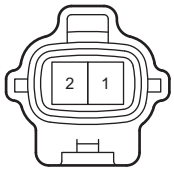


90980-11073

RQ3
White

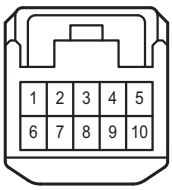

90980-12368

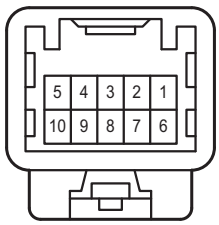

90980-12367

RV1
White




90980-10869




90980-10868

Rb1
White

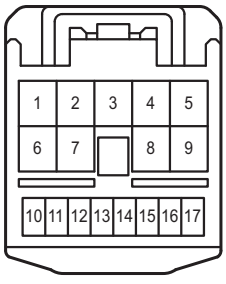


90980-12374

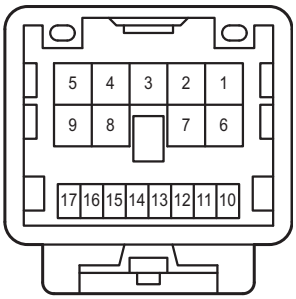


90980-12373

Rd1
White

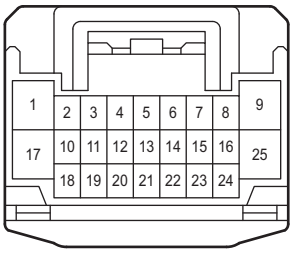


90980-12414

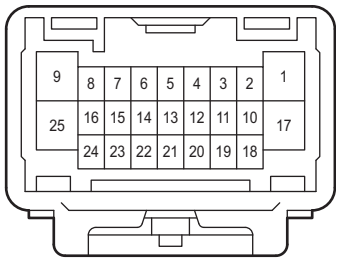


90980-12413

Rd2
Blue




90980-11156 90980-11155

Rs3
Gray

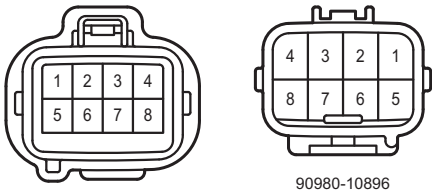


90980-10897 90980-10896

Ru1
Gray

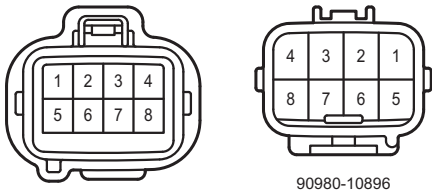


90980-10897 90980-10896

Rx1
White

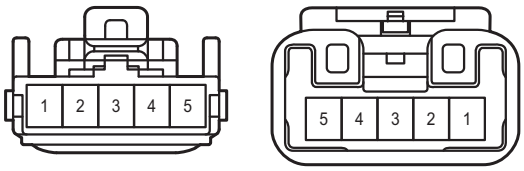


90980-10789 90980-11085

Rx2
Gray White

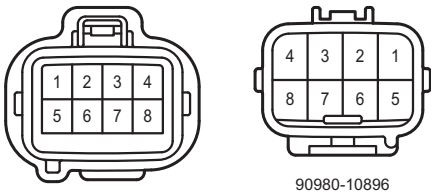


90980-10897 90980-10896

SE1
Gray

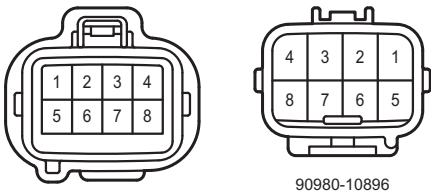


90980-10897 90980-10896

SR2
White

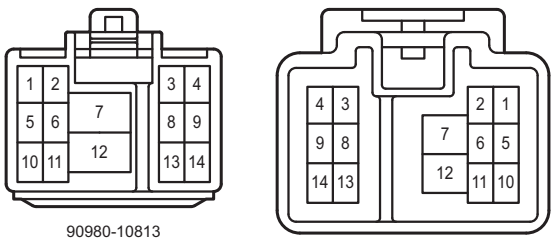


90980-10813 90980-10812

SR3
White

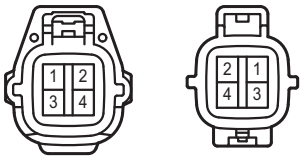

90980-10942 90980-10941

TG2
White

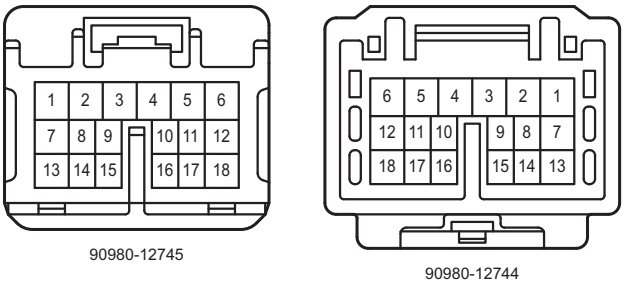


90980-12745 90980-12744

UQ1
Gray



90980-11194

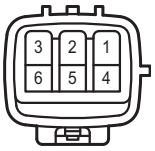

90980-11193

UR1
Gray




90980-11194




90980-11193

WG1
White

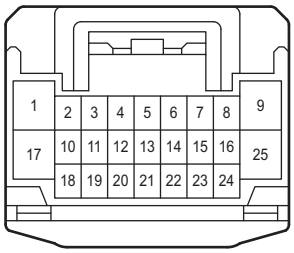


90980-12414

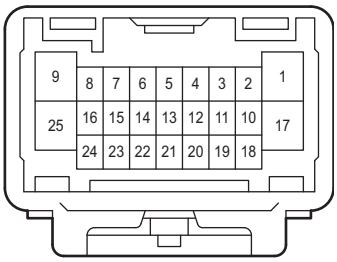


90980-12413

WG2
White

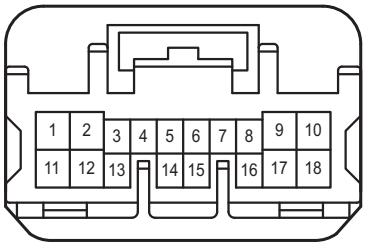


90980-12739

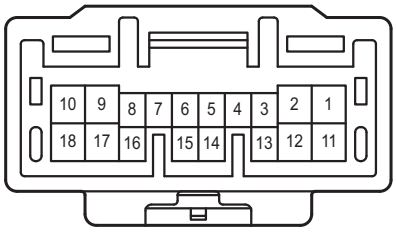


90980-12738

XQ2
White

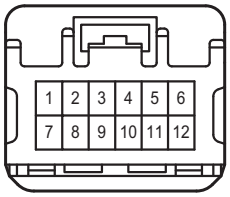


90980-12737

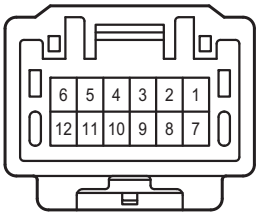


90980-12736

YX1
White

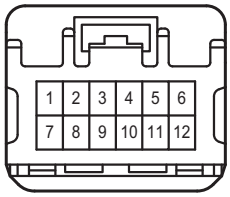


90980-12737

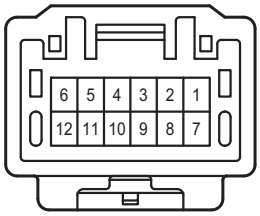


90980-12736

YX2
White

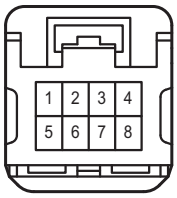

90980-12735

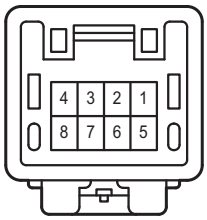


90980-12734

YZ1
White




90980-11003

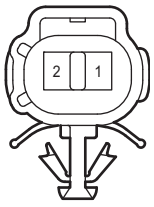


90980-11002

sR2
Gray

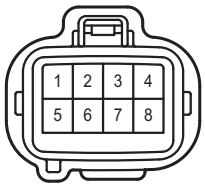

90980-10897

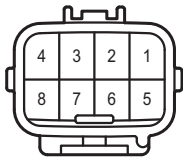

90980-10896

tR2
Gray



90980-11194



90980-11193

zX1
Dark Gray



90980-11194



90980-11193