
RADIATOR SUPPORT (ASSY)

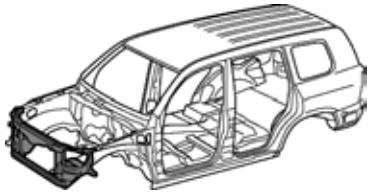


F29204A

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F29204B


REMOVAL·INSTALLATION

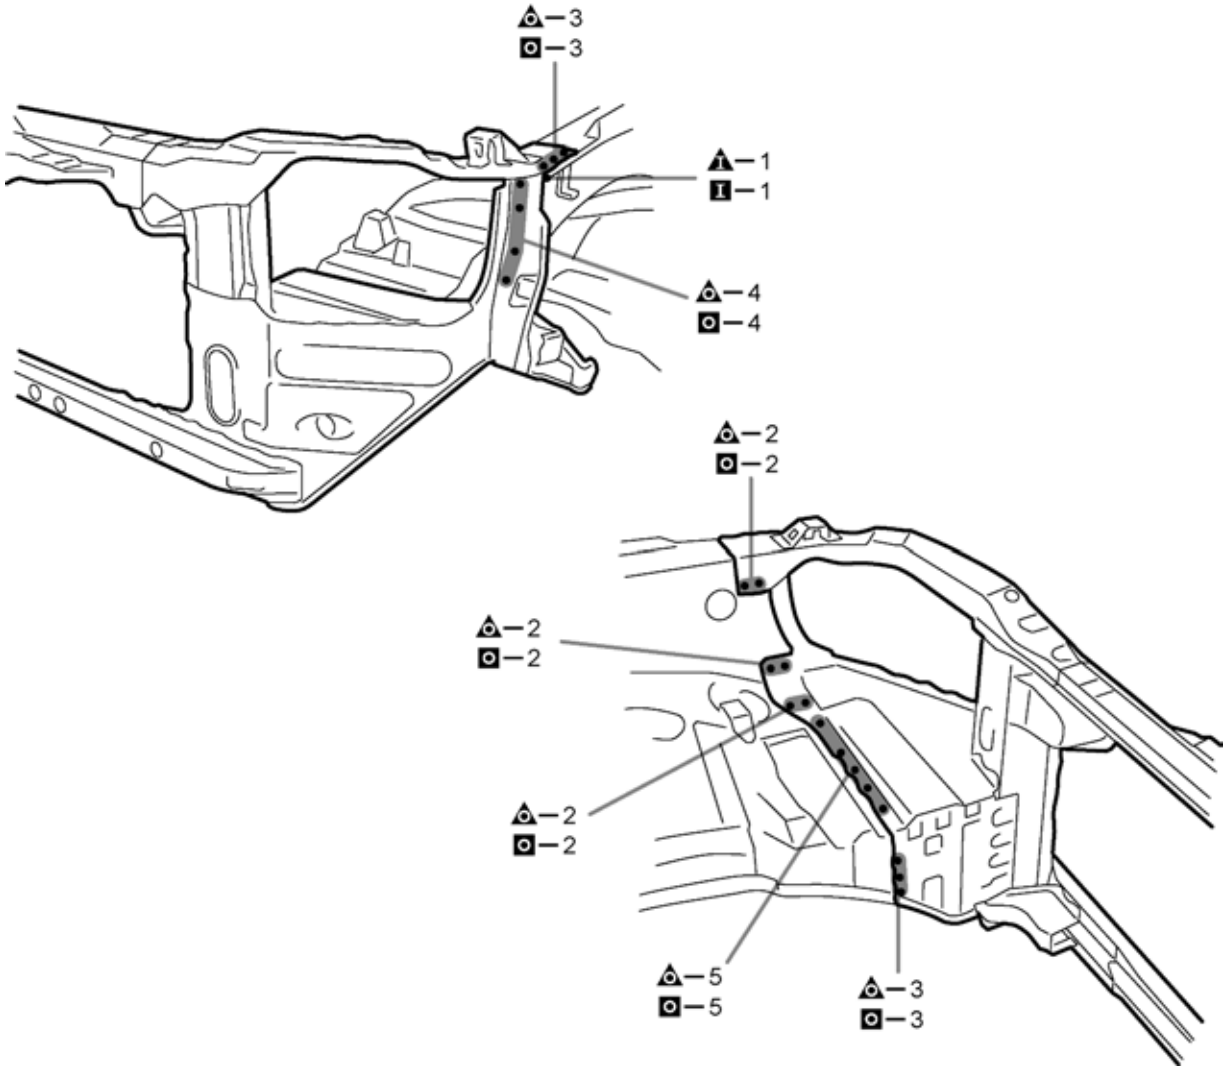

F29204

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

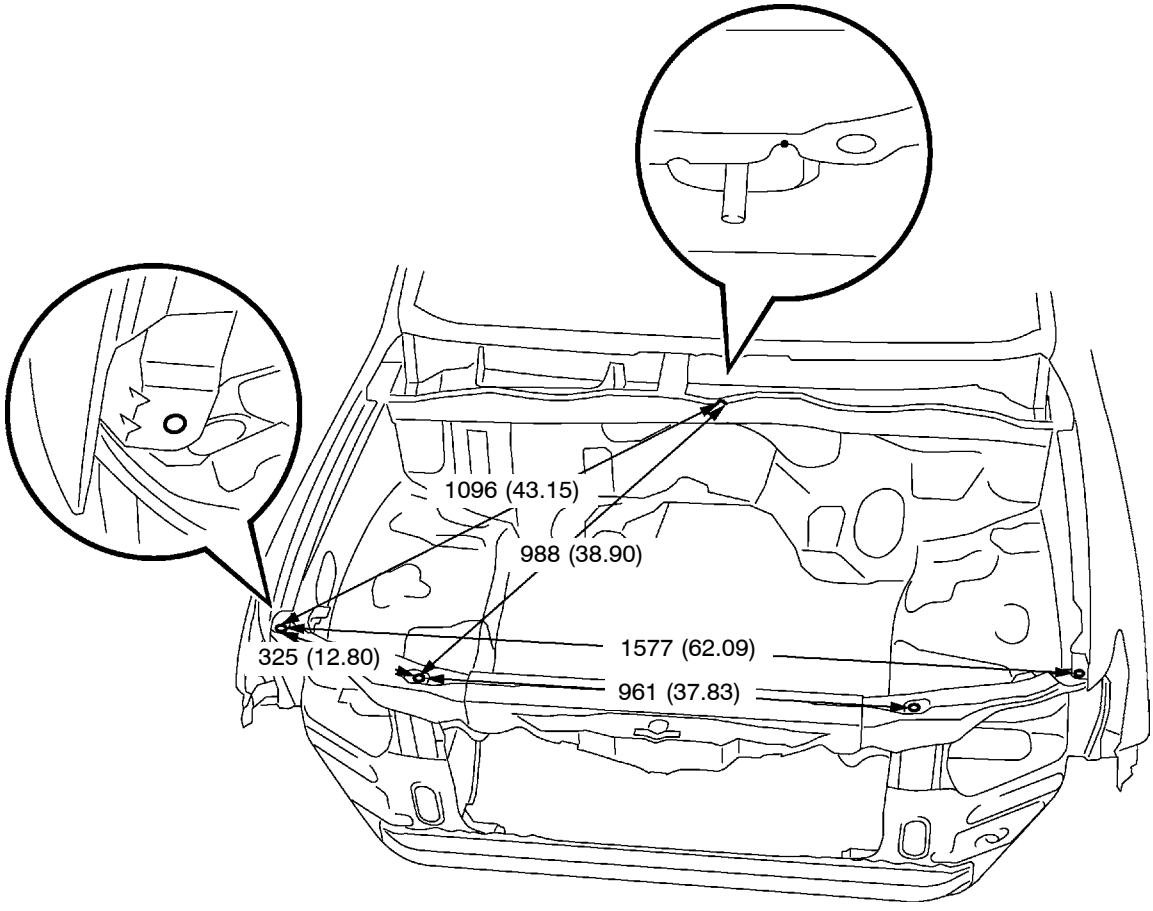

mm (in.)

F29205

INSTALLATION POINT

1 Measure the dimensions before installing the headlights.
2 These values are reference values.