QUARTER PANEL FRONT EXTENSION (ASSY)



F29236A


With the quarter panel removed.

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Plug Weld

F29236B

REMOVAL·INSTALLATION

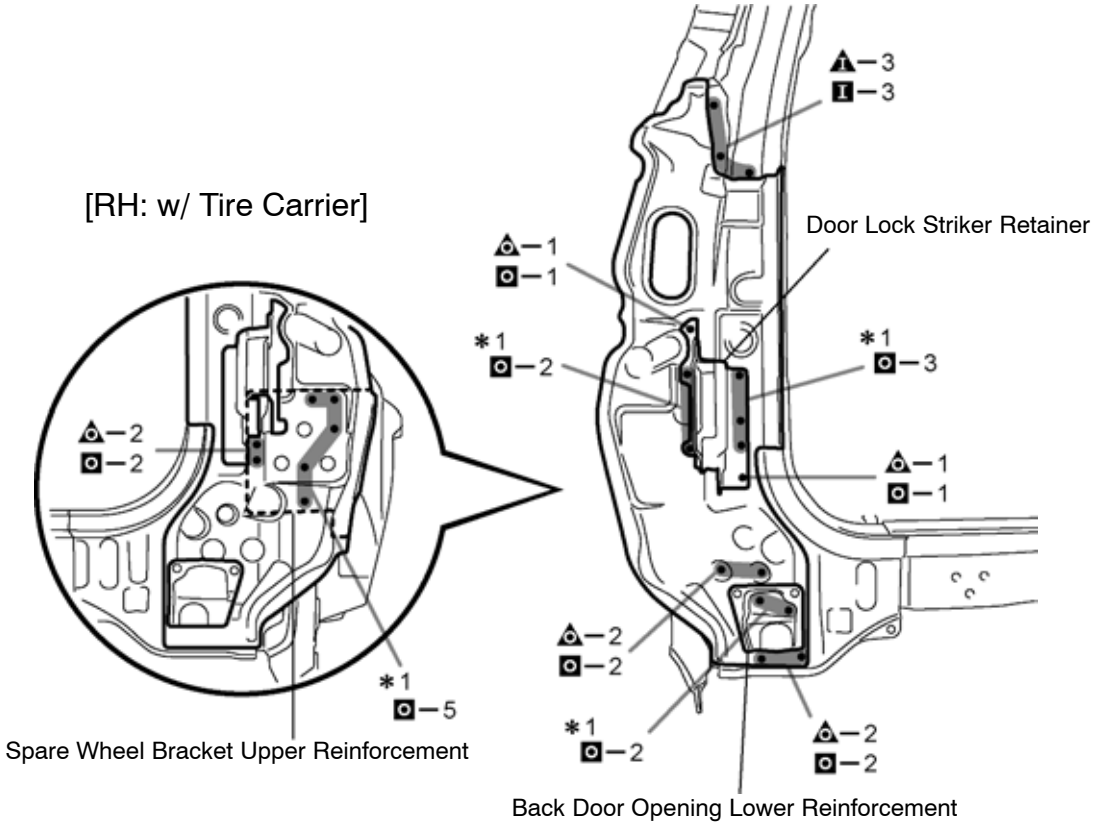


F29236

REMOVAL POINT

1 Remove the door lock striker retainer and spare wheel bracket upper reinforcement at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

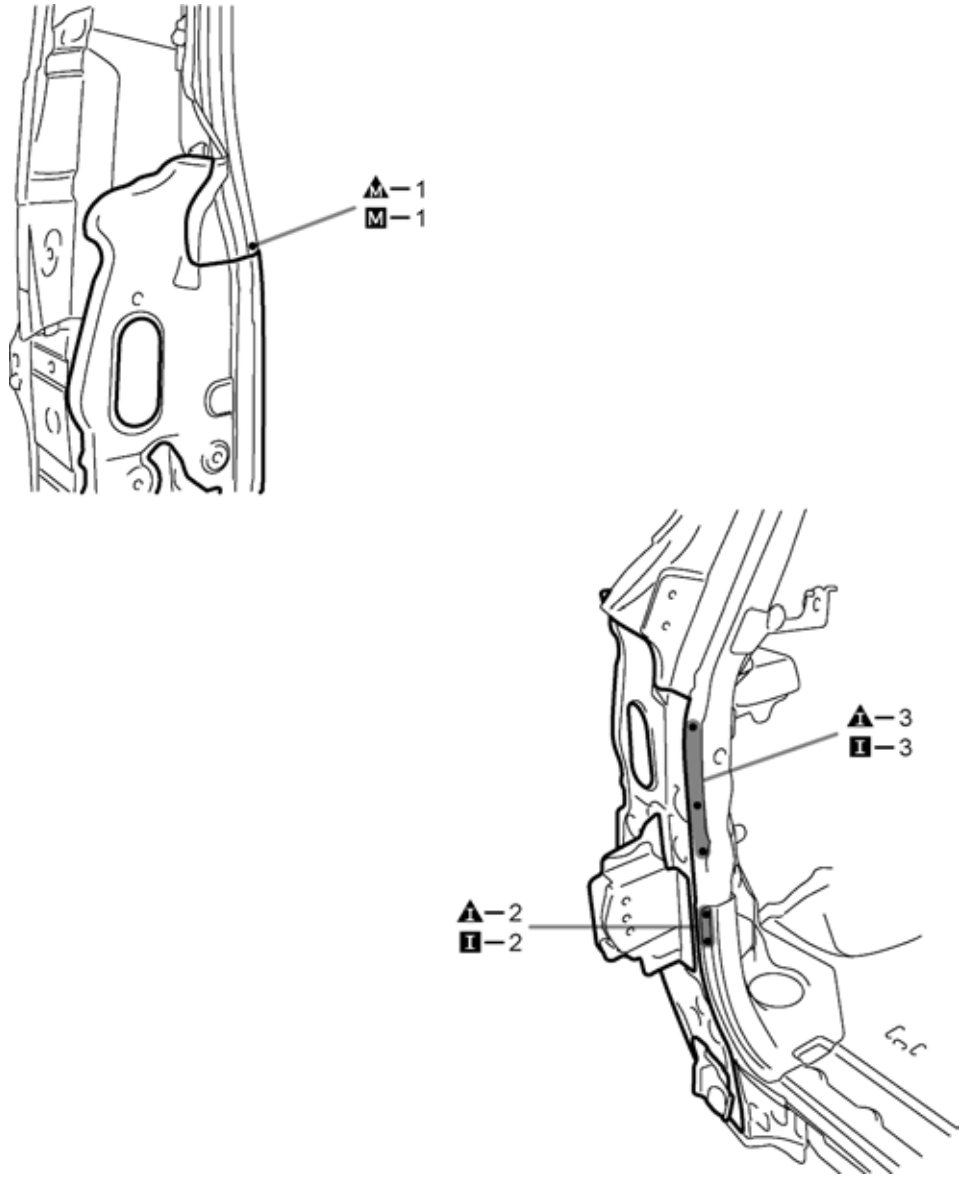

F29237

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.