
BACK DOOR OPENING UPPER REINFORCEMENT (CUT)

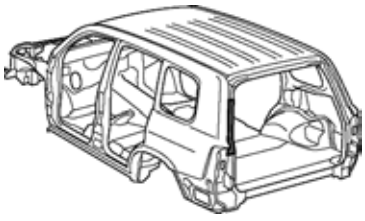

F29238A


With the quarter panel front extension removed.

Symbol meaning

REMOVAL	▲ : Remove Weld Points	: Cut and Join Location
INSTALLATION	○ I : Plug Weld	: Butt Weld

F29238B

REMOVAL·INSTALLATION

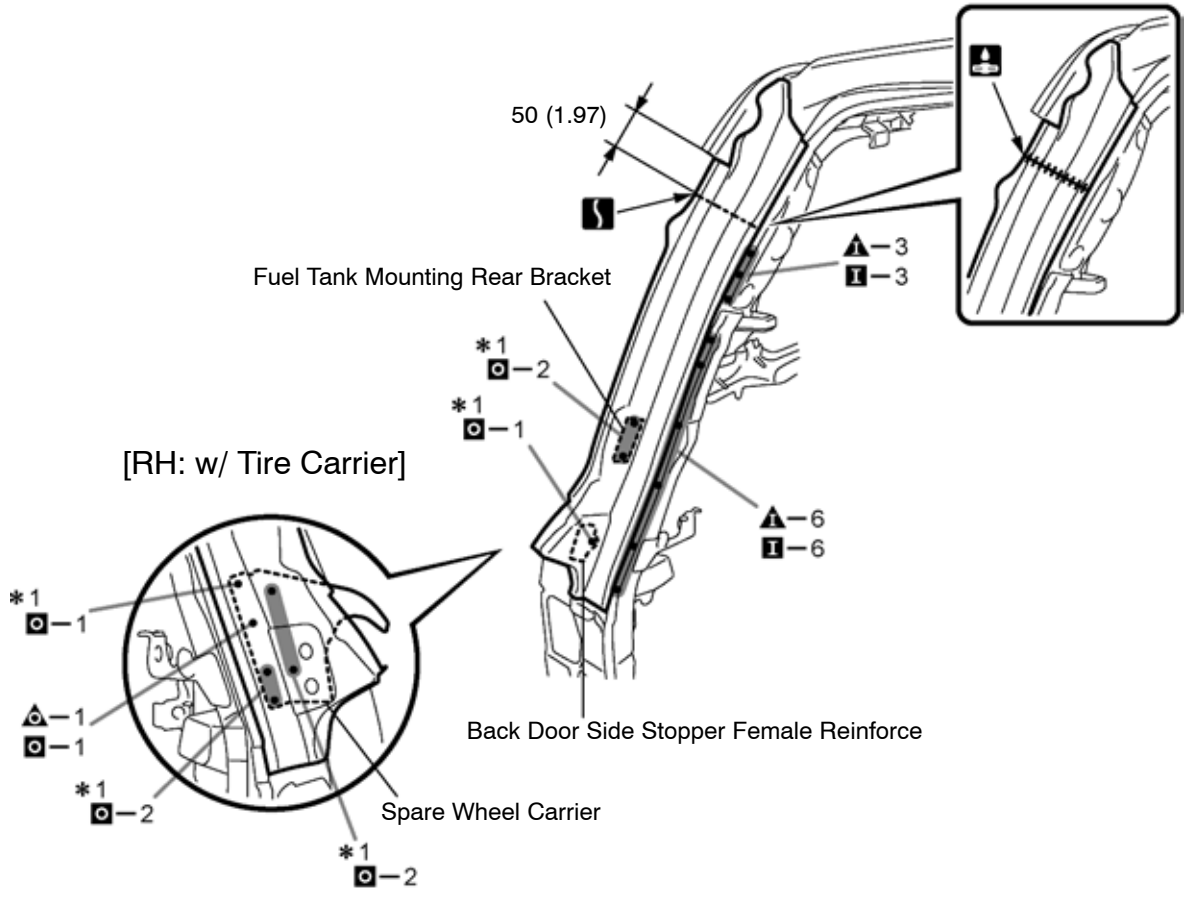

mm (in.)

F29238

REMOVAL POINT

1 Remove the spare wheel carrier at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.