
QUARTER PANEL REINFORCEMENT (CUT)

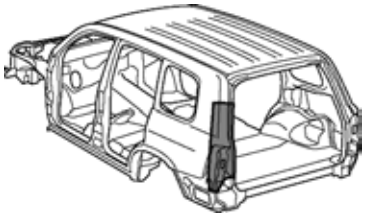

F29239A


With the back door opening upper reinforcement removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Spot Weld : Plug Weld	: Butt Weld

F29239B

REMOVAL·INSTALLATION

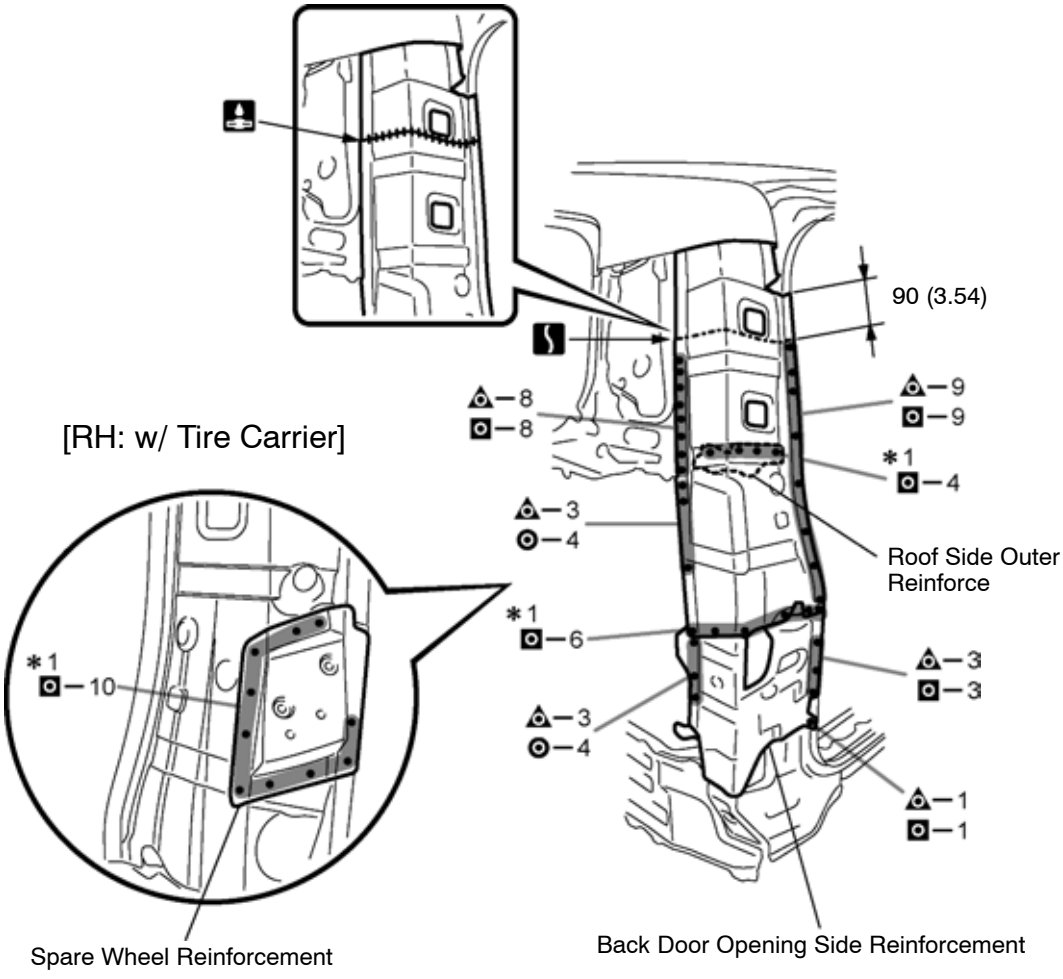

mm (in.)

F29239

REMOVAL POINT

1 Remove the roof side outer reinforce, back door opening side reinforcement and spare wheel reinforcement at the same time.


INSTALLATION POINT


1 *1 is only for installation.

Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points	: Cut and Join Location
INSTALLATION	● : Spot Weld ■ ■ : Plug Weld	: Butt Weld

F29239B

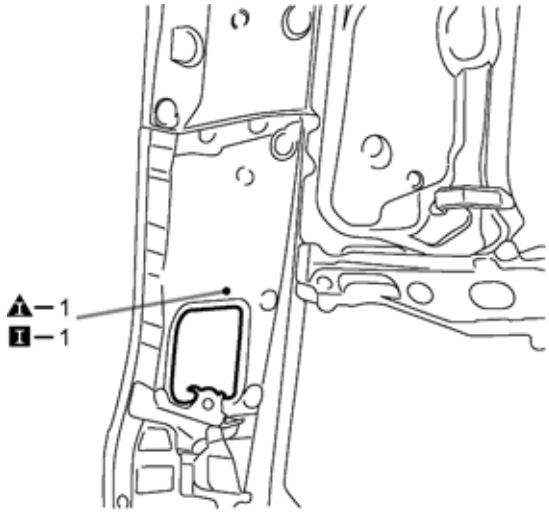

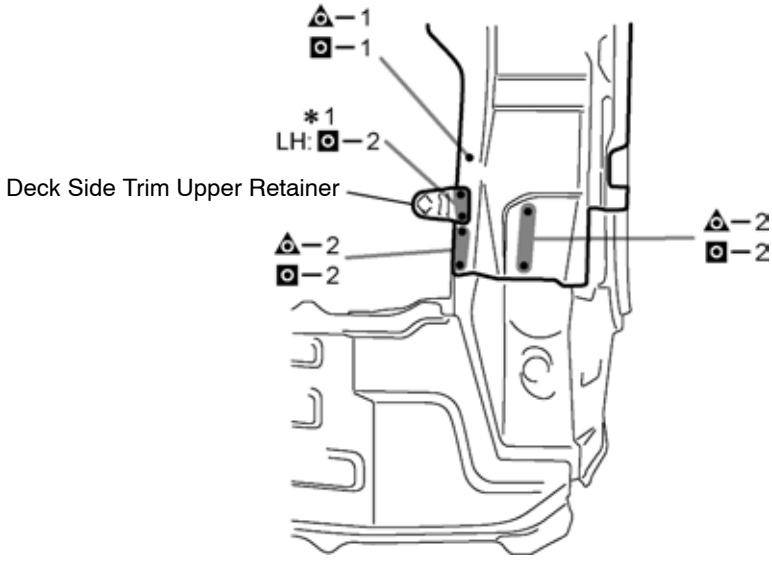

F29240

INSTALLATION POINT

1 *1 is only for installation.

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.