REAR FLOOR SIDE PANEL REAR EXTENSION (ASSY)



F29249A

With the quarter panel removed.


Symbol meaning


REMOVAL	: Remove Weld Points
INSTALLATION	: Spot Weld : Plug Weld

F29249B

REMOVAL·INSTALLATION

[LH]

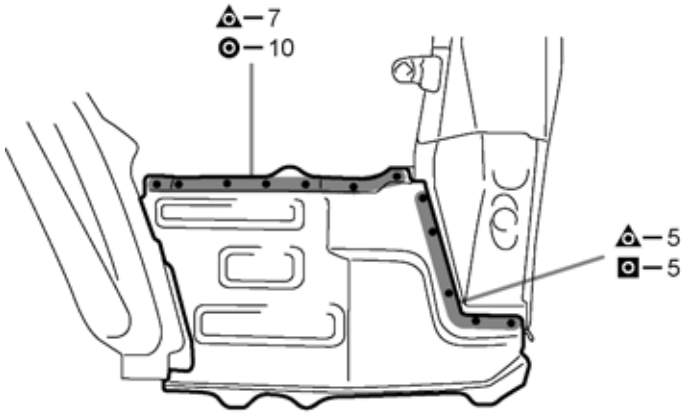

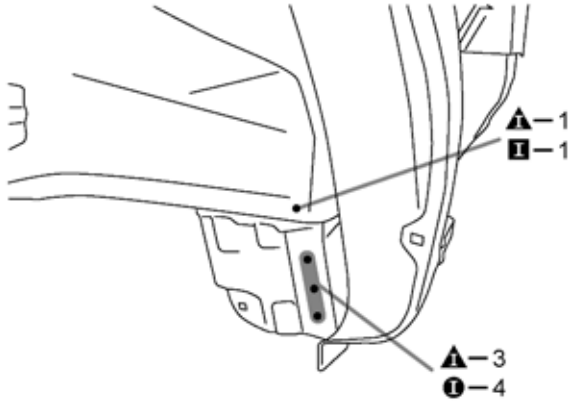

F29249

INSTALLATION POINT


1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: Spot Weld : Plug Weld

F29249B

[RH]

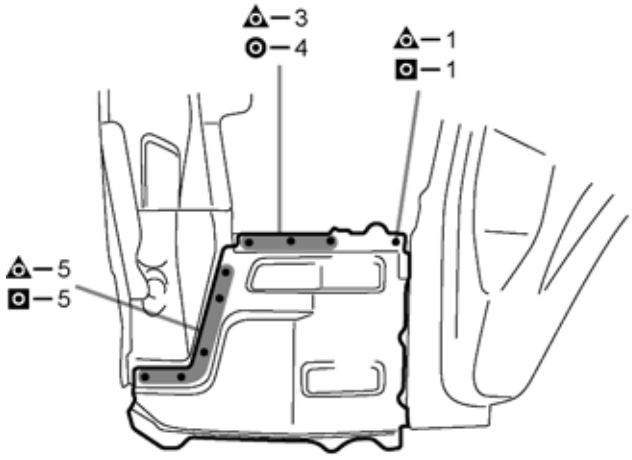

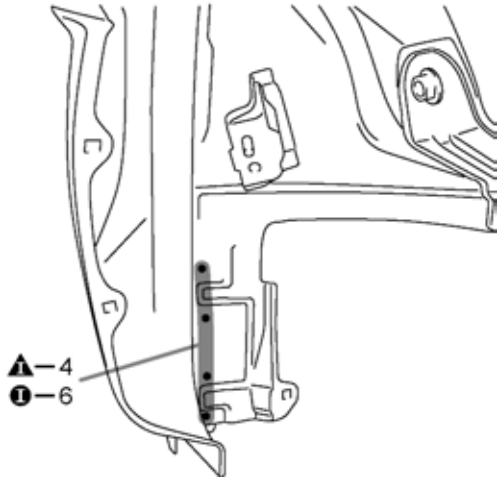

F29250

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.