
5. REPAIR PROCEDURE OF HEADLIGHT RETAINER

(a) INSTALL UPPER HEADLIGHT PROTECTOR RETAINER (USA, Canada)


HINT:

- *If the installation area of the headlight is damaged, use the supply retainer for low-cost repair.*
- *Ensure that the headlight is not damaged.*

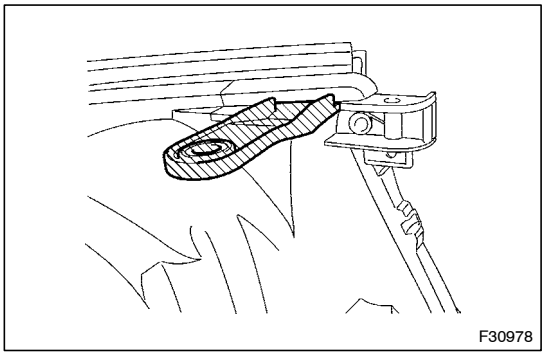

(1) Cut off the part shaded in the illustration and smooth with sandpaper.

NOTICE:
After cutting off the part, place the headlight protector retainer against the bosses, and gradually file away the old bracket if it interferes with the installation of the supply retainer.

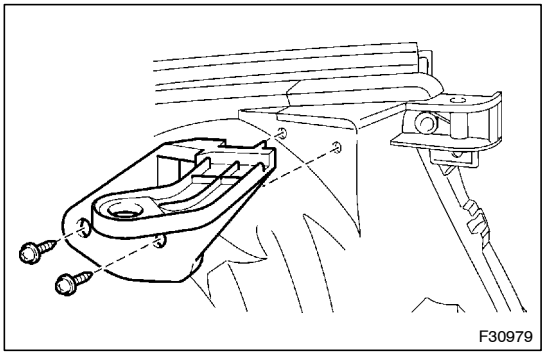


(2) Install the headlight protector retainer with the screw.

(b) INSTALL LOWER HEADLIGHT PROTECTOR RETAINER (USA, Canada)


HINT:

- *If the installation area of the headlight is damaged, use the supply retainer for low-cost repair.*
- *Ensure that the headlight is not damaged.*

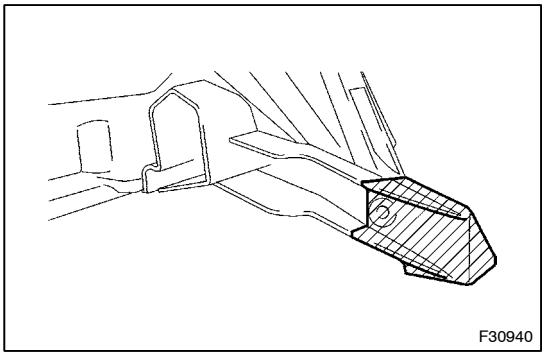

(1) Cut off the part shaded in the illustration and smooth with sandpaper.

NOTICE:
After cutting off the part, place the headlight protector retainer against the bosses, and gradually file away the old bracket if it interferes with the installation of the supply retainer.

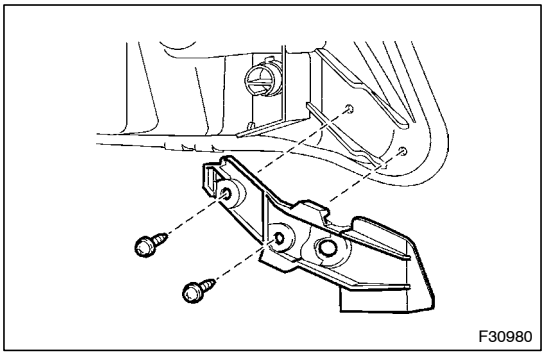


(2) Install the headlight protector retainer with the screw.

(c) INSTALL UPPER HEADLIGHT PROTECTOR RETAINER (Except USA, Canada)


HINT:

- *If the installation area of the headlight is damaged, use the supply retainer for low-cost repair.*
- *Ensure that the headlight is not damaged.*

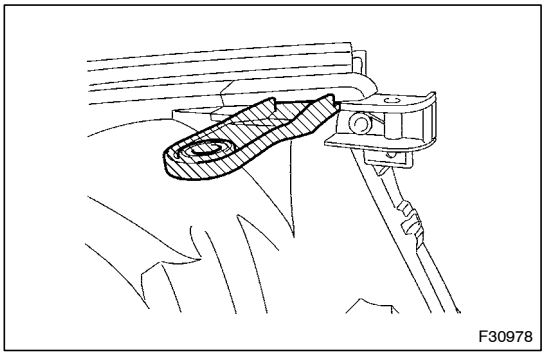

(1) Cut off the part shaded in the illustration and smooth with sandpaper.

NOTICE:
After cutting off the part, place the headlight protector retainer against the bosses, and gradually file away the old bracket if it interferes with the installation of the supply retainer.

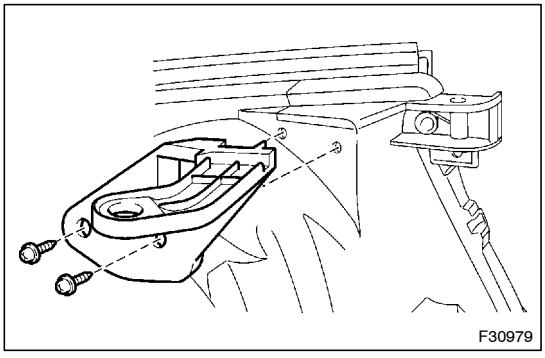


(2) Install the headlight protector retainer with the screw.

(d) INSTALL LOWER HEADLIGHT PROTECTOR RETAINER (Except USA, Canada)


HINT:

- *If the installation area of the headlight is damaged, use the supply retainer for low-cost repair.*
- *Ensure that the headlight is not damaged.*

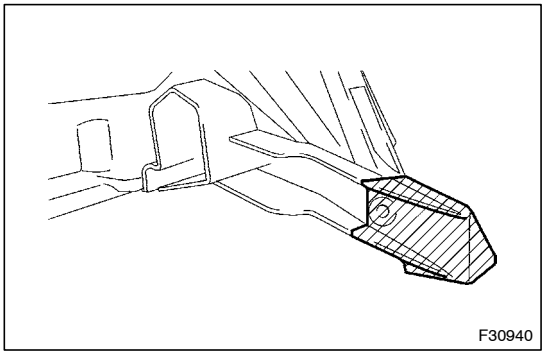

(1) Cut off the part shaded in the illustration and smooth with sandpaper.

NOTICE:
After cutting off the part, place the headlight protector retainer against the bosses, and gradually file away the old bracket if it interferes with the installation of the supply retainer.

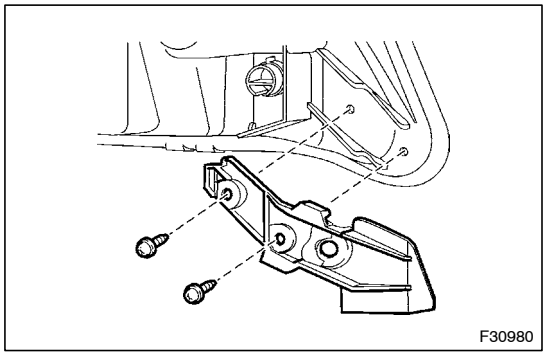

(2) Install the headlight protector retainer with the screw.