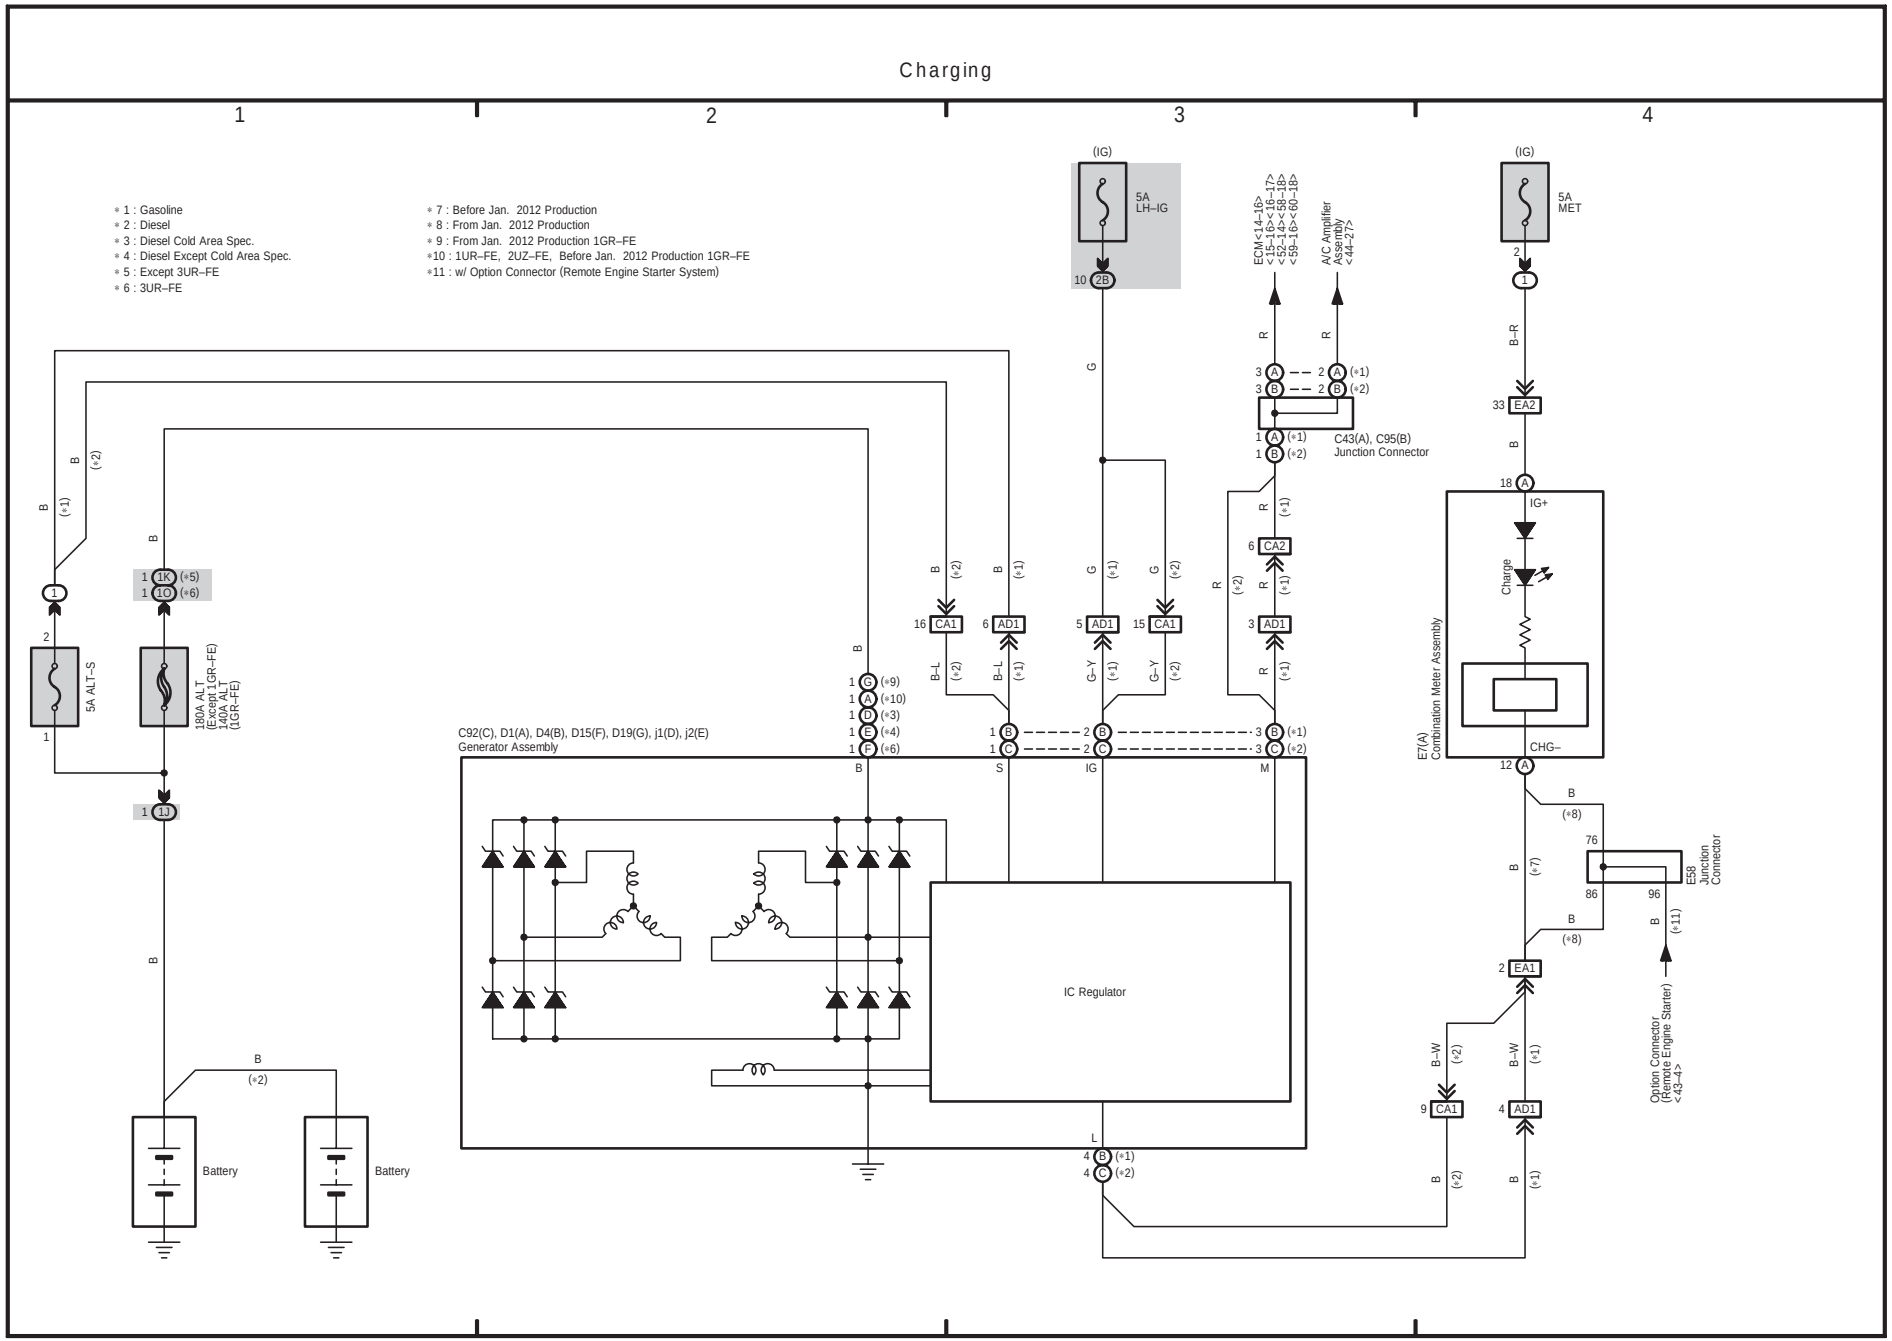

Charging
1
2
3
4
∗1 : Gasoline
∗2 : Diesel
∗3 : Diesel Cold Area Spec.
∗4 : Diesel Except Cold Area Spec.
∗5 : Except 3UR–FE
∗6 : 3UR–FE
∗7 : Before Jan. 2012 Production
∗8 : From Jan. 2012 Production
∗9 : From Jan. 2012 Production 1GR–FE
∗10 : 1UR–FE, 2UZ–FE, Before Jan. 2012 Production 1GR–FE
∗11 : w/ Option Connector (Remote Engine Starter System)
(IG)
5A LH–IG
10 2B
ECM <14–16> <51–15–17> <52–14><59–18> <59–16><60–18>
A/C Amplifier Assembly <44–27>
C43(A), C95(B) Junction Connector
(IG)
5A MET
2
1
B–R
33 EA2
18 A
IG+
Charge
CHG–
12 A
E7(A) Combination Meter Assembly
1 1K (∗5)
1 1O (∗6)
5A ALT–S
180A ALT (Except 1GR–FE) 140A ALT (1GR–FE)
1 1J
C92(C), D1(A), D4(B), D15(F), D19(G), j1(D), j2(E) Generator Assembly
B
S
IG
M
L
IC Regulator
16 CA1
6 AD1
5 AD1
15 CA1
6 CA2
3 AD1
9 CA1
4 AD1
2 EA1
B–L
G–Y
B–W
R
G
B
(∗1)
(∗2)
(∗6)
(∗7)
(∗8)
(∗9)
(∗10)
(∗11)
E58 Junction Connector
76
86
96
Option Connector (Remote Engine Starter) <43–4>
Battery
Battery