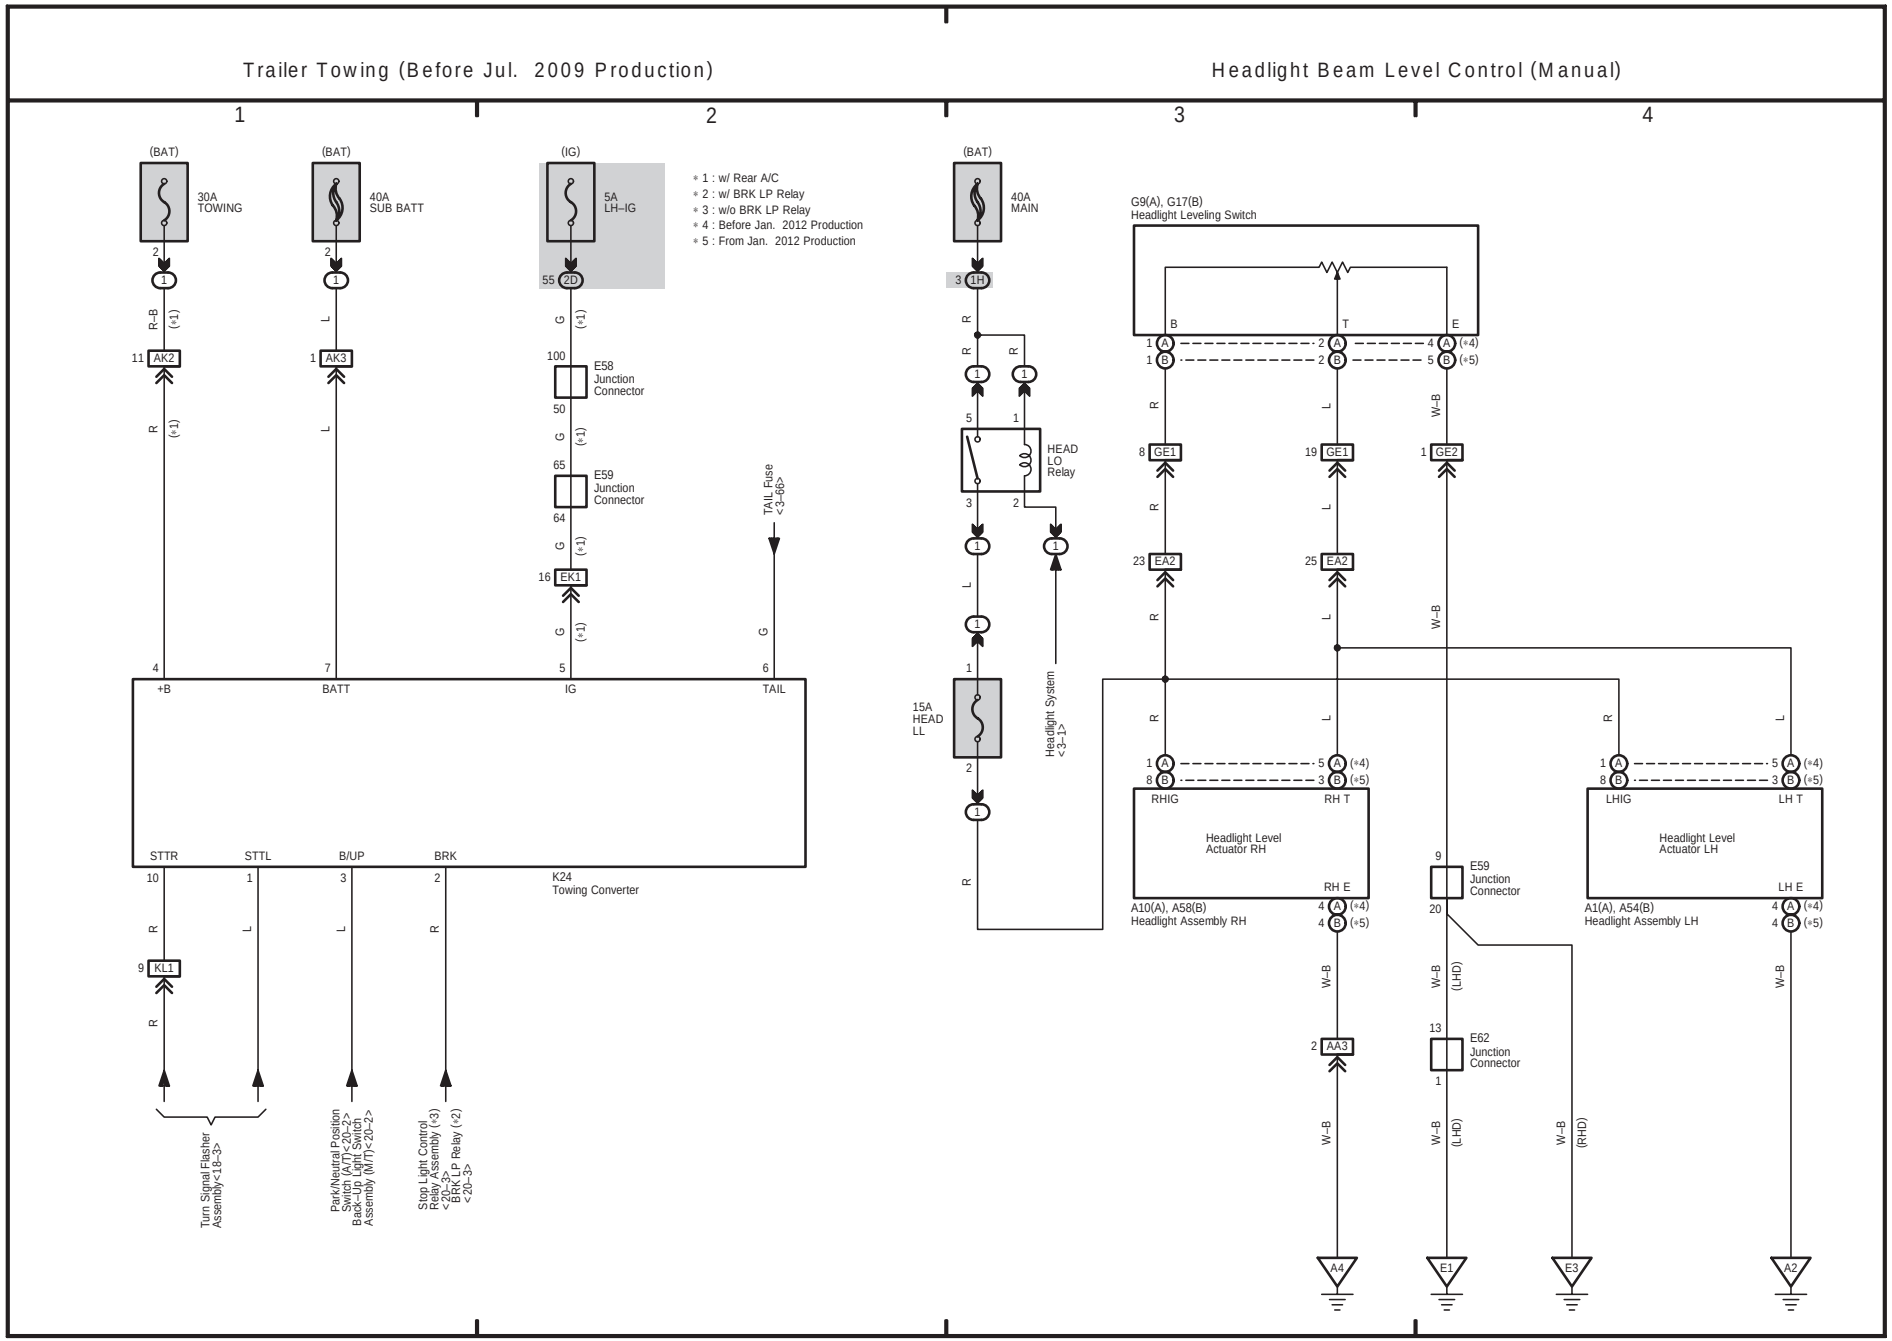

Trailer Towing (Before Jul. 2009 Production)
Headlight Beam Level Control (Manual)
1
2
3
4
(BAT)
30A
TOWING
40A
SUB BATT
(IG)
5A
LH–IG
* 1 : w/ Rear A/C
* 2 : w/ BRK LP Relay
* 3 : w/o BRK LP Relay
* 4 : Before Jan. 2012 Production
* 5 : From Jan. 2012 Production
R–B
L
G
AK2
AK3
EK1
E58
Junction
Connector
E59
Junction
Connector
TAIL Fuse
<3–6B>
+B
BATT
IG
TAIL
STTR
STTL
B/UP
BRK
KL1
K24
Towing Converter
Turn Signal Flasher
Assembly<18–3>
Park/Neutral Position
Switch (A/T)<20–2>
Back–Up Light Switch
Assembly (M/T)<20–2>
Stop Light Control
Relay Assembly (*3)
<20–2>
BRK–LP Relay (*2)
<20–3>
40A
MAIN
1H
HEAD
LO
Relay
15A
HEAD
LL
Headlight System
<3–1>
G9(A), G17(B)
Headlight Leveling Switch
B
T
E
GE1
GE2
EA2
W–B
RHIG
RH T
RH E
Headlight Level
Actuator RH
A10(A), A58(B)
Headlight Assembly RH
LHIG
LH T
LH E
Headlight Level
Actuator LH
A1(A), A54(B)
Headlight Assembly LH
E59
Junction
Connector
E62
Junction
Connector
AA3
(LHD)
(RHD)
A4
E1
E3
A2