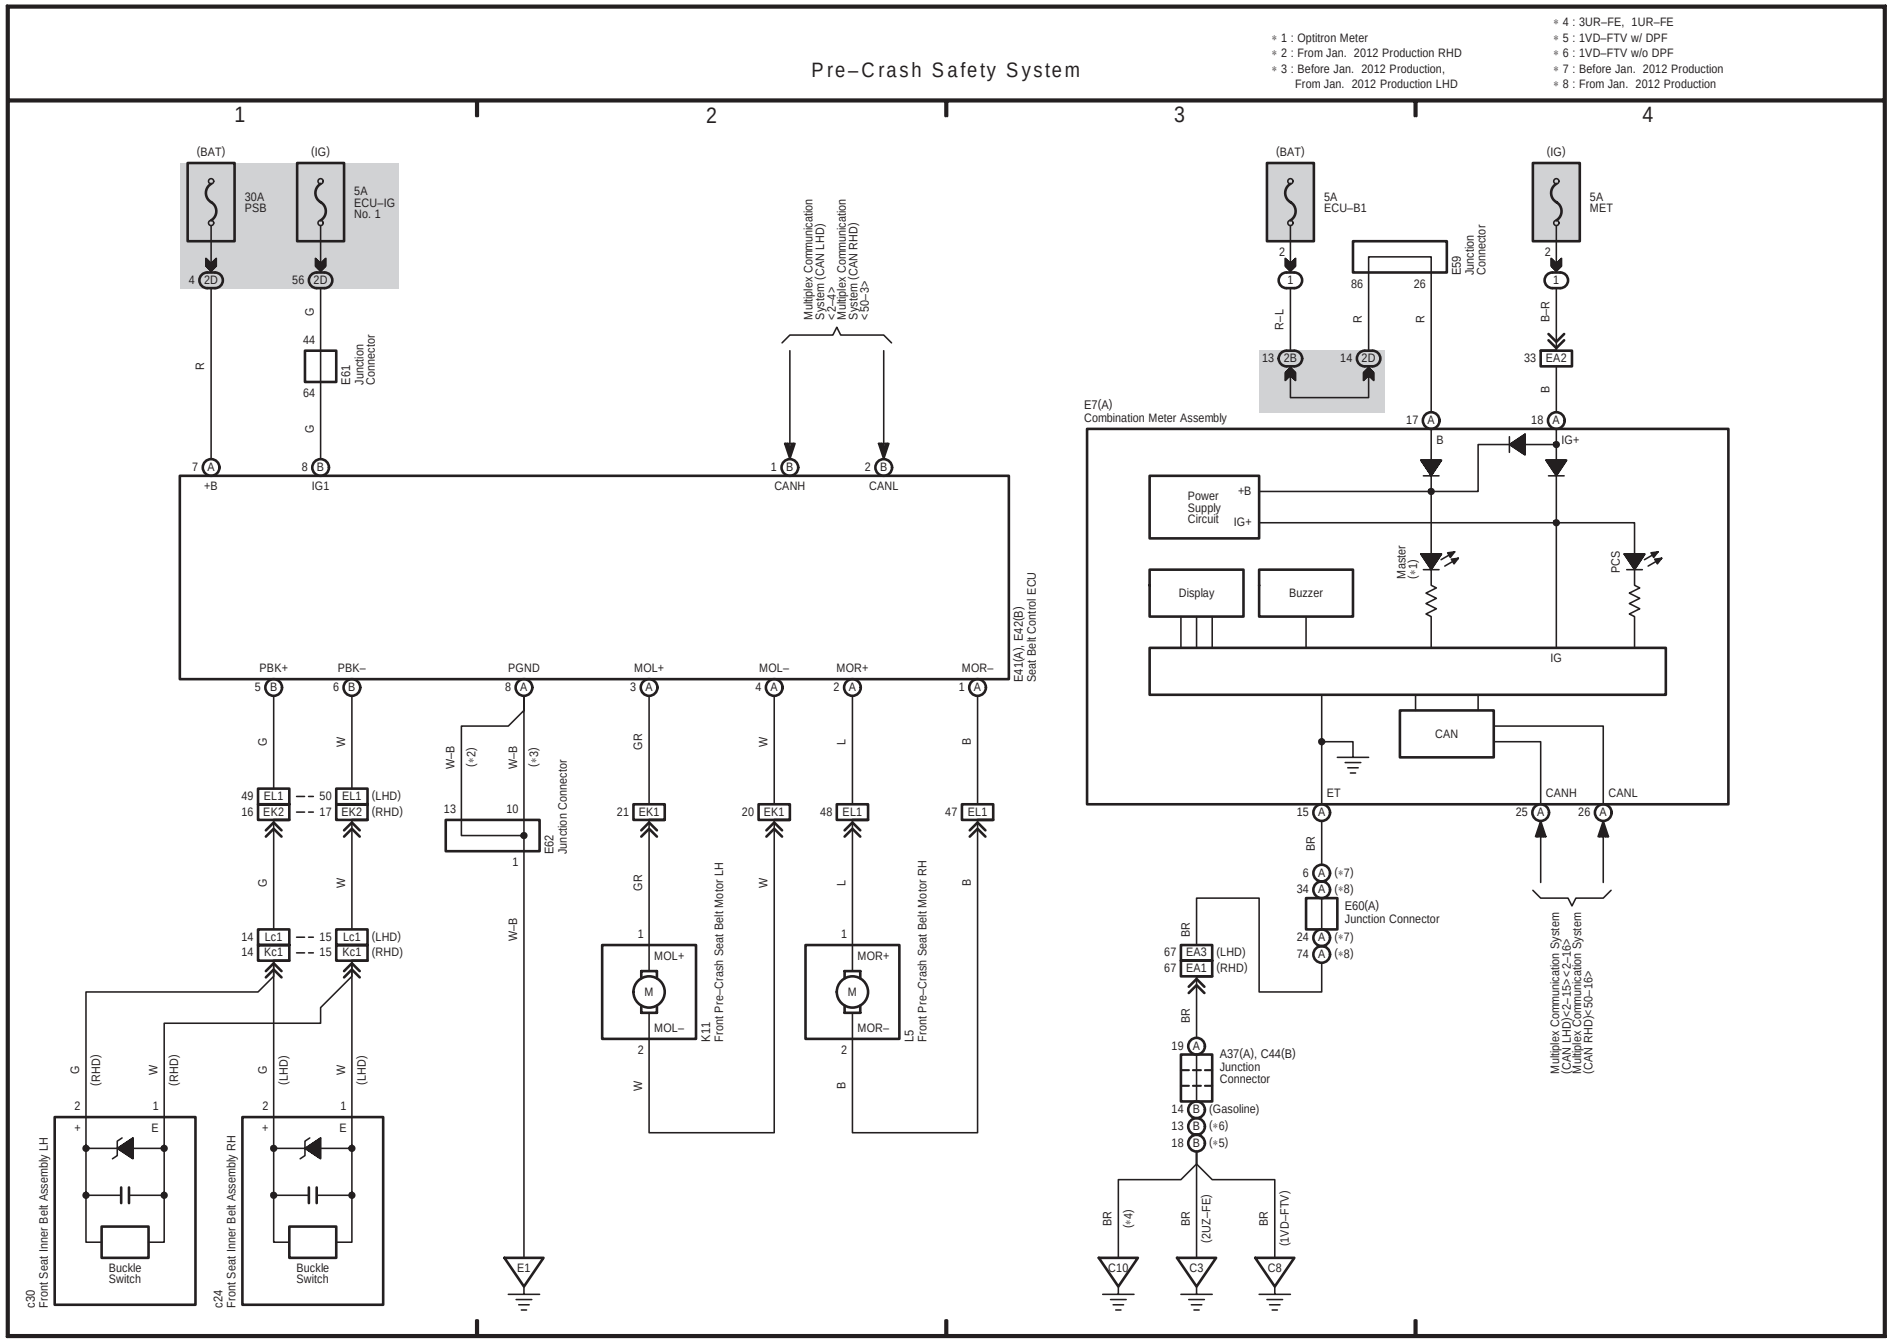

Pre–Crash Safety System
* 1 : Optitron Meter
* 2 : From Jan. 2012 Production RHD
* 3 : Before Jan. 2012 Production, From Jan. 2012 Production LHD
* 4 : 3UR–FE, 1UR–FE
* 5 : 1VD–FTV w/ DPF
* 6 : 1VD–FTV w/o DPF
* 7 : Before Jan. 2012 Production
* 8 : From Jan. 2012 Production
1
2
3
4
(BAT)
(IG)
30A PSB
5A ECU–IG No. 1
5A ECU–B1
5A MET
E61 Junction Connector
E59 Junction Connector
Multiplex Communication System (CAN LHD) <2–4>
Multiplex Communication System (CAN RHD) <5D–3>
E7(A) Combination Meter Assembly
Power Supply Circuit
+B
IG+
Display
Buzzer
Master (*1)
PCS
IG
CAN
ET
CANH
CANL
+B
IG1
E41(A), E42(B) Seat Belt Control ECU
PBK+
PBK–
PGND
MOL+
MOL–
MOR+
MOR–
E62 Junction Connector
K11 Front Pre–Crash Seat Belt Motor LH
L5 Front Pre–Crash Seat Belt Motor RH
E60(A) Junction Connector
A37(A), C44(B) Junction Connector
(Gasoline)
(*4)
(2UZ–FE)
(1VD–FTV)
C10
C3
C8
E1
c30 Front Seat Inner Belt Assembly LH
c24 Front Seat Inner Belt Assembly RH
Buckle Switch
Multiplex Communication System (CAN LHD)<2–15><2–8> (Multiplex Communication System (CAN RHD)<5D–15>
(LHD)
(RHD)