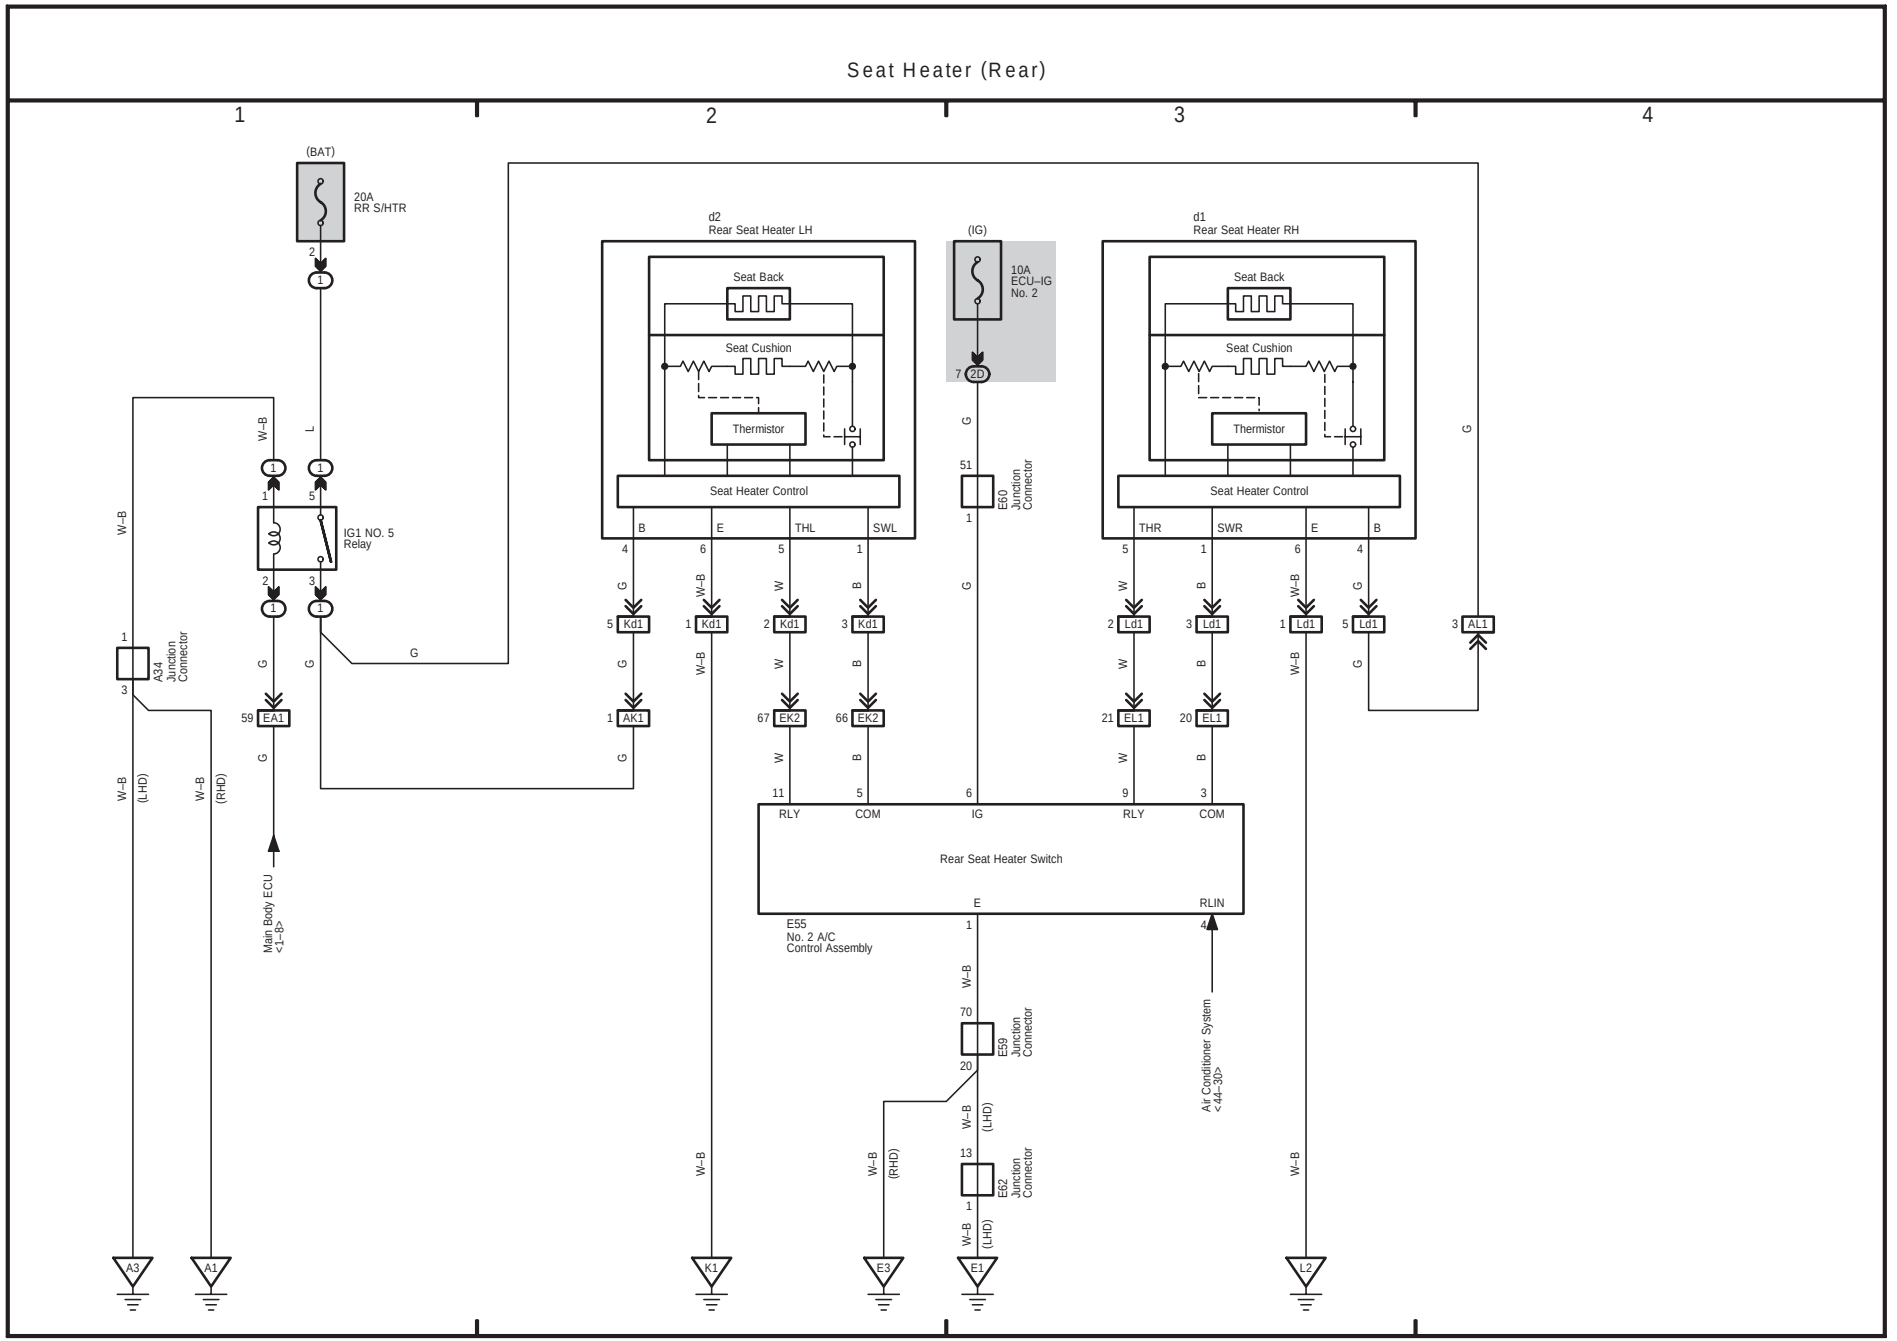

Seat Heater (Rear)
1
2
3
4
(BAT)
20A
RR S/HTR
IG1 NO. 5
Relay
A34
Junction
Connector
Main Body ECU
<1–8>
d2
Rear Seat Heater LH
Seat Back
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
d1
Rear Seat Heater RH
THR
SWR
(IG)
10A
ECU–IG
No. 2
E60
Junction
Connector
Rear Seat Heater Switch
RLY
COM
IG
E55
No. 2 A/C
Control Assembly
E59
Junction
Connector
E62
Junction
Connector
Air Conditioner System
<44–30>
A3
A1
K1
E3
E1
L2
W–B
(LHD)
W–B
(RHD)