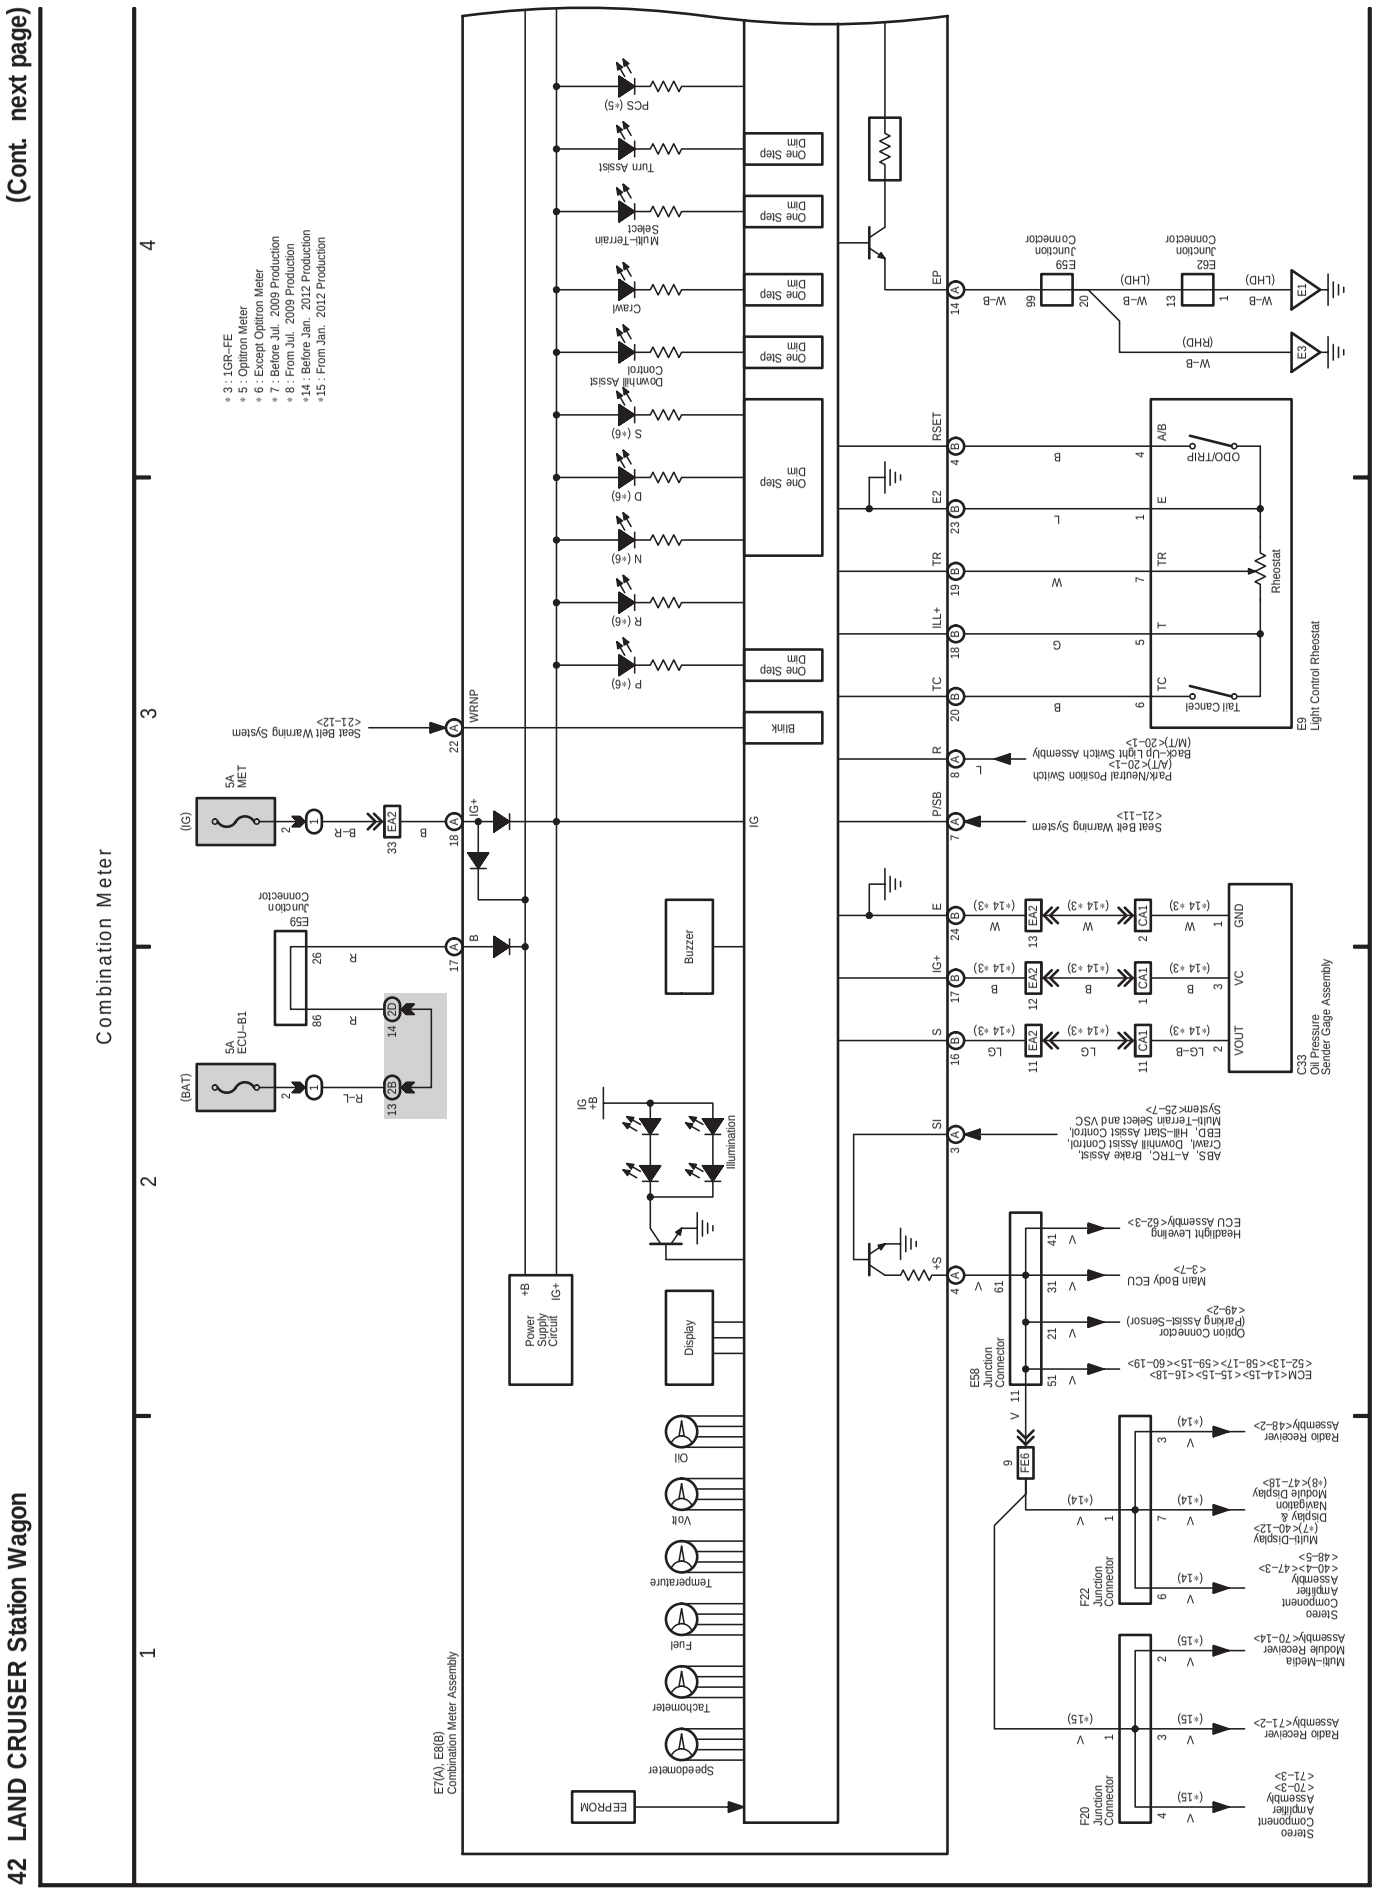
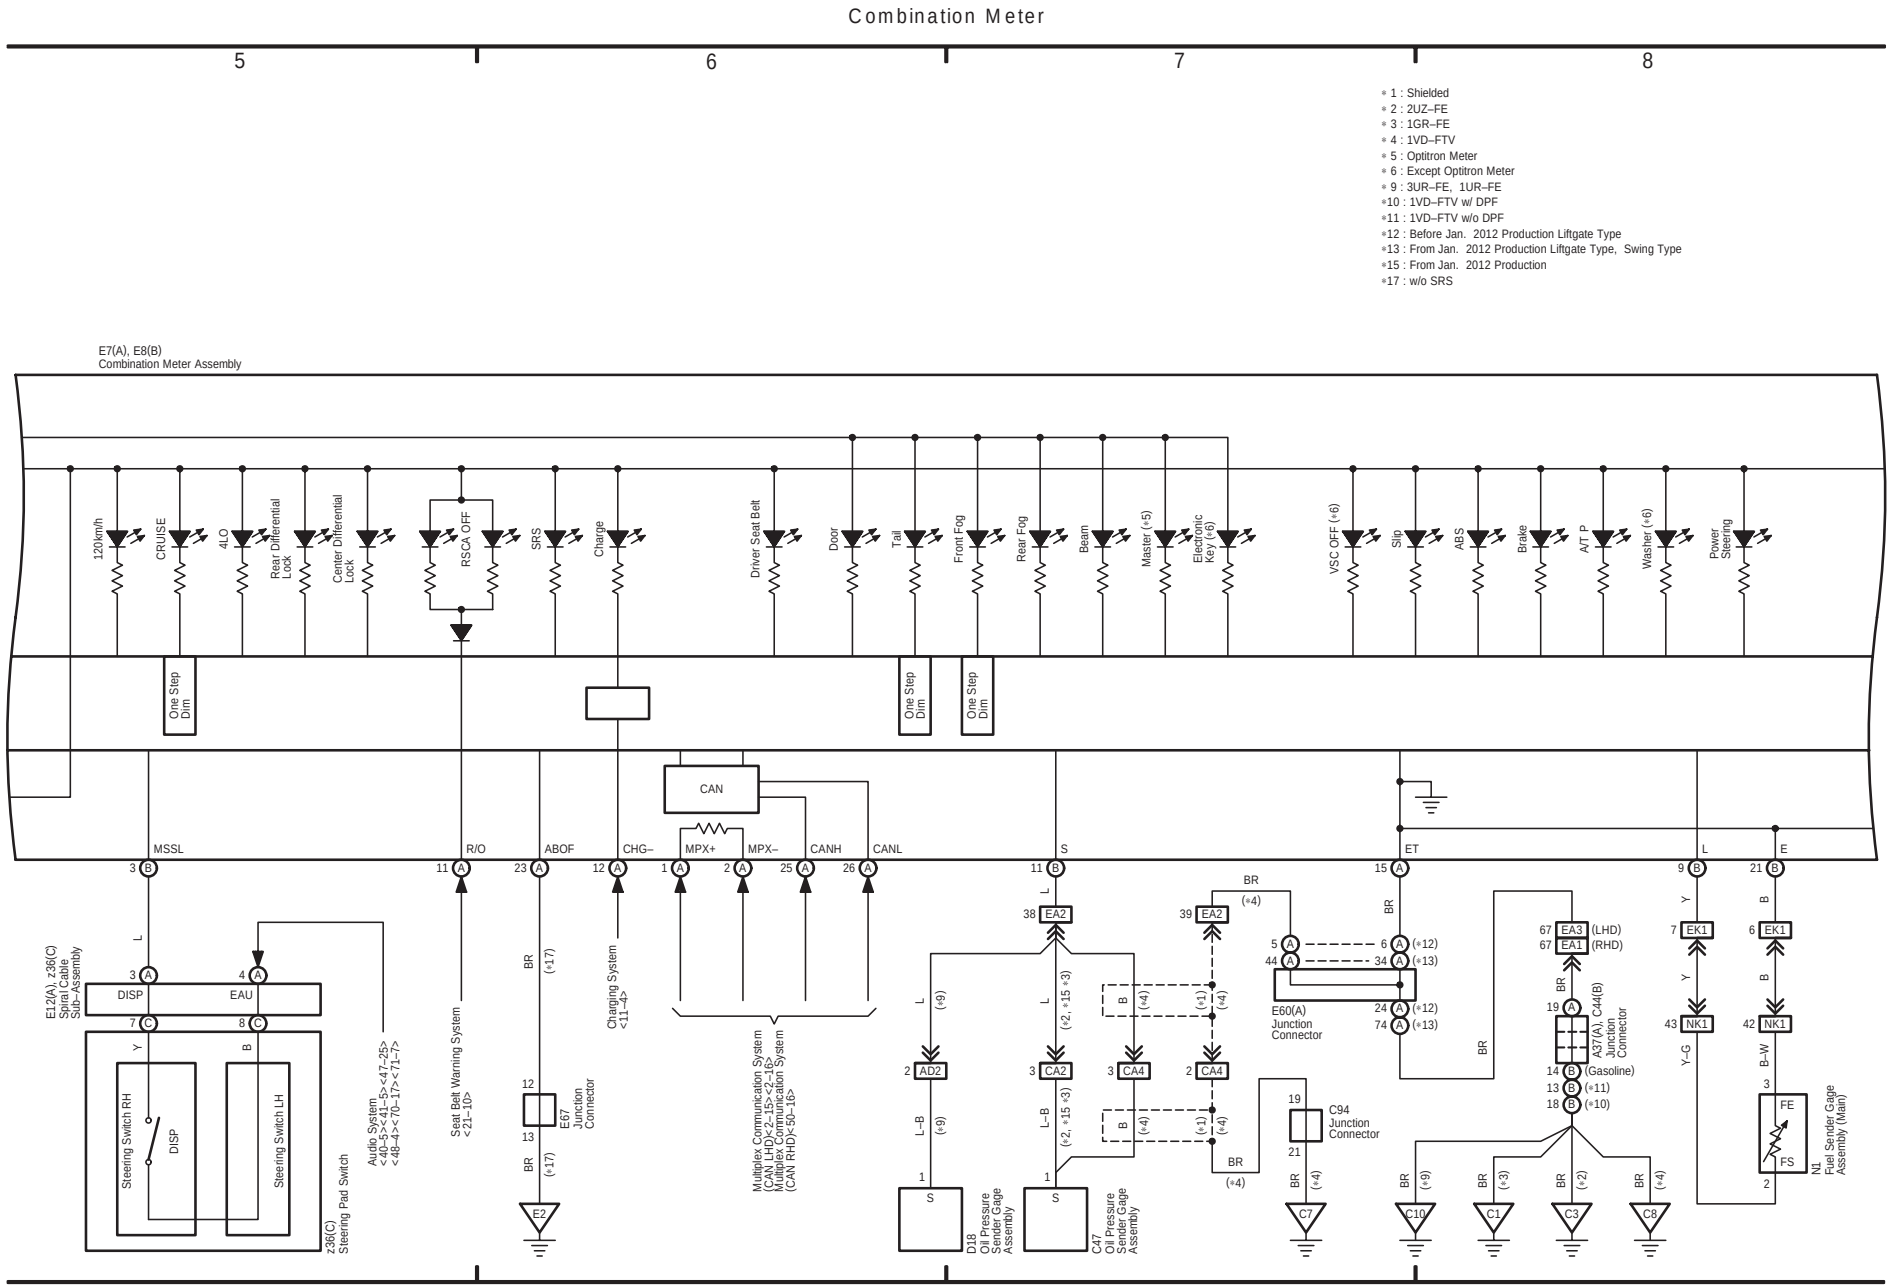

(Cont. next page)
42 LAND CRUISER Station Wagon
Combination Meter
E7(A), E8(B)
Combination Meter Assembly
Speedometer
Tachometer
Fuel
Temperature
Volt
Oil
EEPROM
Display
Power Supply Circuit
+B
IG+
Buzzer
Illumination
Blink
One Step Dim
PCS (*5)
Turn Assist
Multi-Terrain Select
Crawl
Downhill Assist Control
S (*6)
D (*6)
N (*6)
R (*6)
P (*6)
WRNP
IG
Seat Belt Warning System <21-12>
5A MET
5A ECU-B1
(IG)
(BAT)
EA2
CA1
E59 Junction Connector
E62 Junction Connector
E1
E3
E9 Light Control Rheostat
Rheostat
ODO/TRIP
Tail Cancel
Park/Neutral Position Switch (A/T)<20-1>
Back-Up Light Switch Assembly (M/T)<20-1>
C33 Oil Pressure Sender Gage Assembly
GND
VC
VOUT
ABS, A-TRC, Brake Assist, Crawl, Downhill Assist Control, EPS, Hill-Start Assist Control, Multi-Terrain Select and VSC System<25-7>
Headlight Leveling ECU Assembly<62-3>
Main Body ECU <3-7>
Option Connector (Parking Assist-Sensor) <49-2>
ECM<14-15><15-15><16-18><52-13><58-17><59-15><60-19>
E58 Junction Connector
FE6
Radio Receiver Assembly<48-2>
Multi-Display (*7)<40-12>
Display & Navigation Module Display (*8)<47-18>
Stereo Component Amplifier Assembly <40-4><47-3><48-5>
F22 Junction Connector
Multi-Media Module Receiver Assembly<70-14>
Radio Receiver Assembly<71-2>
Stereo Component Amplifier Assembly <70-3><71-3>
F20 Junction Connector
*3 : 1GR-FE
*5 : Optitron Meter
*6 : Except Optitron Meter
*7 : Before Jul. 2009 Production
*8 : From Jul. 2009 Production
*14 : Before Jan. 2012 Production
*15 : From Jan. 2012 Production

(Cont. next page)



42 LAND CRUISER Station Wagon (Cont' d)

