


(Cont. next page)
Engine Control (1VD–FTV w/ DPF)
60 LAND CRUISER Station Wagon
7.5A EFI NO. 3
7.5A EFI NO. 2
15A AIF
80A GLOW2
80A GLOW1
25A EFI MAIN2
25A EFI MAIN
EDU 2 Relay
EDU 1 Relay
A/F Relay
GLOW 2 Relay
GLOW 1 Relay
EFI MAIN2 Relay
EFI Relay
C78 Glow Plug Assembly
C77 Glow Plug Assembly
A34 Junction Connector
(BAT)
(LHD)
(RHD)


(Cont. next page)

Engine Control (1VD–FTV w/ DPF)

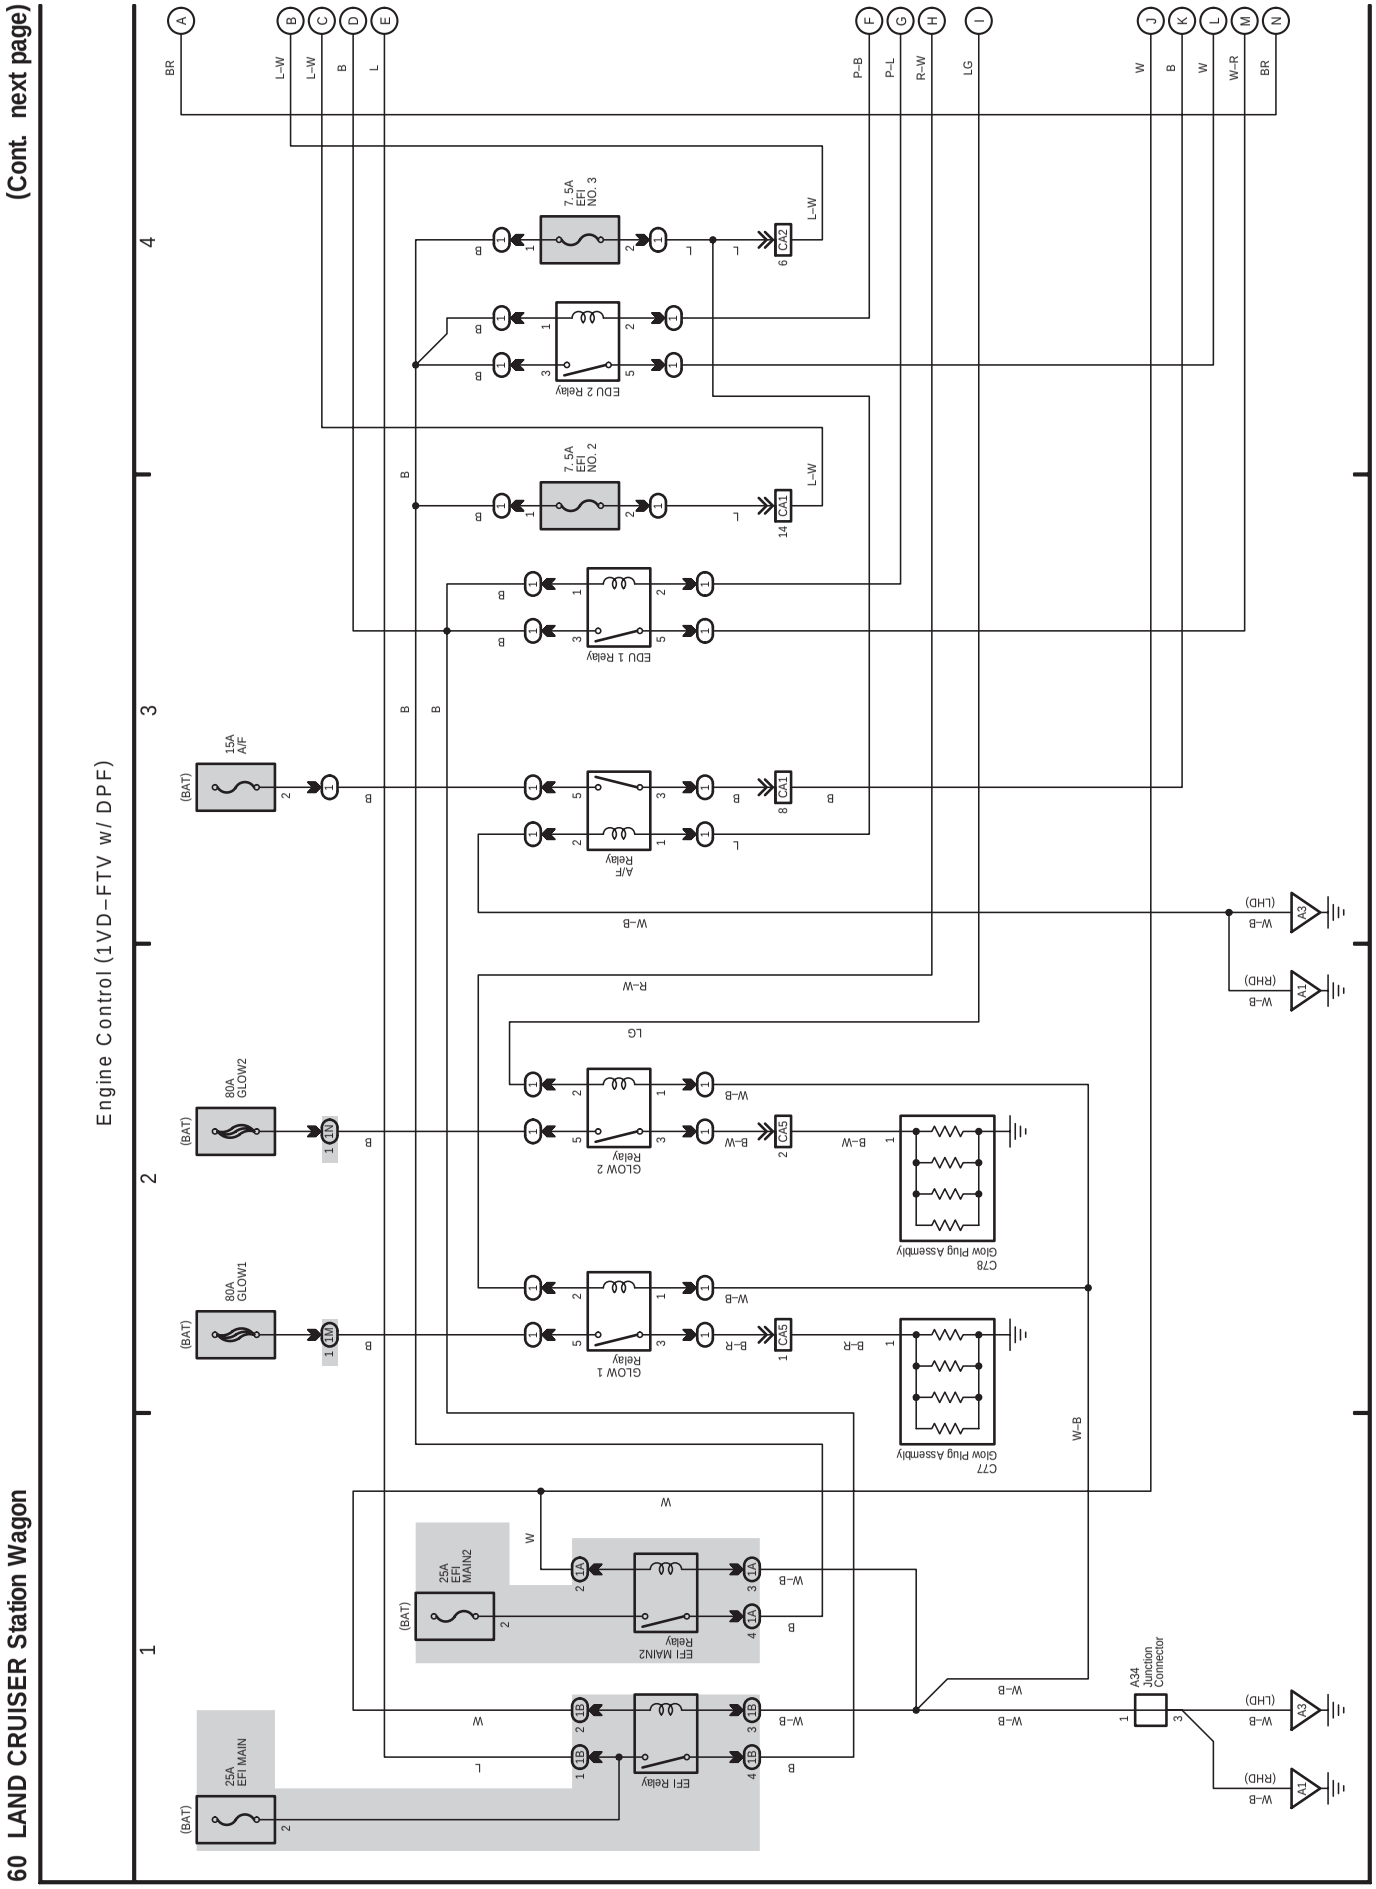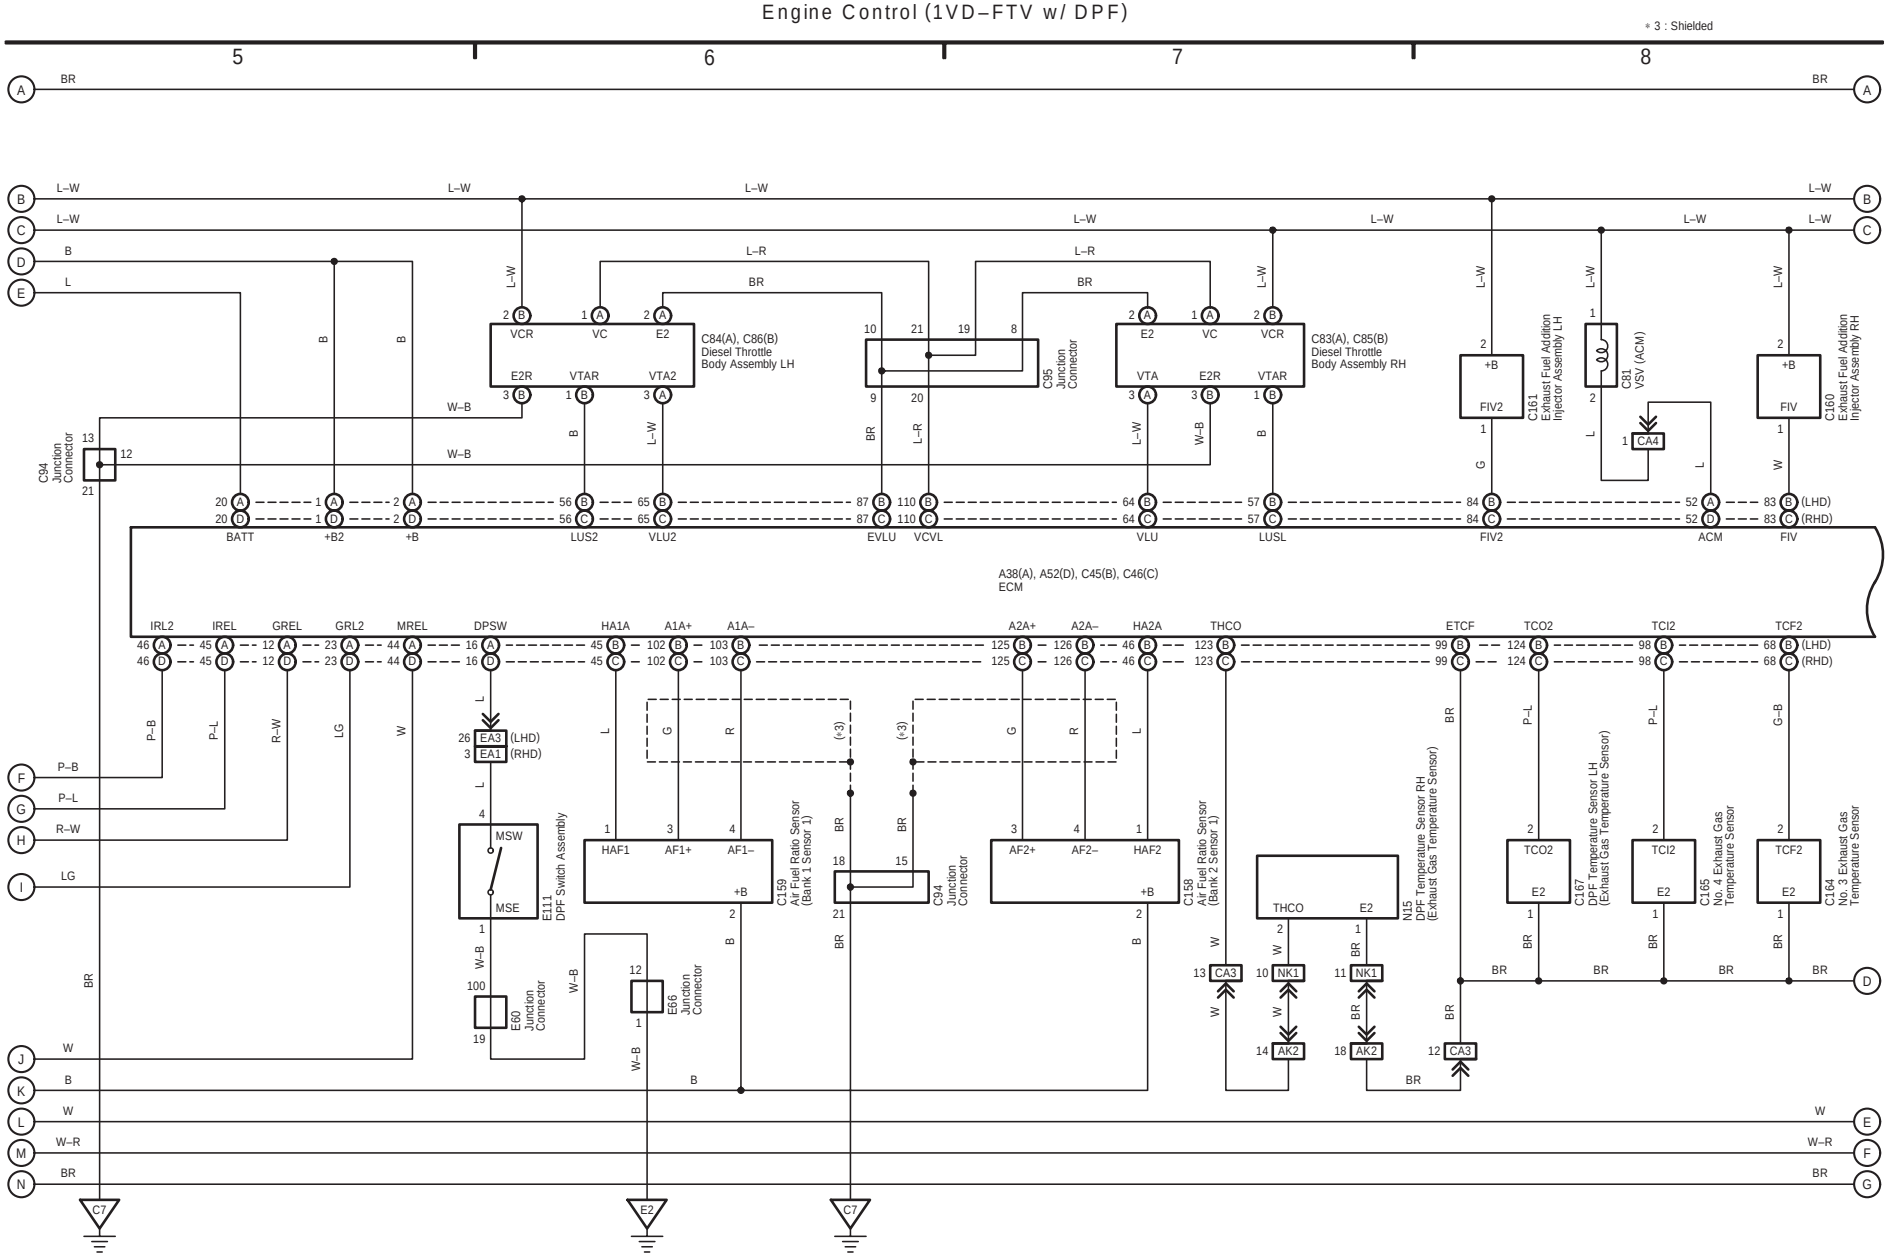


(Cont. next page)


Engine Control (1VD–FTV w/ DPF)

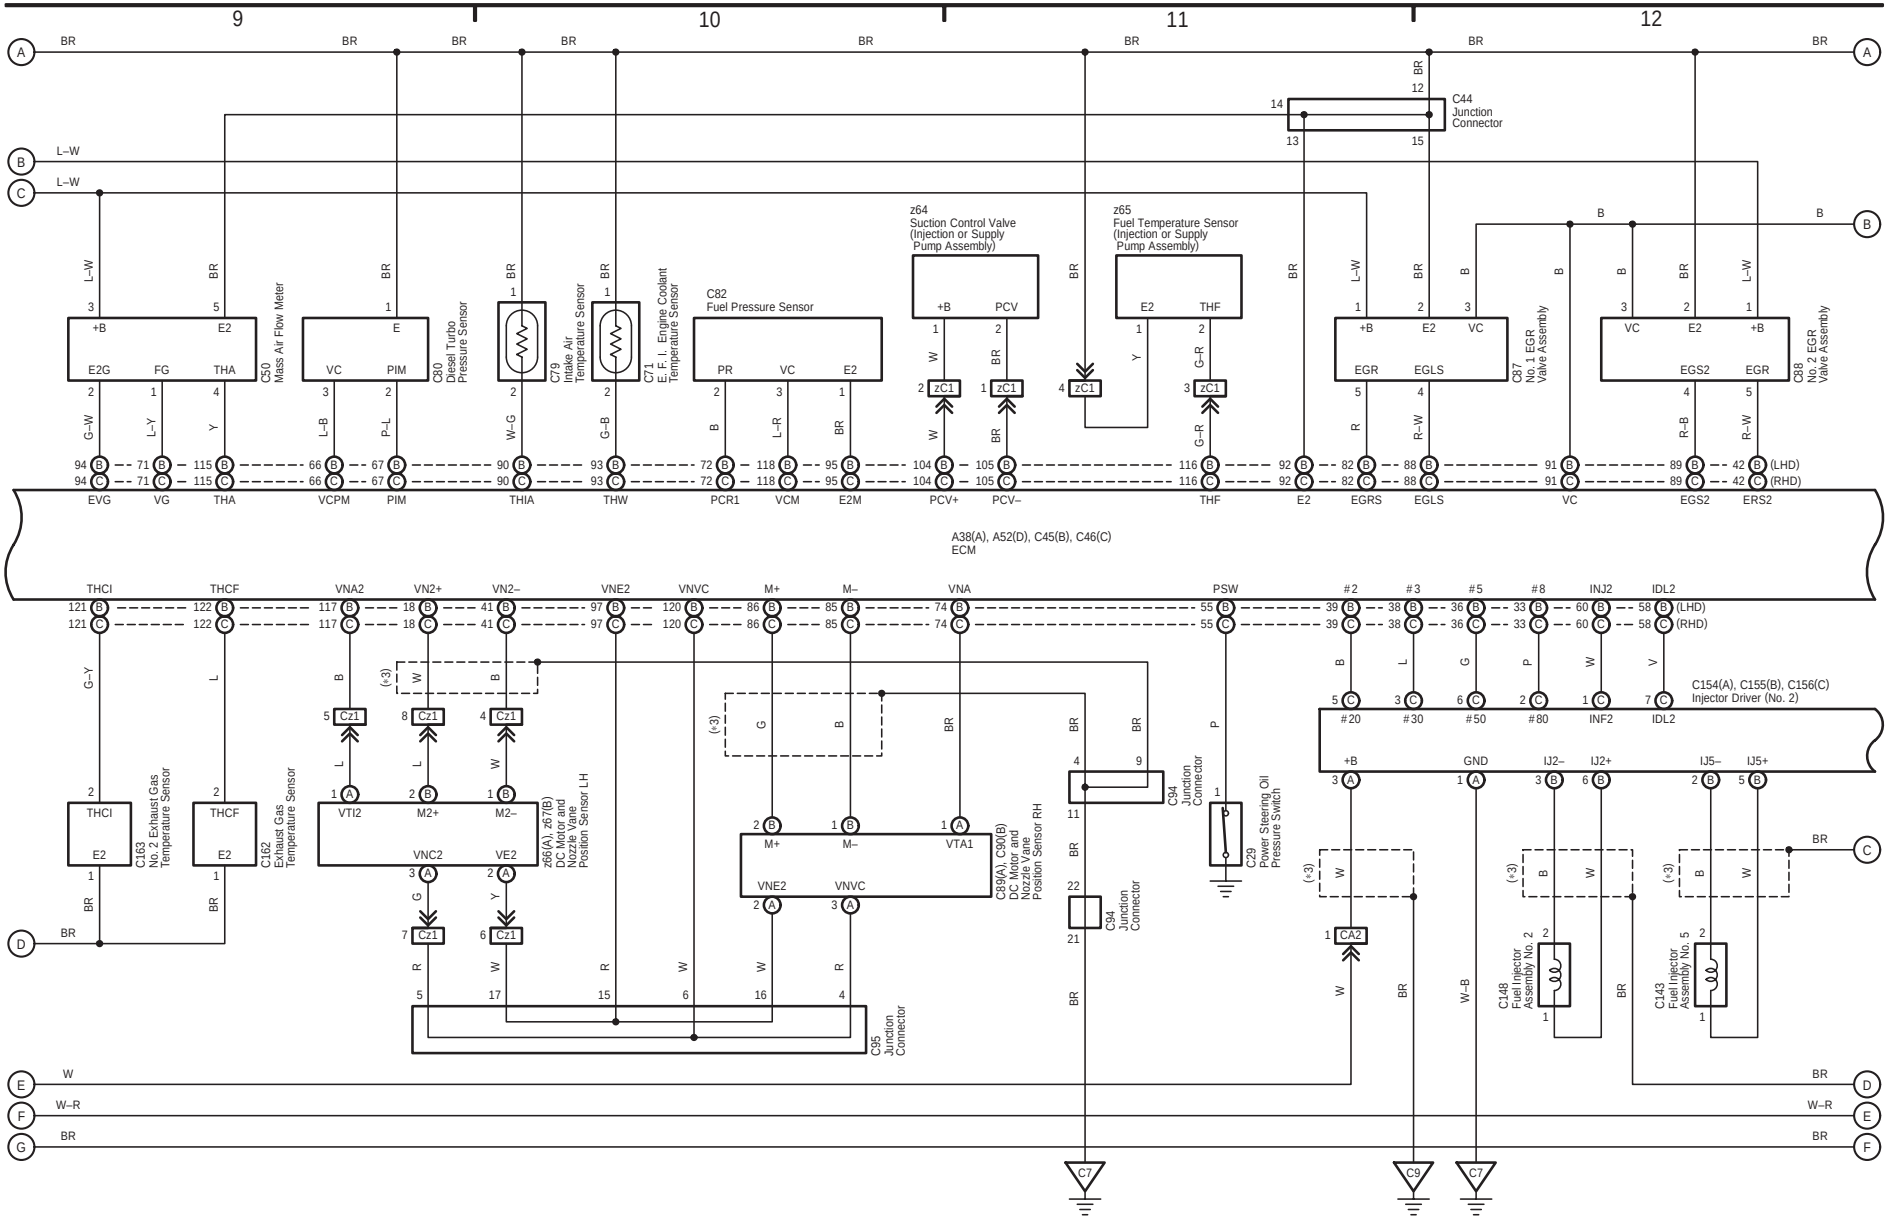

(Cont. next page)

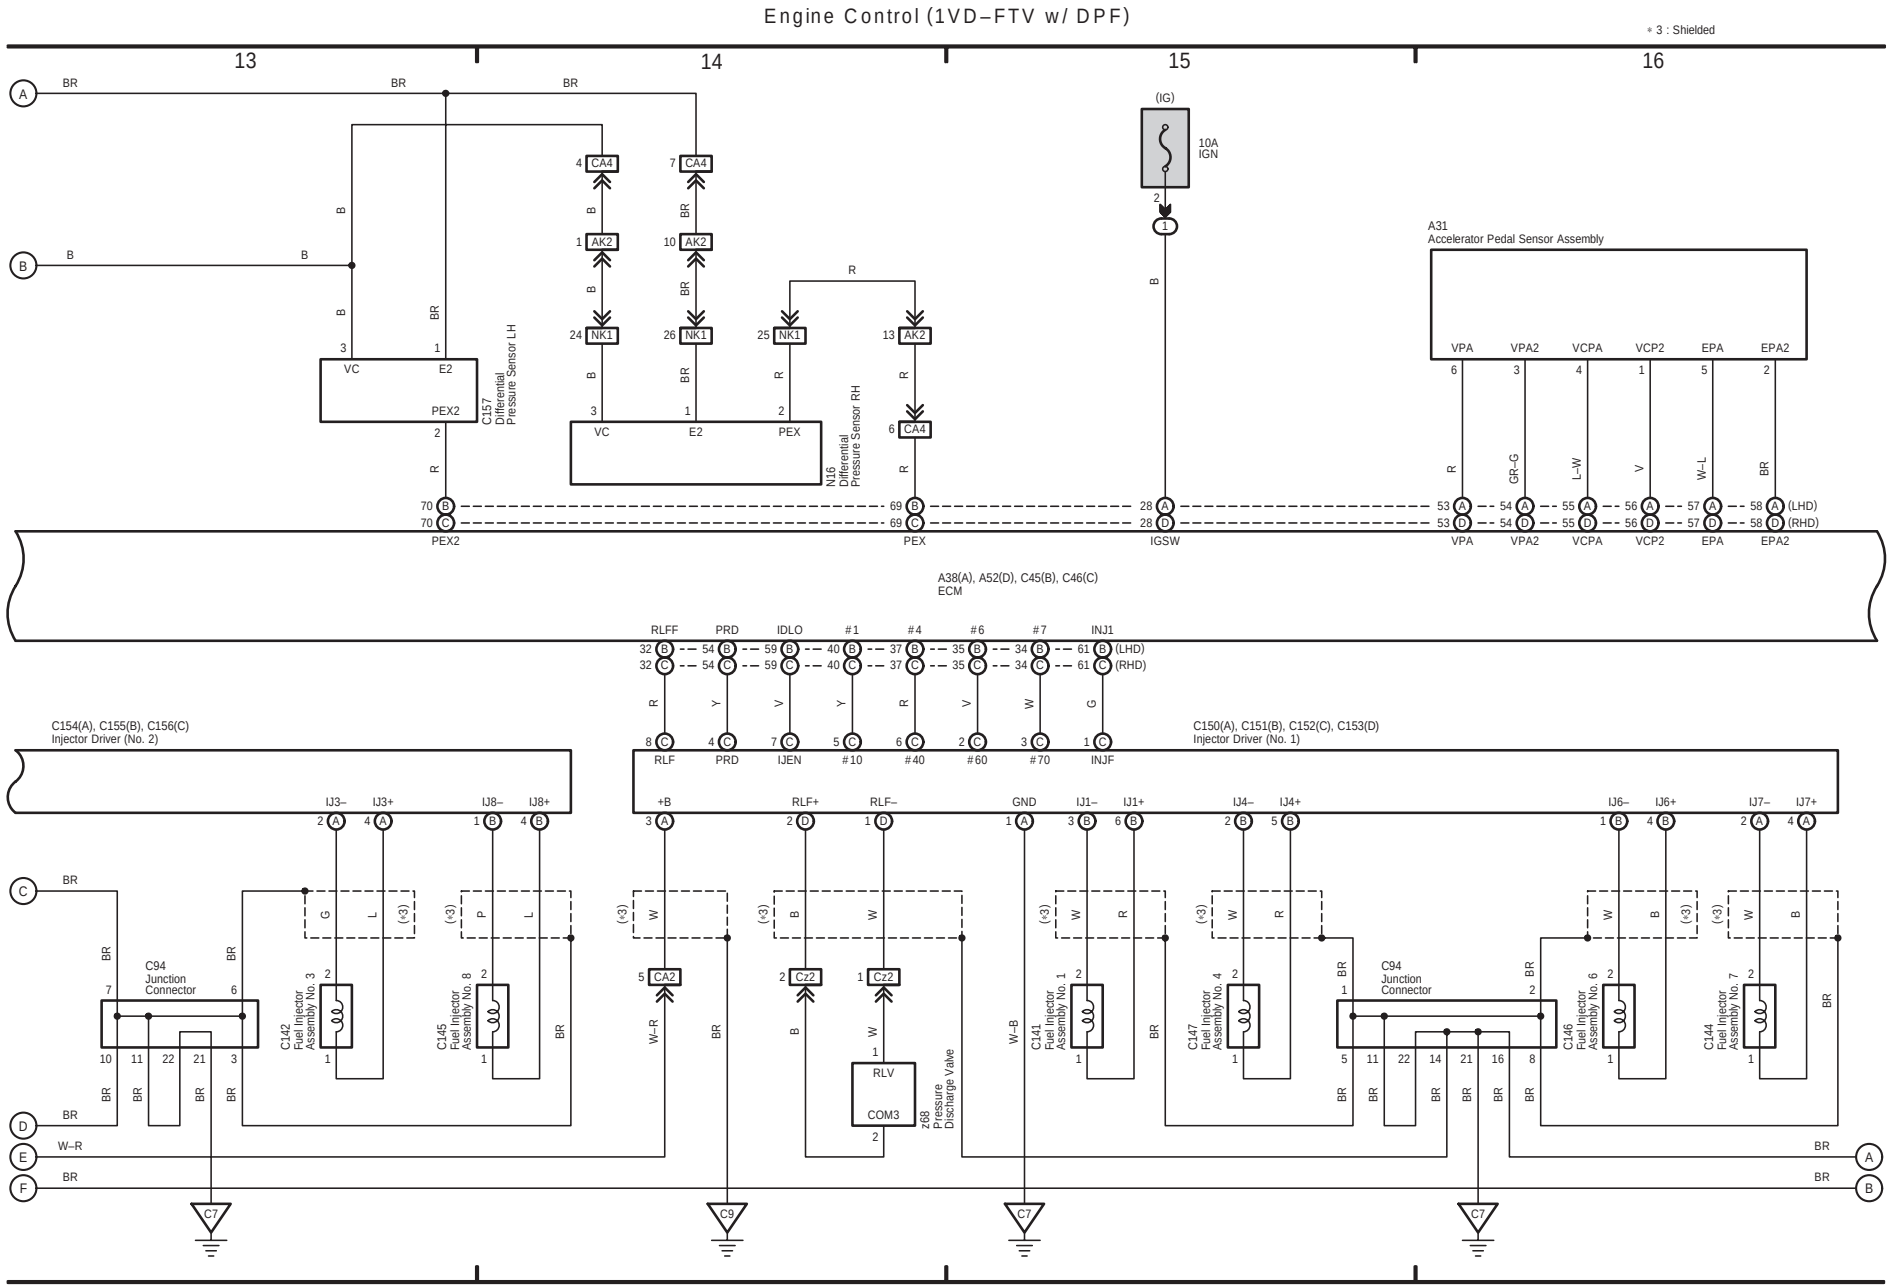


(Cont. next page)

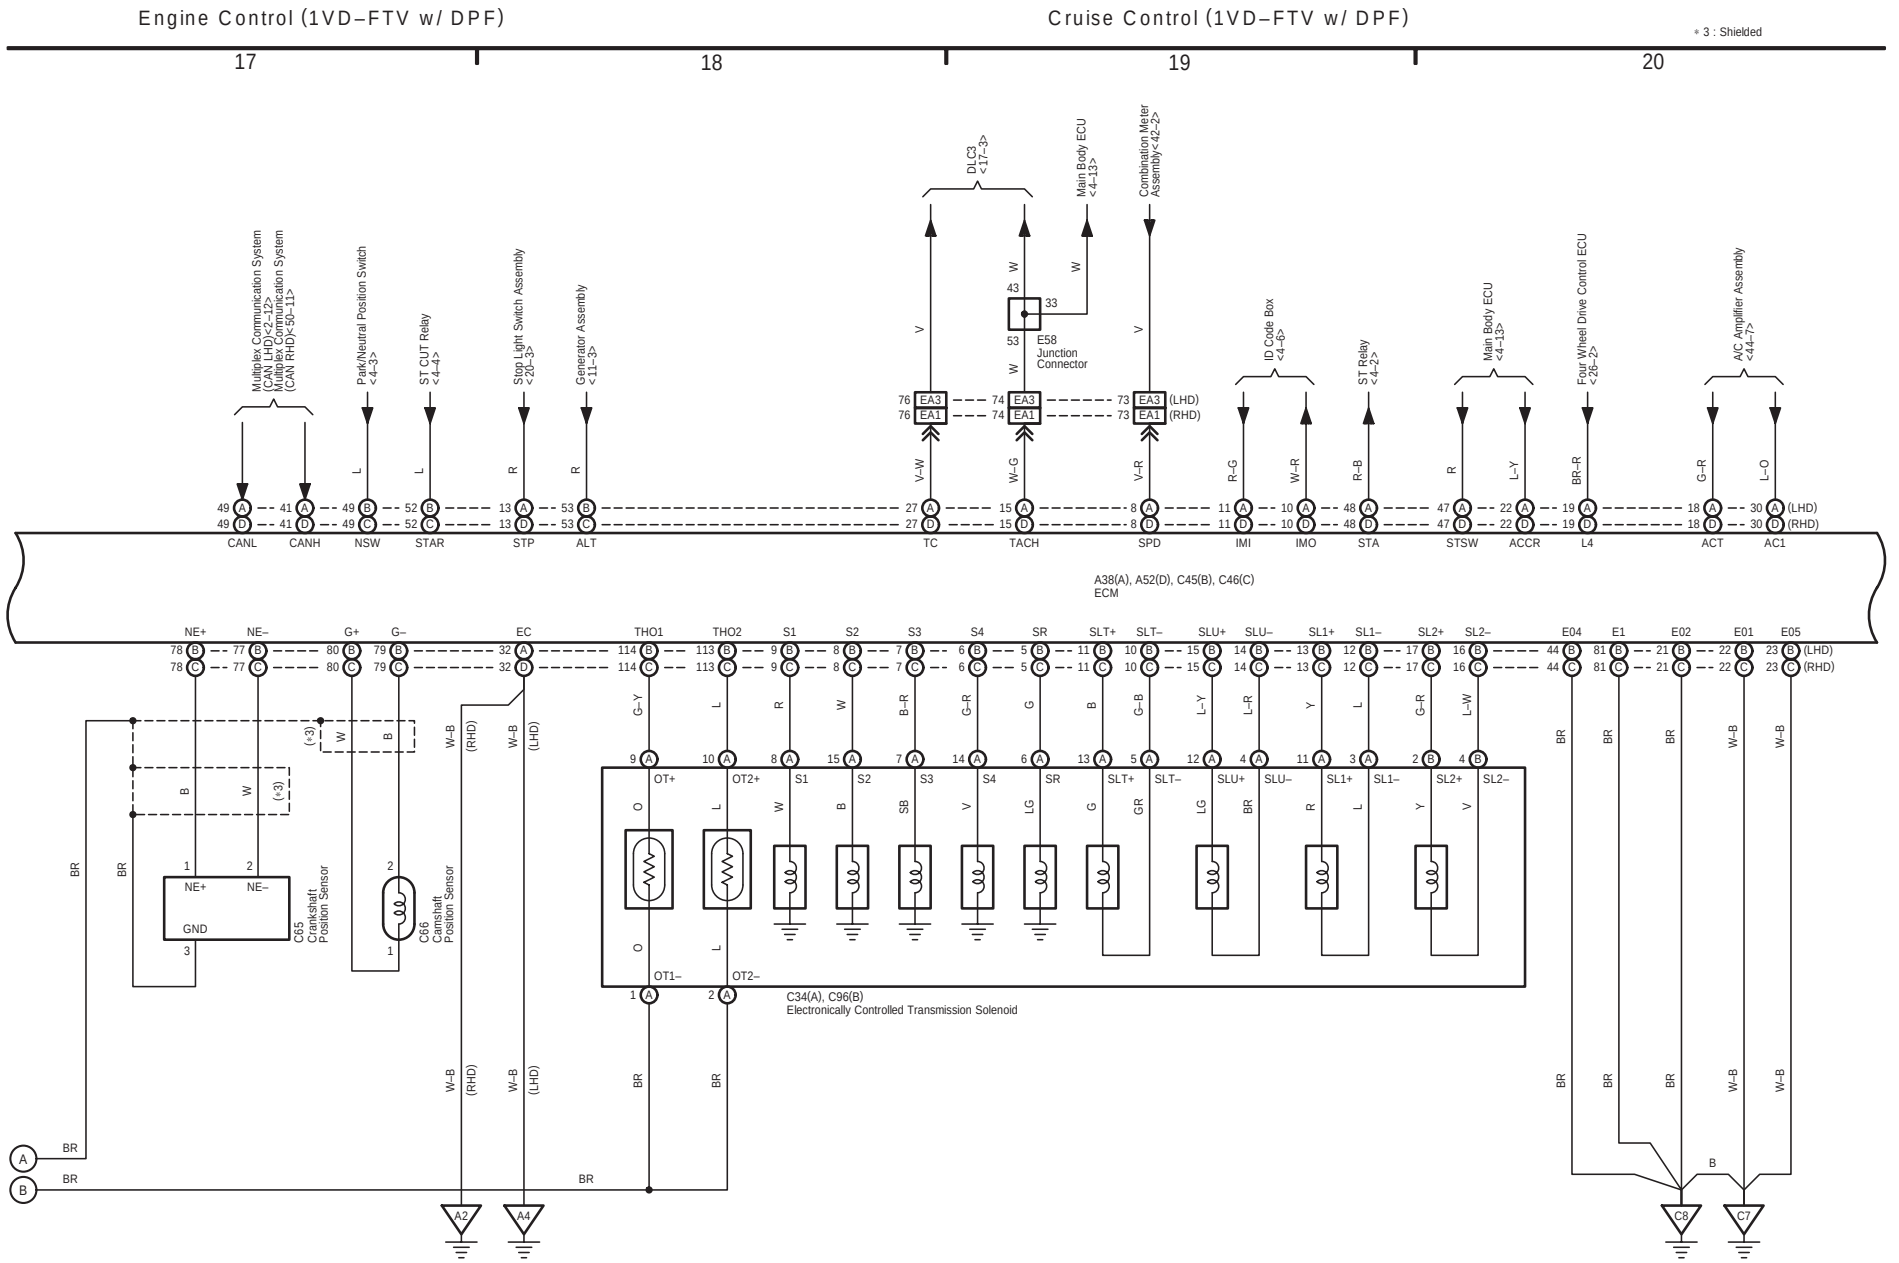


(Cont. next page)

Cruise Control (1VD–FTV w/ DPF)

ECT and A/T Indicator (1VD–FTV w/ DPF)

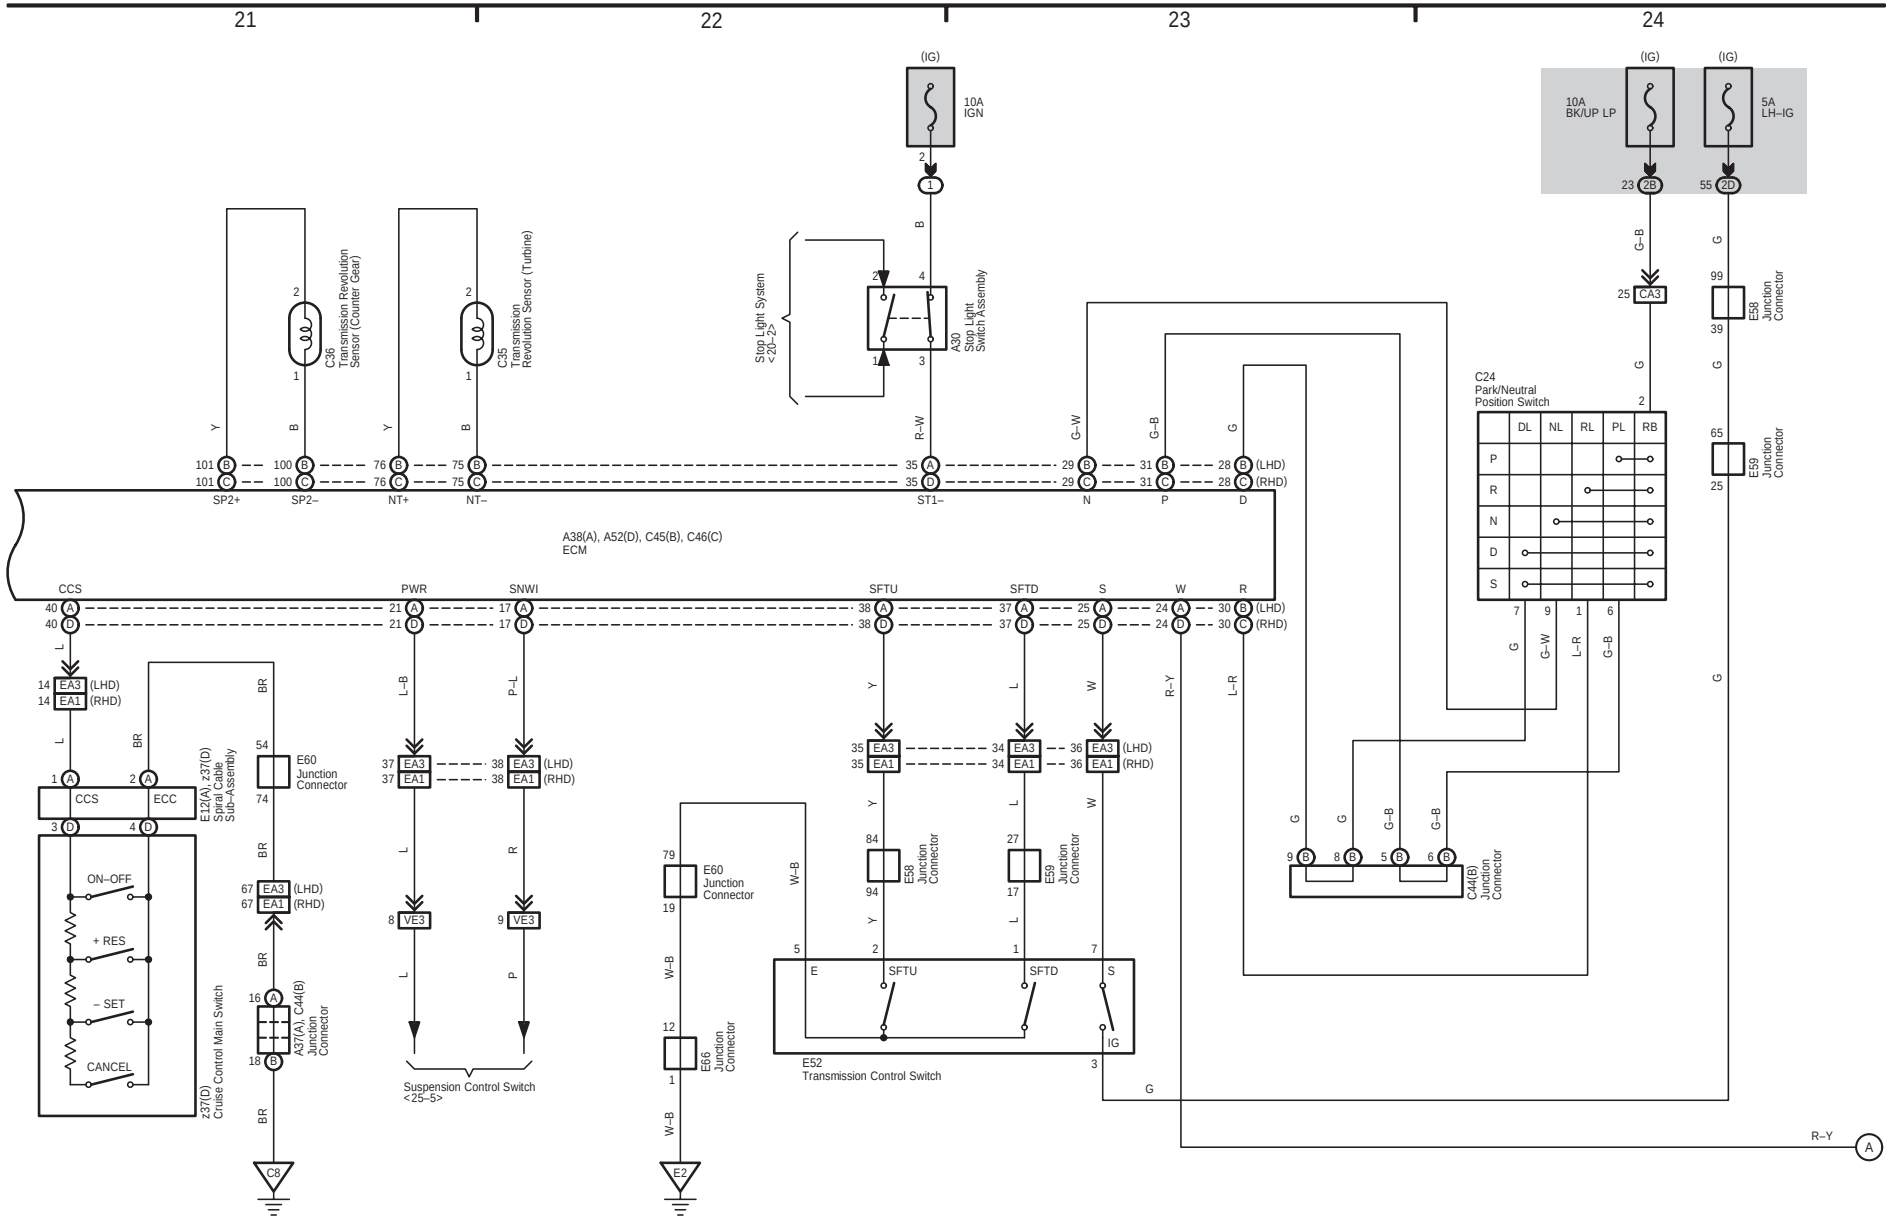

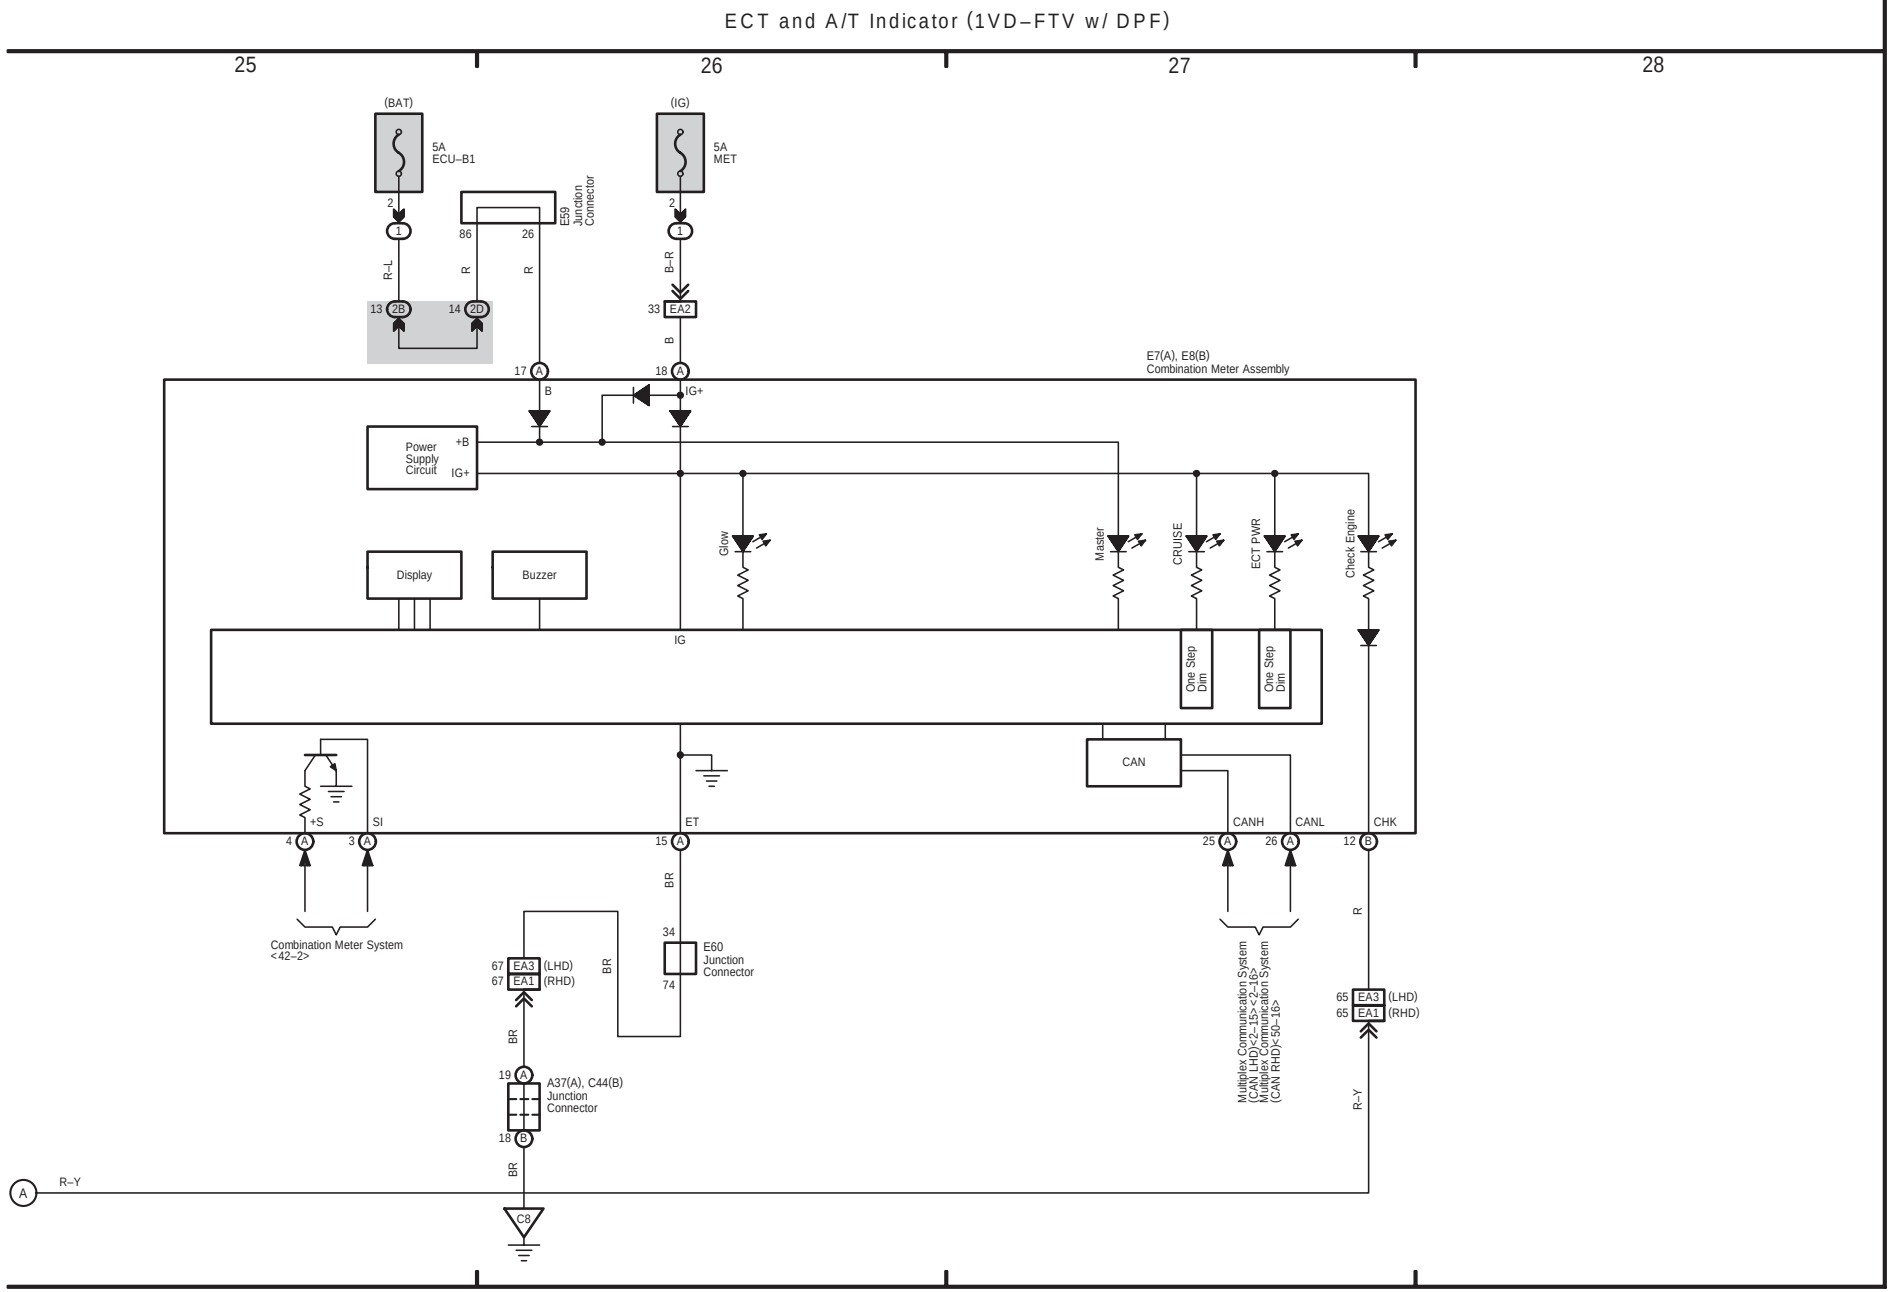
ECT and A/T Indicator (1VD–FTV w/ DPF)
25
26
27
28
(BAT)
5A
ECU–B1
(IG)
5A
MET
E59
Junction
Connector
R–L
R
R
B–R
B
2B
2D
EA2
E7(A), E8(B)
Combination Meter Assembly
IG+
Power
Supply
Circuit
+B
IG+
Display
Buzzer
Glow
Master
CRUISE
ECT PWR
Check Engine
IG
One Step
Dim
One Step
Dim
CAN
+S
SI
ET
CANH
CANL
CHK
Combination Meter System
<42–2>
BR
E60
Junction
Connector
EA3 (LHD)
EA1 (RHD)
A37(A), C44(B)
Junction
Connector
C8
Multiplex Communication System
(CAN LHD)<2–15><2–16>
Multiplex Communication System
(CAN RHD)<50–16>
R–Y