
F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(LHD)

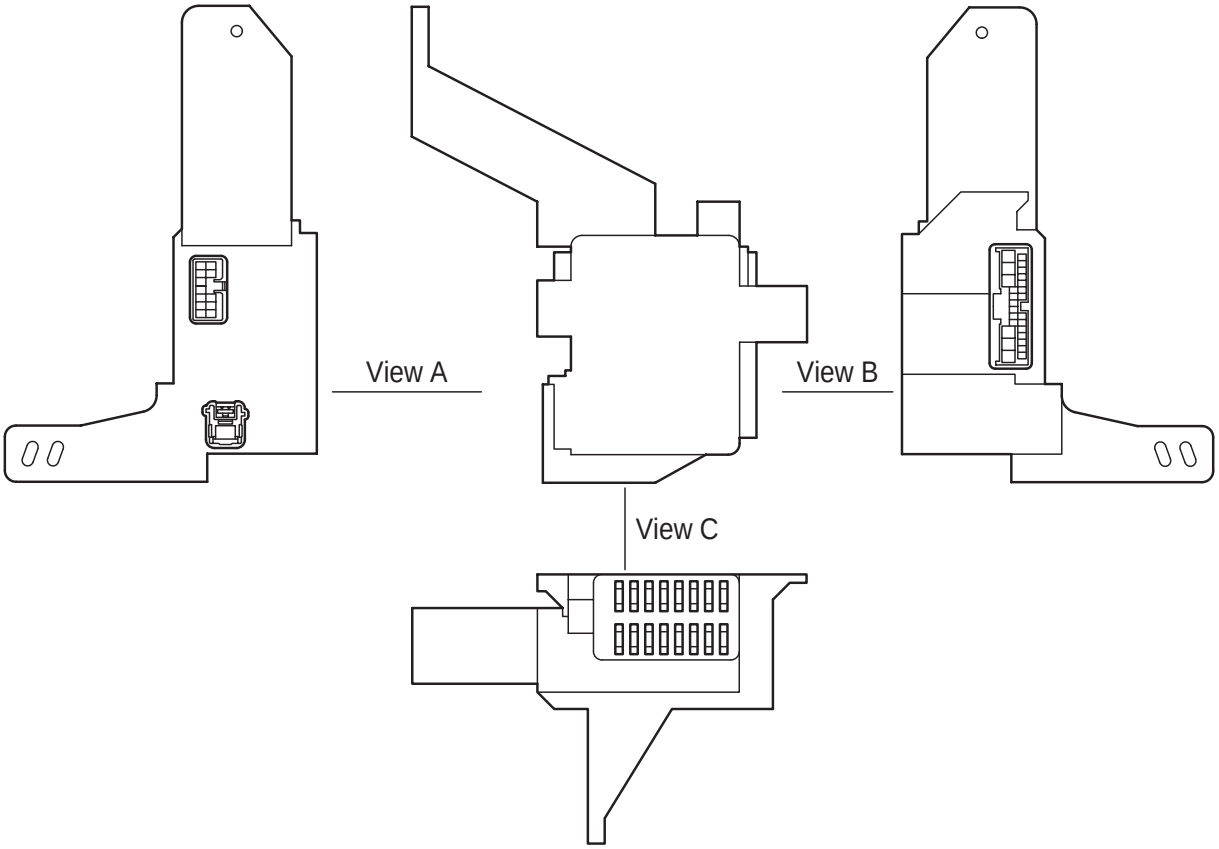

(LHD)

View A

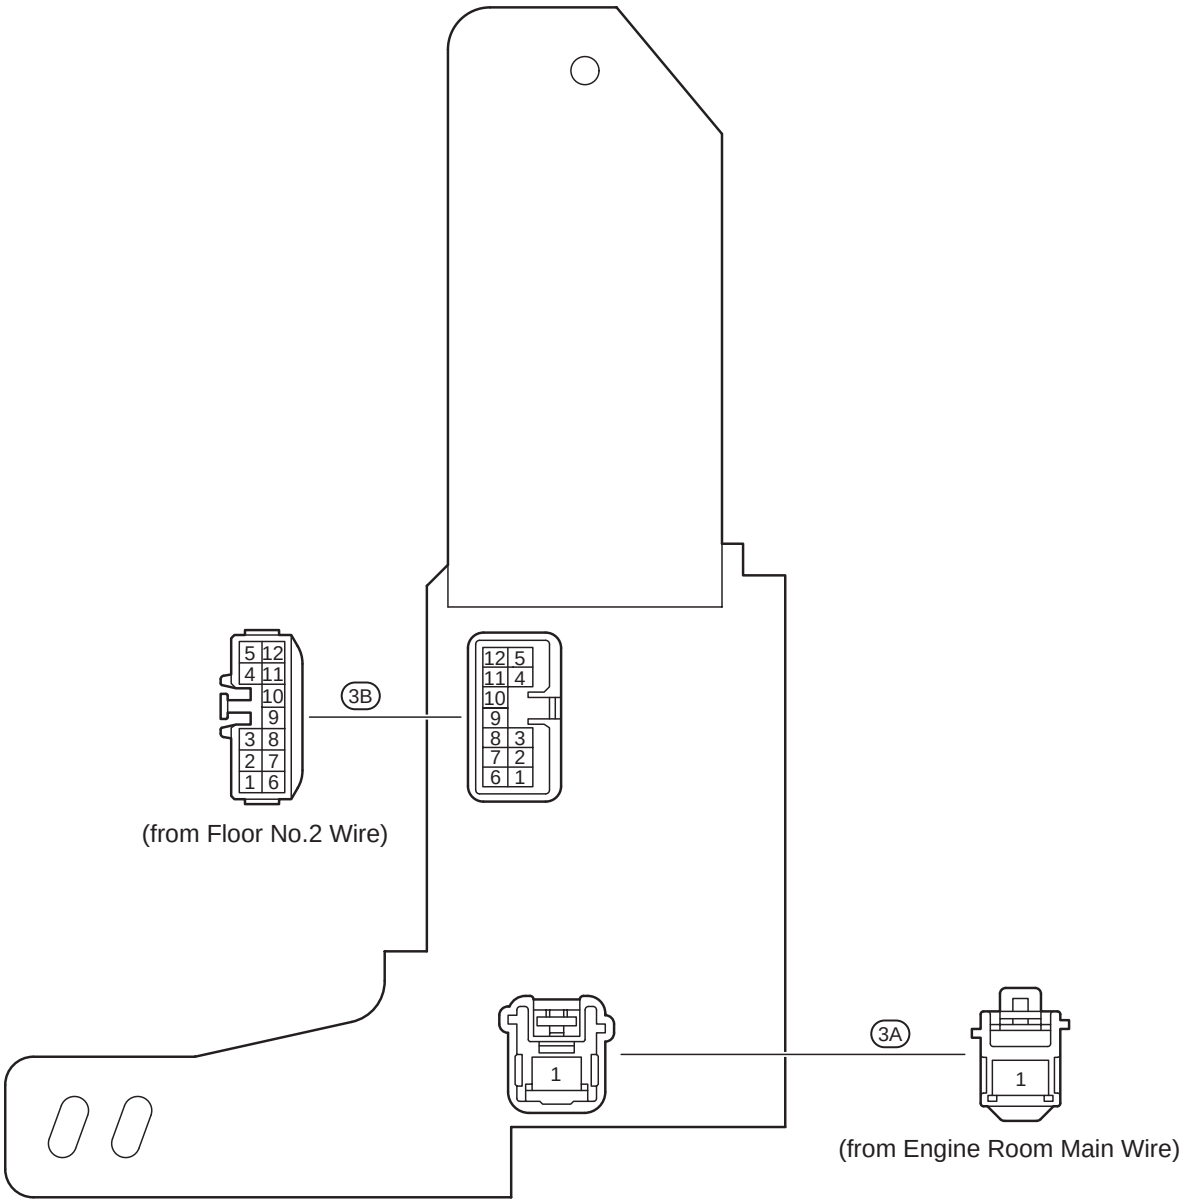

5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room Main Wire)

F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)


(LHD)

View B

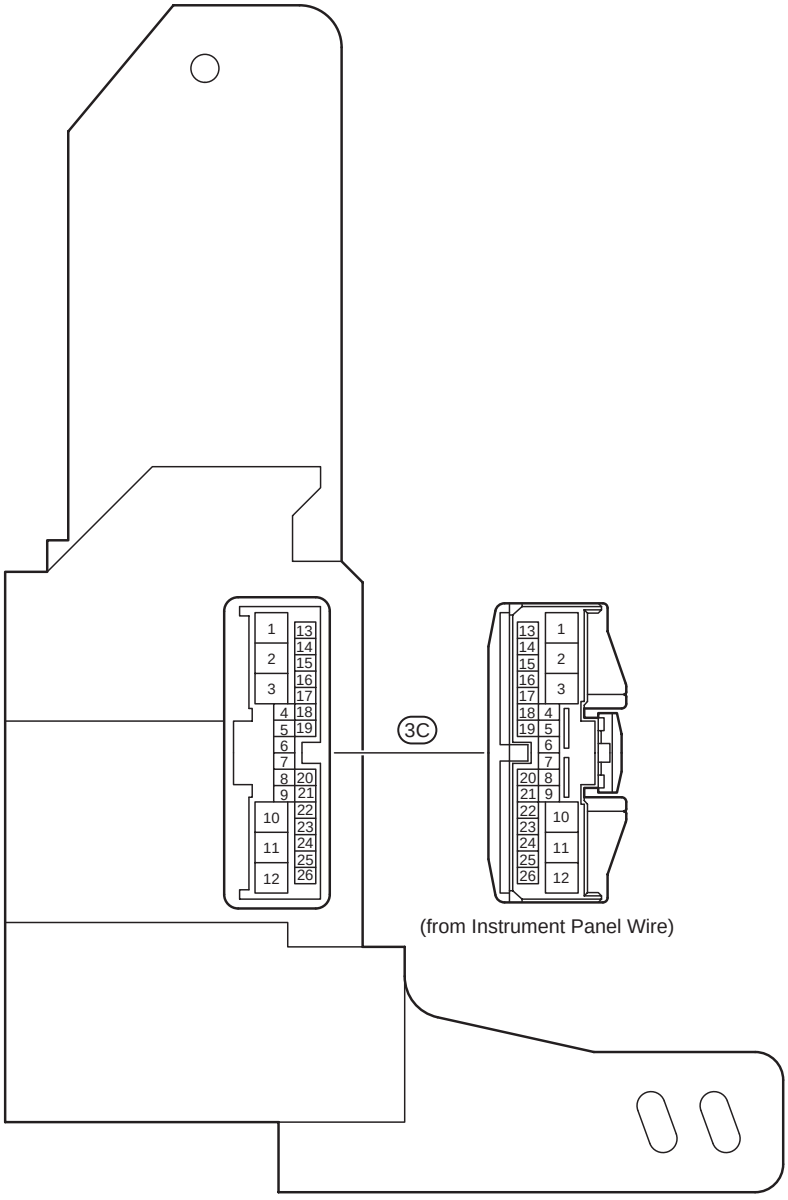

(LHD)


View C

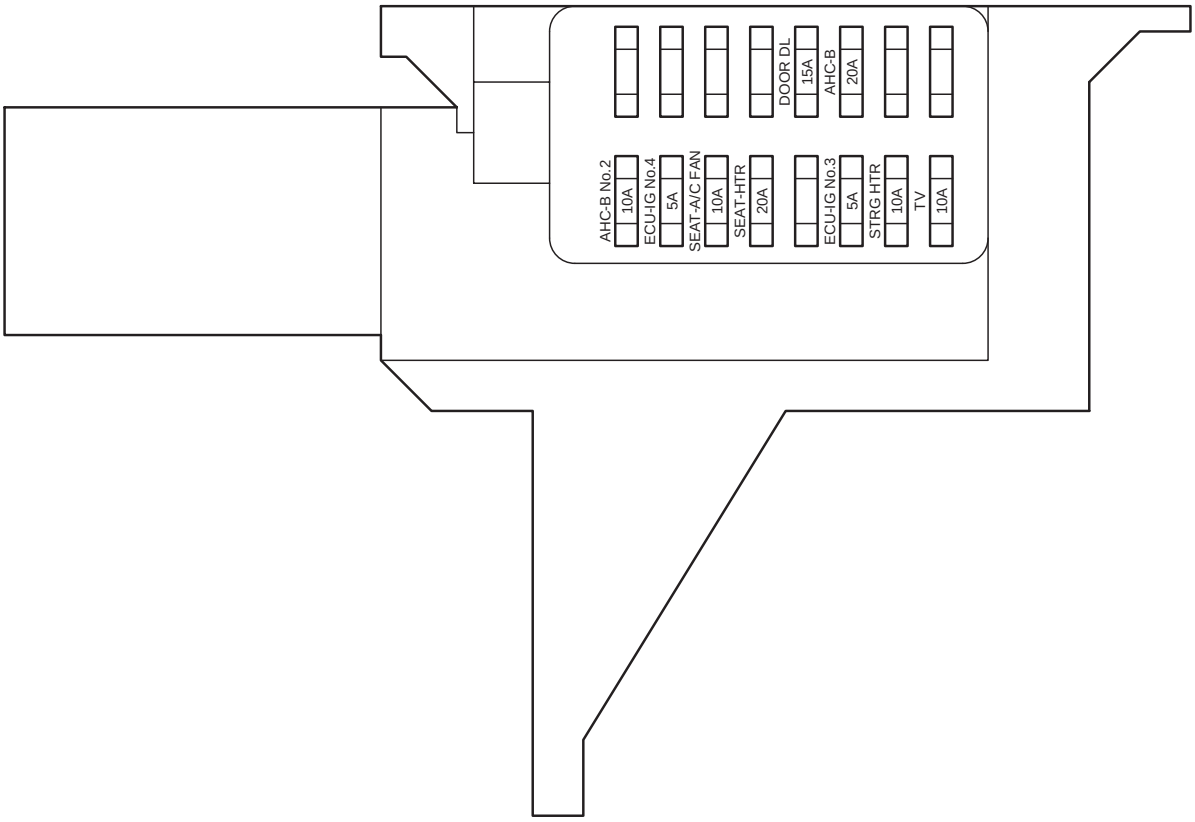
DOOR DL
15A
AHC-B
20A
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
ECU-IG No.3
5A
STRG HTR
10A
TV
10A

F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(RHD)

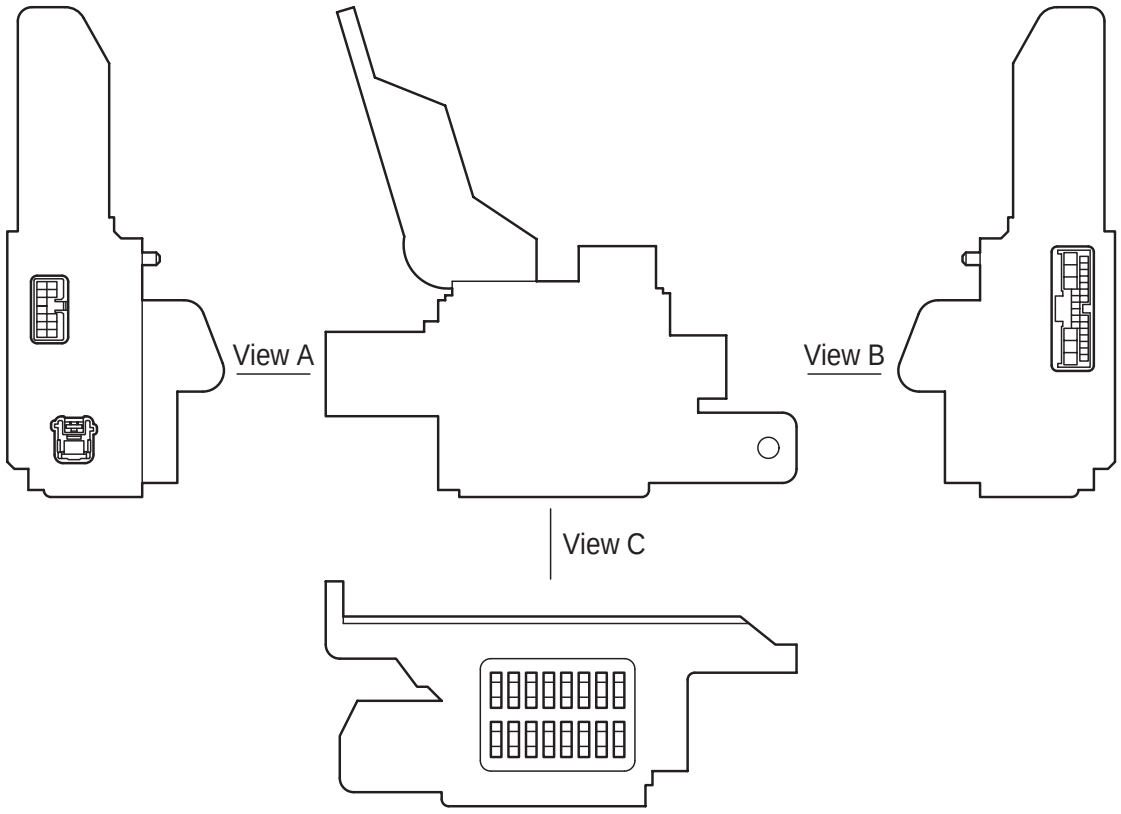

(RHD)


View A

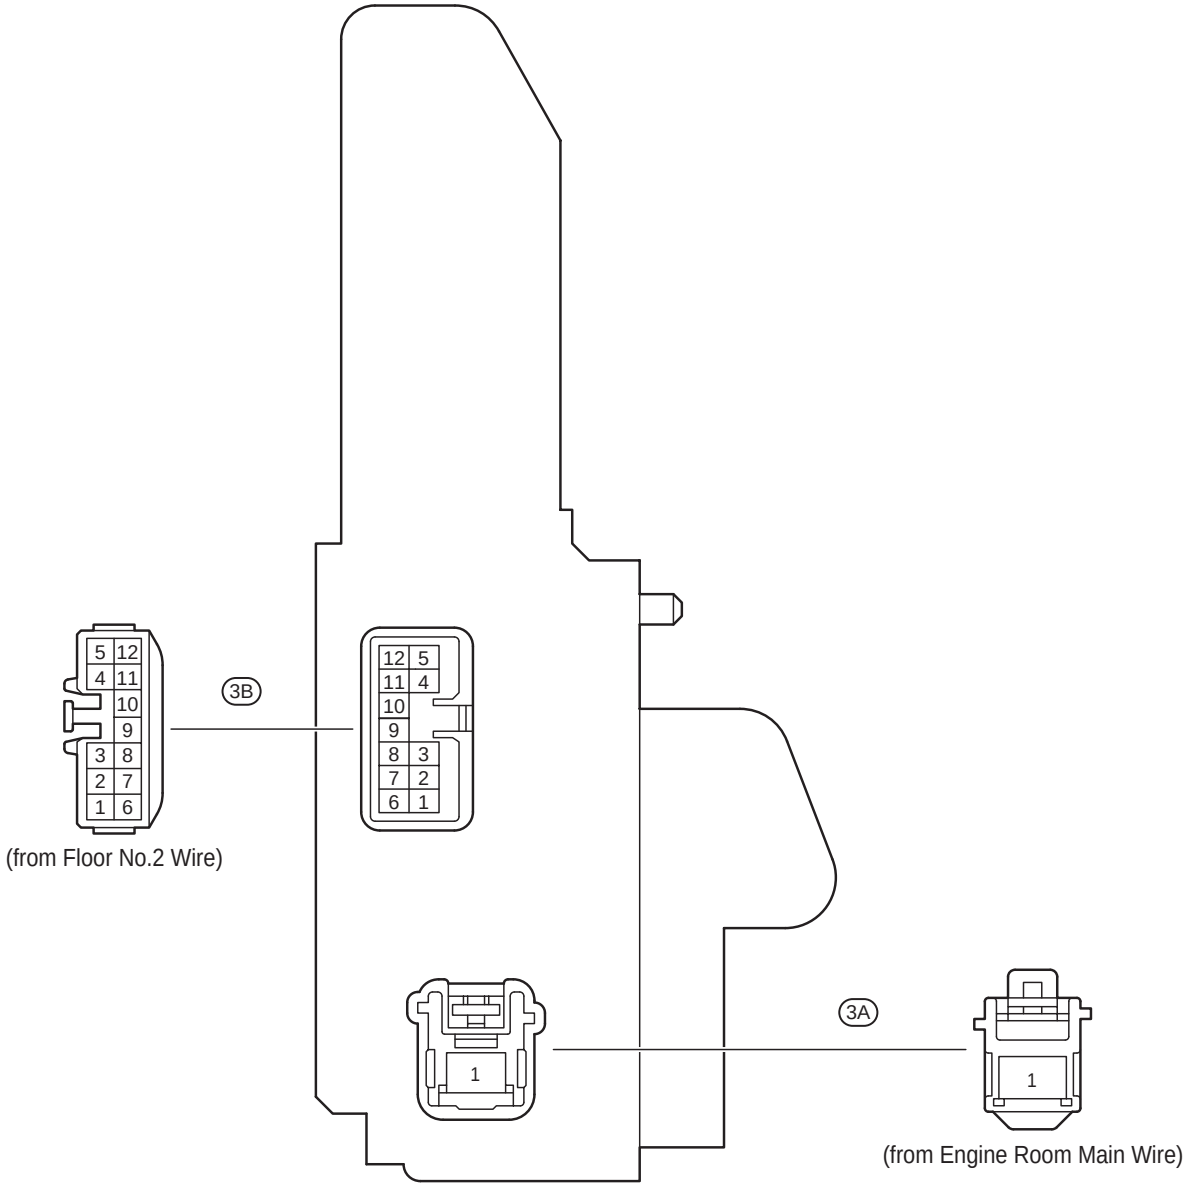
5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room Main Wire)

F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(RHD)

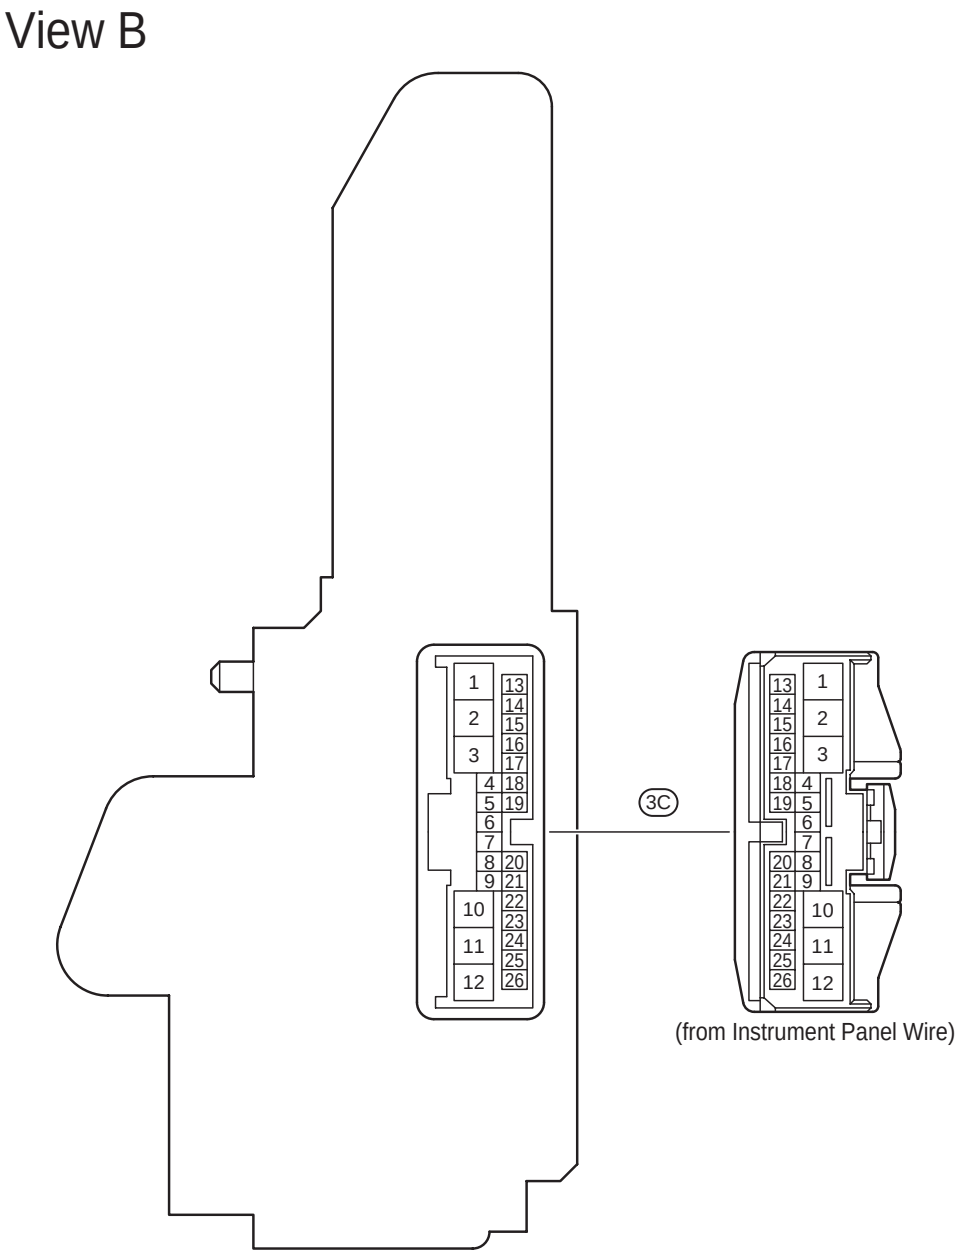

(RHD)

View C

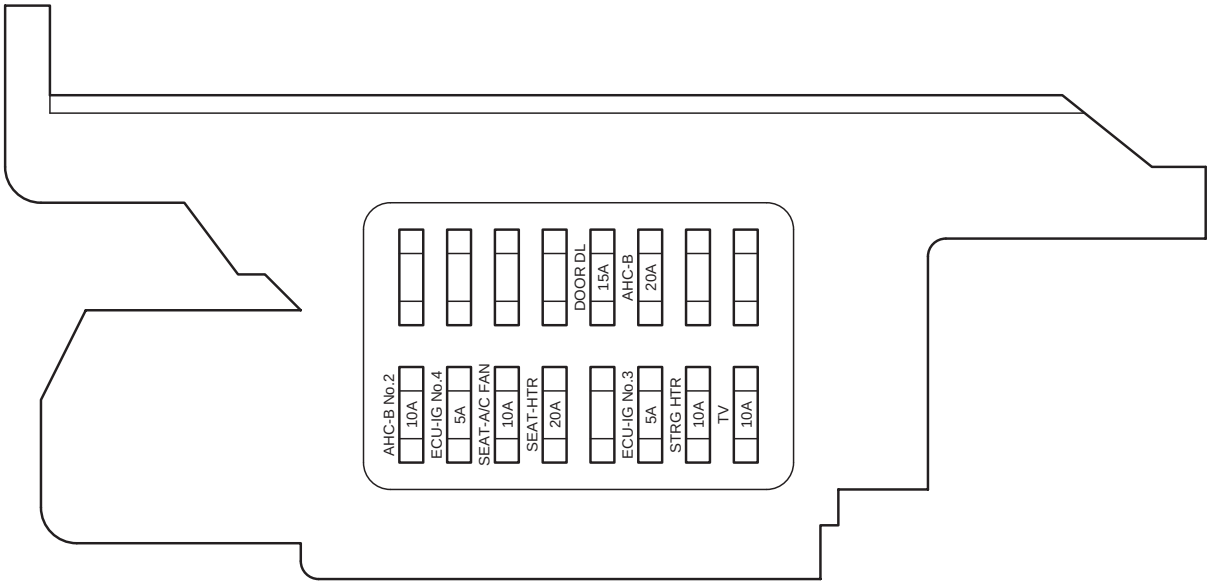
DOOR DL
15A
AHC-B
20A
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
ECU-IG No.3
5A
STRG HTR
10A
TV
10A