
F RELAY LOCATIONS

① : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	Engine Compartment Left (See Page 20)


* 1:DEFOG Relay
* 2:EDU 2 Relay
* 3:EDU 1 Relay
* 4:IG1 NO.5 Relay
* 5:EFI NO.2 Relay (Except 1VD-FTV w/ DPF)
  A/F Relay (1VD-FTV w/ DPF)
* 6:RR A/C Relay
* 7:ST Relay (Gasoline)
* 8:C/OPN Relay (Gasoline Before Jan. 2012 Production)
  AI-PUMP HTR Relay (1UR-FE)
  SUB PUMP Relay (Diesel)
* 9:SECURITY
  HORN Relay
* 10:FR FOG Relay
* 11:PTC HTR1 Relay
* 12:ST CUT Relay
* 13:CDS FAN Relay
* 14:PTC HTR2 Relay
* 15:BRK LP Relay
* 16:MG CLT Relay
* 17:DEICER Relay
  (w/ Front Window Deicer)
  P/W MAIN Relay
  (Driver's Door Only Jam Protection)
* 18:PTC HTR3 Relay
* 19:ST Relay (Diesel)
* 20:HEAD HI Relay
* 21:HEAD LO Relay
* 22:60A AHC
  (for High Current)
* 23:50A HTR
  (for High Current)
* 25:150A LH-J/B
  (for High Current)
* 26:180A ALT (Except 1GR-FE)
  (for High Current)
  140A ALT (1GR-FE)
  (for High Current)
* 27:50A A/PUMP NO.1 (Gasoline)
  (for High Current)
  80A GLOW1 (Diesel)
  (for High Current)
* 28:80A GLOW2
  (for High Current)
* 29:40A MAIN
  (for High Current)
* 30:AHC Relay
* 31:GLOW 1 Relay
* 32:GLOW 2 Relay
* 33:VSCS HTR Relay (1VD-FTV)
  AI-VSV Relay (1UR-FE, 1GR-FE)
* 34:30A PBD (for High Current)

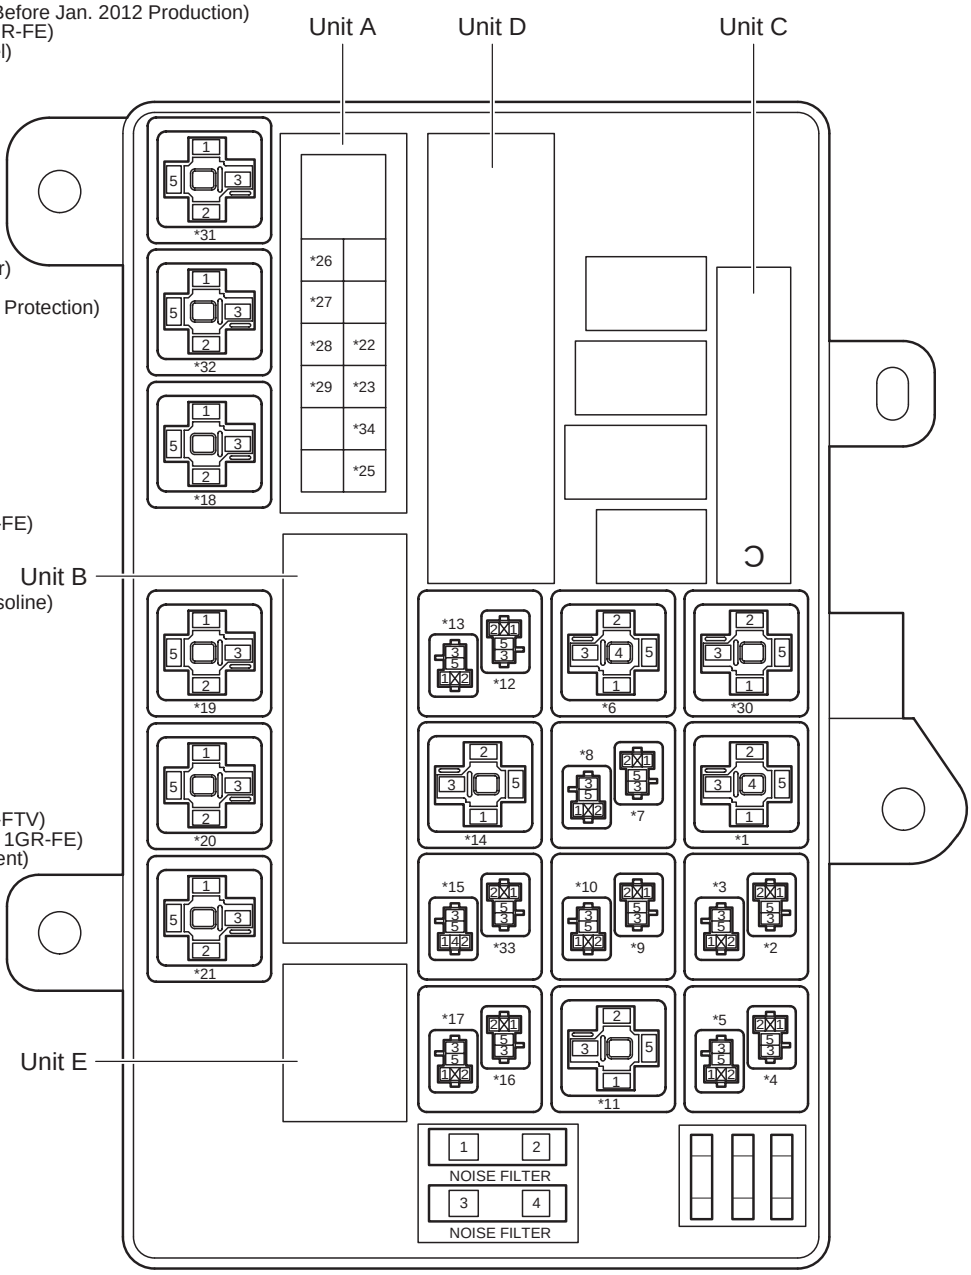


F RELAY LOCATIONS

(1) : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	Engine Compartment Left (See Page 20)

(Gasoline)

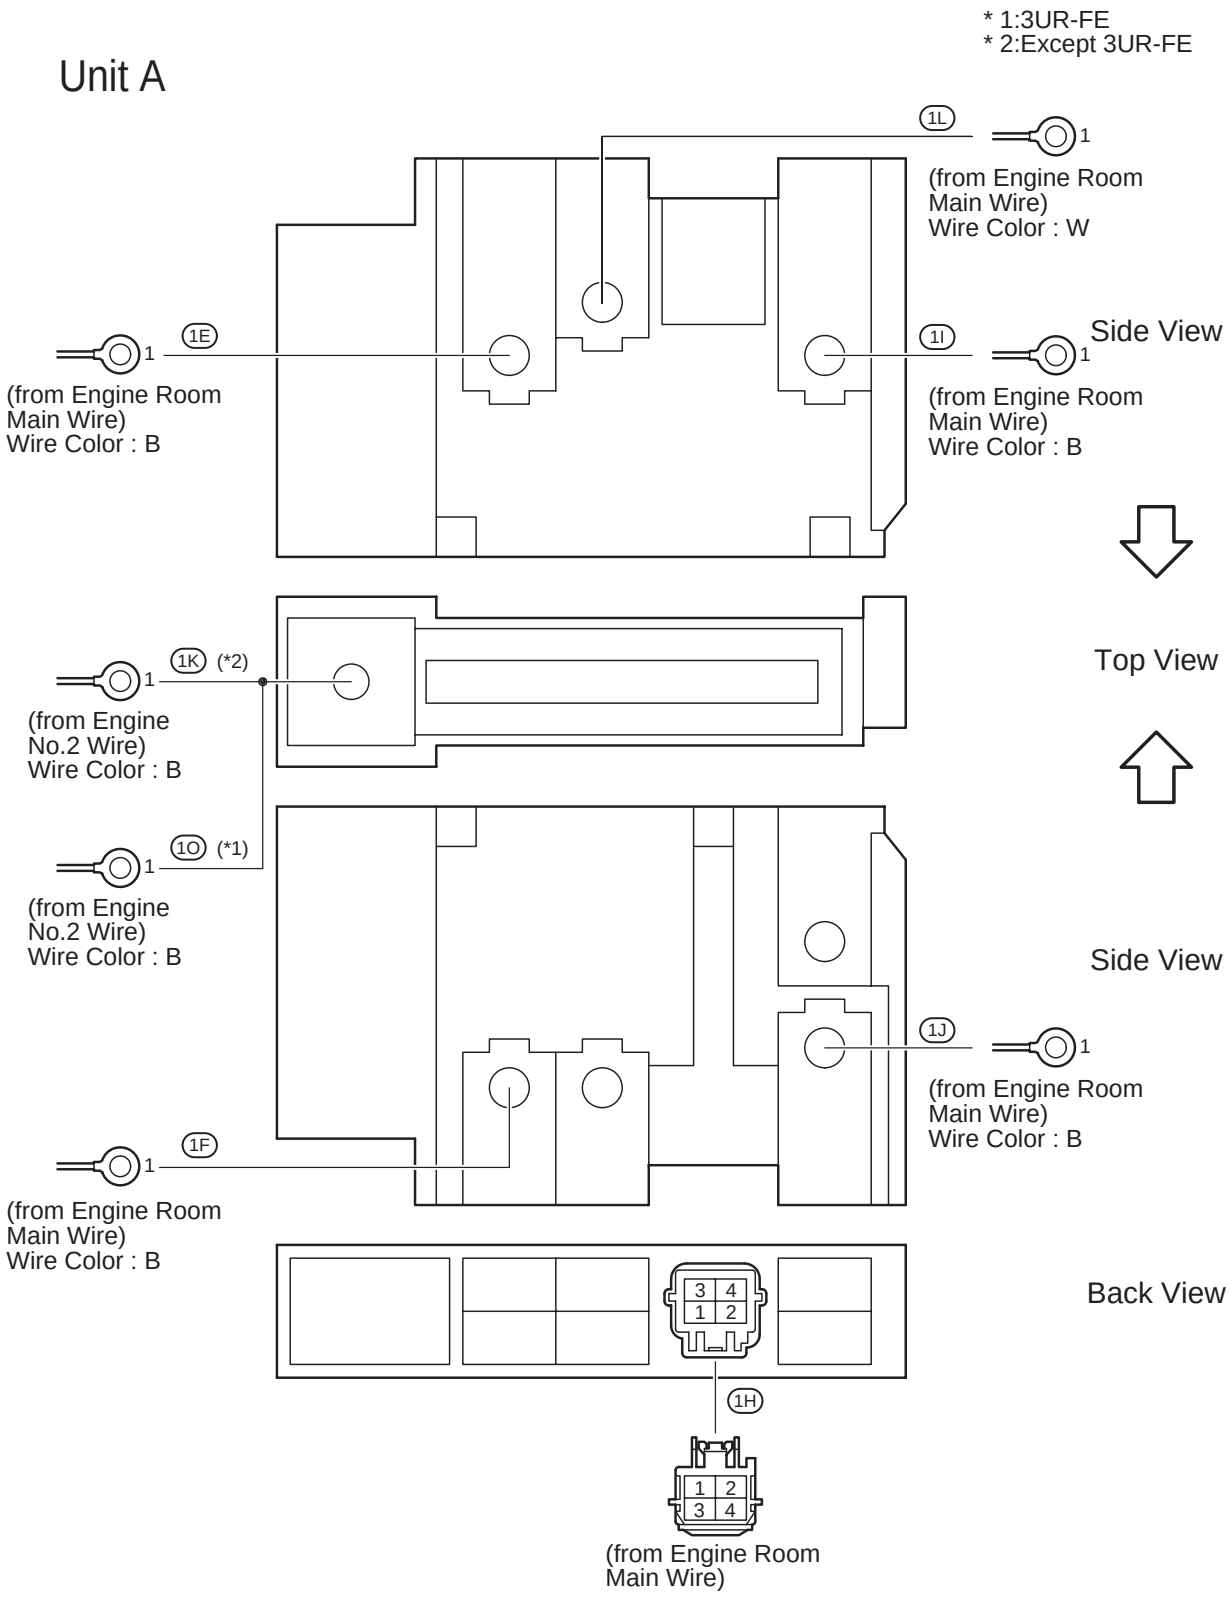


(Diesel)

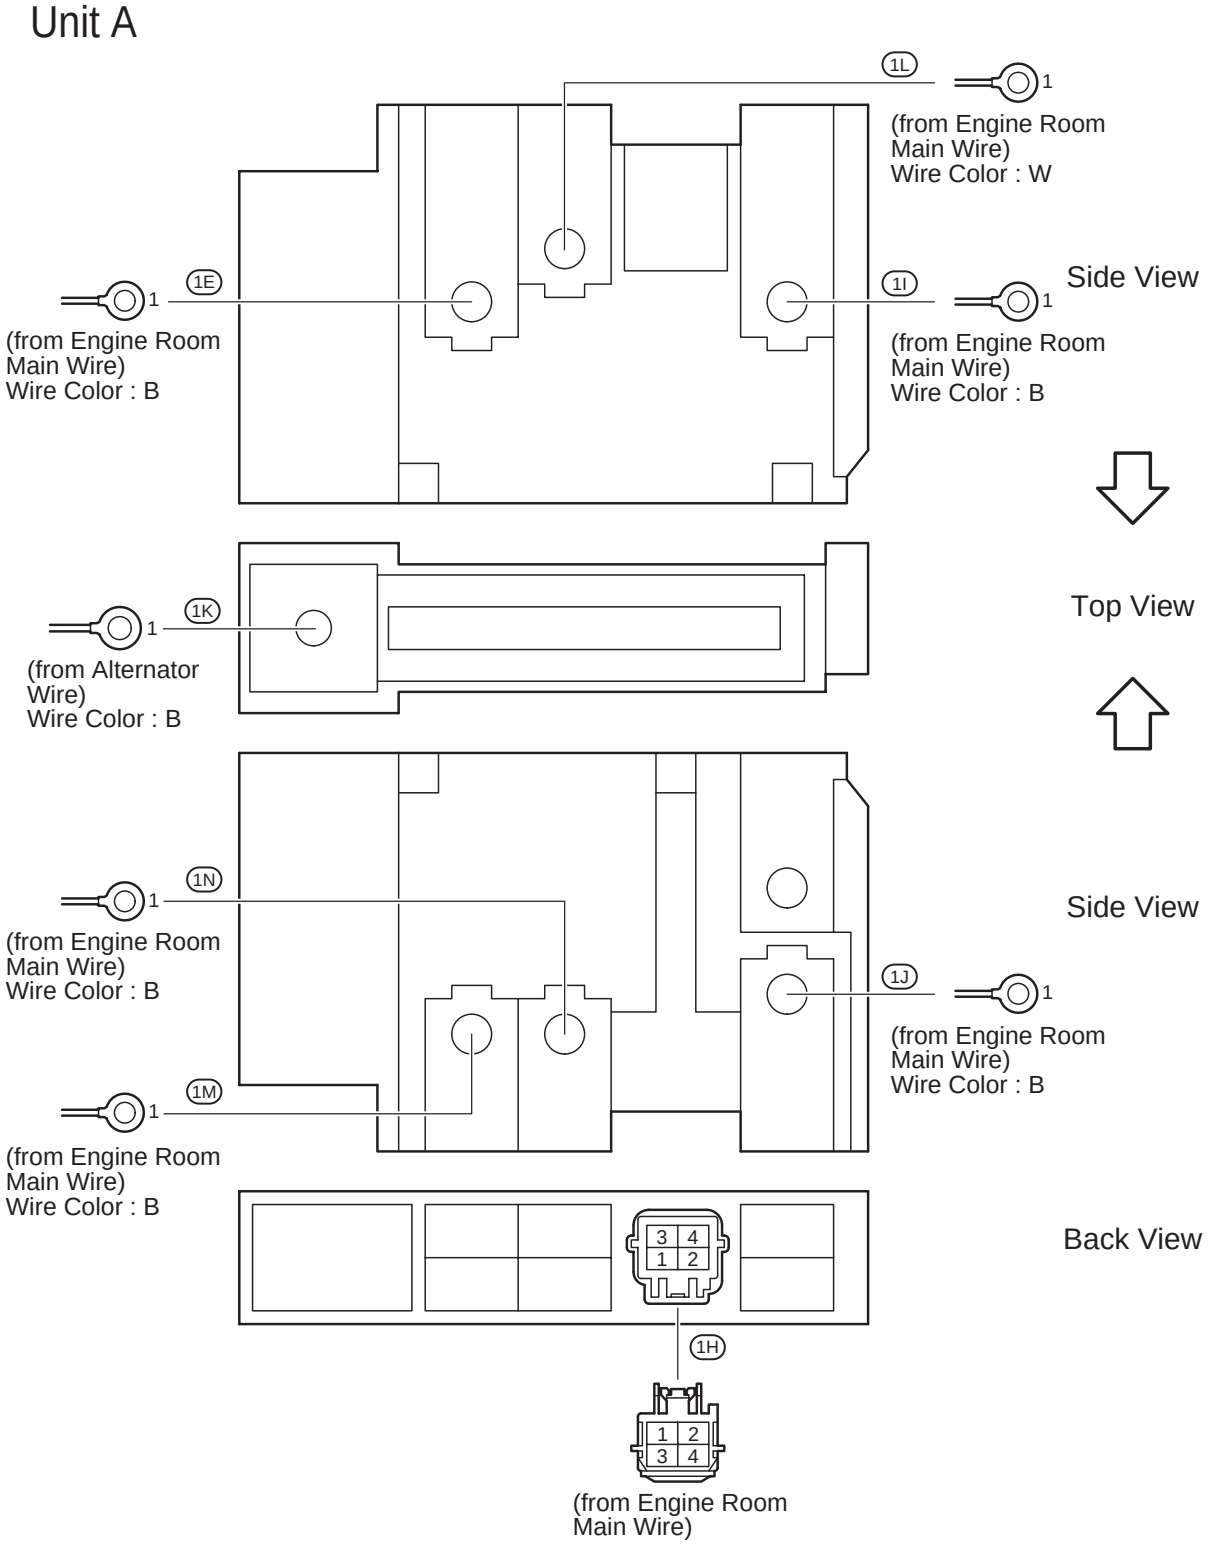
Unit A
1L
1
(from Engine Room Main Wire)
Wire Color : W
1E
1
(from Engine Room Main Wire)
Wire Color : B
1I
1
(from Engine Room Main Wire)
Wire Color : B
Side View
Top View
1K
1
(from Alternator Wire)
Wire Color : B
1N
1
(from Engine Room Main Wire)
Wire Color : B
Side View
1J
1
(from Engine Room Main Wire)
Wire Color : B
1M
1
(from Engine Room Main Wire)
Wire Color : B
3 4
1 2
Back View
1H
1 2
3 4
(from Engine Room Main Wire)


F RELAY LOCATIONS

① : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

Unit B

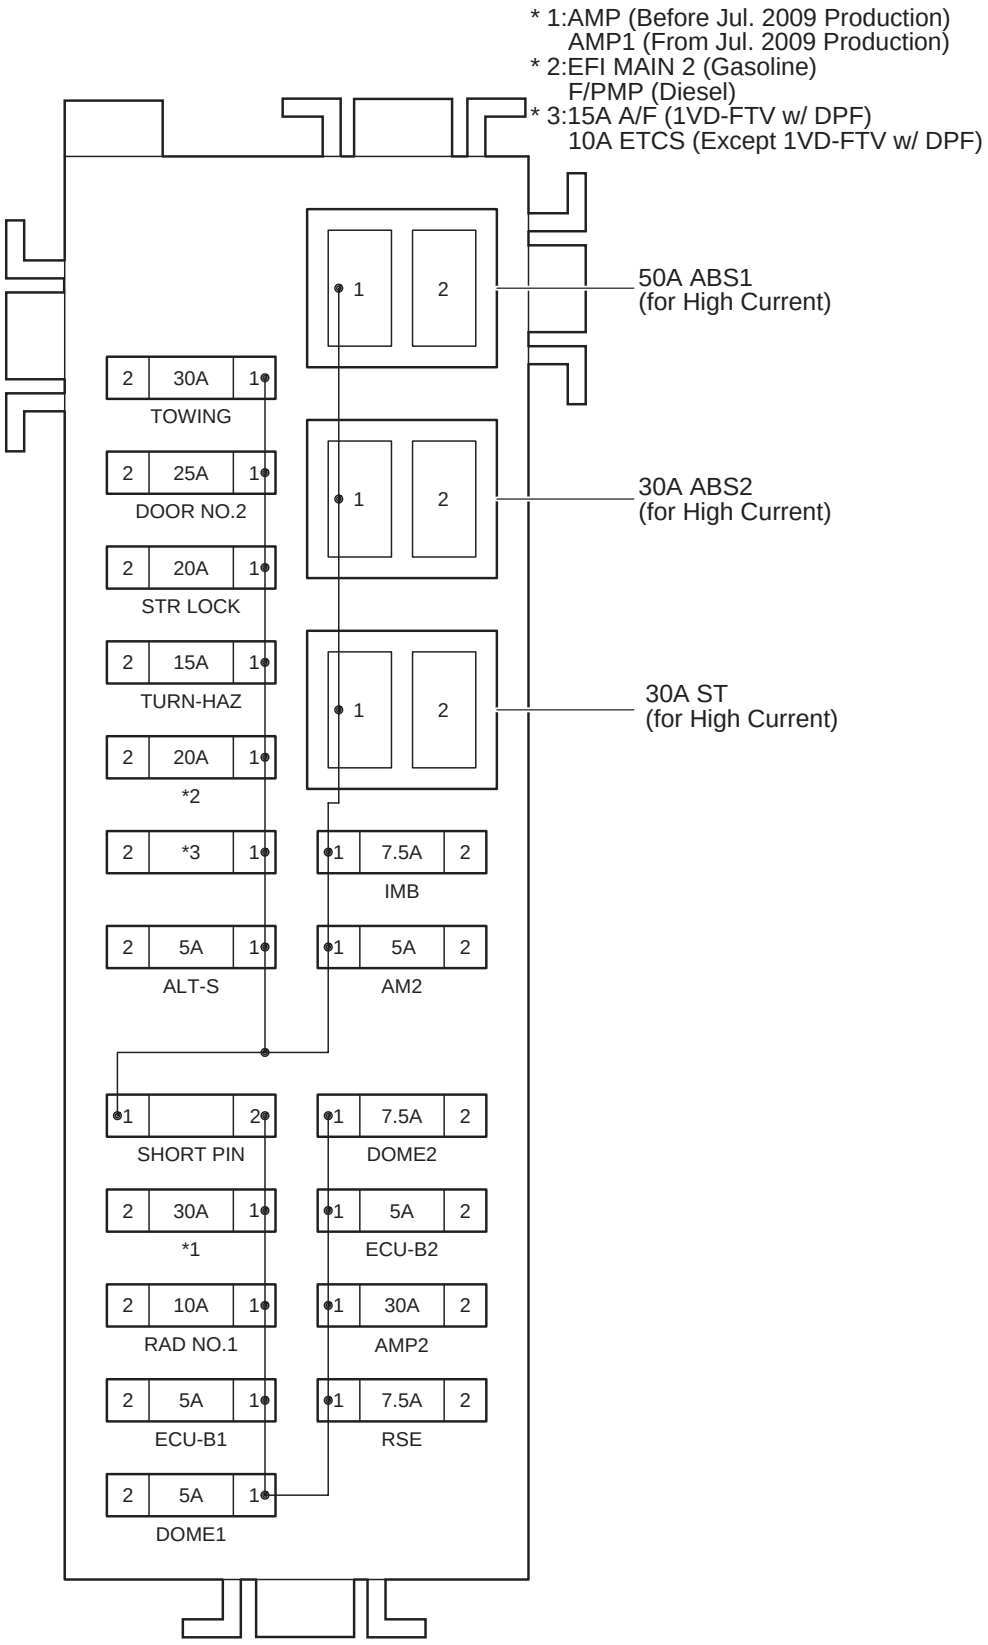


Unit E

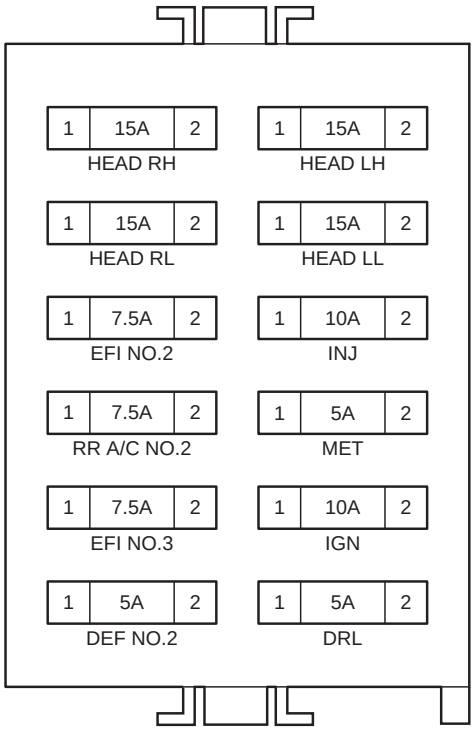
1 15A 2
HEAD RH
1 15A 2
HEAD LH
1 15A 2
HEAD RL
1 15A 2
HEAD LL
1 7.5A 2
EFI NO.2
1 10A 2
INJ
1 7.5A 2
RR A/C NO.2
1 5A 2
MET
1 7.5A 2
EFI NO.3
1 10A 2
IGN
1 5A 2
DEF NO.2
1 5A 2
DRL

F RELAY LOCATIONS

(1) : Engine Room R/B Assembly : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

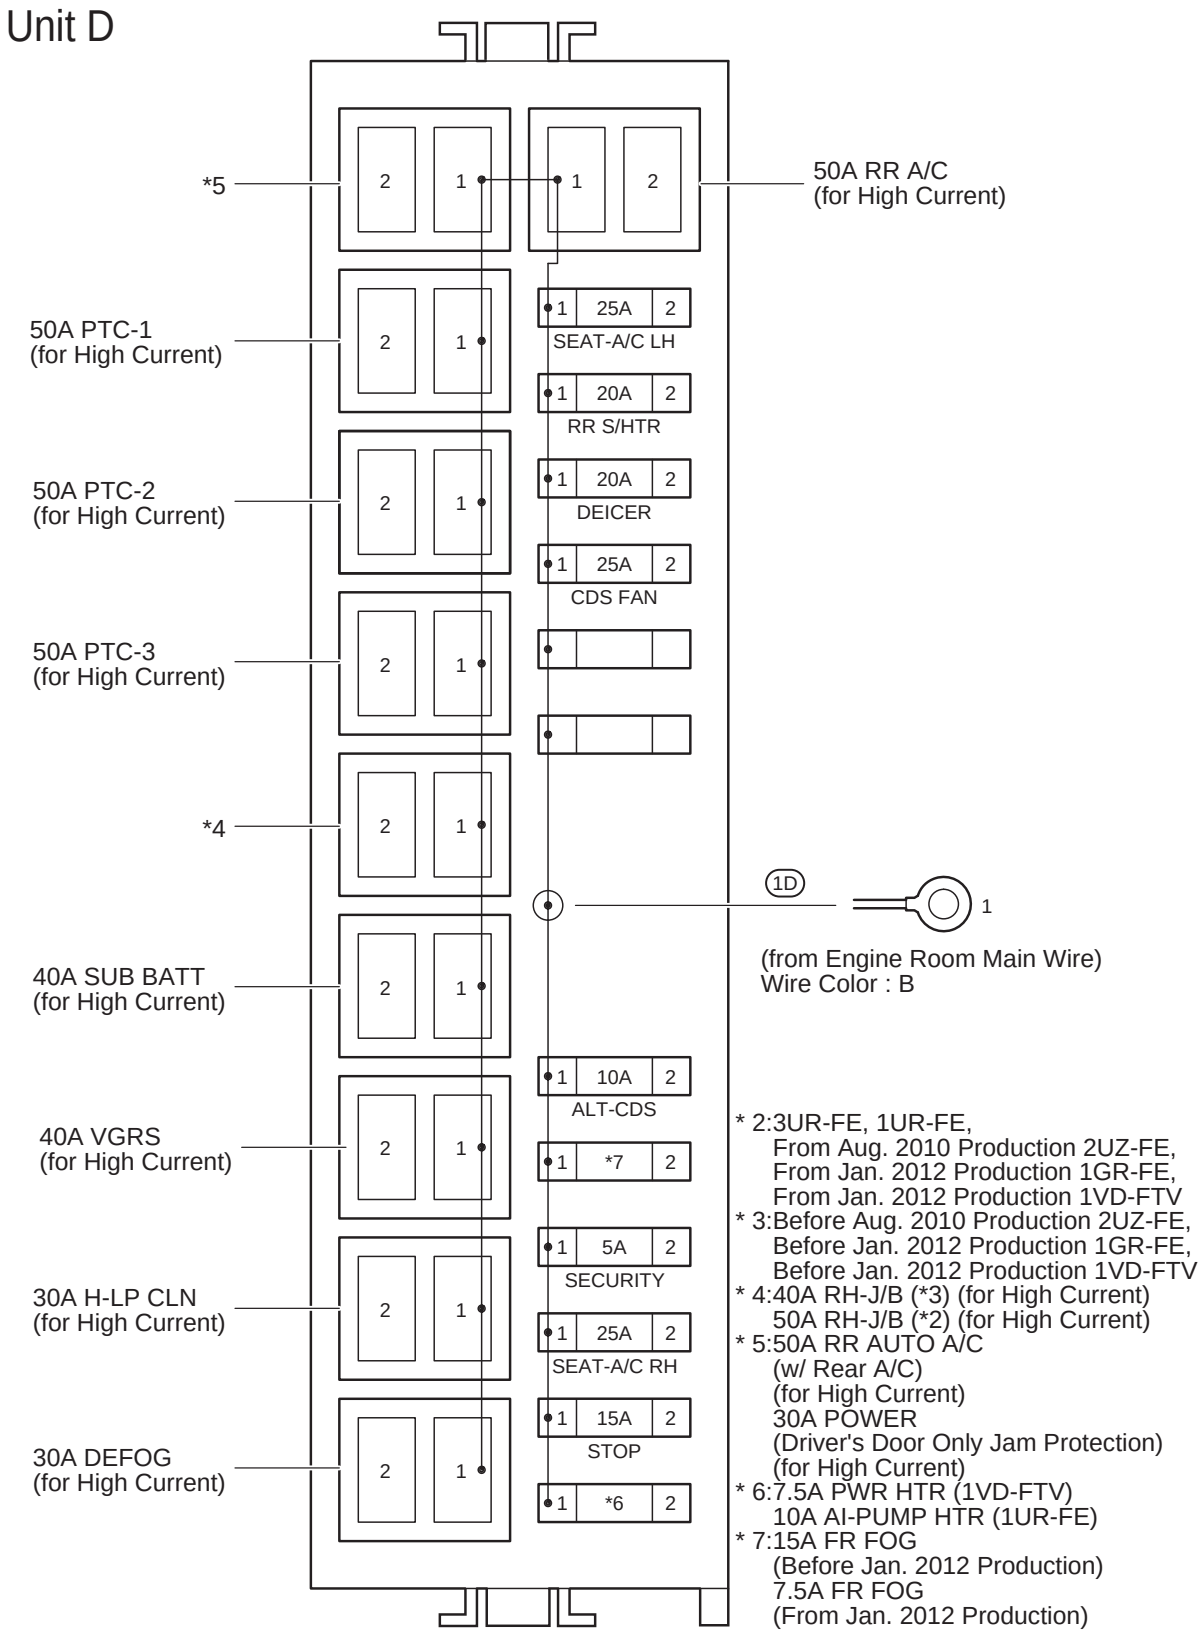

Unit C

* 1:15A A/F (Gasoline)
  15A EFI MAIN2 (Diesel w/o DPF)
  25A EFI MAIN2 (Diesel w/ DPF)

