
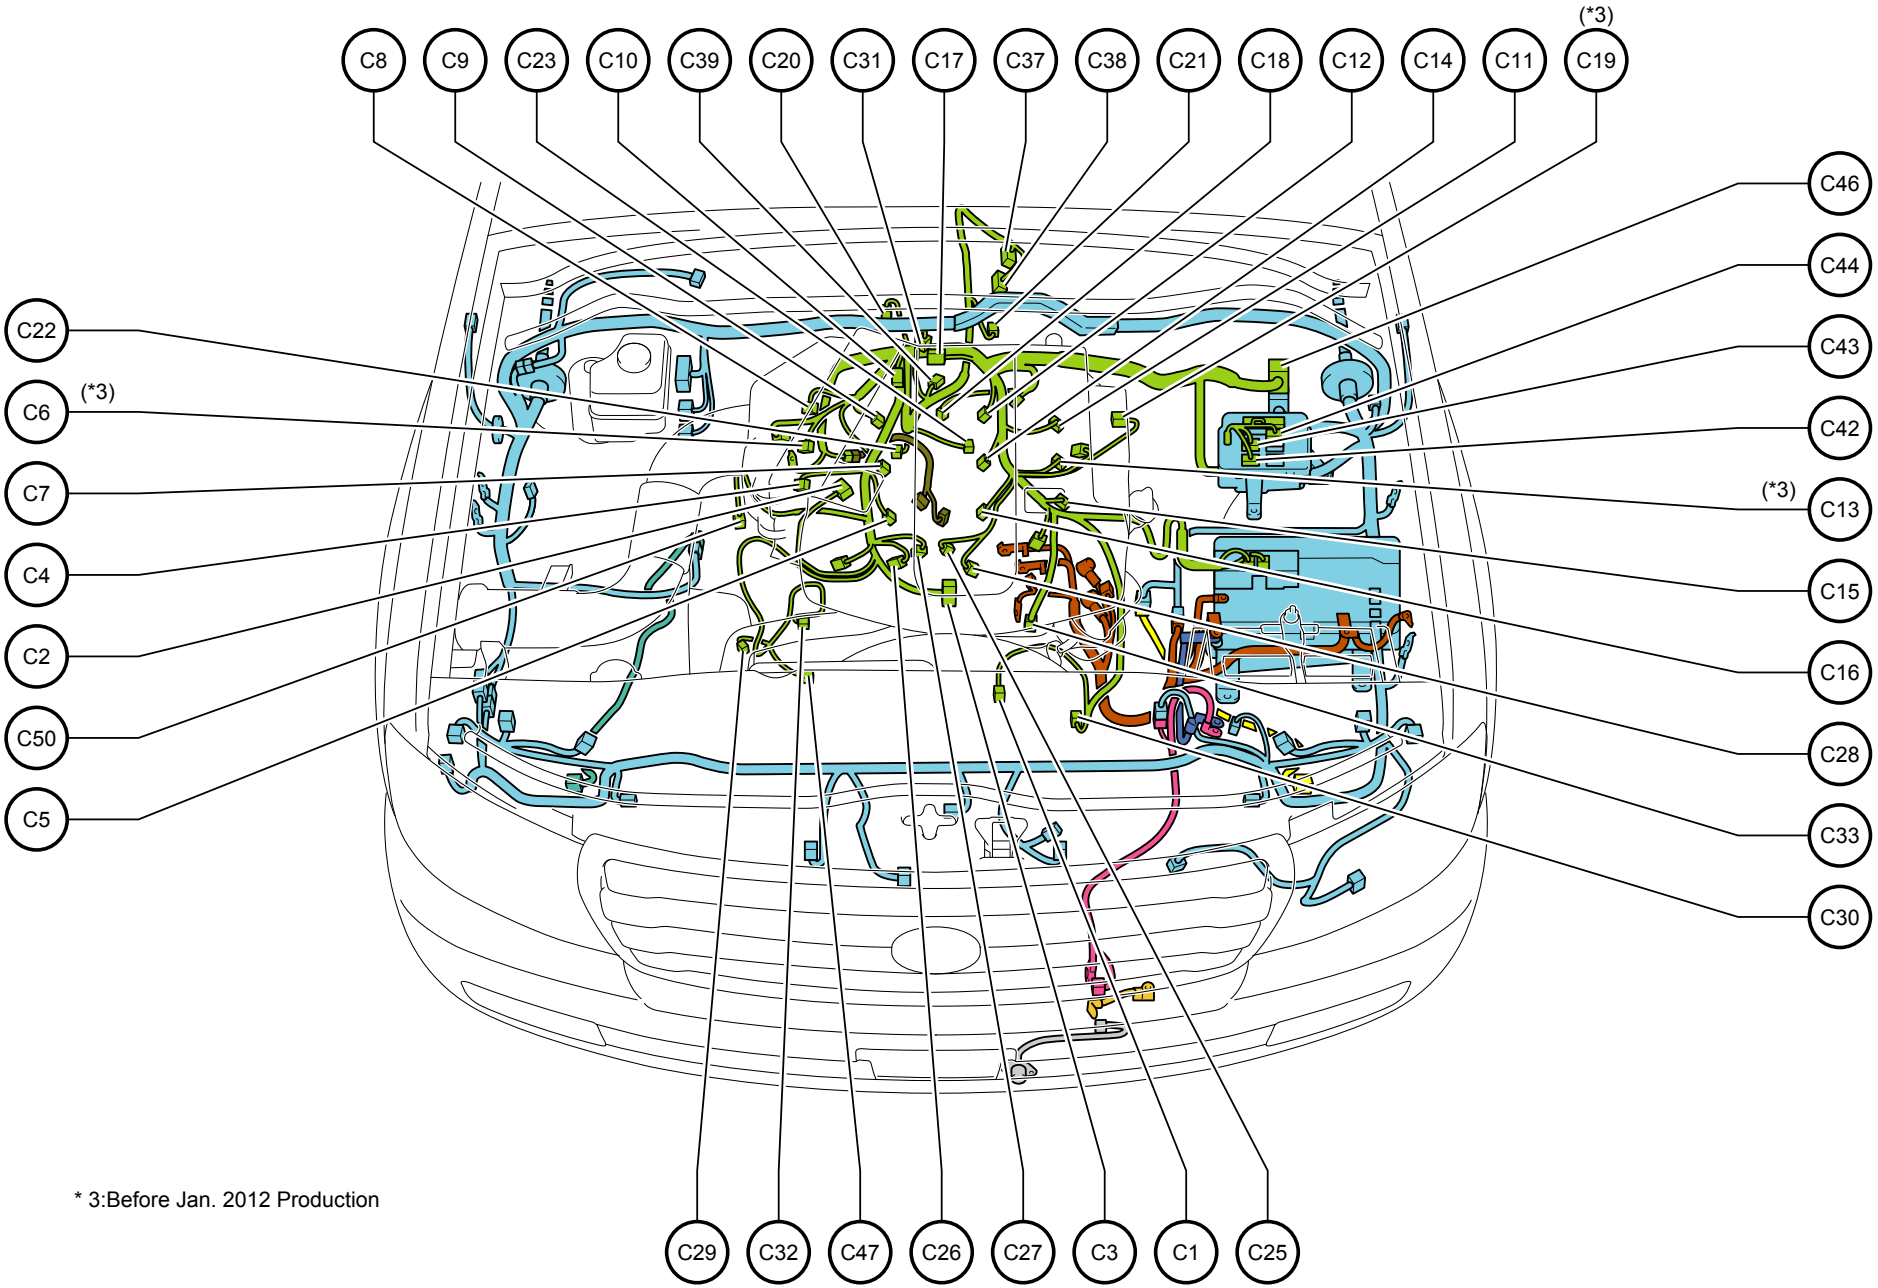



* 3:Before Jan. 2012 Production

C 1 Crankshaft Position Sensor
C 2 Mass Air Flow Meter
C 3 Throttle Body Assembly
C 4 Ignition Coil Assembly No.1
C 5 Fuel Injector Assembly No.1
C 6 Ignition Coil Assembly No.3
C 7 Fuel Injector Assembly No.3
C 8 Ignition Coil Assembly No.5
C 9 Fuel Injector Assembly No.5
C 10 Noise Filter (Ignition Bank 1)
C 11 Ignition Coil Assembly No.6
C 12 Fuel Injector Assembly No.6
C 13 Ignition Coil Assembly No.4
C 14 Fuel Injector Assembly No.4
C 15 Ignition Coil Assembly No.2
C 16 Fuel Injector Assembly No.2
C 17 Noise Filter (Ignition Bank 2)
C 18 E.F.I. Engine Coolant Temperature Sensor
C 19 Purge VSV
C 20 Oxygen Sensor (Bank 1 Sensor 2)
C 21 Oxygen Sensor (Bank 2 Sensor 2)
C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 25 VVT Sensor (Bank 2 Intake Side)
C 26 VVT Sensor (Bank 1 Intake Side)
C 27 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
C 28 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
C 29 Power Steering Oil Pressure Switch
C 30 Cooler Compressor Assembly
C 31 VSV (ACIS)
C 32 Engine Oil Level Sensor
C 33 Oil Pressure Sender Gage Assembly
C 37 Transfer Shift Actuator Assembly
C 38 Transfer Shift Actuator Assembly
C 39 Back-Up Light Switch Assembly
C 42 Junction Connector
C 43 Junction Connector
C 44 Junction Connector
C 46 ECM
C 47 Oil Pressure Sender Gage Assembly
C 50 Mass Air Flow Meter


C 1
Black

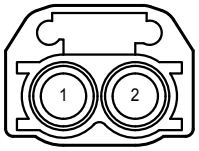


C 2
Black

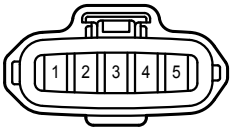


C 3
Black

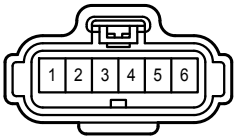


C 4
Black




C 5
Gray

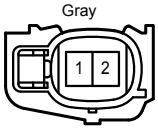


C 6
Black




C 7
Gray

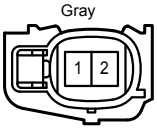

C 8
Black




C 9
Gray




C 10
Gray




C 11
Black




C 12
Gray




C 13
Black




C 14
Gray

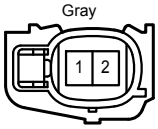

C 15
Black



C 16
Gray

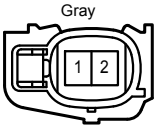


C 17
Gray



C 18
Dark Gray



C 19
Gray

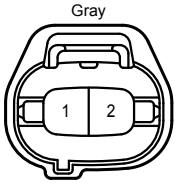

C 20
Dark Gray



C 21
Dark Gray




C 22
Dark Gray




C 23
Dark Gray



C 25
Black

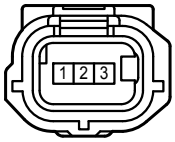

C 26
Black

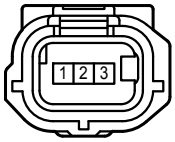

C 27
Black



C 28
Black




C 29
Black



C 30
Gray




C 31
Brown

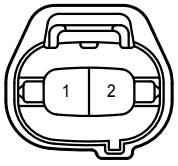


C 32
Gray




C 33
Black

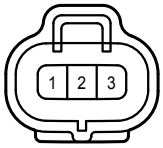


C 37
Black

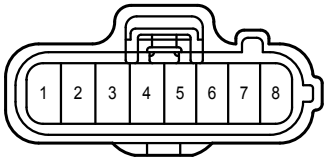


C 38
Dark Gray

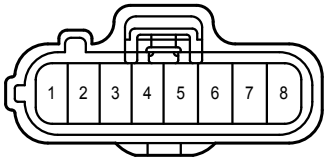


C 39
Gray

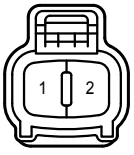


C 42
White

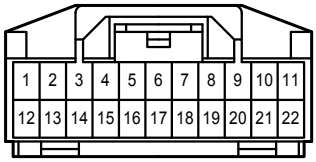


C 43
White

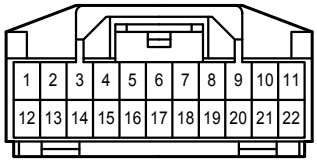

C 44
Blue

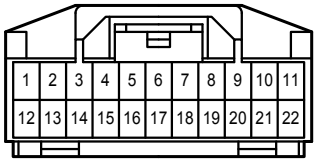

C 46
Black

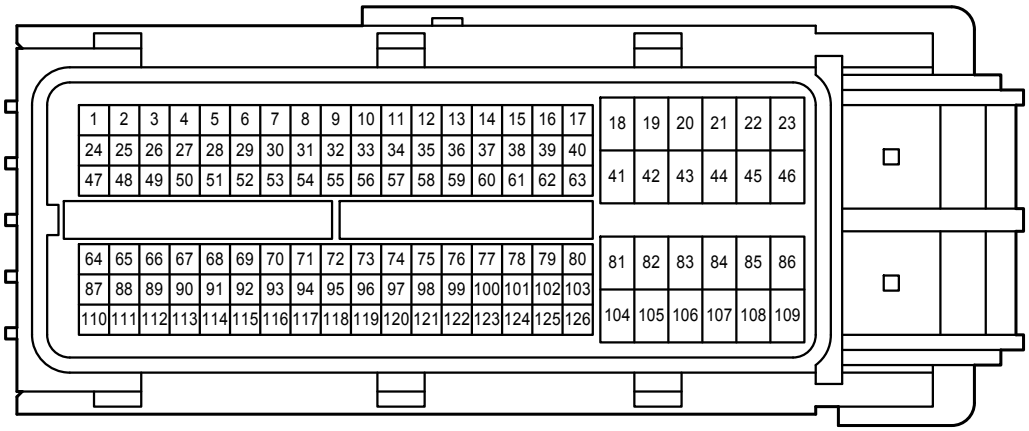

C 47
Black



C 50
Black

