


D8
D2
D9
D10
D5
D6
D11
D4
D1
B2
B3
D7
B1
B4


B 1 Fog Light Assembly LH
B 2 Fog Light Assembly RH
B 3 No.1 Ultrasonic Sensor RH
B 4 No.1 Ultrasonic Sensor LH

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor


B 1
Brown

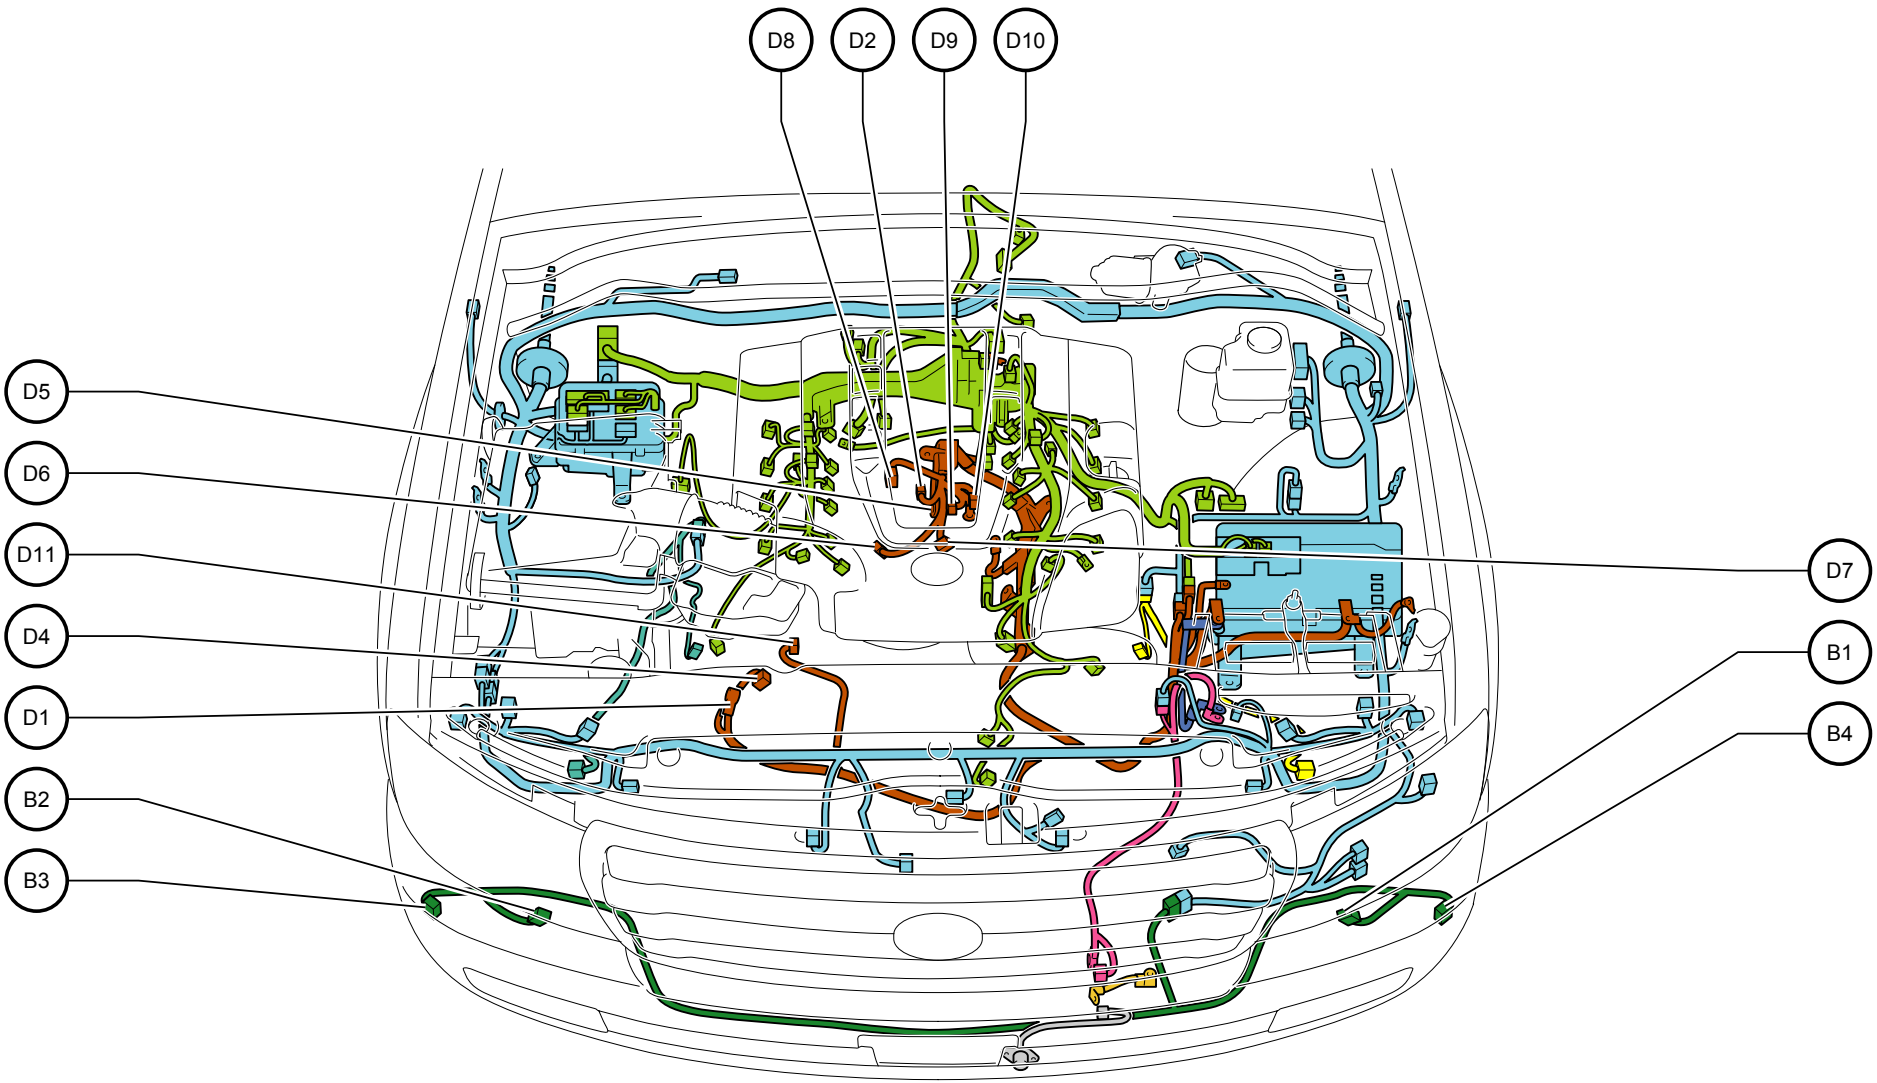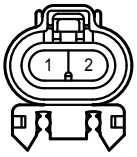


B 2
Brown

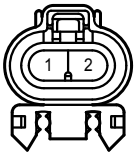


B 3
Black

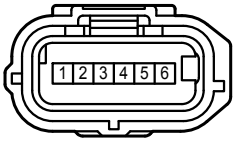

B 4
Black

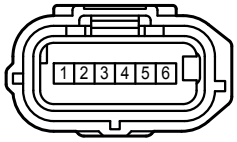

D 1




D 2
Black




D 4
Black




D 5




D 6
Gray

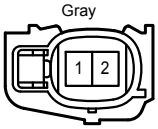


D 7
Black




D 8
Gray

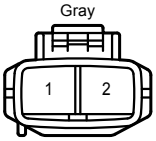

D 9
Black

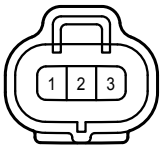

D 10
Black

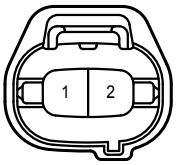

D 11
Gray

