


D8
D2
D9
D10
D5
D7
D6
D11
D4
D1

D 1 Generator Assembly
D 2 Starter Assembly
D 4 Generator Assembly
D 5 Starter Assembly
D 6 Knock Control Sensor (Bank 2)
D 7 Knock Control Sensor (Bank 1)
D 8 Air Pump Assembly
D 9 Air Pressure Sensor
D 10 Air Switching Valve
D 11 Engine Oil Level Sensor

D 1

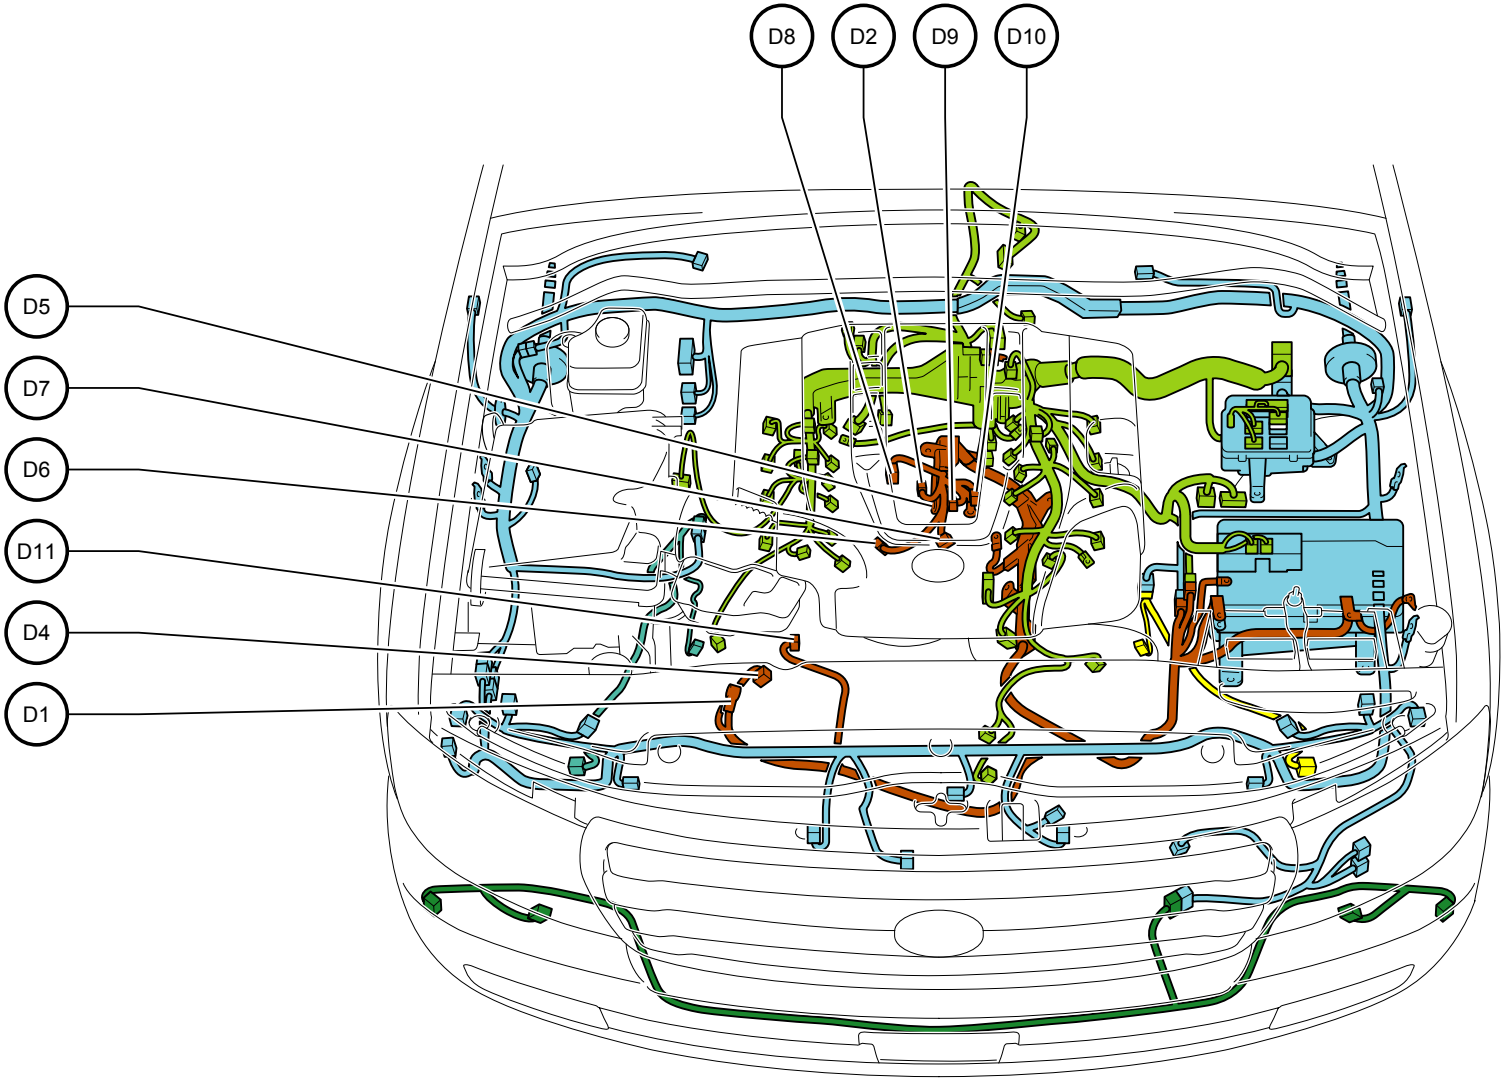


D 2
Black




D 4
Black




D 5




D 6
Gray



D 7
Black




D 8
Gray

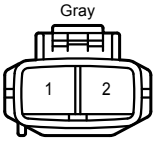

D 9
Black



D 10
Black

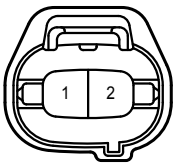

D 11
Gray

