


U6
U5
a4
a3
a2
a1
z34
z17
a8
a7
a6
a5
z35
z18
U4
U3

U 3 Knock Control Sensor (Bank 1 Sensor 1)
U 4 Knock Control Sensor (Bank 2 Sensor 1)
U 5 Knock Control Sensor (Bank 1 Sensor 2)
U 6 Knock Control Sensor (Bank 2 Sensor 2)


a 1 Fuel Injector Assembly No.2
a 2 Fuel Injector Assembly No.4
a 3 Fuel Injector Assembly No.6
a 4 Fuel Injector Assembly No.8
a 5 Fuel Injector Assembly No.1
a 6 Fuel Injector Assembly No.3
a 7 Fuel Injector Assembly No.5
a 8 Fuel Injector Assembly No.7

z 17 Front Speed Sensor RH
z 18 Front Speed Sensor LH
z 34 Front Height Control Sensor Sub-Assembly RH
z 35 Front Height Control Sensor Sub-Assembly LH


U 3
Gray

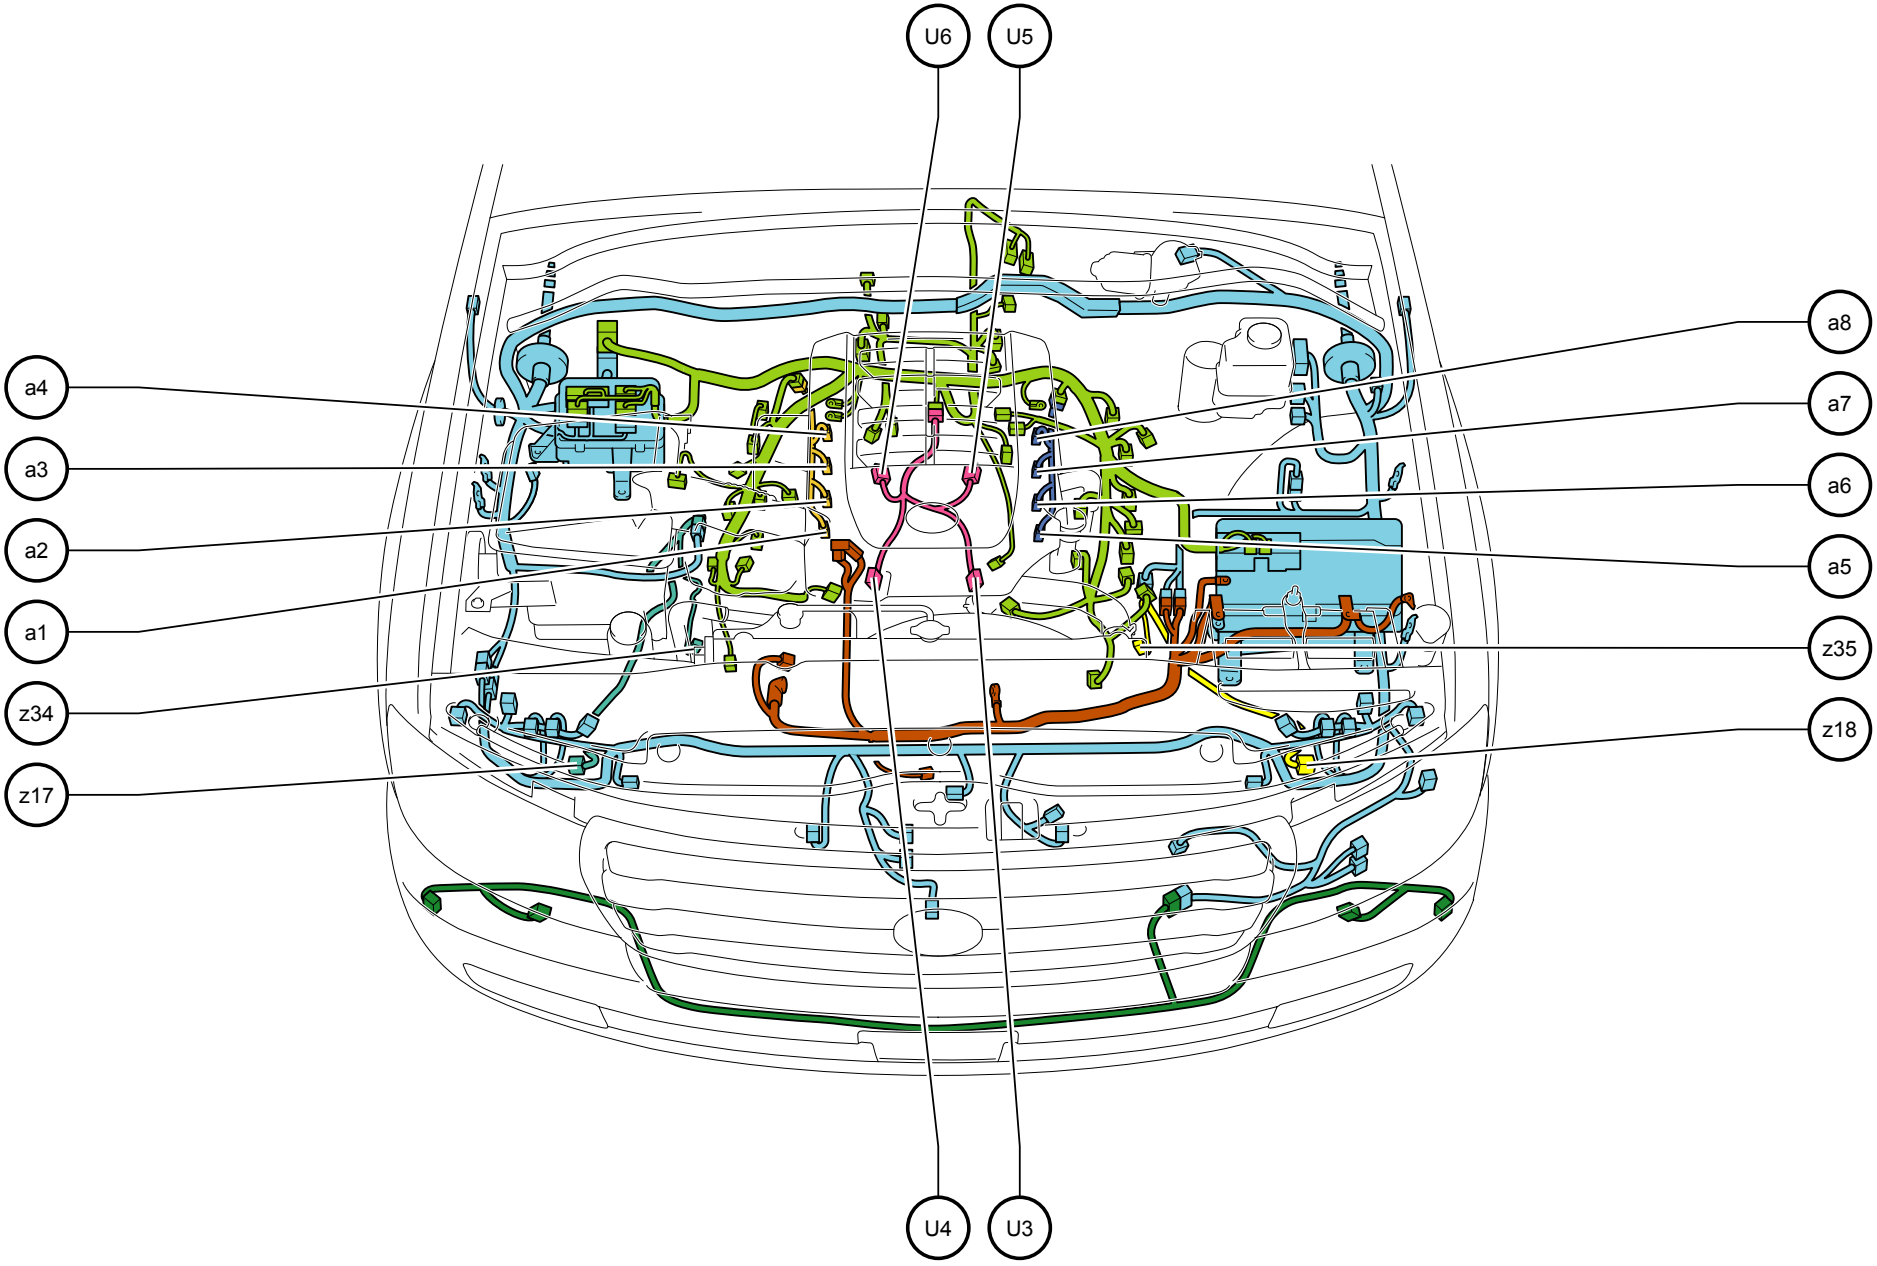


U 4
Black




U 5
Gray




U 6
Black




a 1
Black

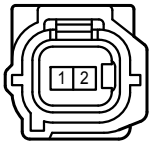


a 2
Black

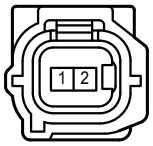


a 3
Black

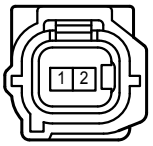


a 4
Black

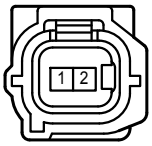


a 5
Black

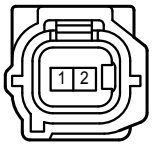


a 6
Black

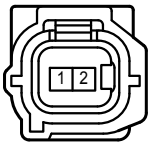

a 7
Black

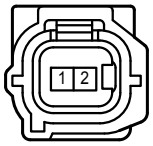

a 8
Black

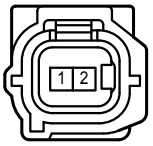


z 17
Black



z 18
Black



z 34
Black

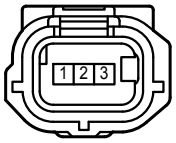

z 35
Black

