


* 1:w/ Seat Position Memory
* 2:w/o Seat Position Memory
* 3:Except Lumbar Support Only
* 4:Lumbar Support Only
(*4)
z57
c13
c7
L33
c31
(*1)
c27
z58
(*2)
c2
c26
c6
c17
c22
c30
c18
c19
c25
c34
c23
c20
c36
c35
c3
c1
c7
(*3)
c4
c32
c29
(*4)
c29
(*3)
c5
c33
c28
(*4)
c28
(*3)
c12

L 33 Front Seat Inner Belt Assembly RH

c 1 Front Seat Heater Assembly RH
c 2 Front Power Seat Switch Assembly RH
c 3 Front Power Seat Slide Position Motor Assembly RH
c 4 Front Power Seat Lift Position Motor Assembly RH
c 5 Front Power Seat Vertical Position Motor Assembly RH
c 6 Front Power Seat Reclining Position Motor Assembly RH
c 7 Front Seat Inner Belt Assembly RH
c 12 Junction Connector
c 13 Front Seat Heater Assembly LH
c 17 Front Power Seat Slide Position Motor Assembly LH
c 18 Front Power Seat Lift Position Motor Assembly LH
c 19 Front Power Seat Vertical Position Motor Assembly LH
c 20 Front Power Seat Reclining Position Motor Assembly LH
c 22 Front Seat Inner Belt Assembly LH
c 23 Junction Connector
c 25 Front Power Seat Switch Assembly LH
c 26 Front Position Control ECU and Switch Assembly RH
c 27 Front Position Control ECU and Switch Assembly RH
c 28 Front Power Seat Switch Assembly RH
c 29 Front Lumbar Support Forward and Back Motor Assembly RH
c 30 Front Seat Inner Belt Assembly LH
c 31 Seat Climate Control Blower RH
c 32 Seat Climate Control ECU RH
c 33 Front Seat Cushion Heater Assembly RH
c 34 Seat Climate Control Blower LH
c 35 Seat Climate Control ECU LH
c 36 Front Seat Cushion Heater Assembly LH

z 57 Front Side Airbag Squib Circuit LH
z 58 Front Side Airbag Squib Circuit RH


L 33
Gray

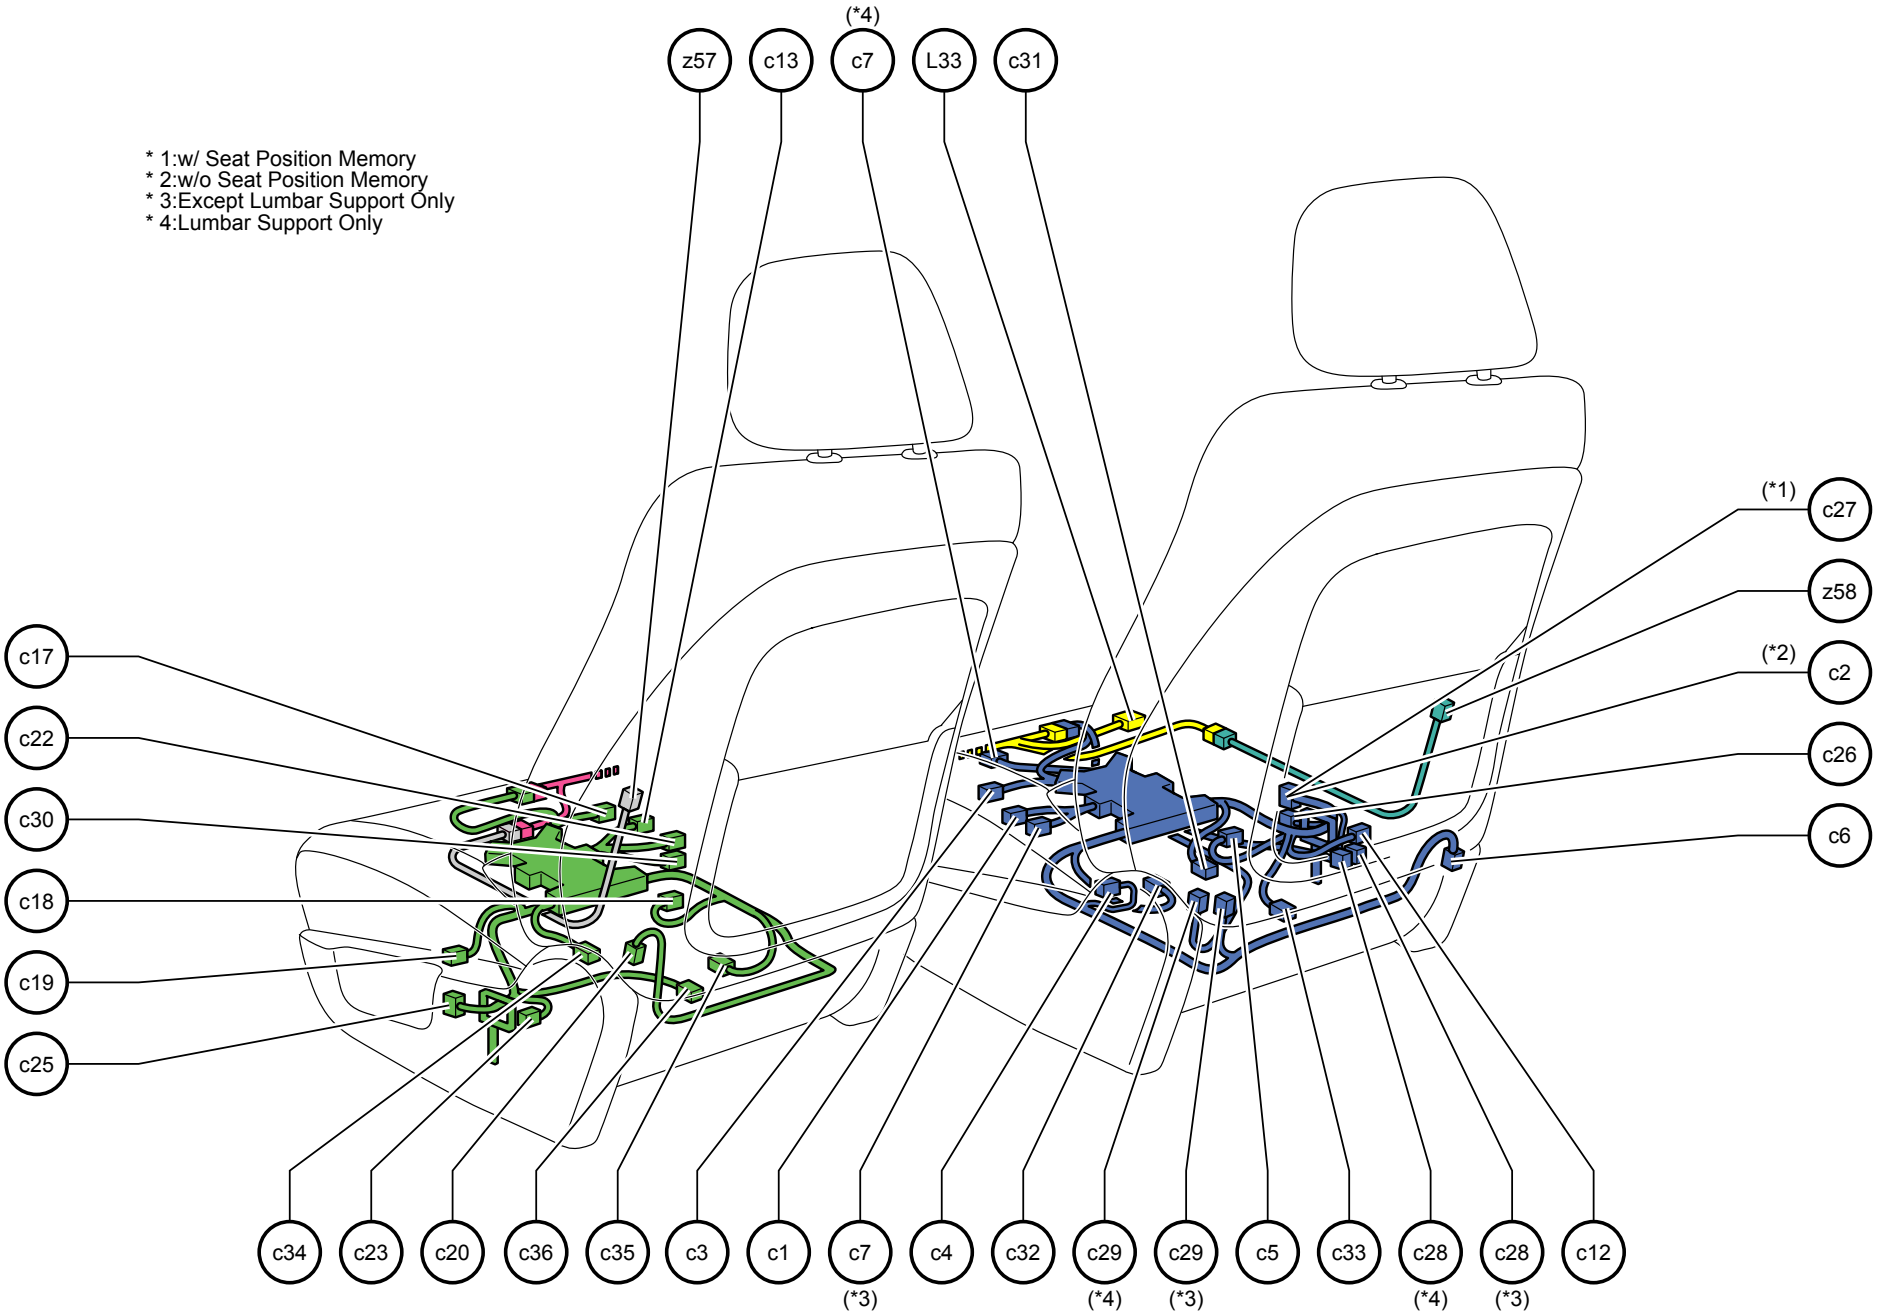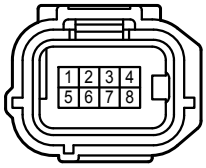


c 1
White




c 2
Black

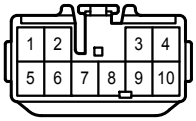


c 3
White




c 4
White




c 5
White




c 6
White



c 7
White

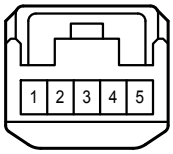


c 12
White




c 13
White




c 17
White




c 18
White




c 19
White




c 20
White




c 22
White

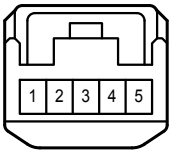


c 23
White




c 25
Black

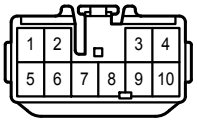


c 26
Gray

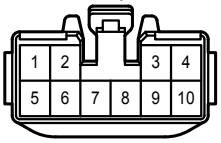


c 27
White

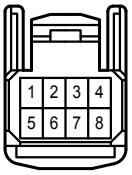


c 28
White

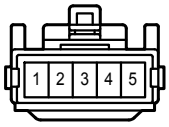


c 29
White




c 30
White

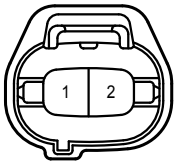


c 31
White

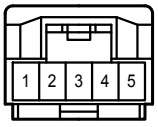


c 32
White

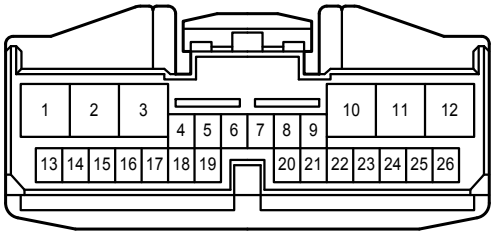


c 33
White




c 34
White

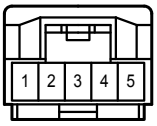


c 35
White

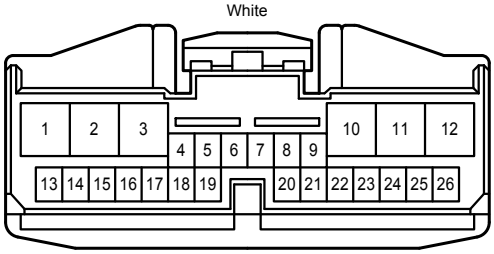

c 36
White



z 57
White



z 58
White

