
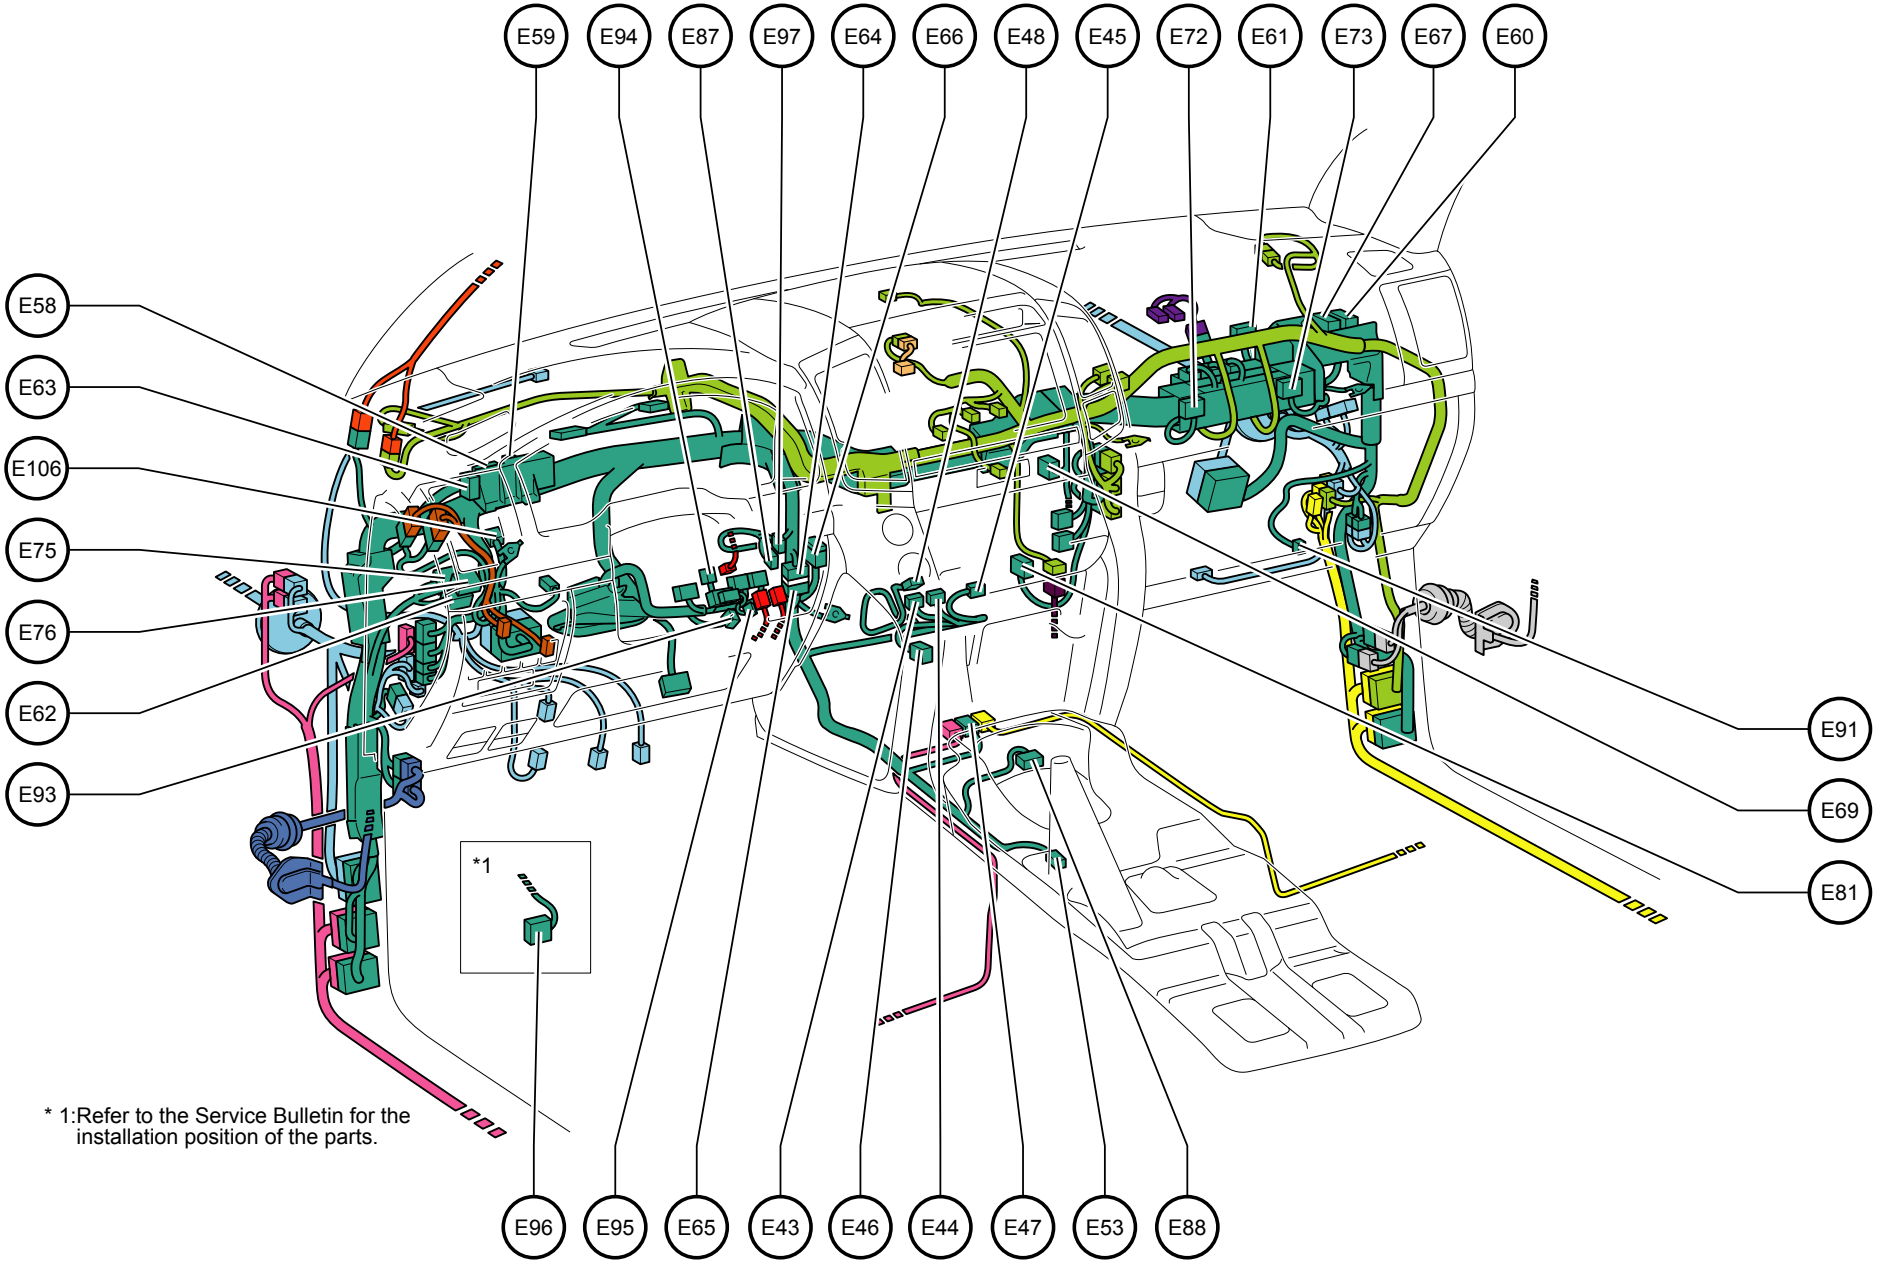


* 1:Refer to the Service Bulletin for the installation position of the parts.

E 43 Cigarette Lighter Assembly
E 44 Cigarette Lighter Illumination Assembly
E 45 Ash Receptacle Light Sub-Assembly
E 46 Front Power Outlet Socket Assembly
E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 53 Parking Brake Switch Assembly
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 69 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 81 A/C Amplifier Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 106 Junction Connector


E 43
White




E 44
Gray




E 45
White




E 46
White



E 47
Yellow

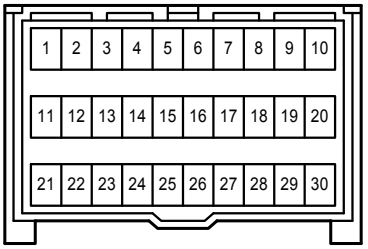


E 48
Black

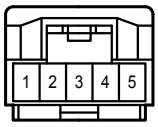


E 53
White




E 58

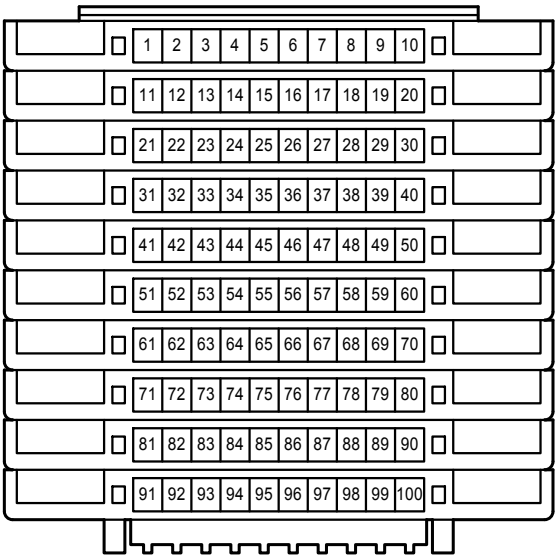


E 59

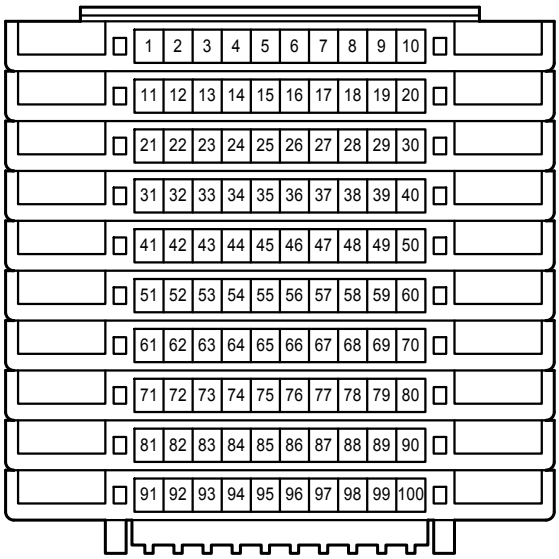


E 60

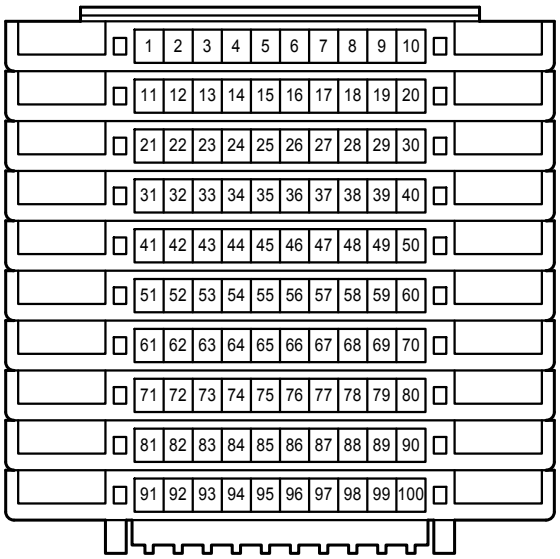


E 61

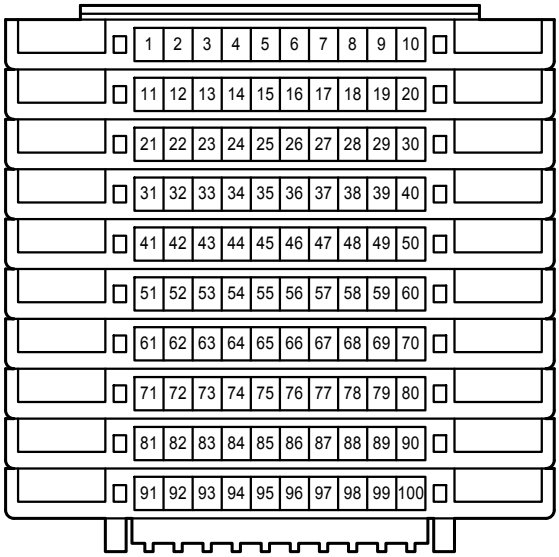


E 62
White

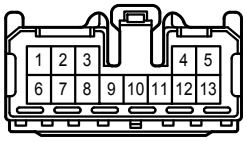


E 63
Gray




E 64
Black

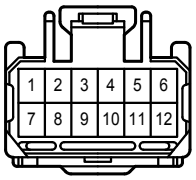


E 65
Black

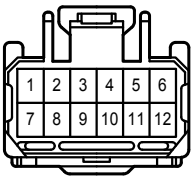


E 66
White

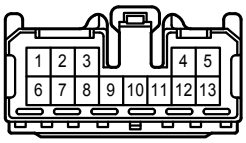


E 67
White

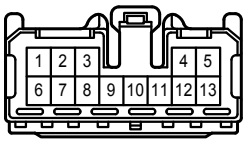


E 69
Gray

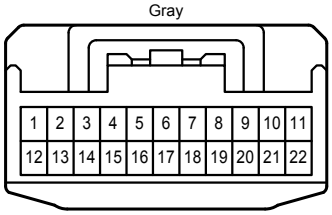


E 72
Gray

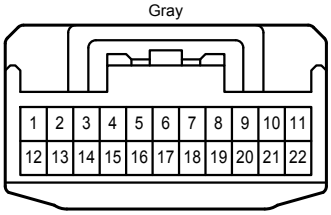


E 73
Gray

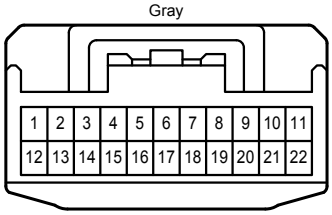


E 75
Gray

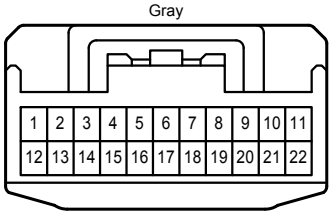

E 76
Gray

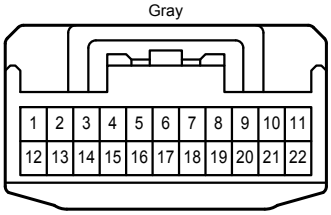


E 81
White

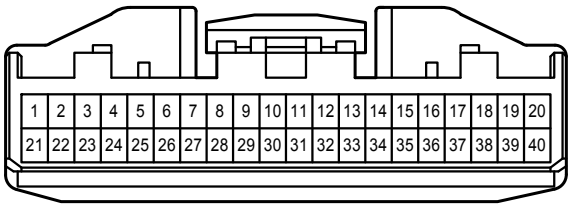


E 87
White




E 88
Black

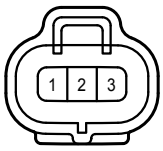


E 91
White

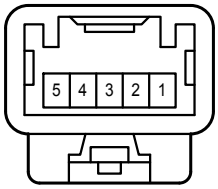


E 93
White

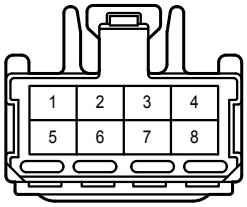


E 94
White




E 95
Black

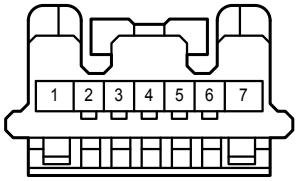

E 96
Black

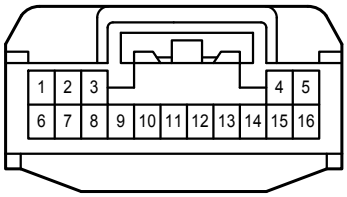

E 97
Black

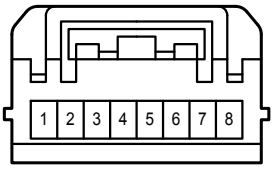

E106
White

