



* 3:Refer to the Service Bulletin for the installation position of the parts.
E62
E67
E61
E72
E65
E106
E81
E97
E68
E69
E63
E75
E71
E73
E64
E66
E59
E74
E60
E58
E76
E91
*3
E88
E53
E47
E48
E87
E70
E94
E95
E93
E96

E 47 Center Airbag Sensor Assembly
E 48 Transfer Position Switch
E 53 Parking Brake Switch Assembly
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 61 Junction Connector
E 62 Junction Connector
E 63 Junction Connector
E 64 Junction Connector
E 65 Junction Connector
E 66 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 Junction Connector
E 70 Junction Connector
E 71 Junction Connector
E 72 Junction Connector
E 73 Junction Connector
E 74 Junction Connector
E 75 Junction Connector
E 76 Junction Connector
E 81 A/C Amplifier Assembly
E 87 Differential Lock Switch
E 88 Deceleration Sensor
E 91 Option Connector (Parking Assist-Sensor)
E 93 Ignition or Starter Switch Assembly
E 94 Un-Lock Warning Switch Assembly
E 95 Transponder Key Amplifier
E 96 Transponder Key ECU Assembly
E 97 Idle Up Switch
E 106 Junction Connector

E 47
Yellow

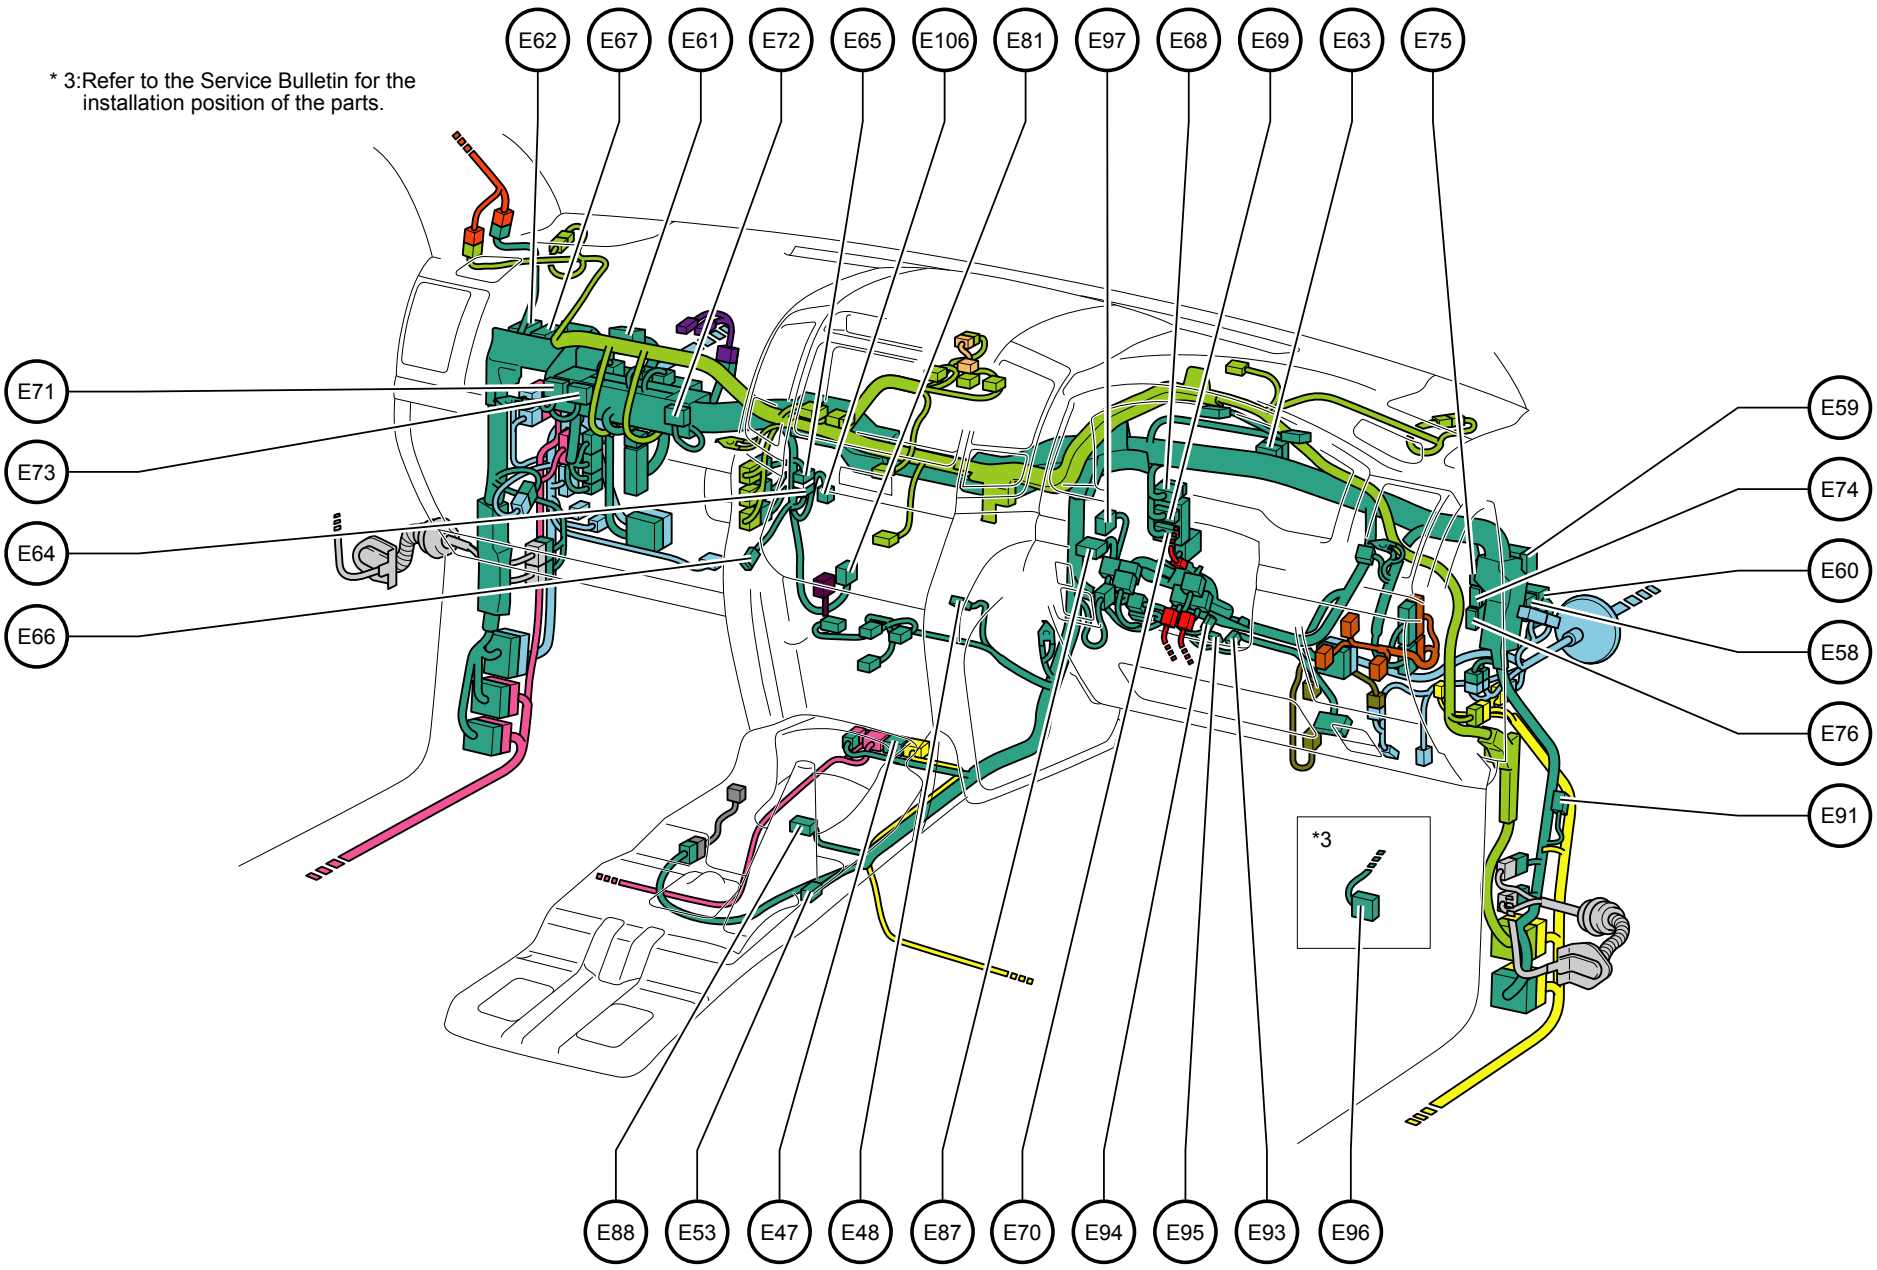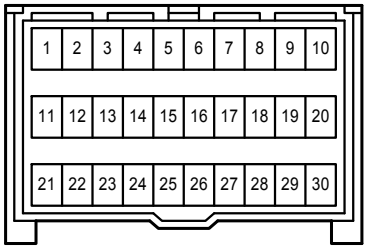


E 48
Black

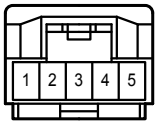


E 53
White




E 58

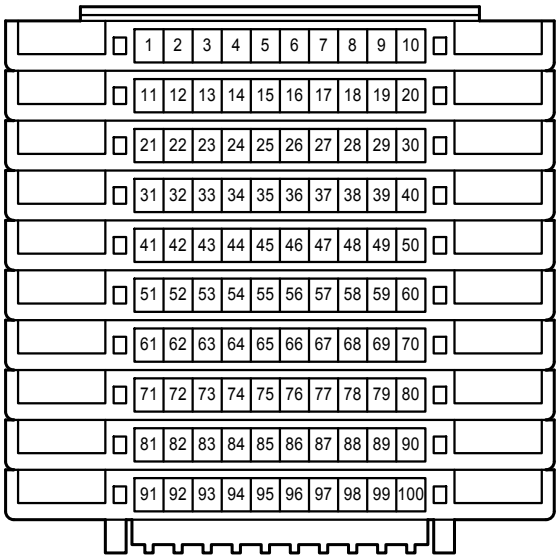


E 59

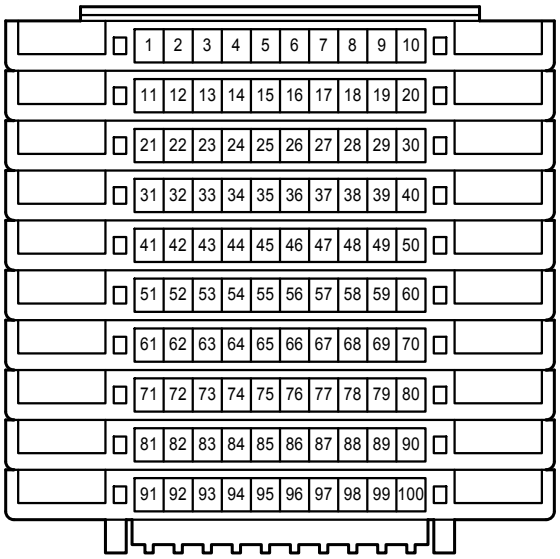


E 60

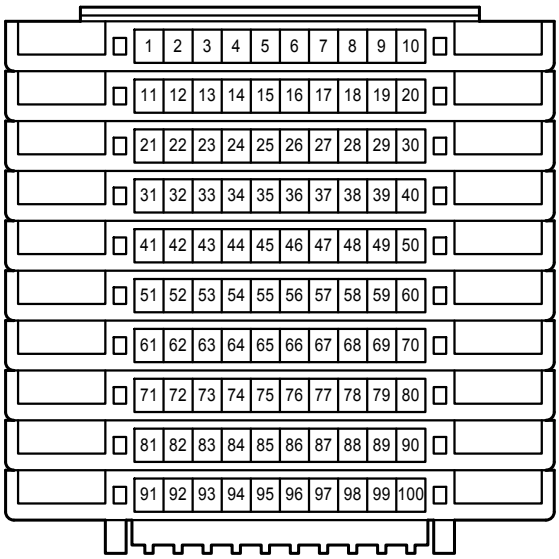


E 61

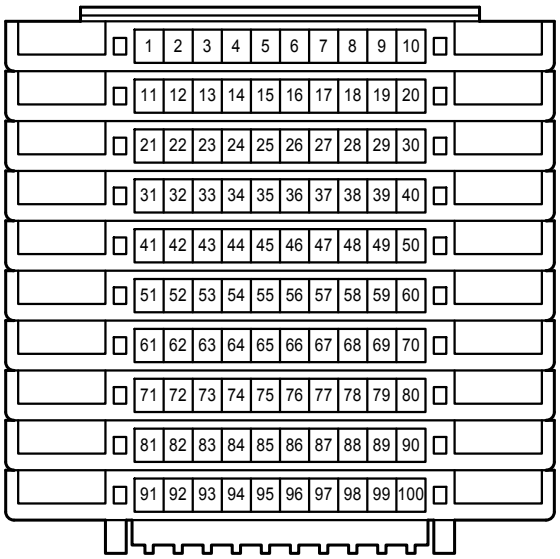


E 62
White

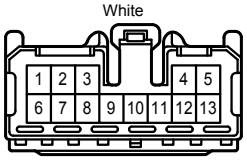


E 63
Gray




E 64
Black

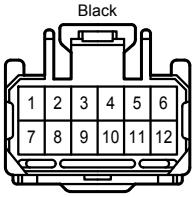


E 65
Black

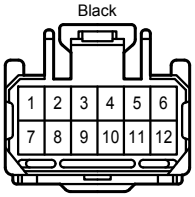


E 66
White

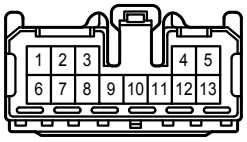


E 67
White

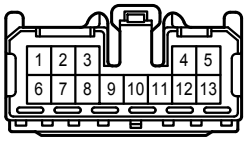


E 68
Gray

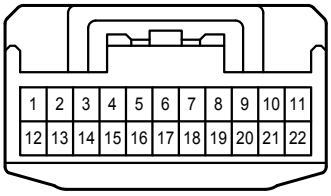


E 69
Gray

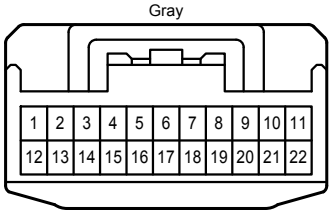


E 70
Gray

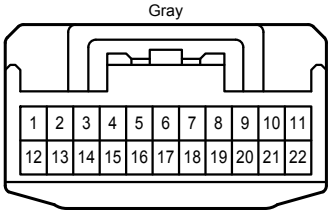


E 71
Gray

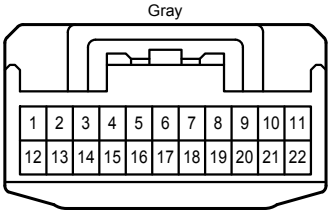


E 72
Gray

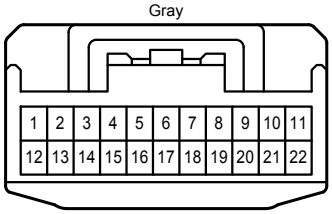


E 73
Gray

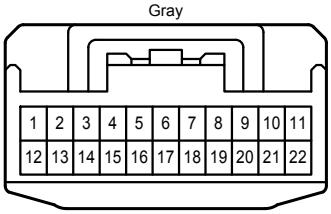


E 74
Gray

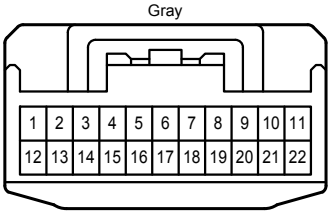


E 75
Gray

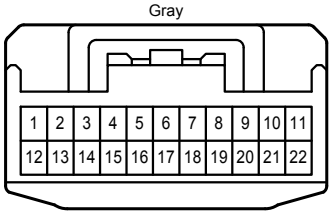

E 76
Gray

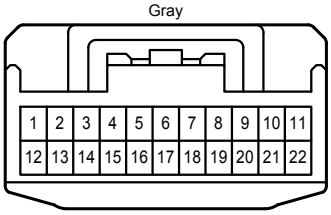

E 81
White

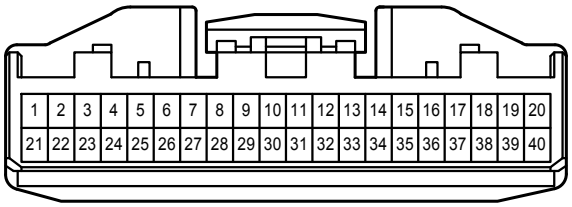


E 87
White




E 88
Black




E 91
White

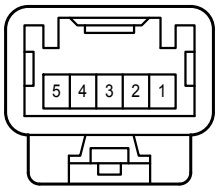


E 93
White

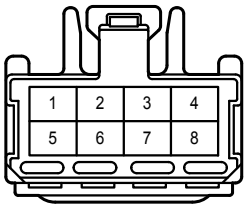


E 94
White




E 95
Black

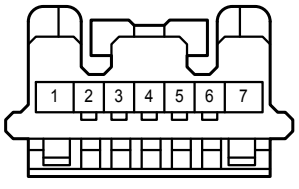

E 96
Black

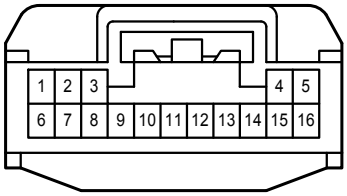

E 97
Black

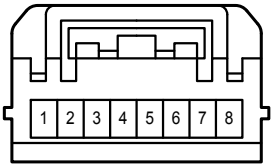

E106
White

