




(BAT)
60A
AHC
(IG)
5A
LH–IG
(BAT)
20A
AHC–B
(BAT)
10A
AHC–B
No. 2
(IG)
5A
ECU–IG
No. 4
1 1L
55 2D
11 3C
1 3C
5 3C
2 AK1
W
G
G (*4)
E58
Junction
Connector
99
9
G
66
E61
Junction
Connector
46
G
29 EK1
30 EK1
37 EK2
W
R
G
1
1
5
1
AHC
Relay
3
2
16 C
RC
1 B
BAT
3 A
BAT2
5 A
IG
K34(A), K35(B), K36(C)
Suspension Control ECU
TD
DNSW
UPSW
TSW1
TSW2
GND
GND
11 A
21 A
20 A
2 A
9 A
1 A
6 B
W–R
W–B
1 AL2
W
G
G (*4)
6 VE3
41 EK1
45 EK1
39 EK1
38 EK1
40 EK1
W
G
LG
GR
B
4 VE2
3 VE2
2 VE2
5 VE2
6 VE2
W
G
LG
GR
B
5 A
6 A
7 A
15 A
14 A (*3)
10 B
9 B
8 B
7 B
6 B
5 B (*4)
IG
N
LO
HI
ECU1
ECU2
Height Control Switch
Height Control Off Switch
TEMS Switch
E
V4(A), (B)
Suspension Control Switch
20 A (*3)
16 B (*4)
W–B
1 VE1 (*1)
1 VE3 (*2)
L36
Height Control Pump
and Motor Assembly
2
M
1
A34
Junction
Connector
1
3
W–B
W–B
(LHD)
W–B
(RHD)
E66
Junction
Connector
9
1
W–B
W–B
W–B
W–B
W–B
L2
L3
A3
A1
E2
K3


* 1 : Before Jul. 2009 Production
* 2 : From Jul. 2009 Production
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production

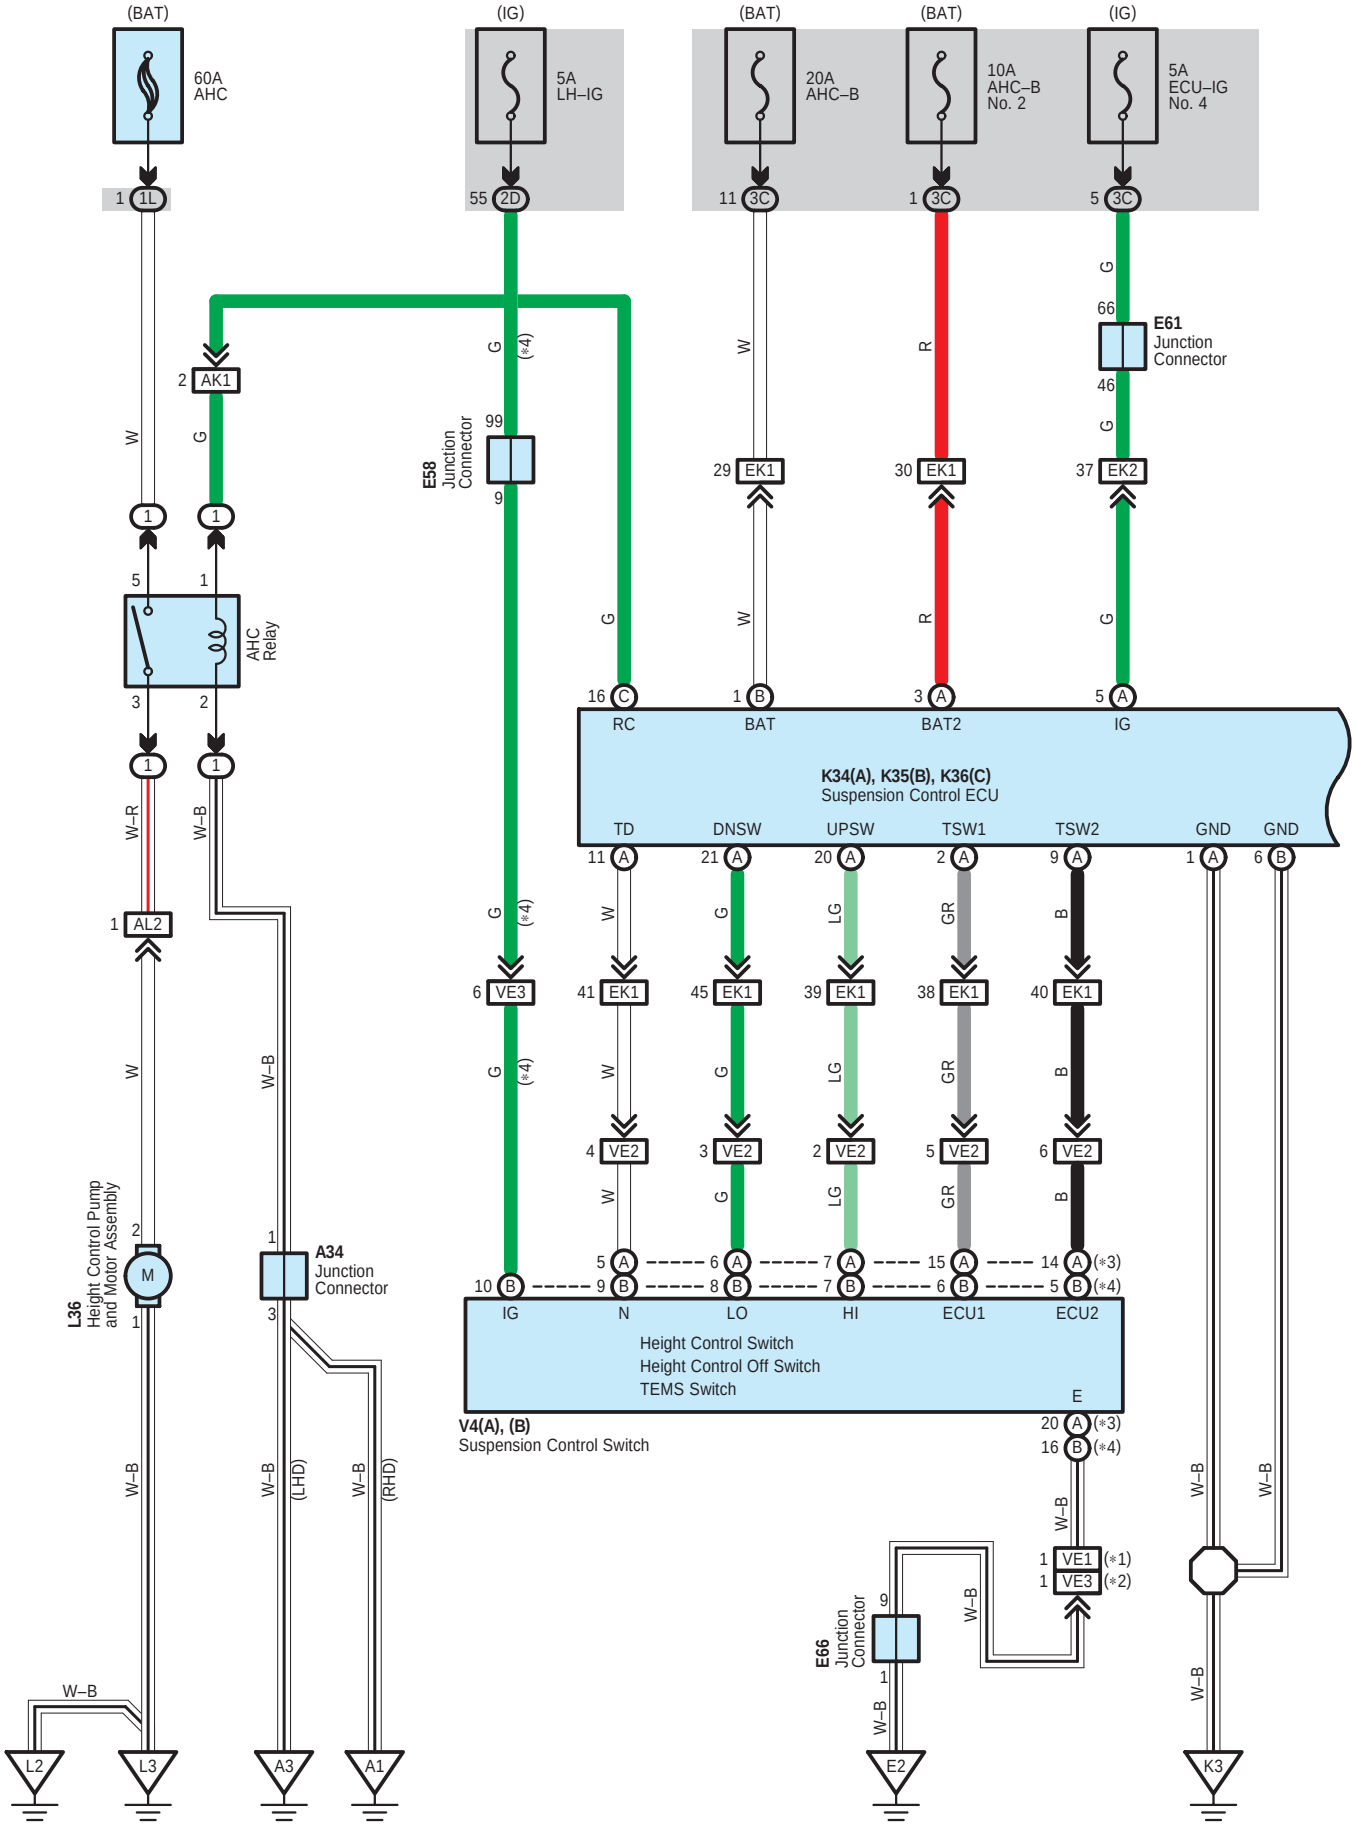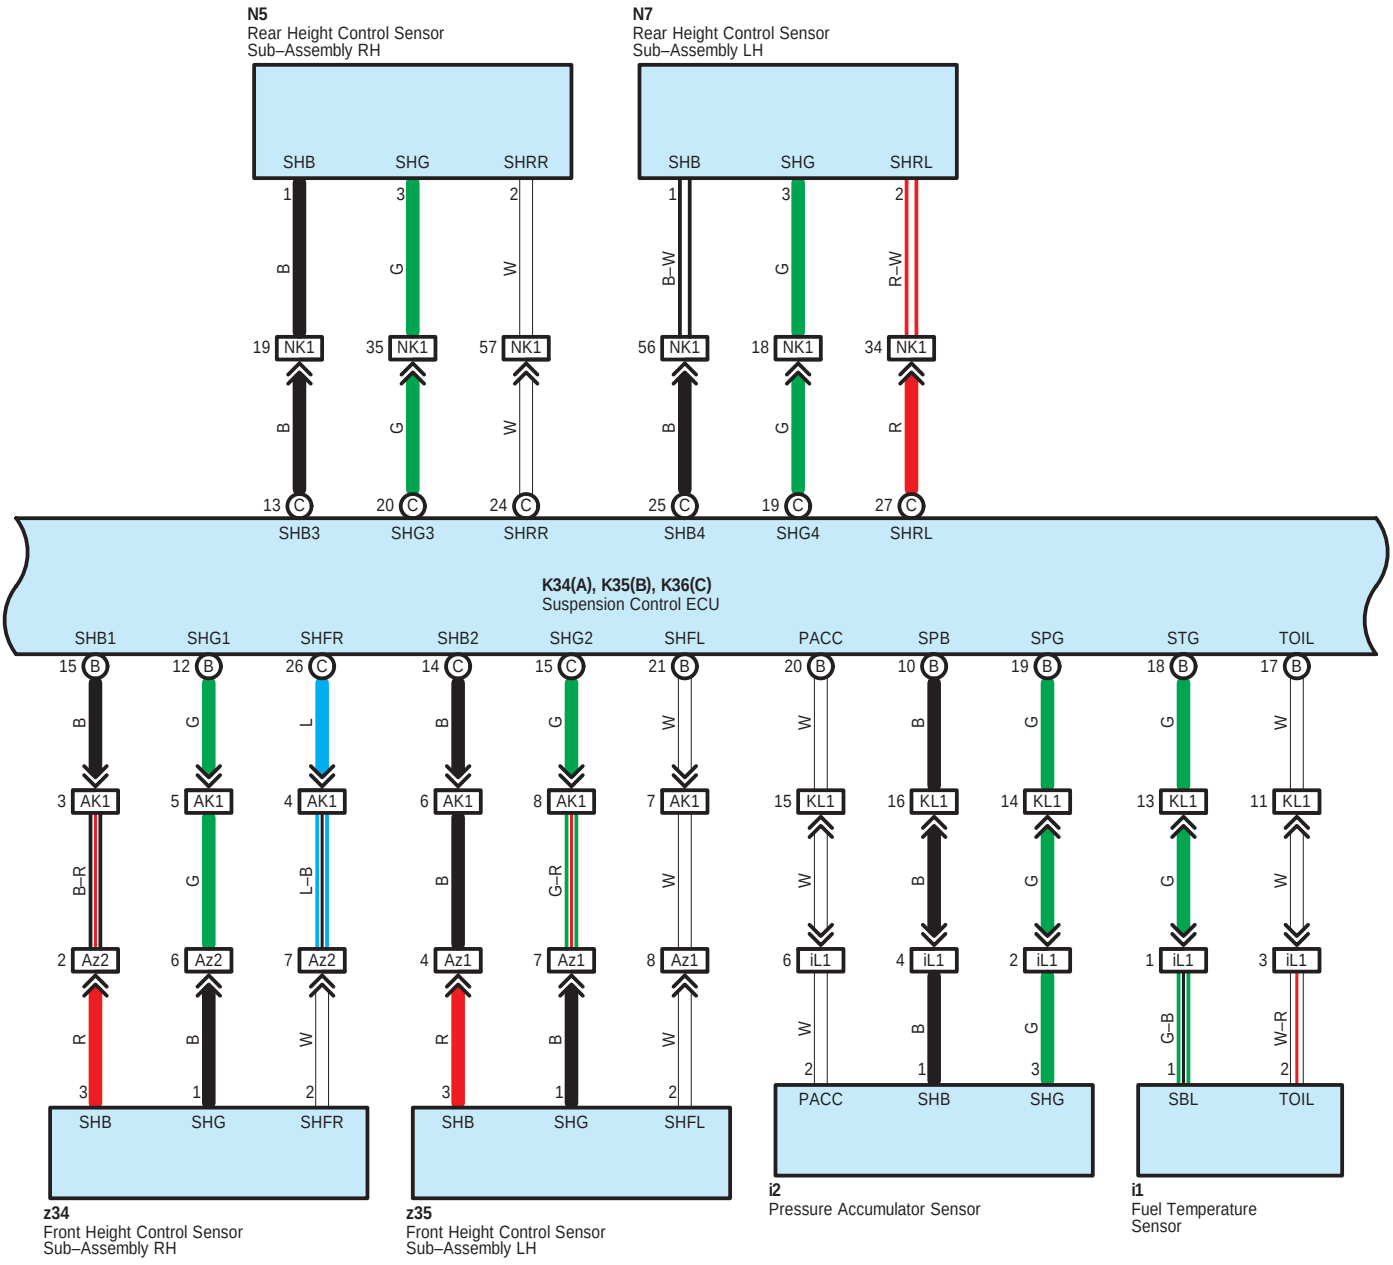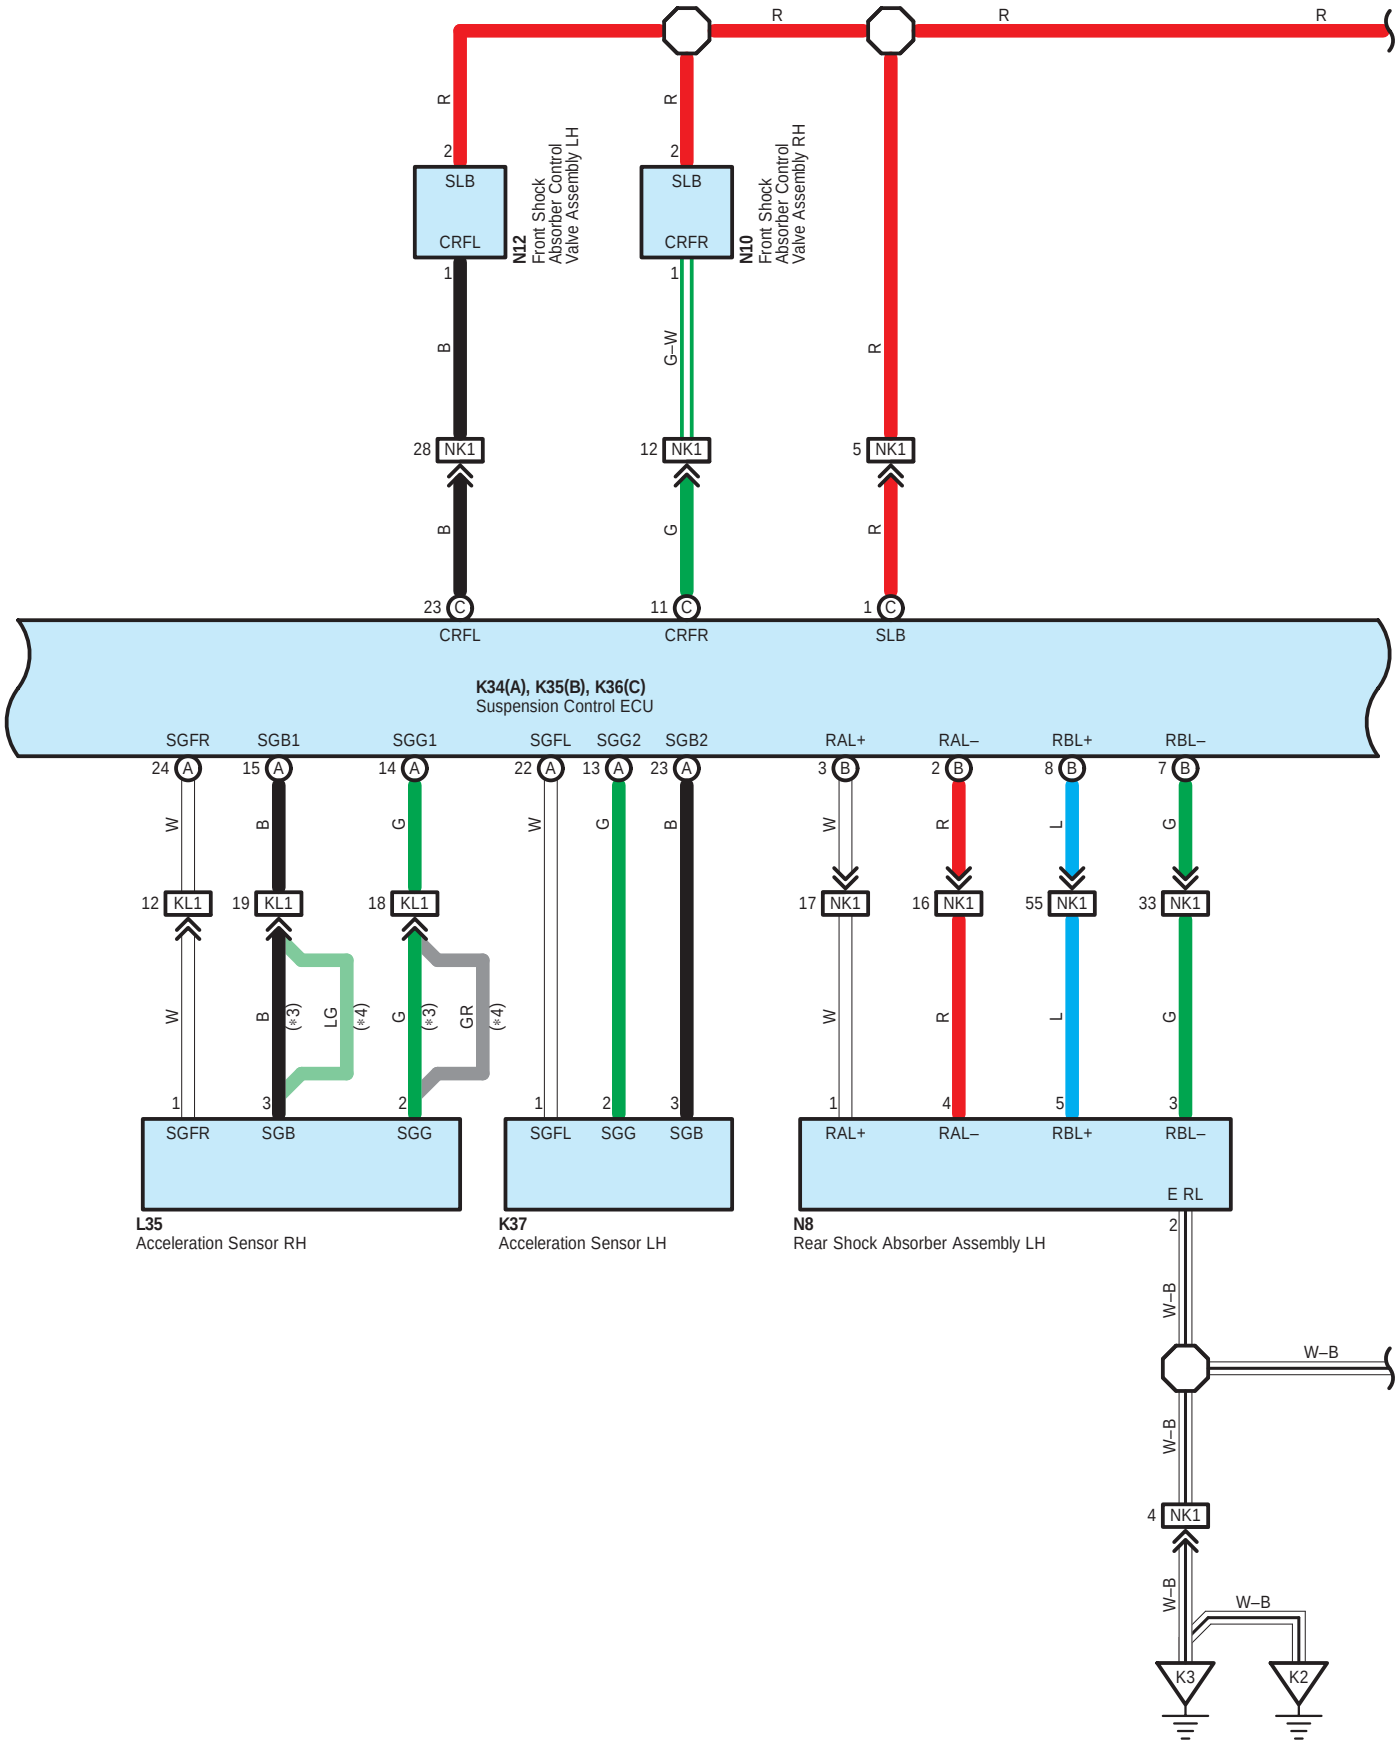




R
R
R
R
2
SLB
CRFL
1
N12
Front Shock Absorber Control Valve Assembly LH
2
SLB
CRFR
1
N10
Front Shock Absorber Control Valve Assembly RH
B
G–W
R
28 NK1
12 NK1
5 NK1
B
G
R
23 C
CRFL
11 C
CRFR
1 C
SLB
K34(A), K35(B), K36(C)
Suspension Control ECU
SGFR
SGB1
SGG1
SGFL
SGG2
SGB2
RAL+
RAL–
RBL+
RBL–
24 A
15 A
14 A
22 A
13 A
23 A
3 B
2 B
8 B
7 B
W
B
G
W
G
B
W
R
L
G
12 KL1
19 KL1
18 KL1
17 NK1
16 NK1
55 NK1
33 NK1
W
B
(*3)
LG
(*4)
G
(*3)
GR
(*4)
W
R
L
G
1
3
2
1
2
3
1
4
5
3
SGFR
SGB
SGG
SGFL
SGG
SGB
RAL+
RAL–
RBL+
RBL–
E RL
L35
Acceleration Sensor RH
K37
Acceleration Sensor LH
N8
Rear Shock Absorber Assembly LH
2
W–B
W–B
W–B
4 NK1
W–B
W–B
K3
K2

* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production

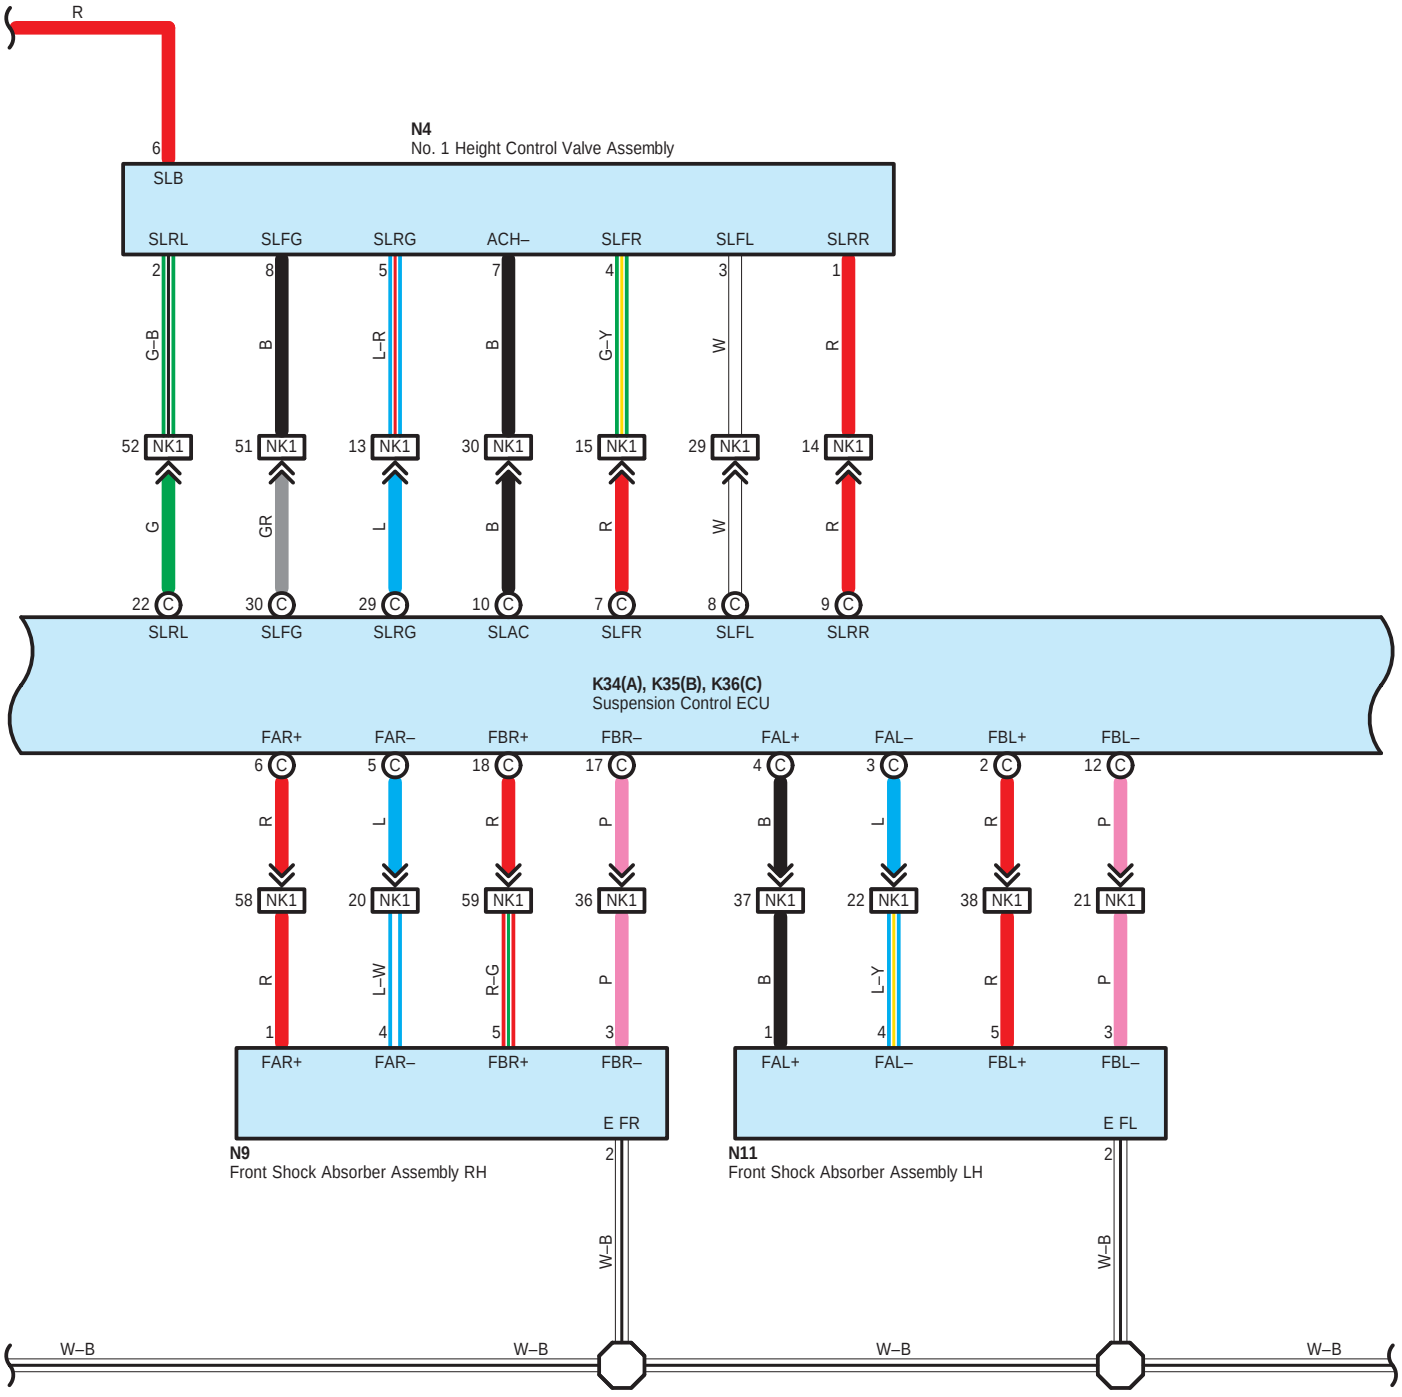


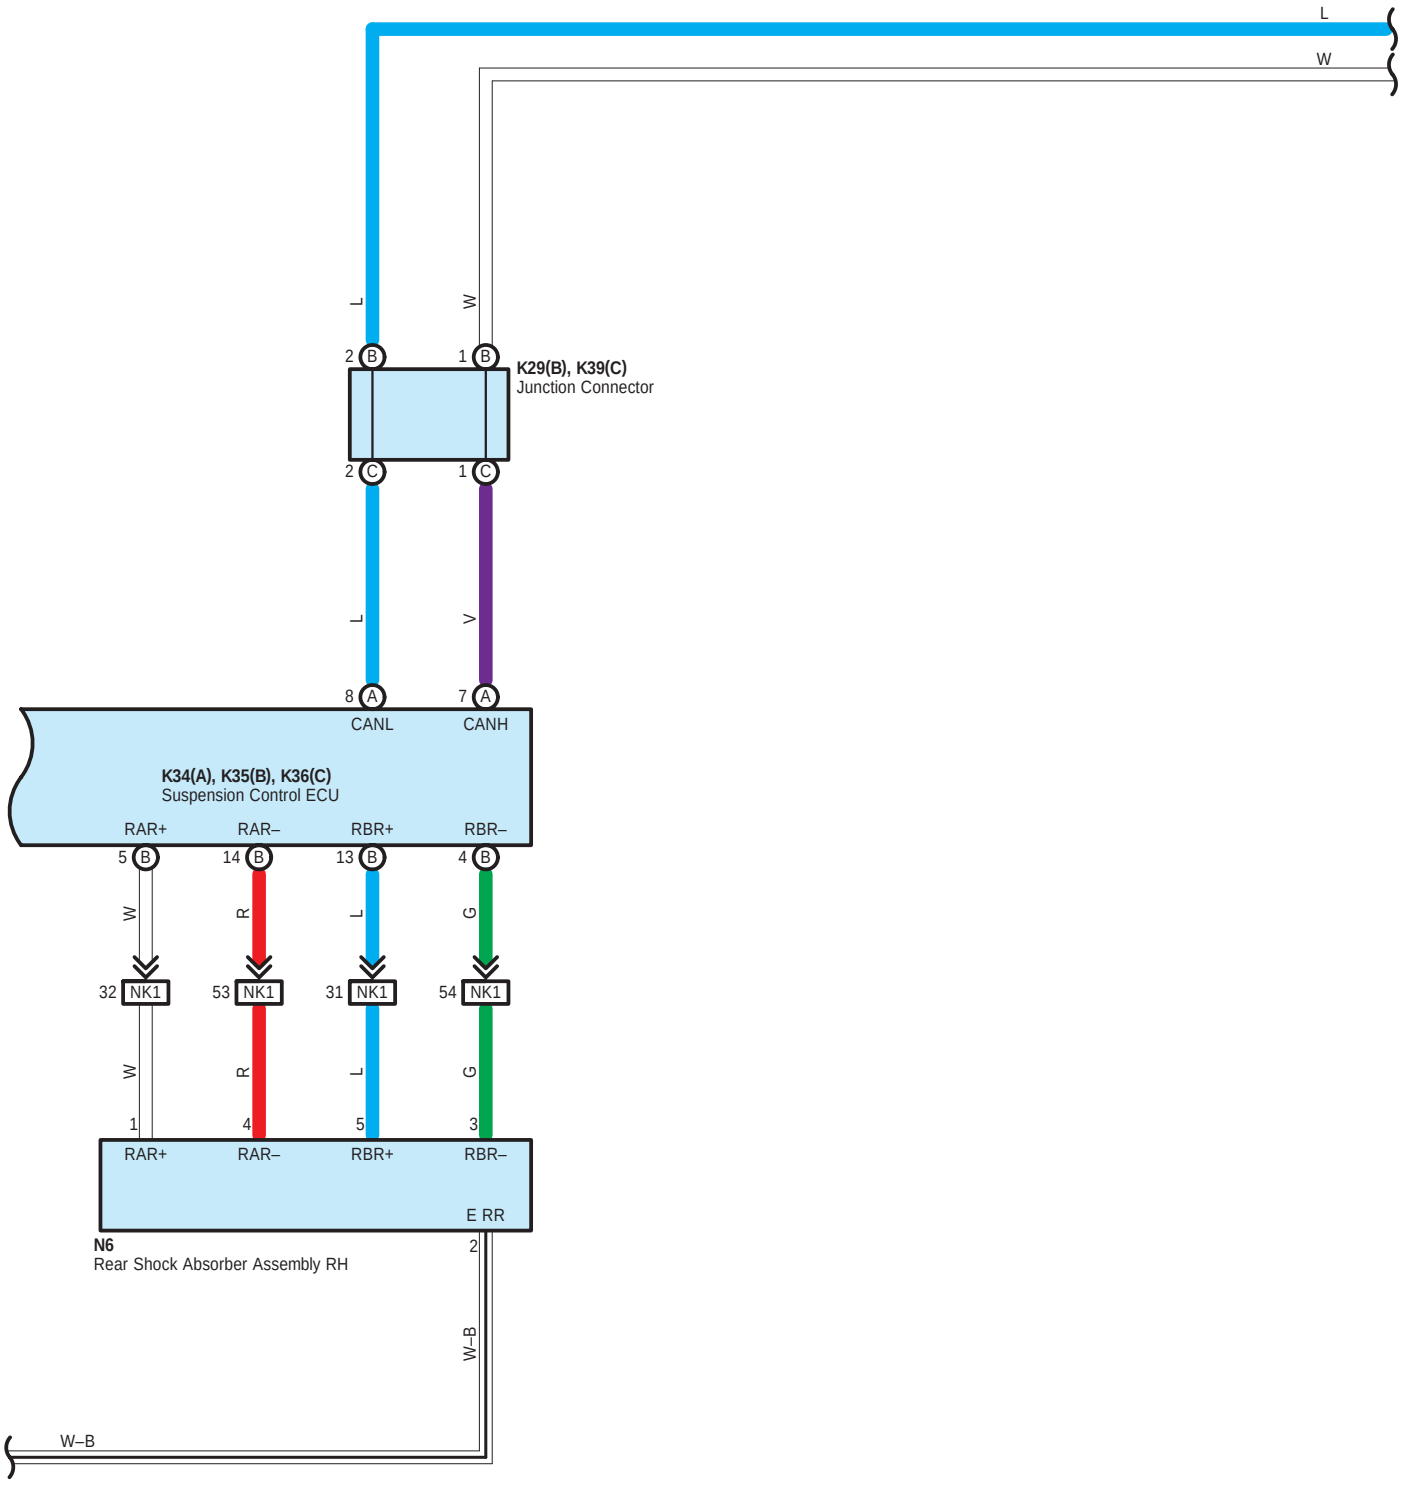
L
W
L
W
2 B
1 B
K29(B), K39(C)
Junction Connector
2 C
1 C
L
V
8 A
7 A
CANL
CANH
K34(A), K35(B), K36(C)
Suspension Control ECU
RAR+
RAR–
RBR+
RBR–
5 B
14 B
13 B
4 B
W
R
L
G
32 NK1
53 NK1
31 NK1
54 NK1
W
R
L
G
1
4
5
3
RAR+
RAR–
RBR+
RBR–
E RR
2
N6
Rear Shock Absorber Assembly RH
W–B
W–B

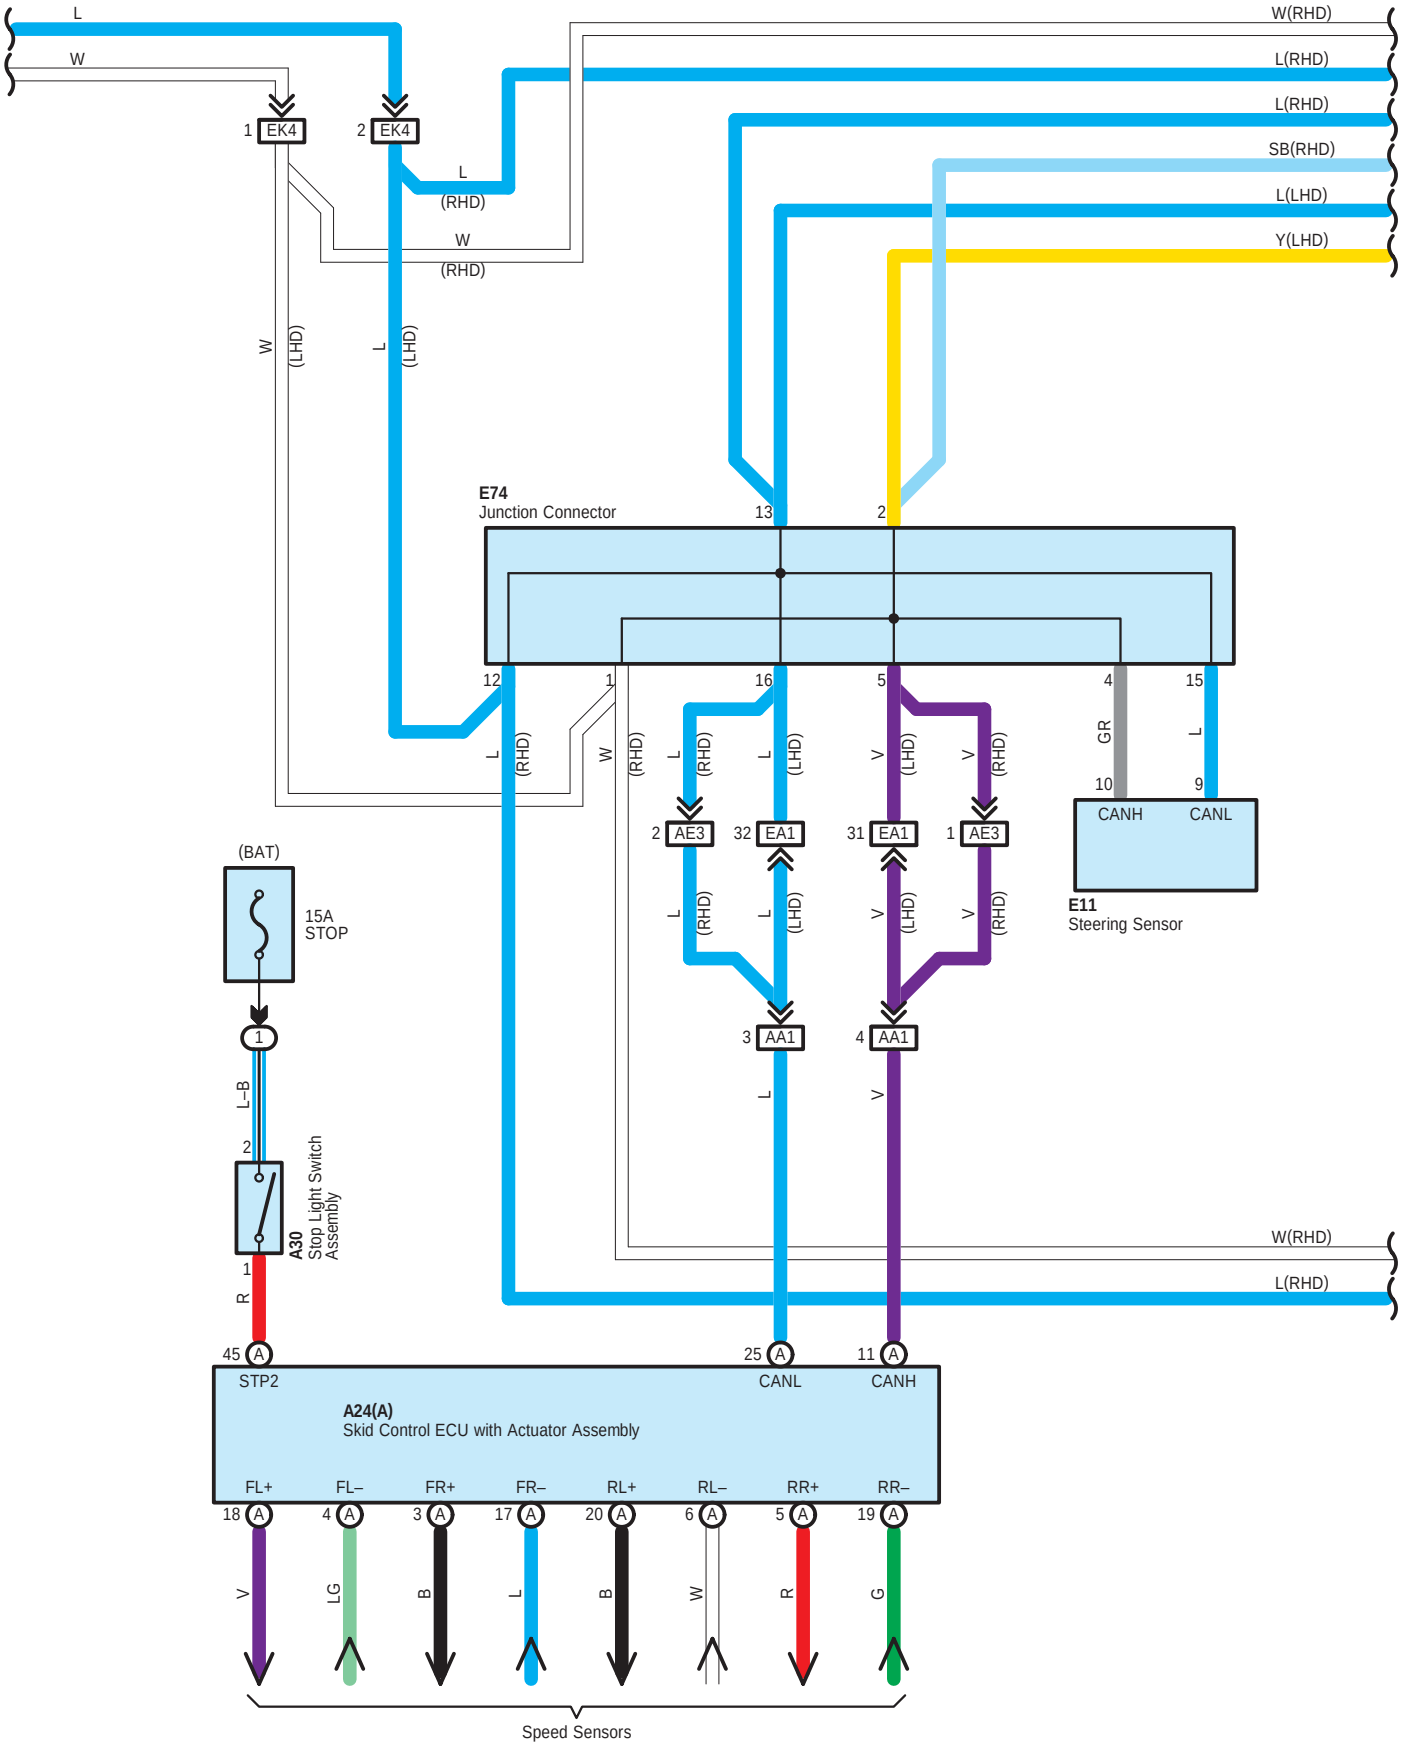

L
W
1 EK4
2 EK4
L (RHD)
W (RHD)
W (LHD)
L (LHD)
W(RHD)
L(RHD)
L(RHD)
SB(RHD)
L(LHD)
Y(LHD)
E74
Junction Connector
13
2
12
1
16
5
4
15
GR
L
10
9
CANH
CANL
E11
Steering Sensor
2 AE3
32 EA1
31 EA1
1 AE3
3 AA1
4 AA1
(BAT)
15A
STOP
1
L–B
2
A30
Stop Light Switch
Assembly
1
R
W(RHD)
L(RHD)
45 A
25 A
11 A
STP2
CANL
CANH
A24(A)
Skid Control ECU with Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
18 A
4 A
3 A
17 A
20 A
6 A
5 A
19 A
V
LG
B
L
B
W
R
G
Speed Sensors

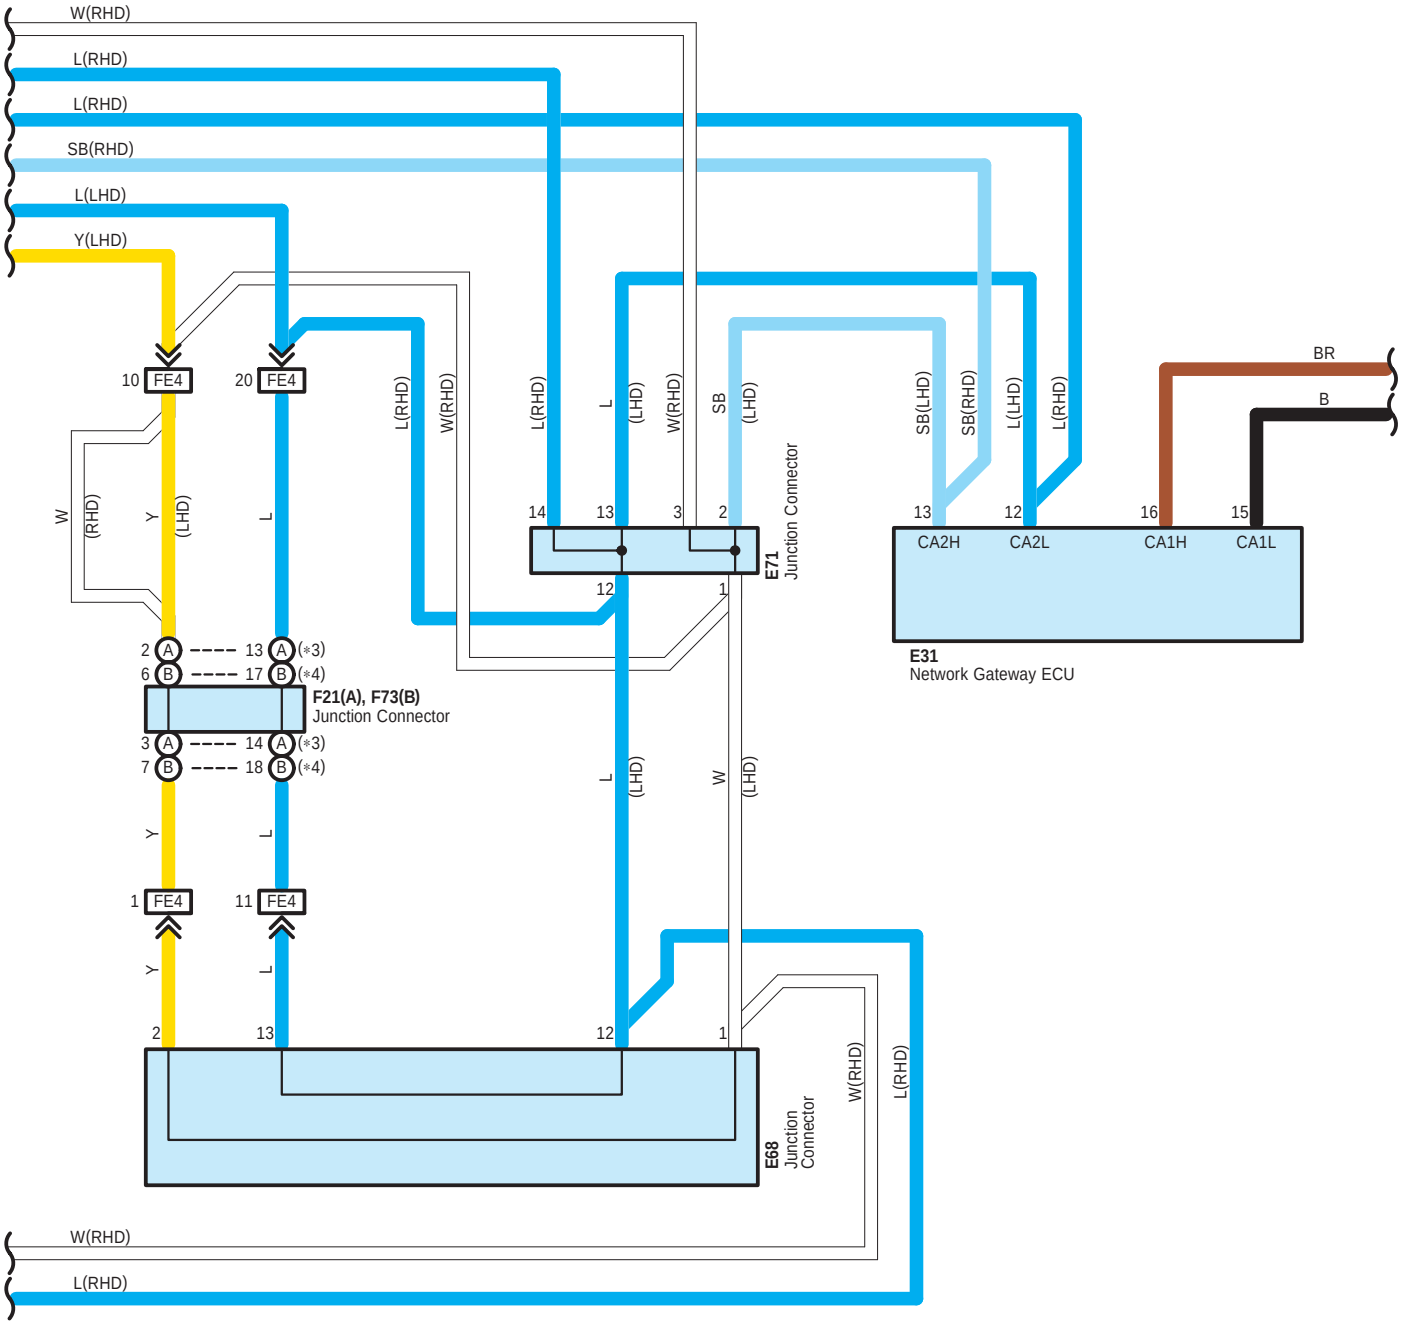


* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production
* 5 : 1VD–FTV w/ DPF
* 6 : 1VD–FTV w/o DPF

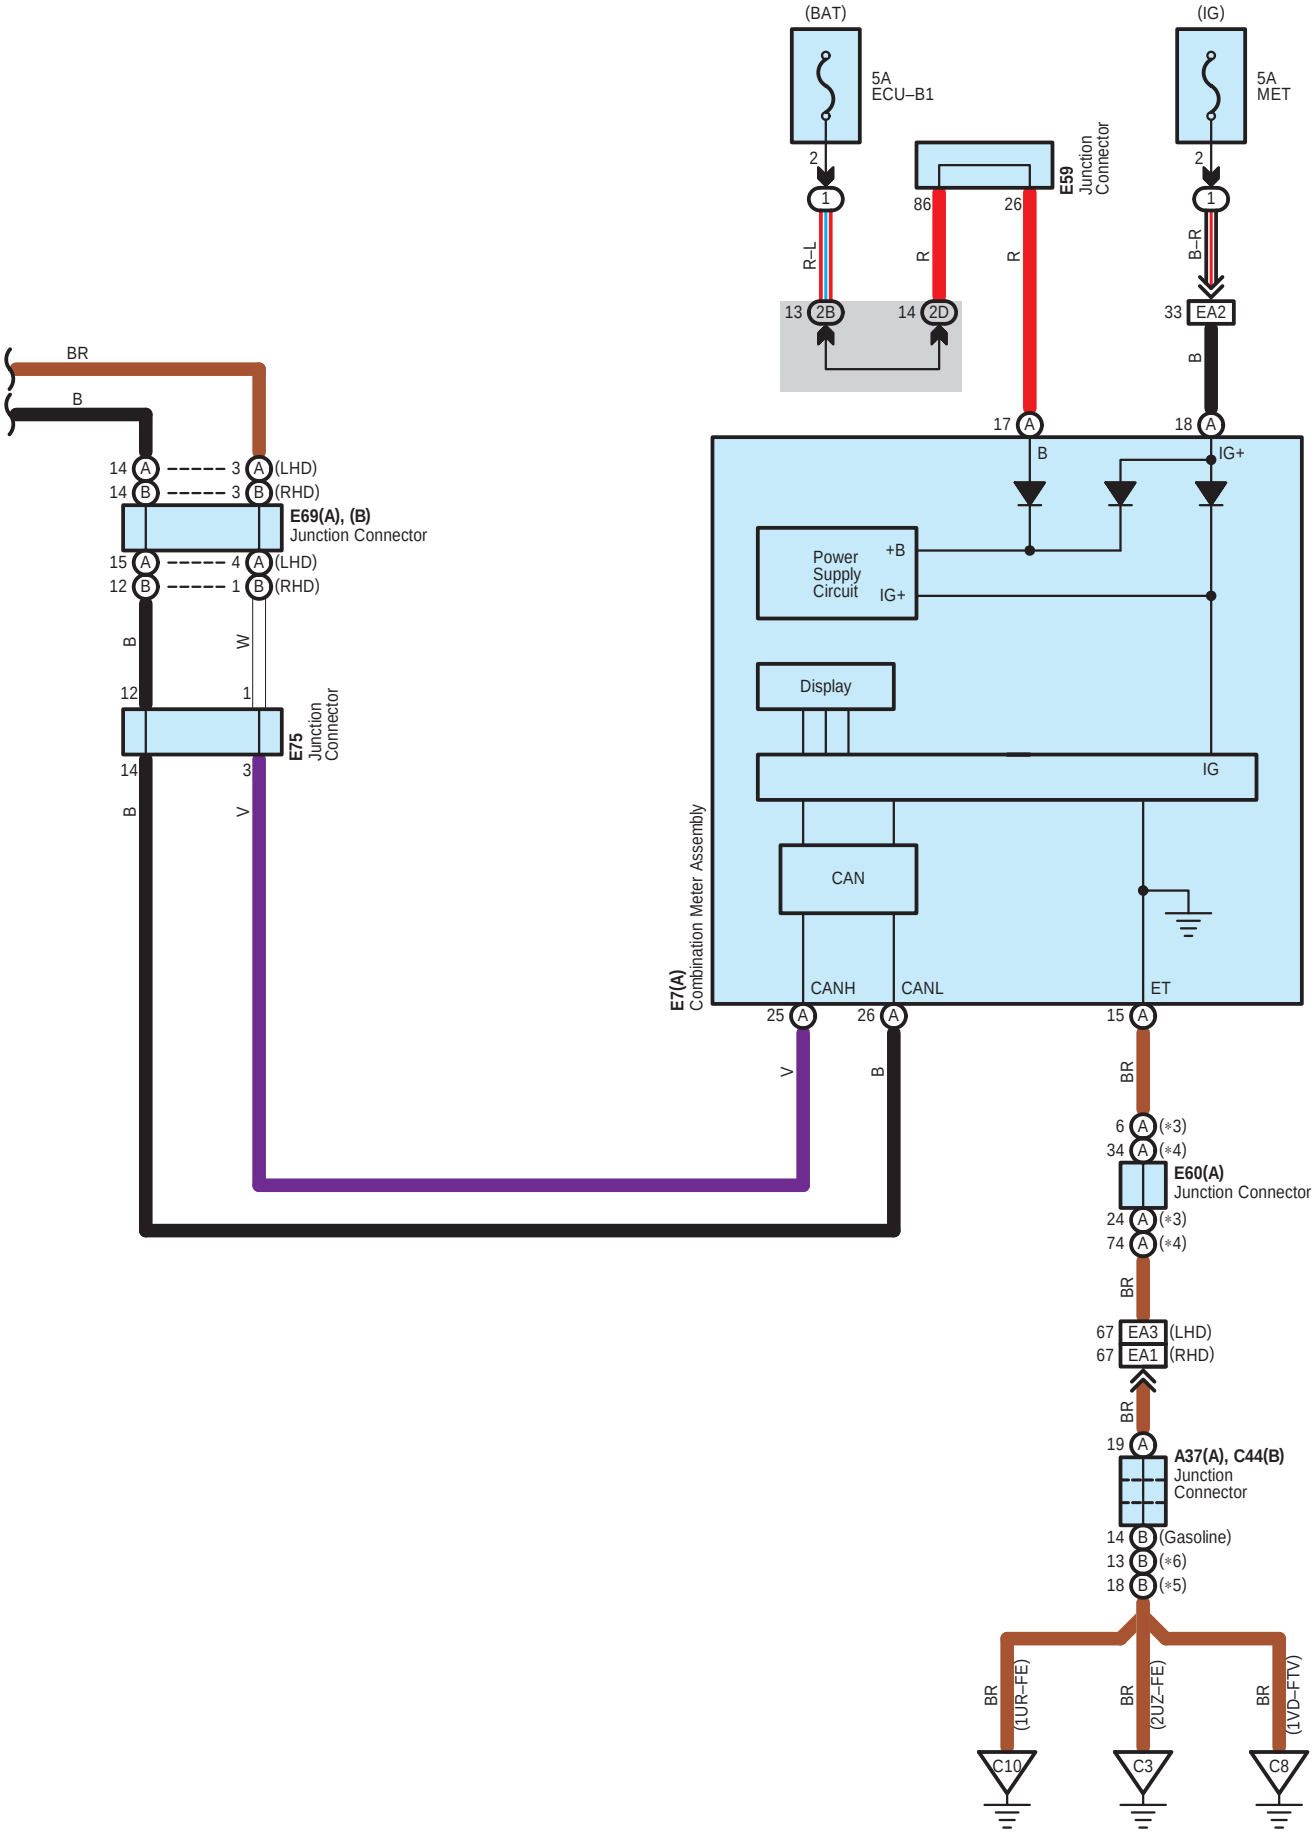
(BAT)
5A
ECU–B1
2
1
R–L
E59
Junction
Connector
86
26
R
R
13 2B
14 2D
(IG)
5A
MET
2
1
B–R
33 EA2
B
17 A
18 A
B
IG+
Power
Supply
Circuit
+B
IG+
Display
IG
CAN
CANH
CANL
ET
E7(A)
Combination Meter Assembly
25 A
26 A
15 A
V
B
BR
B
14 A
14 B
3 A
3 B
(LHD)
(RHD)
E69(A), (B)
Junction Connector
15 A
12 B
4 A
1 B
(LHD)
(RHD)
B
W
12
1
E75
Junction
Connector
14
3
B
V
BR
6 A (*3)
34 A (*4)
E60(A)
Junction Connector
24 A (*3)
74 A (*4)
BR
67 EA3 (LHD)
67 EA1 (RHD)
BR
19 A
A37(A), C44(B)
Junction
Connector
14 B (Gasoline)
13 B (*6)
18 B (*5)
BR
(1UR–FE)
BR
(2UZ–FE)
BR
(1VD–FTV)
C10
C3
C8


A 24
Black

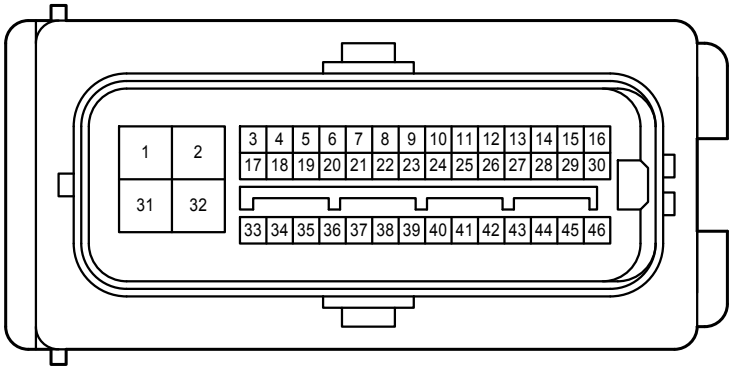


A 30
Gray




A 34
White

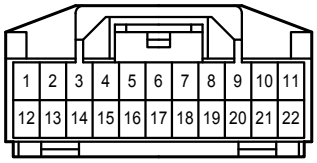


A 37
Blue

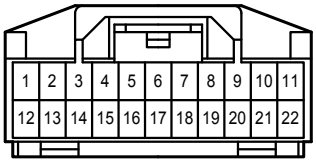


C 44
Blue

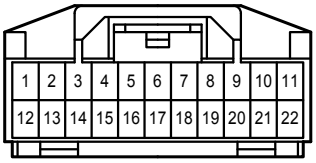


E 7
White

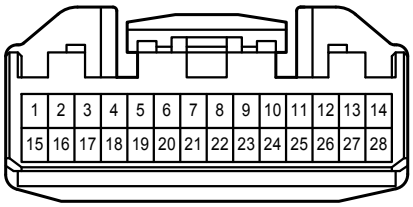


E 11
Gray

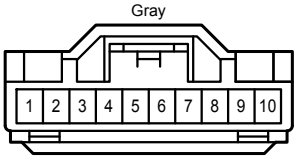


E 31
White

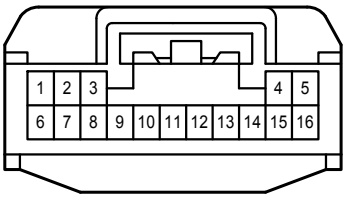


E 58

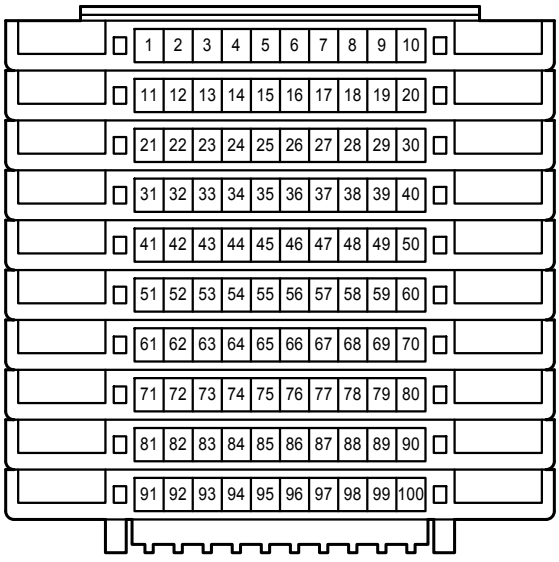


E 59

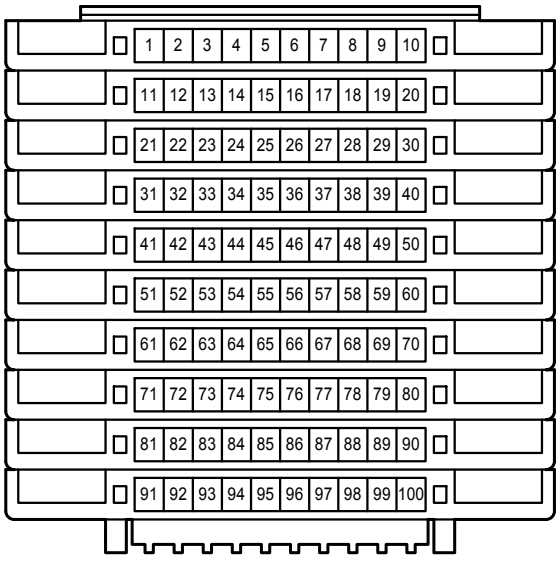


E 60

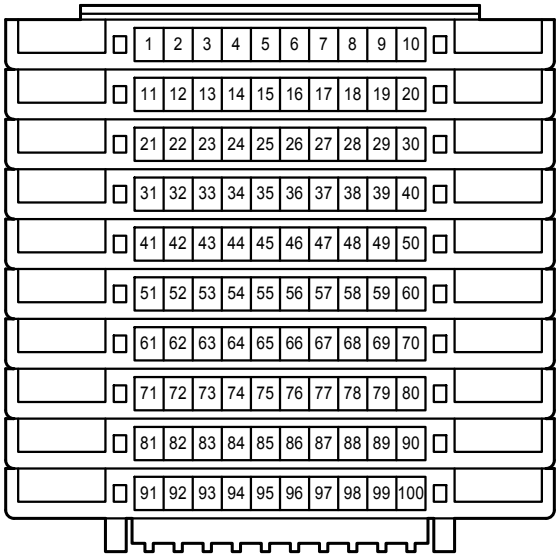


E 61

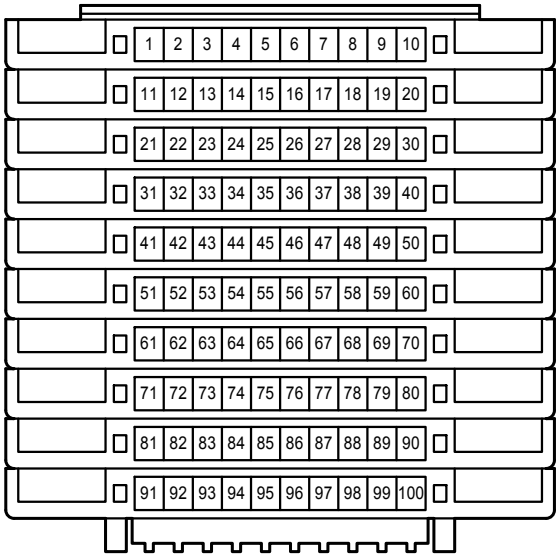


E 66
White

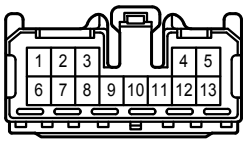


E 68
Gray

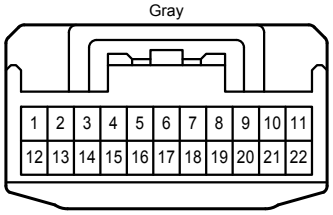


E 69
Gray

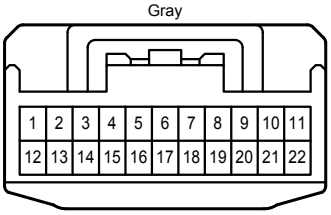


E 71
Gray

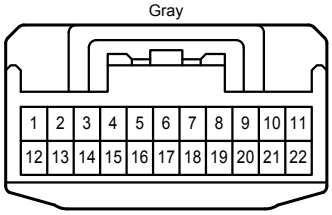


E 74
Gray

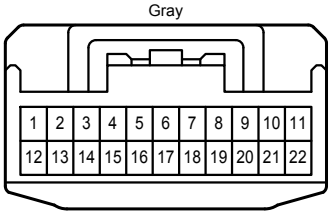


E 75
Gray

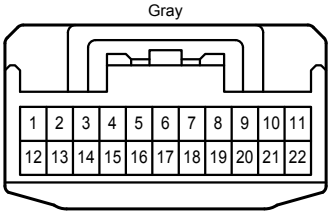


F 21
Black

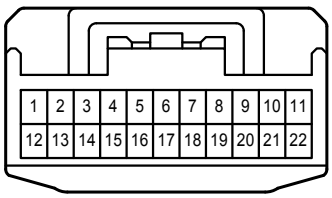


F 73
Blue

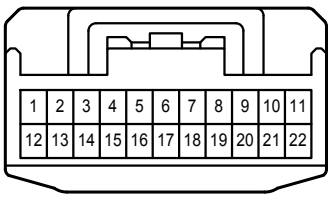


K 29
White




K 34
Black

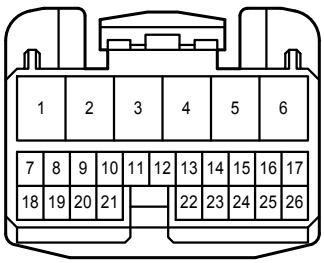


K 35
Black

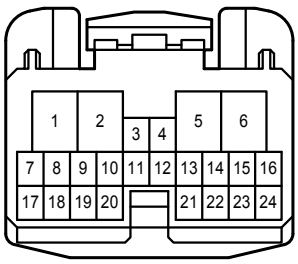


K 36
Black

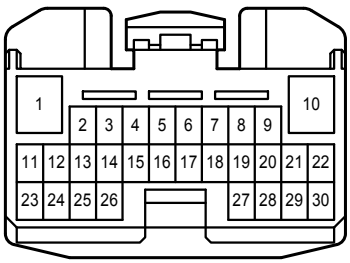


K 37
Black

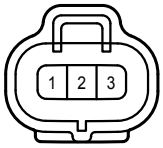


K 39
White




L 35
Black

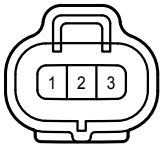

L 36
Black

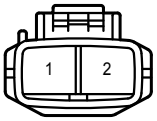

N 4
Black

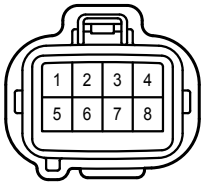

N 5
Black



N 6
Gray



N 7
Black



N 8
Gray



N 9
Gray



N 10
Gray




N 11
Gray



N 12
Gray




V 4
White

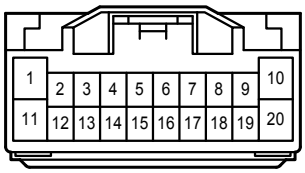


i 1
Gray




i 2
Black

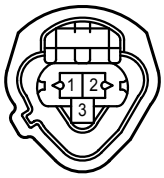


z 34
Black

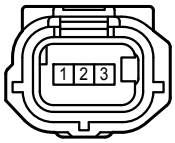


z 35
Black

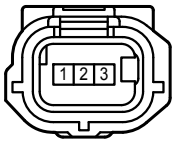


1L




2B
White

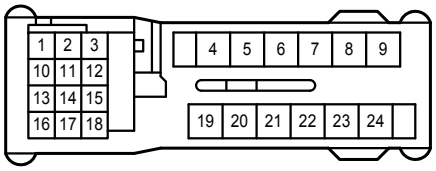


2D
White

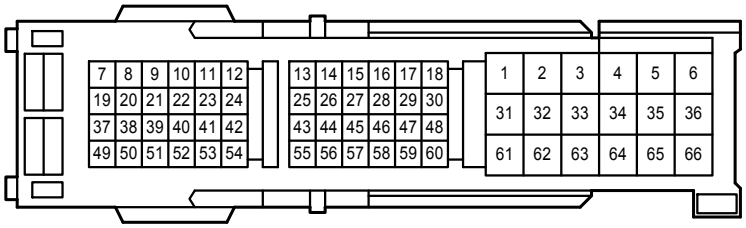


3C
White

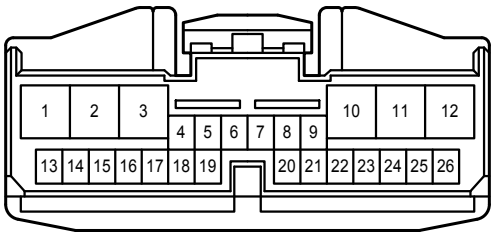


AA1
Gray

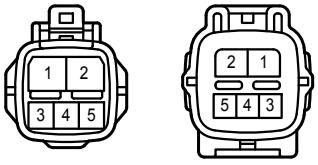


AE3
Gray

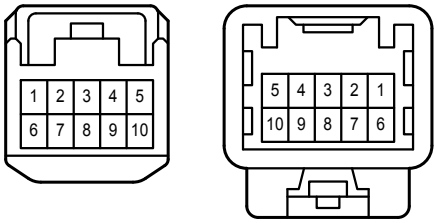


AK1
Blue

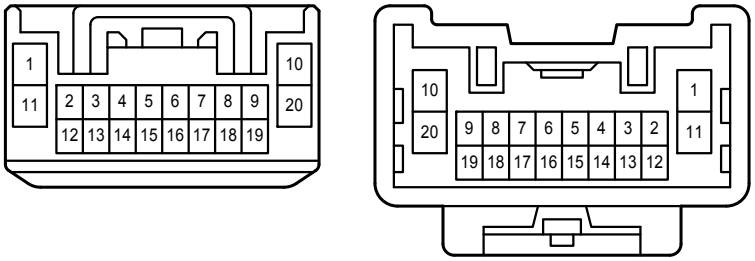


AL2
White

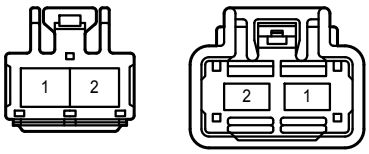


Az1
Gray

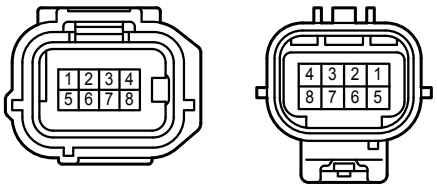

Az2
Gray

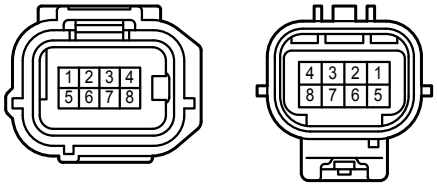


EA1
White

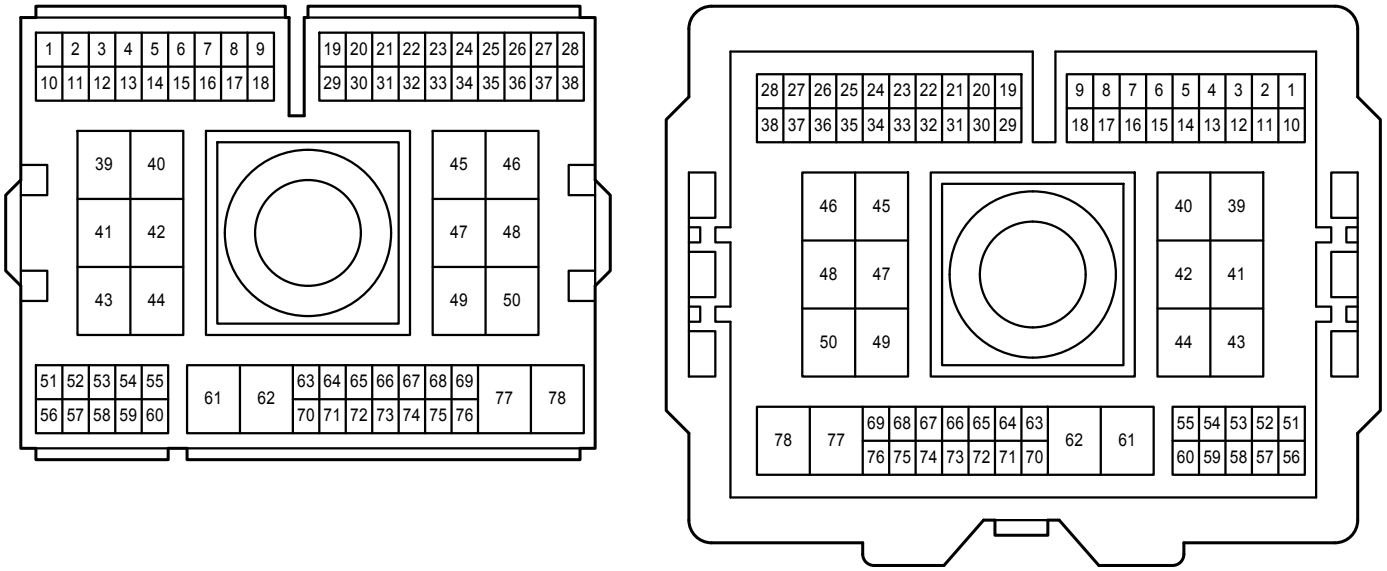


EA2

White

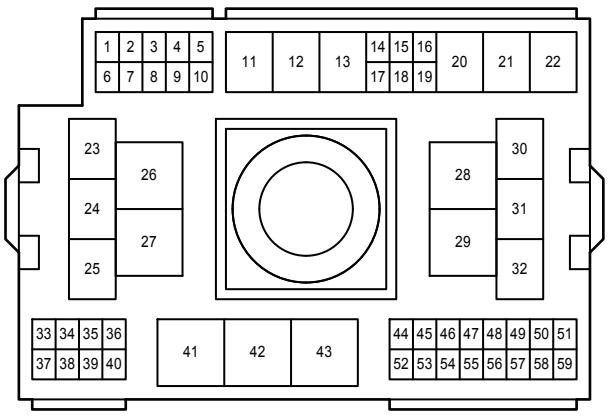



Gray

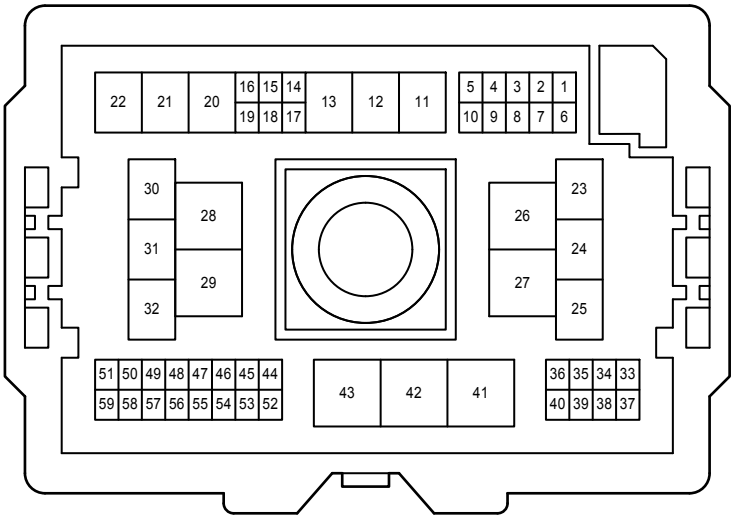


EA3

White

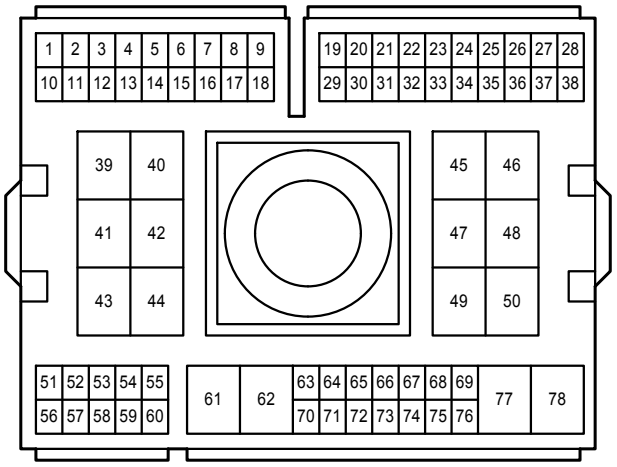


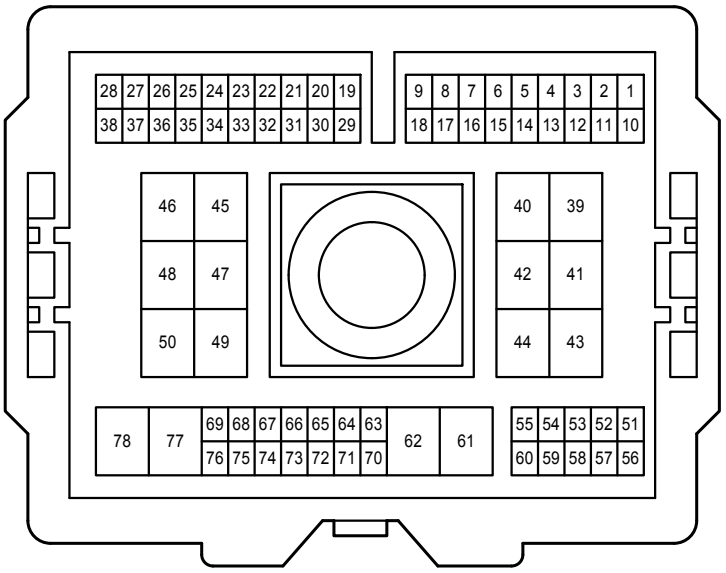


EK1

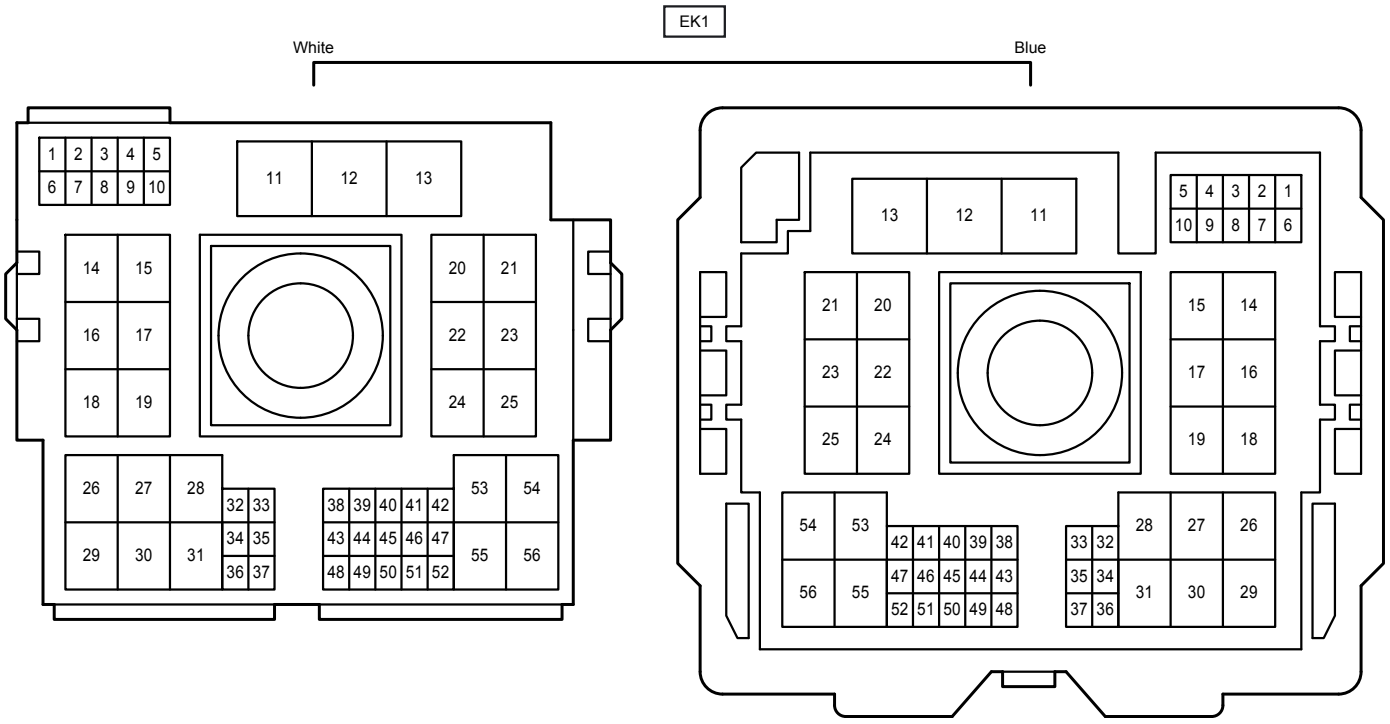


EK2

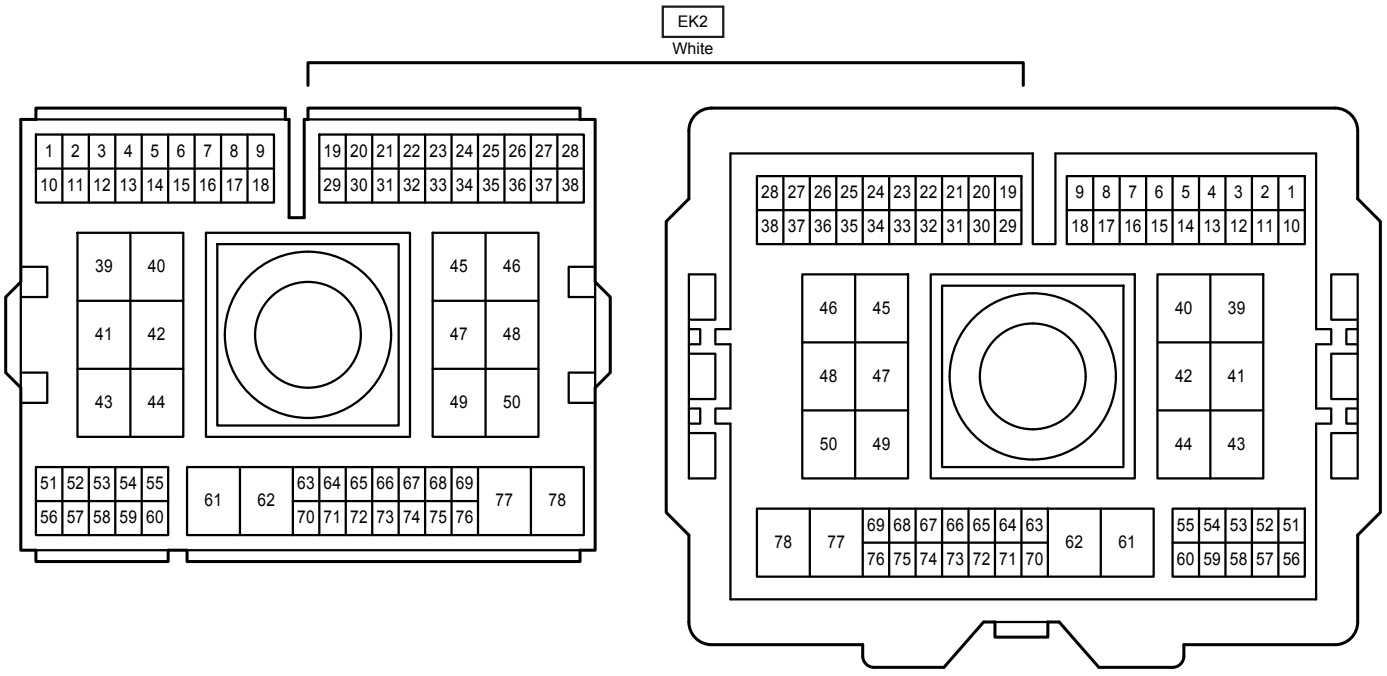


EK4

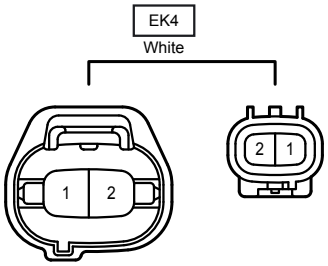


FE4

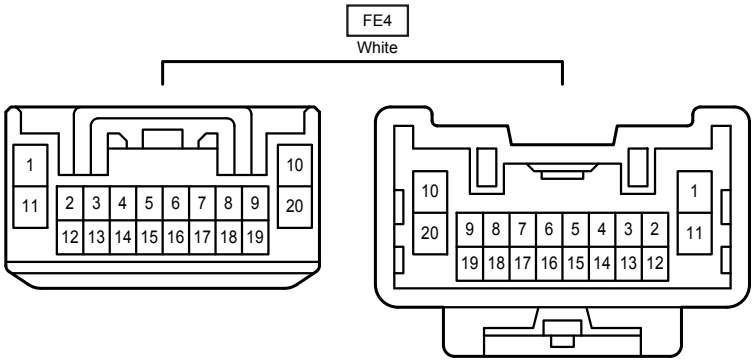


KL1
White

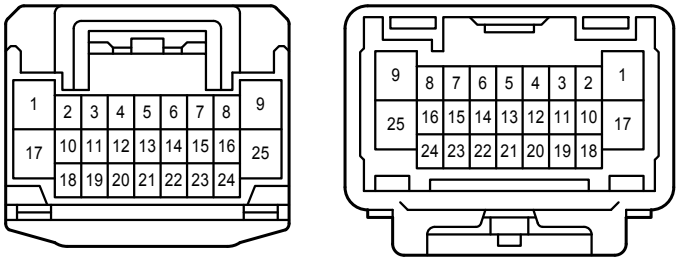


NK1
White

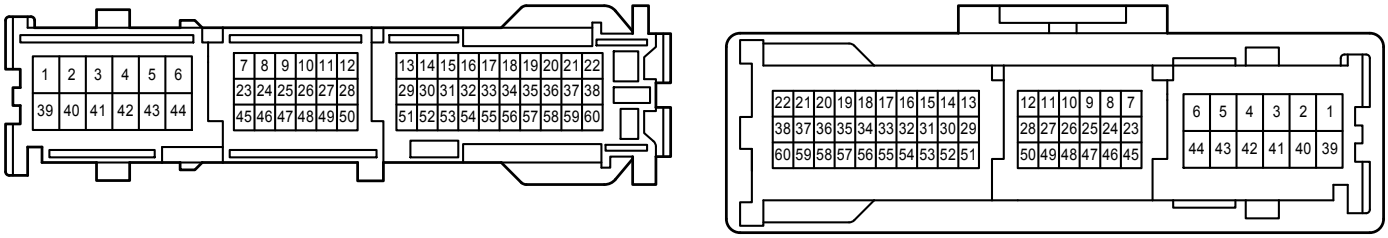


VE1
White

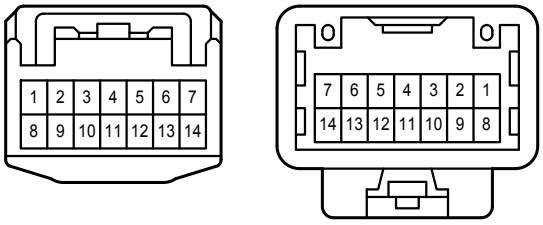

VE2
White

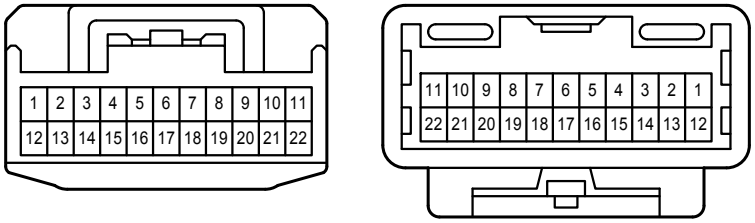

VE3
Gray

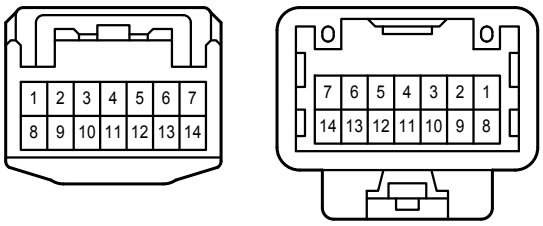

iL1
White

