




(IG)
10A
INJ
2
1
B
15 CA1
B–R
W–B
C135
Noise Filter
(Ignition Bank 2)
C4
Ignition Coil Assembly No. 1
C13
Ignition Coil Assembly No. 4
C133
Ignition Coil Assembly No. 6
C131
Ignition Coil Assembly No. 7
+B
GND
IGT1
IGF1
IGT4
IGT6
IGT7
B–Y
G–B
L–B
G
G–W
C43
Junction
Connector
40 B
40 C
34 B
34 C
104 B
104 C
36 B
36 C
38 B (LHD)
38 C (RHD)
C45(B), C46(C)
ECM


B–R
W–B
C134
Ignition Coil Assembly No. 2
C130
Ignition Coil Assembly No. 3
C8
Ignition Coil Assembly No. 5
C53
Ignition Coil Assembly No. 8
+B
GND
IGT2
IGT3
IGT5
IGT8
IGF2
C132
Noise Filter
(Ignition Bank 1)
C43
Junction
Connector
L–B
B
R
G–R
G–B
33
37
105
35
39
(LHD)
(RHD)
C45(B), C46(C)
ECM
C11


C 4
Black

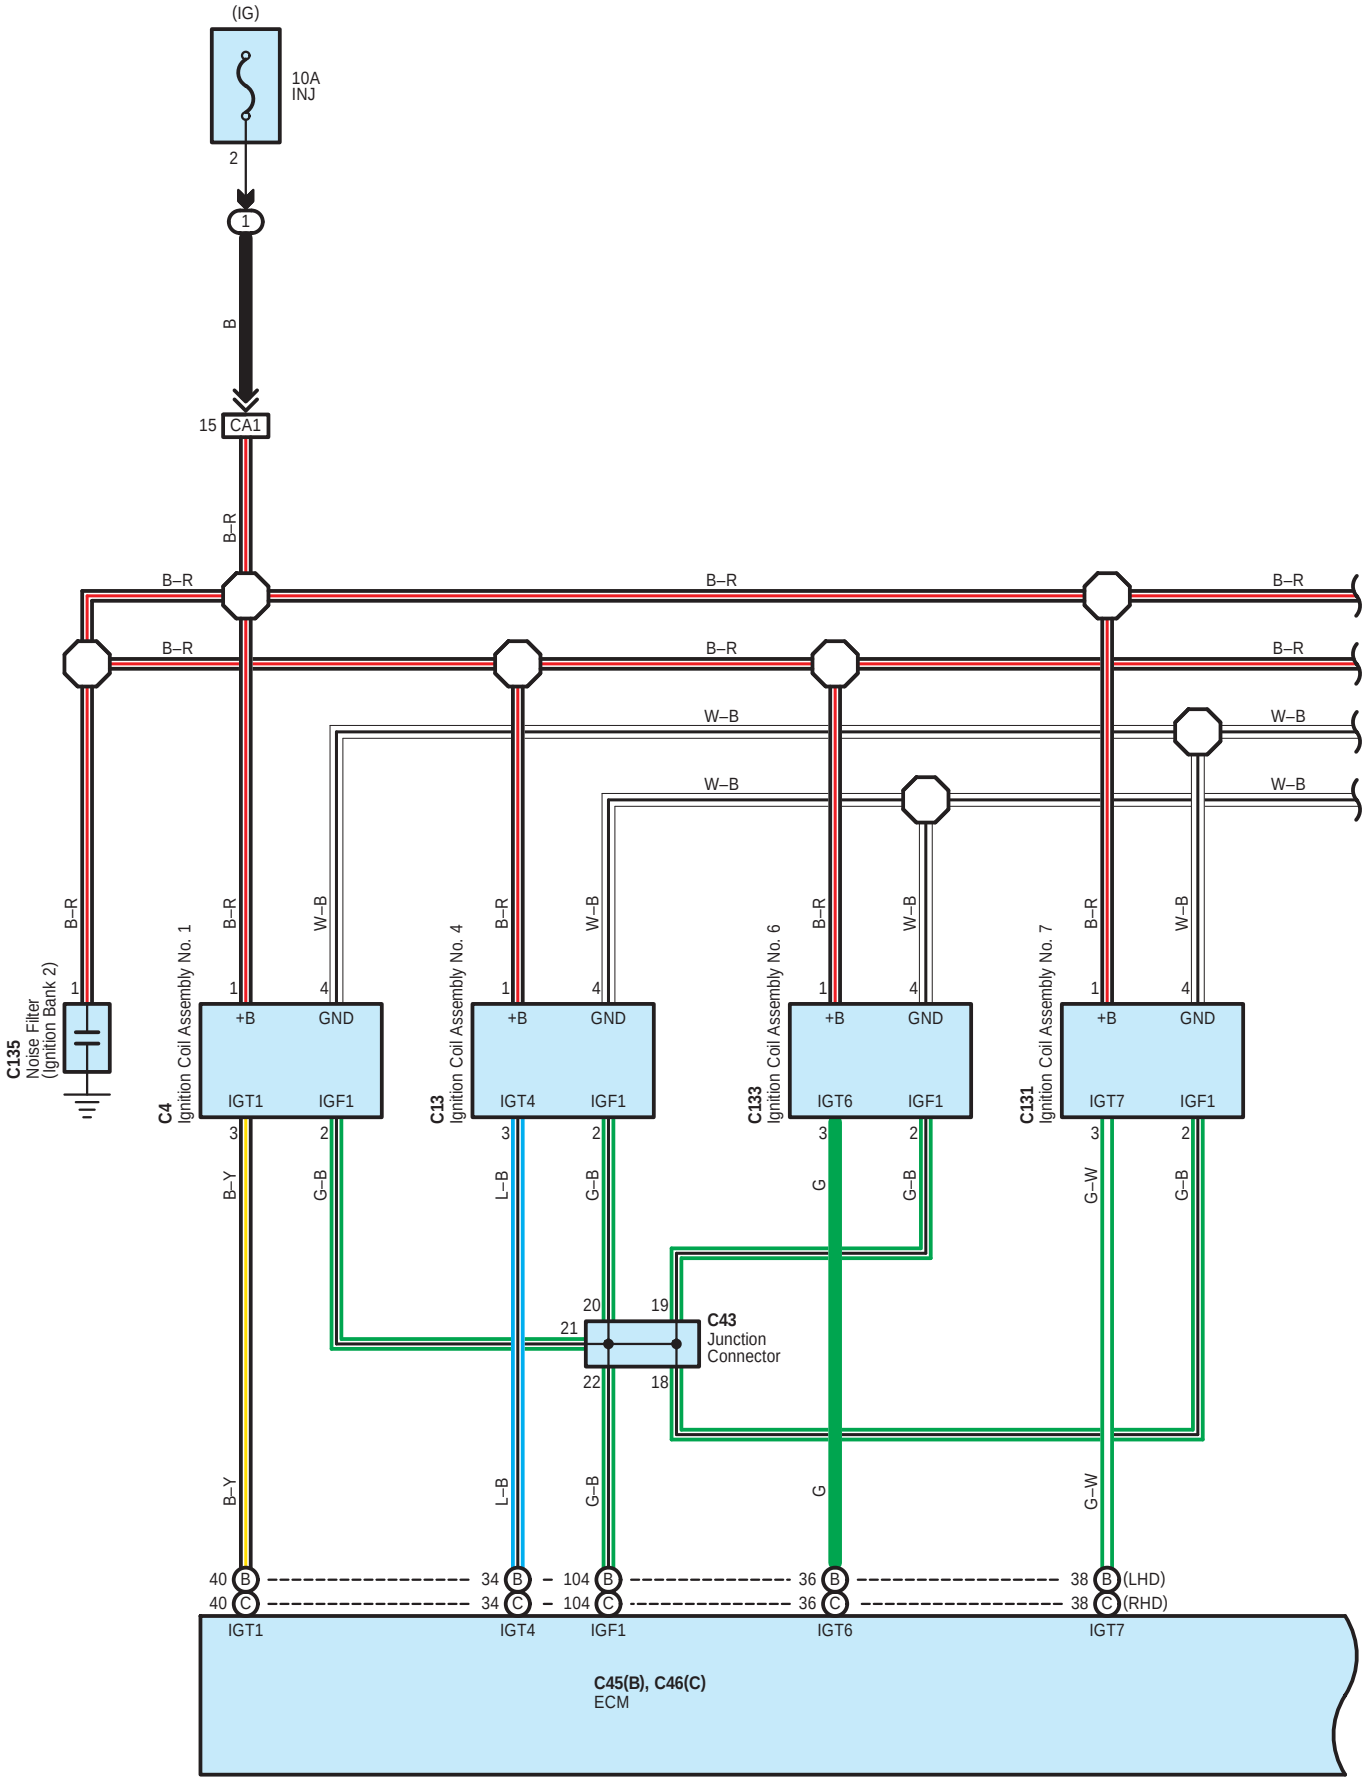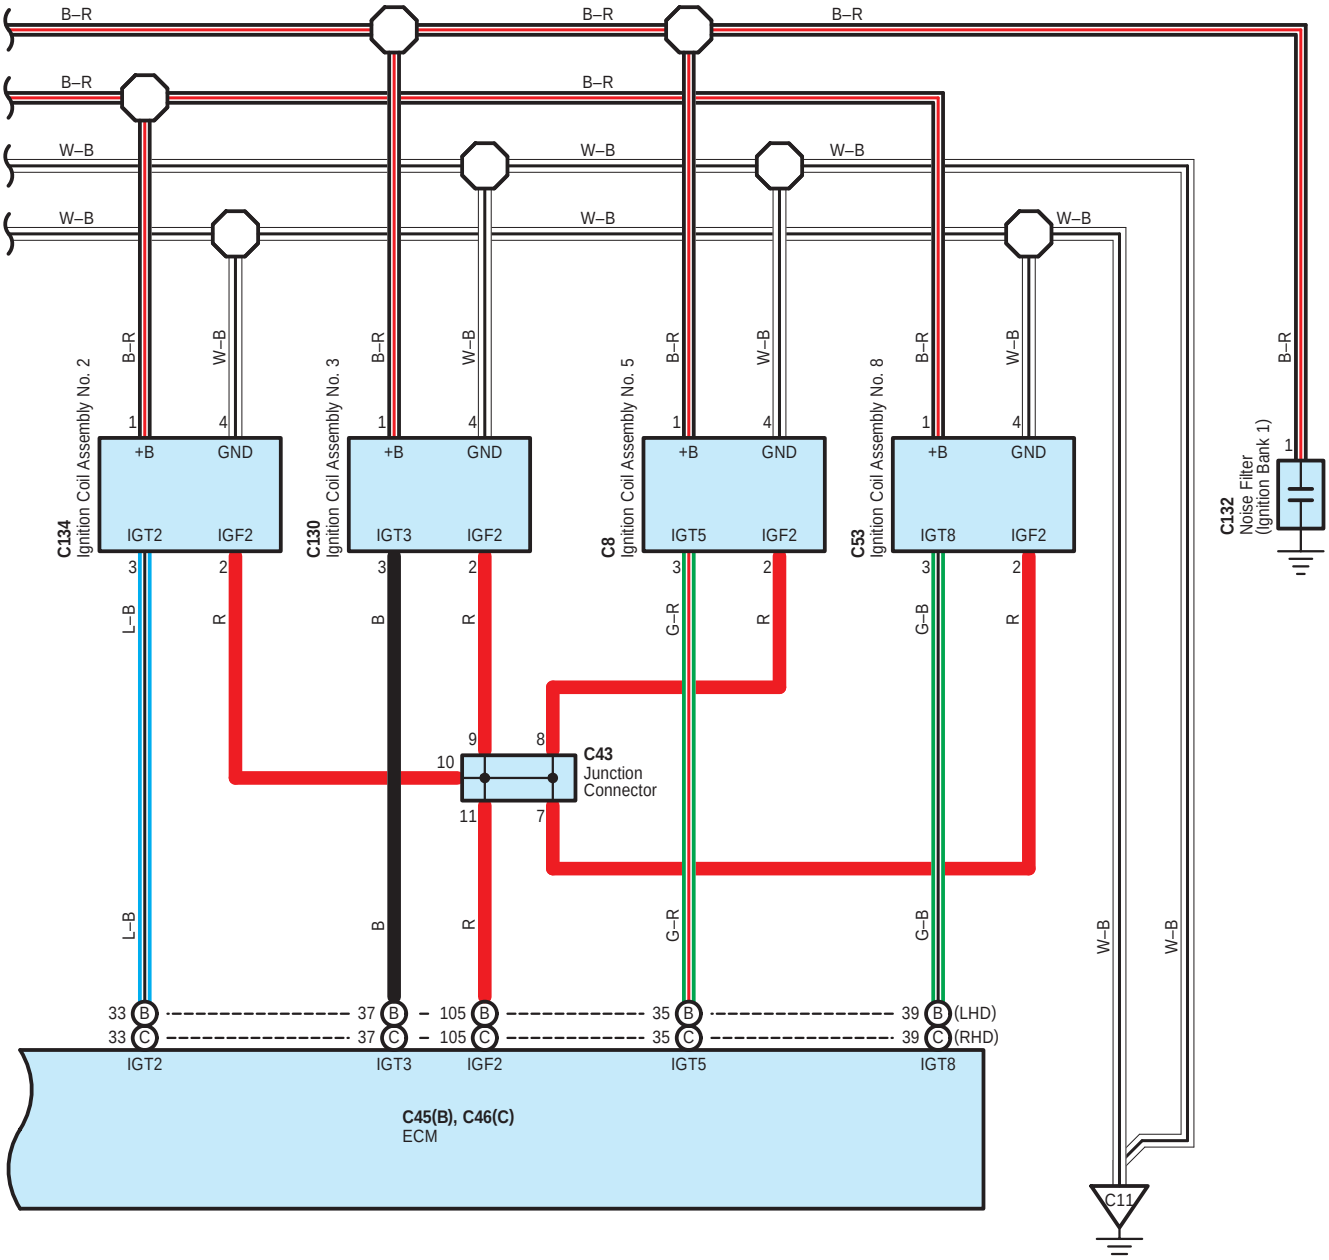


C 8
Black




C 13
Black




C 43
White

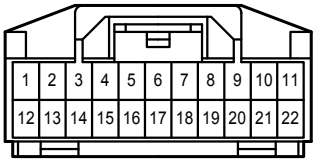


C 45
Black

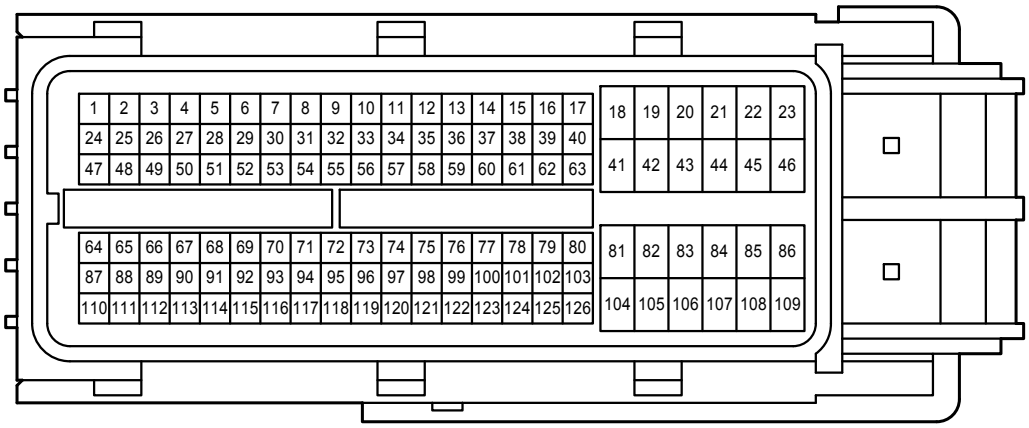

C 46
Black

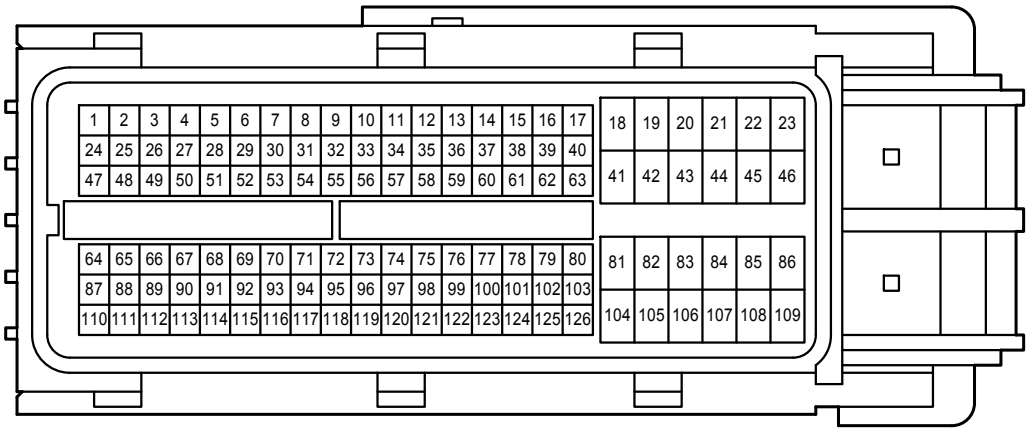

C 53
Black




C130
Gray




C131
Gray




C132
Gray

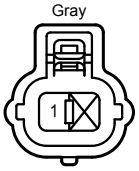


C133
Gray




C134
Gray



C135
Gray

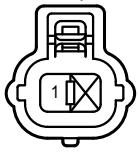

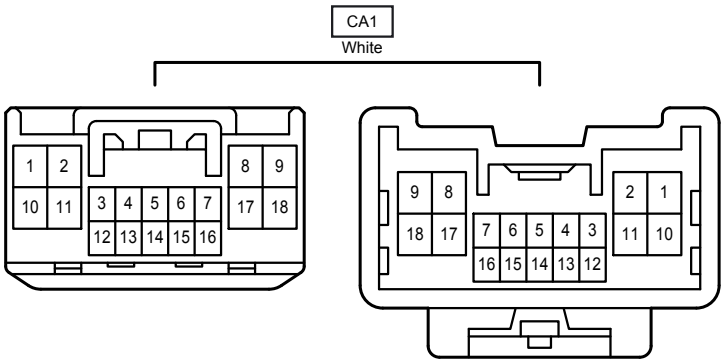
CA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10