




(BAT)
(IG)
(BAT)
15A
TI&TE
5A
ECU–IG
No. 1
5A
ECU–B1
34 2D
56 2D
2
1
L
G
R–L
44
E61
Junction
Connector
13 2B
74
G
14 2D
42
E60
Junction
Connector
R
62
G
44
E59
Junction
Connector
86
E59
Junction
Connector
14
16
L
G
R
2
8
9
+B
IG
ECUB
Tilt
Down
Telescopic
Shrink
Tilt Up
Telescopic
Stretch
Tilt and
Telescopic Switch
MSW
VC
10 A
8 A (*1)
7 B
6 B (*2)
E14(A)
Headlight Dimmer Switch Assembly
E15(B)
Windshield Wiper Switch Assembly
R
Y
3
4
MSW
VC
TIM+
TIM–
VCI
TIS
E1
TEM+
TEM–
VCE
TES
E2
GND
10
1
6
7
17
11
GR
LG
Y
W
G
W–B
1
2
4
5
6
TIM+
TIM–
VCI
TIS
E1
M
Tilt Motor
Tilt Sensor
GND
E17
Power Tilt Motor
3
W–B
M
Telescopic
Motor
Telescopic Sensor
E27
Multiplex Tilt and Telescopic ECU
W–B
W–B
(LHD)
W–B
(RHD)
W–B
E1
E3
E2


* 1 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
* 2 : RHD Headlight Dimmer Switch Assembly RH Side Type

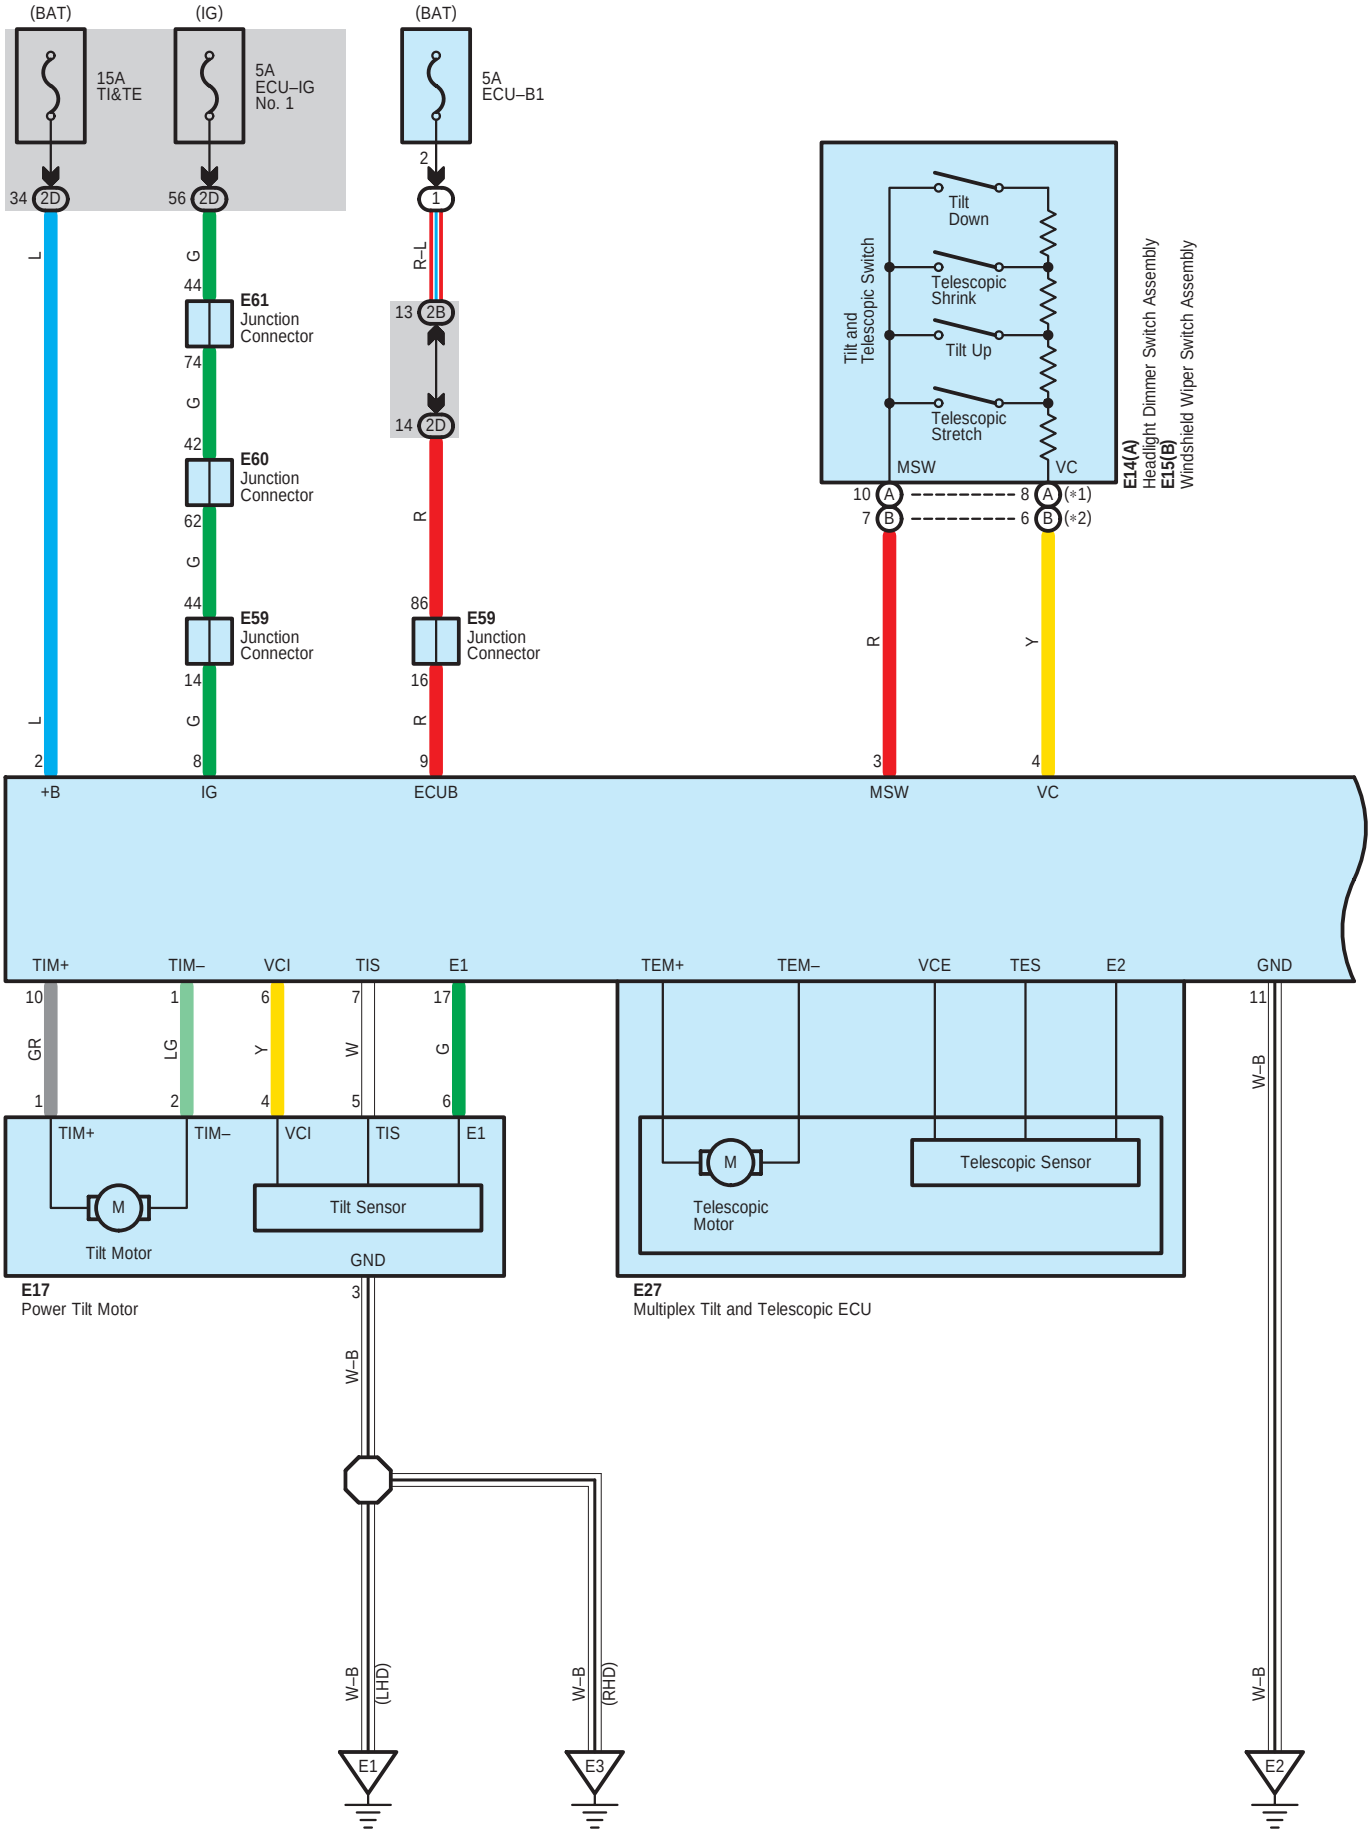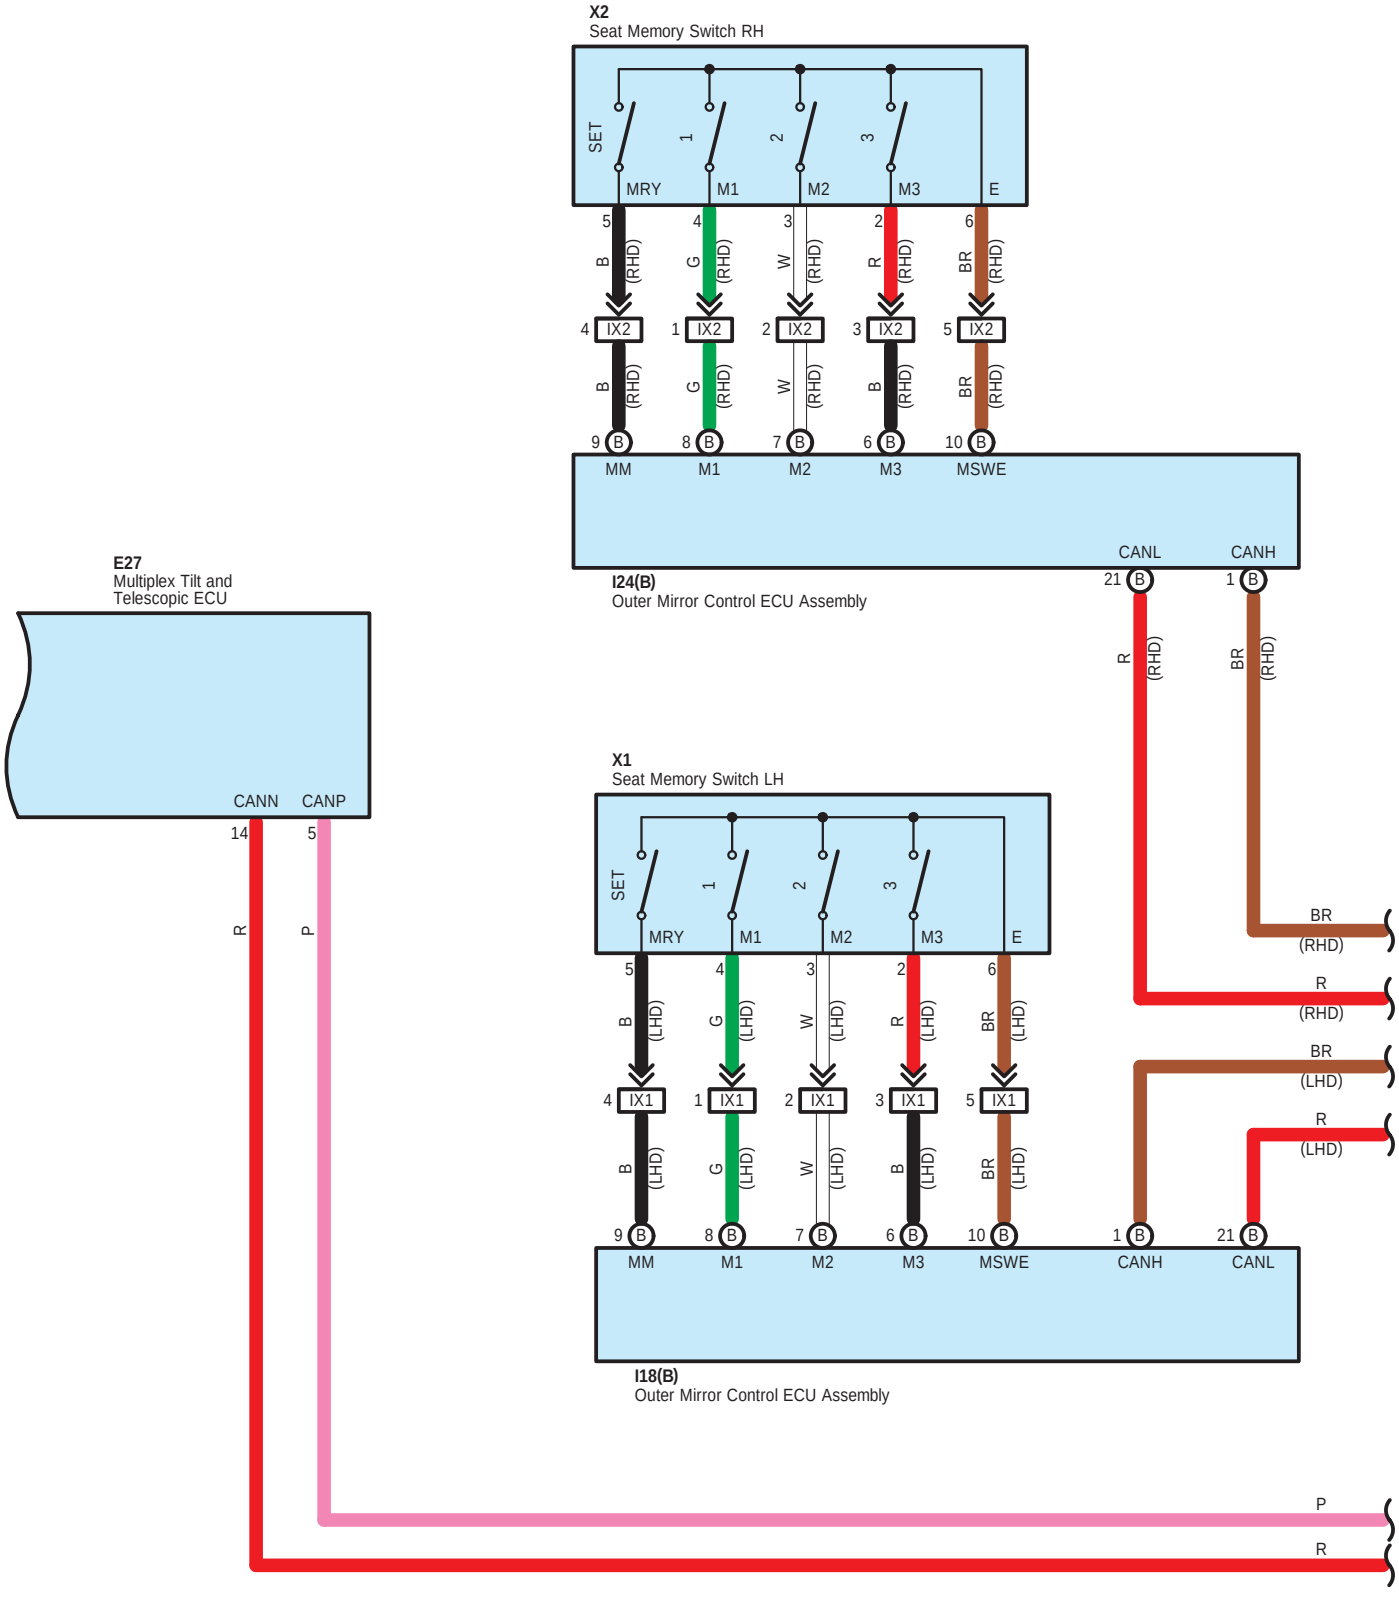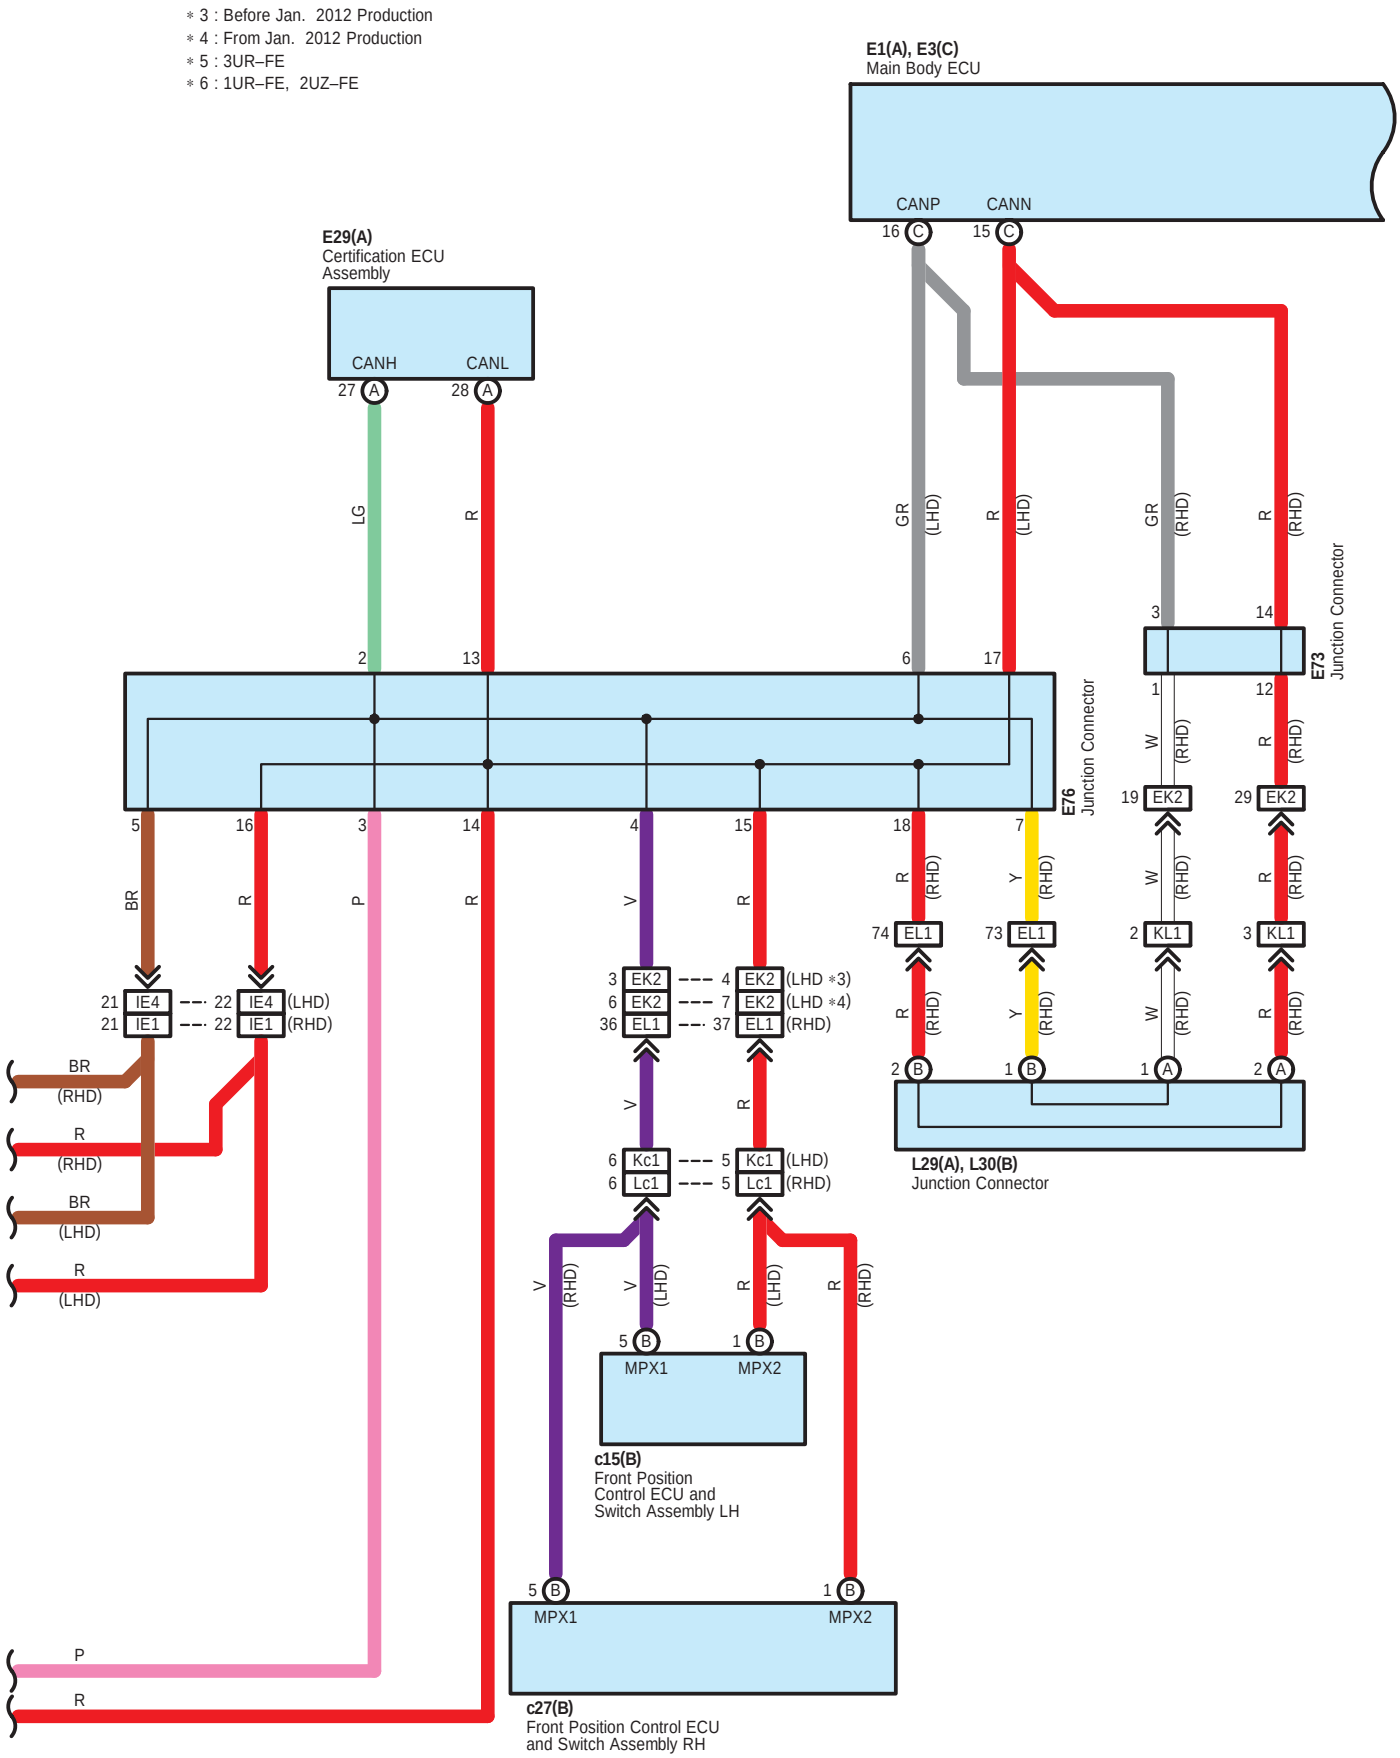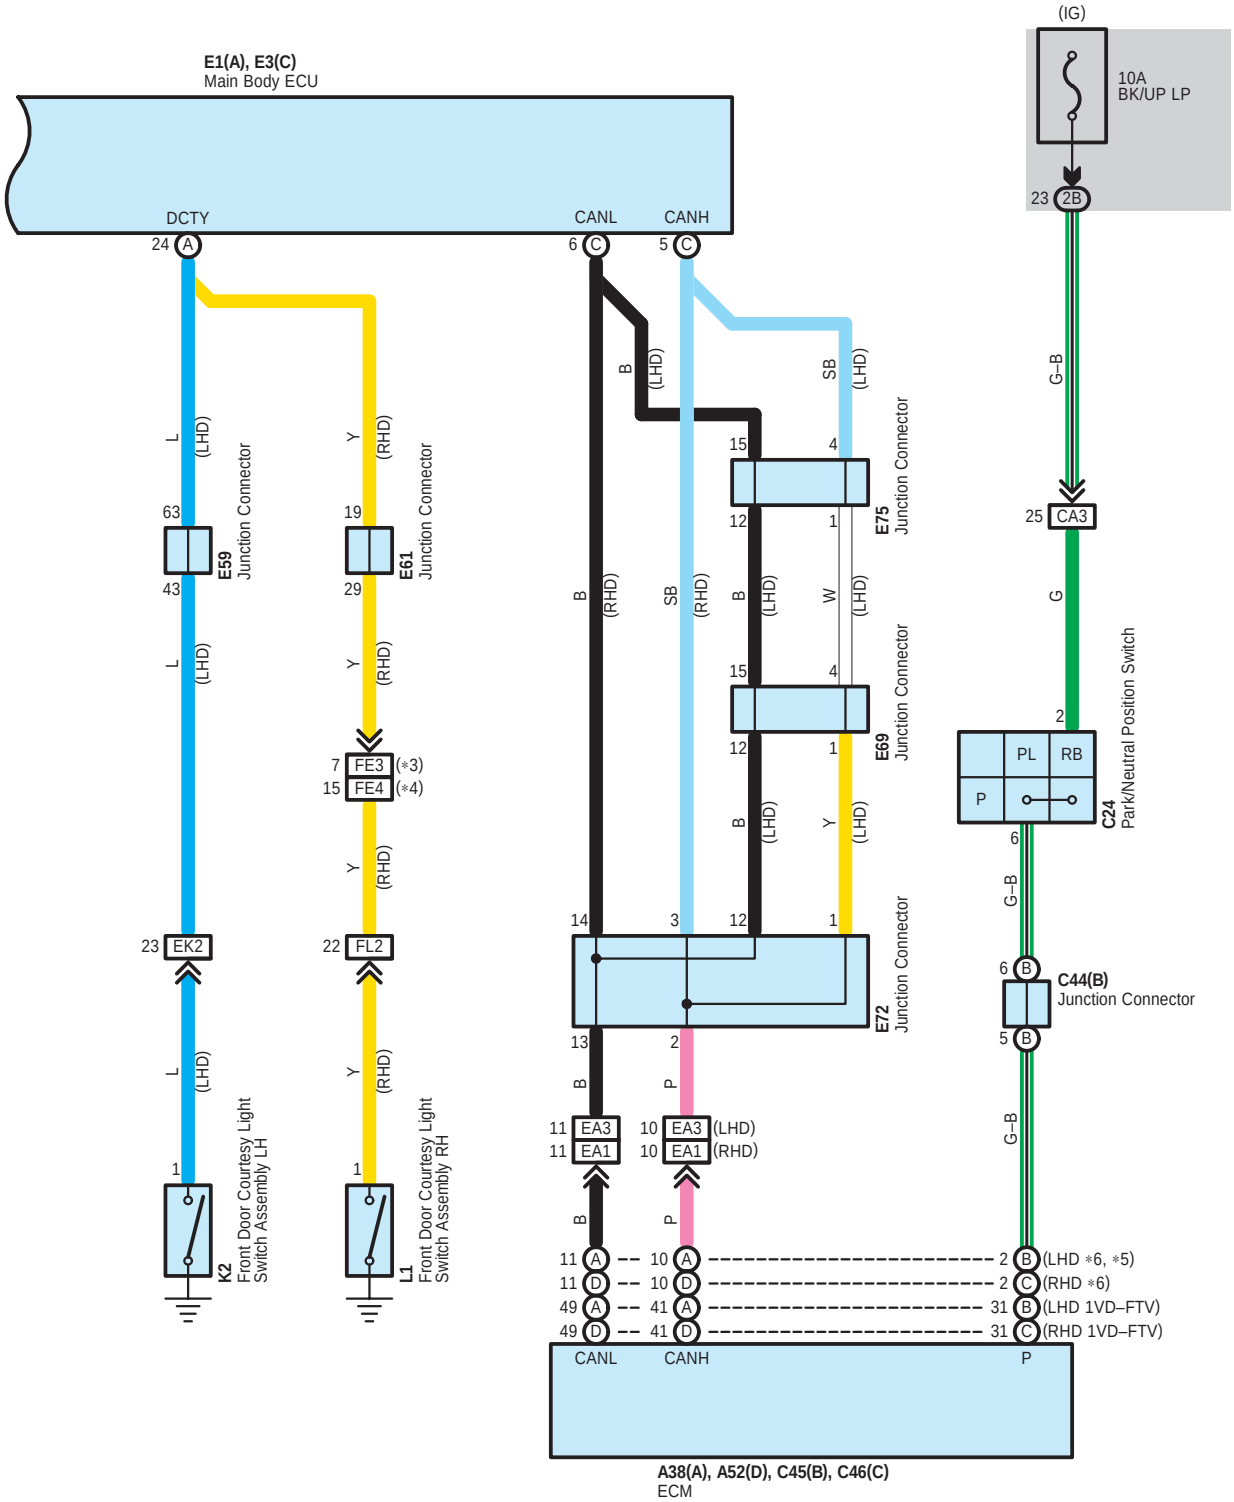



∗ 3 : Before Jan. 2012 Production
∗ 4 : From Jan. 2012 Production
∗ 5 : 3UR–FE
∗ 6 : 1UR–FE, 2UZ–FE
E1(A), E3(C)
Main Body ECU
CANP
CANN
16 C
15 C
E29(A)
Certification ECU
Assembly
CANH
CANL
27 A
28 A
LG
R
GR (LHD)
R (LHD)
GR (RHD)
R (RHD)
2
13
6
17
3
14
E73
Junction Connector
1
12
W (RHD)
R (RHD)
E76
Junction Connector
19 EK2
29 EK2
5
16
3
14
4
15
18
7
BR
R
P
R
V
R
R (RHD)
Y (RHD)
74 EL1
73 EL1
2 KL1
3 KL1
21 IE4
21 IE1
22 IE4 (LHD)
22 IE1 (RHD)
3 EK2
6 EK2
36 EL1
4 EK2 (LHD ∗3)
7 EK2 (LHD ∗4)
37 EL1 (RHD)
2 B
1 B
1 A
2 A
L29(A), L30(B)
Junction Connector
BR (RHD)
R (RHD)
BR (LHD)
R (LHD)
6 Kc1
6 Lc1
5 Kc1 (LHD)
5 Lc1 (RHD)
V (RHD)
V (LHD)
R (LHD)
R (RHD)
5 B
1 B
MPX1
MPX2
c15(B)
Front Position
Control ECU and
Switch Assembly LH
P
R
5 B
1 B
MPX1
MPX2
c27(B)
Front Position Control ECU
and Switch Assembly RH


E1(A), E3(C)
Main Body ECU
DCTY
CANL
CANH
24 A
6 C
5 C
(IG)
10A
BK/UP LP
23 2B
G–B
25 CA3
G
2
PL
RB
P
C24
Park/Neutral Position Switch
6
G–B
6 B
C44(B)
Junction Connector
5 B
G–B
L (LHD)
Y (RHD)
63
19
E59
Junction Connector
43
29
E61
Junction Connector
L (LHD)
Y (RHD)
7 FE3 (*3)
15 FE4 (*4)
Y (RHD)
23 EK2
22 FL2
L (LHD)
Y (RHD)
1
1
K2
Front Door Courtesy Light
Switch Assembly LH
L1
Front Door Courtesy Light
Switch Assembly RH
B (LHD)
SB (LHD)
B (RHD)
SB (RHD)
15
4
12
1
E75
Junction Connector
B (LHD)
W (LHD)
15
4
12
1
E69
Junction Connector
B (LHD)
Y (LHD)
14
3
12
1
E72
Junction Connector
13
2
B
P
11 EA3
11 EA1
10 EA3 (LHD)
10 EA1 (RHD)
B
P
11 A
11 D
49 A
49 D
10 A
10 D
41 A
41 D
2 B (LHD *6, *5)
2 C (RHD *6)
31 B (LHD 1VD–FTV)
31 C (RHD 1VD–FTV)
CANL
CANH
P
A38(A), A52(D), C45(B), C46(C)
ECM


A 38
Black

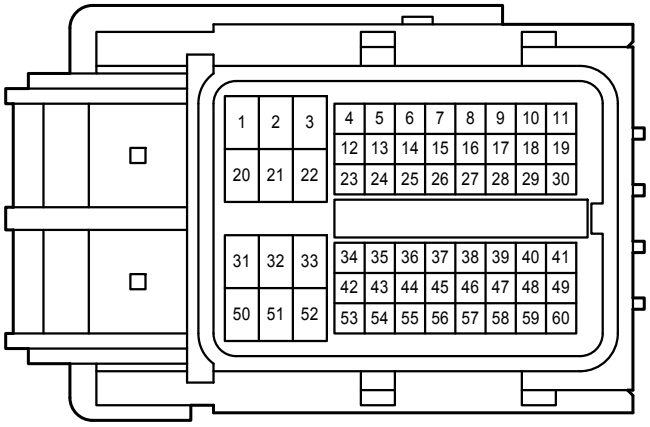


A 52
Black

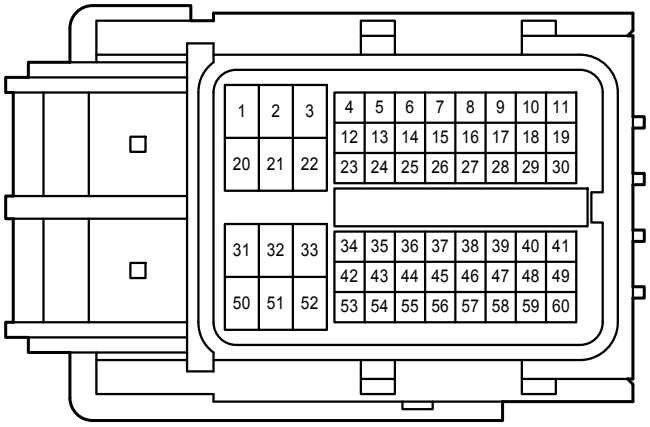


C 24
Gray

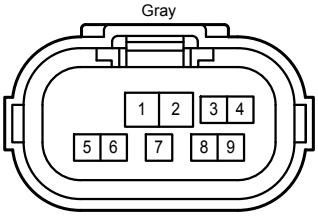


C 44
Blue

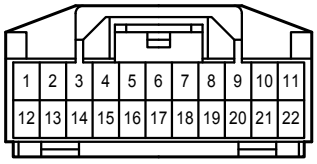


C 45
Black

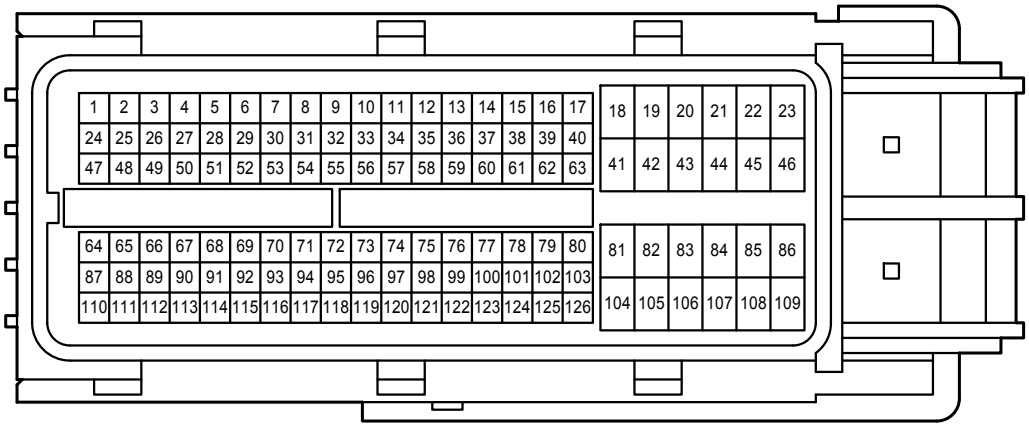


C 46
Black

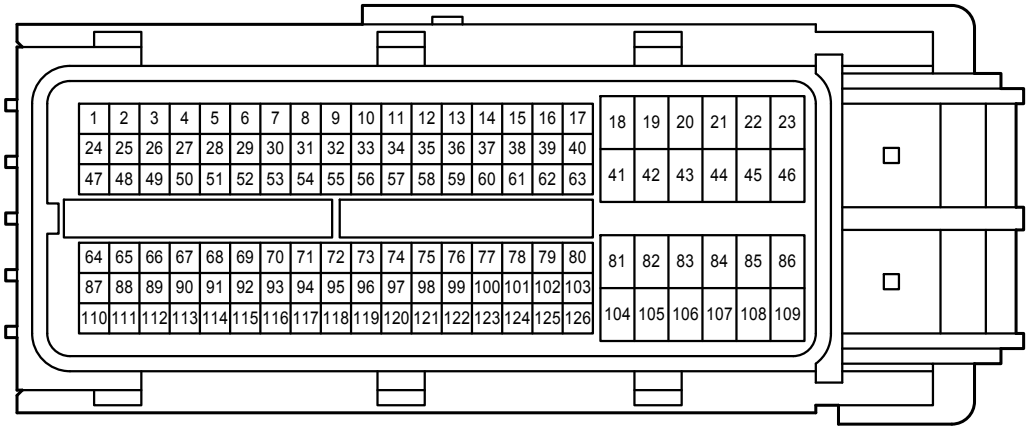


E 1
White

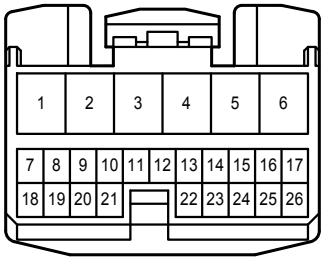


E 3
White

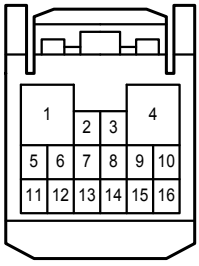

E 14
White

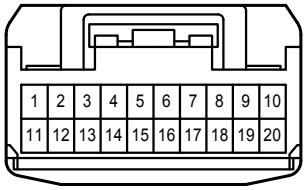


E 15
White

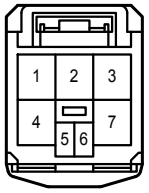


E 17
White




E 27
White

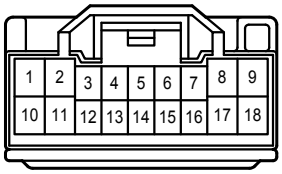


E 29
White

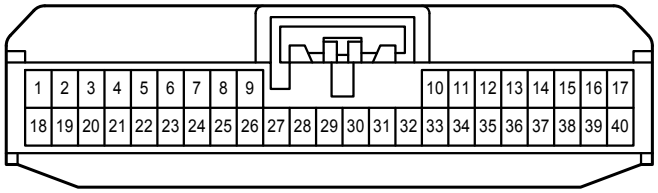


E 59

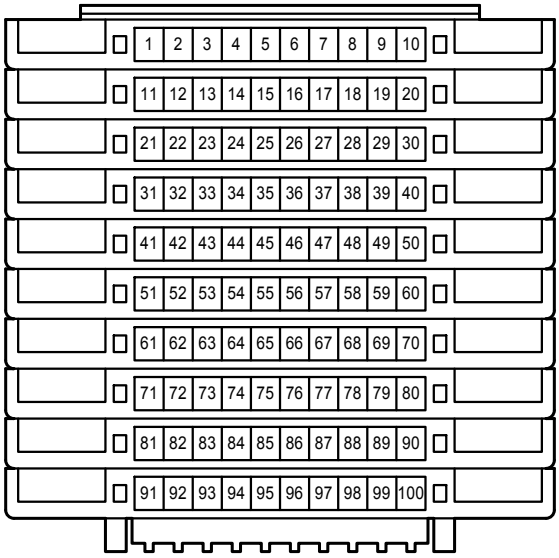


E 60

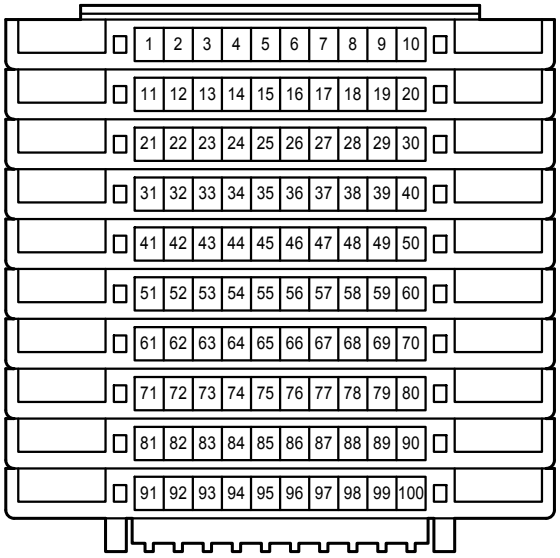


E 61

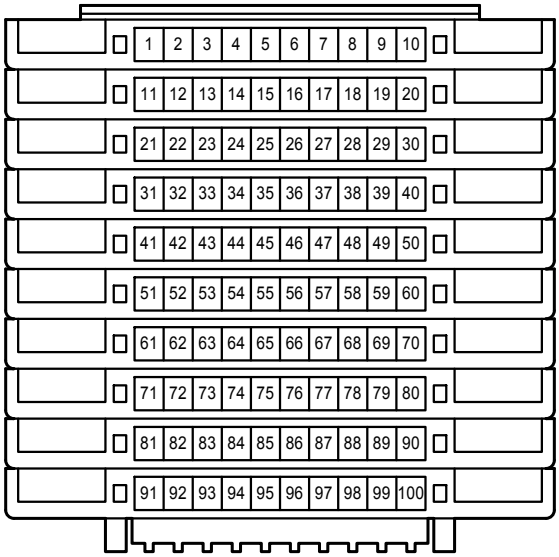


E 69
Gray

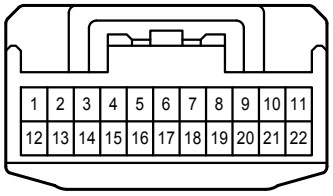


E 72
Gray

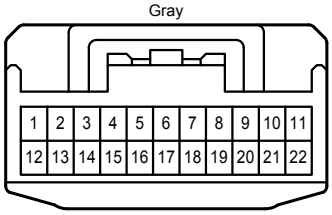


E 73
Gray

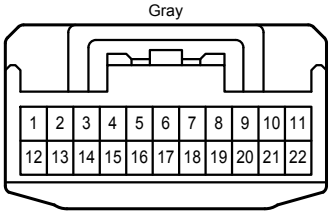


E 75
Gray

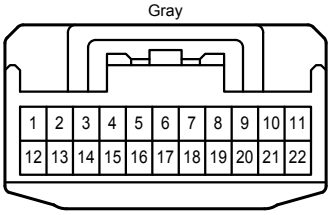


E 76
Gray

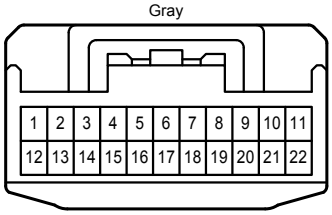

I 18
White

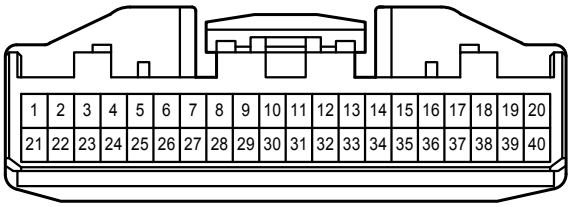

I 24
White

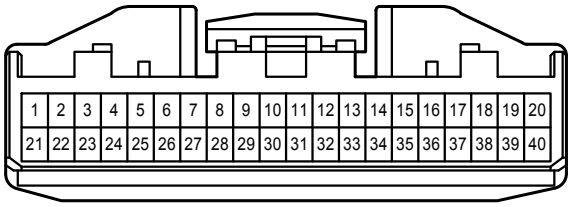


K 2
White




L 1
White




L 29
White




L 30
White




X 1
Black

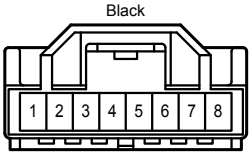


X 2
Black

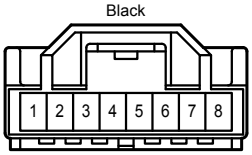


c 15
White

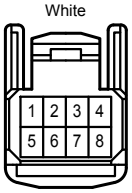


c 27
White

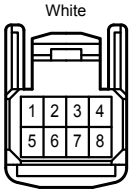


2B
White

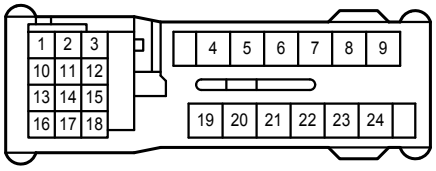


2D
White

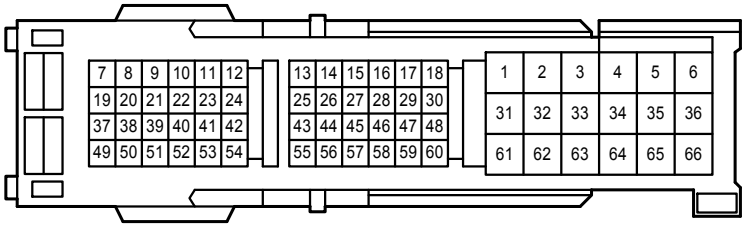


CA3
White

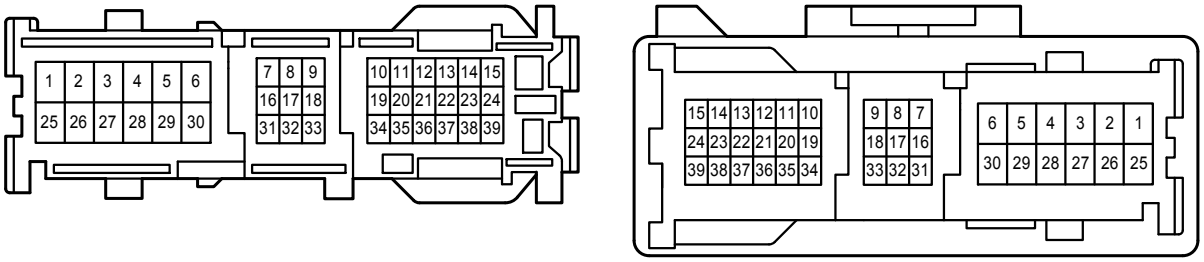


EA1
White

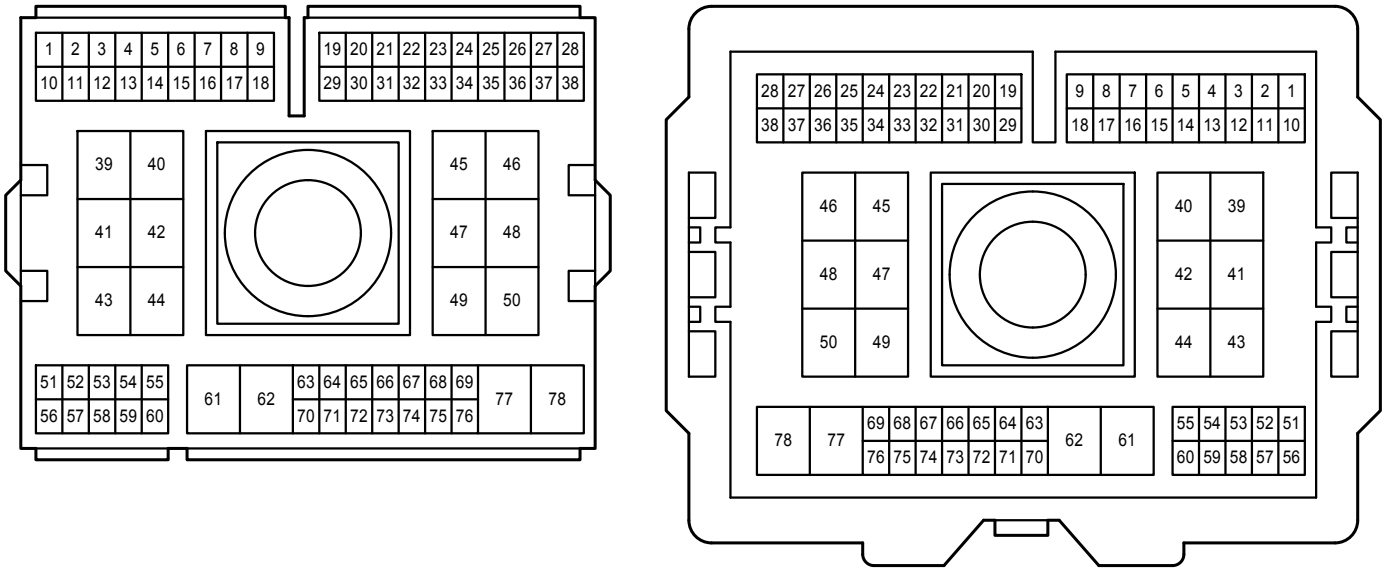


EA3
White

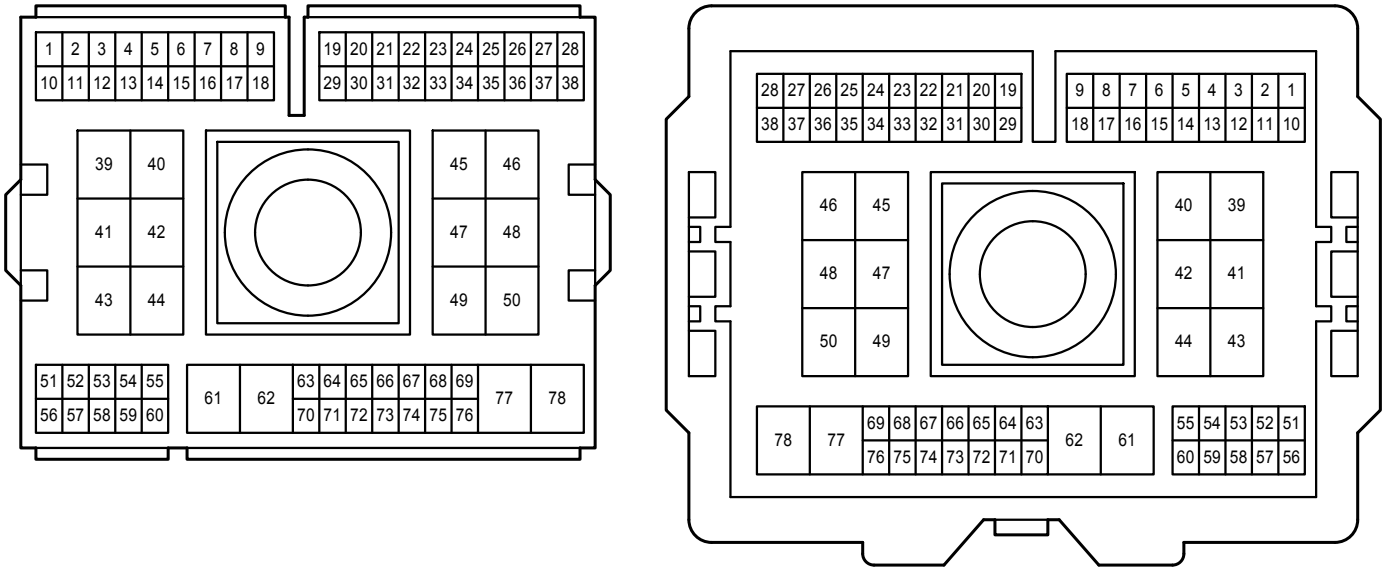


EK2
White

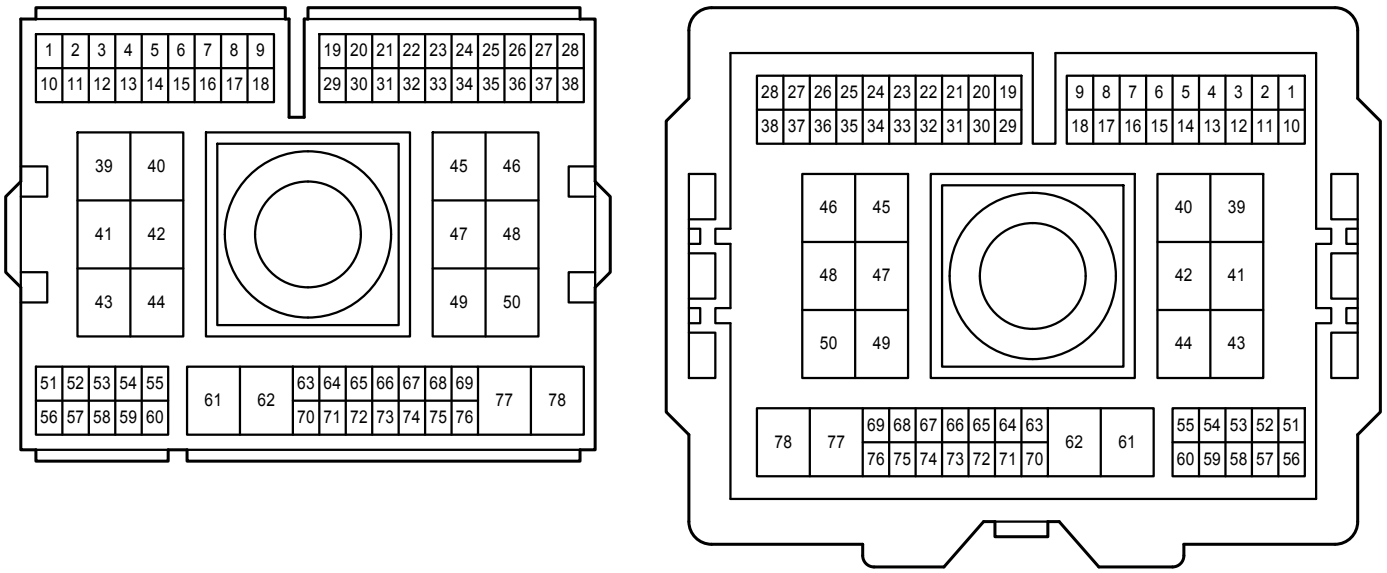


EL1
White

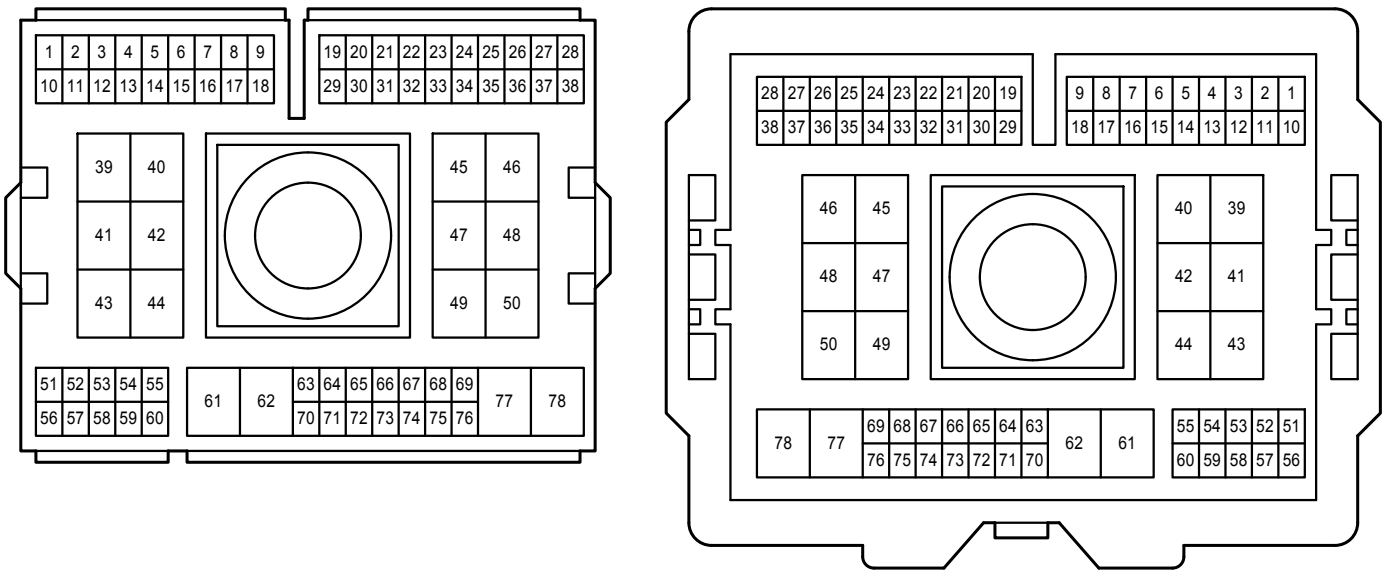


FE3
White

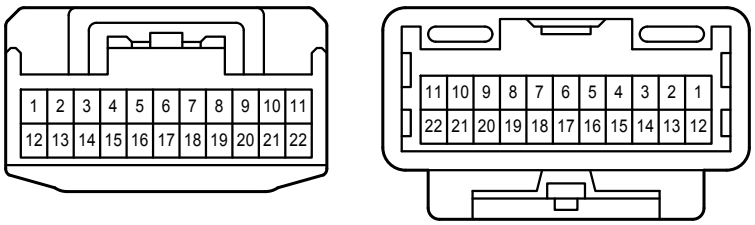


FE4
White

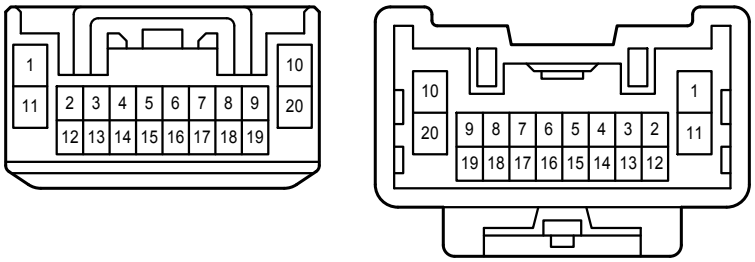


FL2
Blue

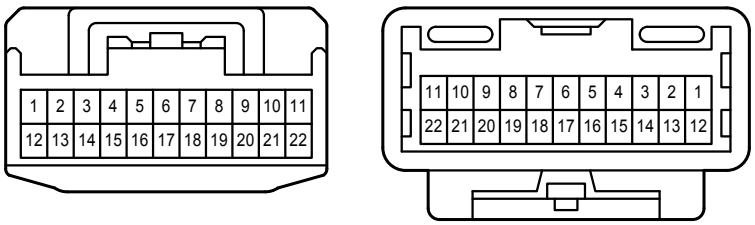


IE1
Gray

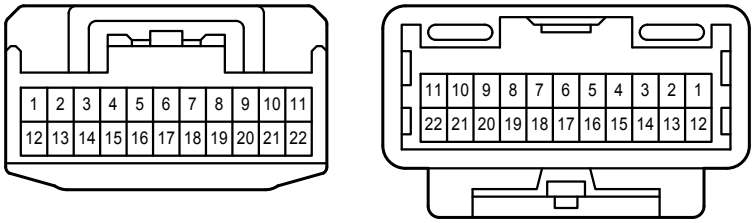


IE4
Gray

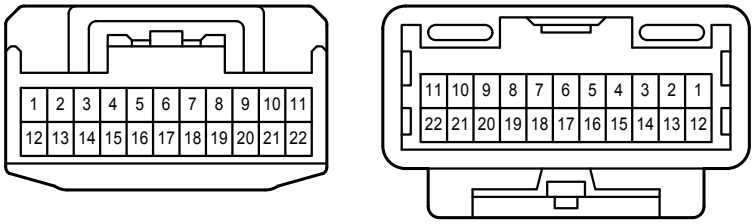


IX1
White

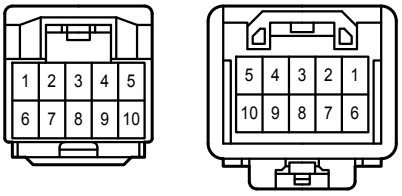


IX2
White

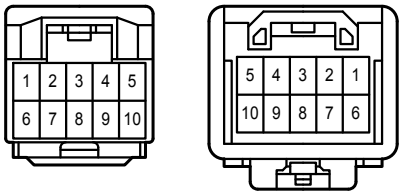

KL1
White

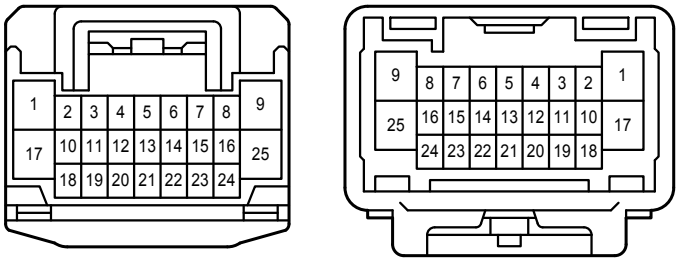

Kc1
White

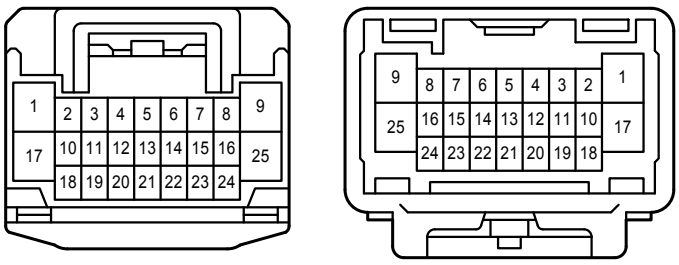

Lc1
White

