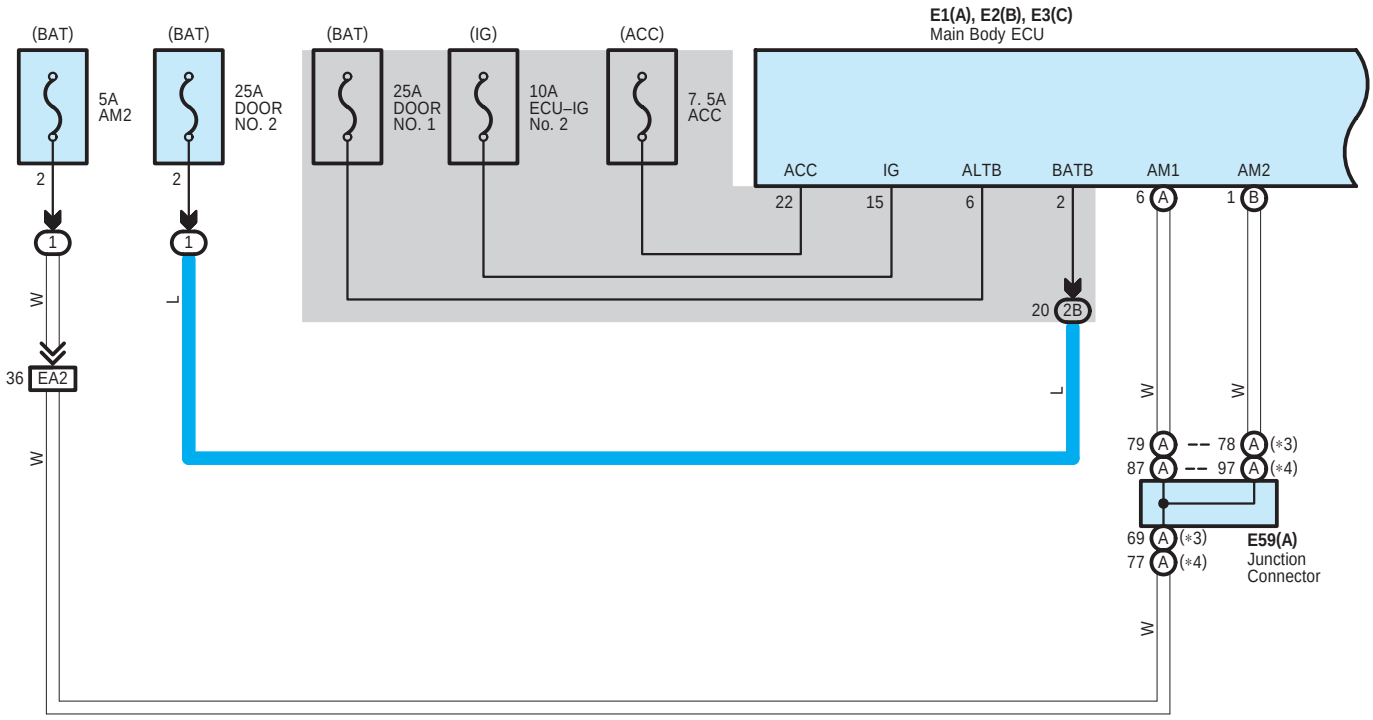
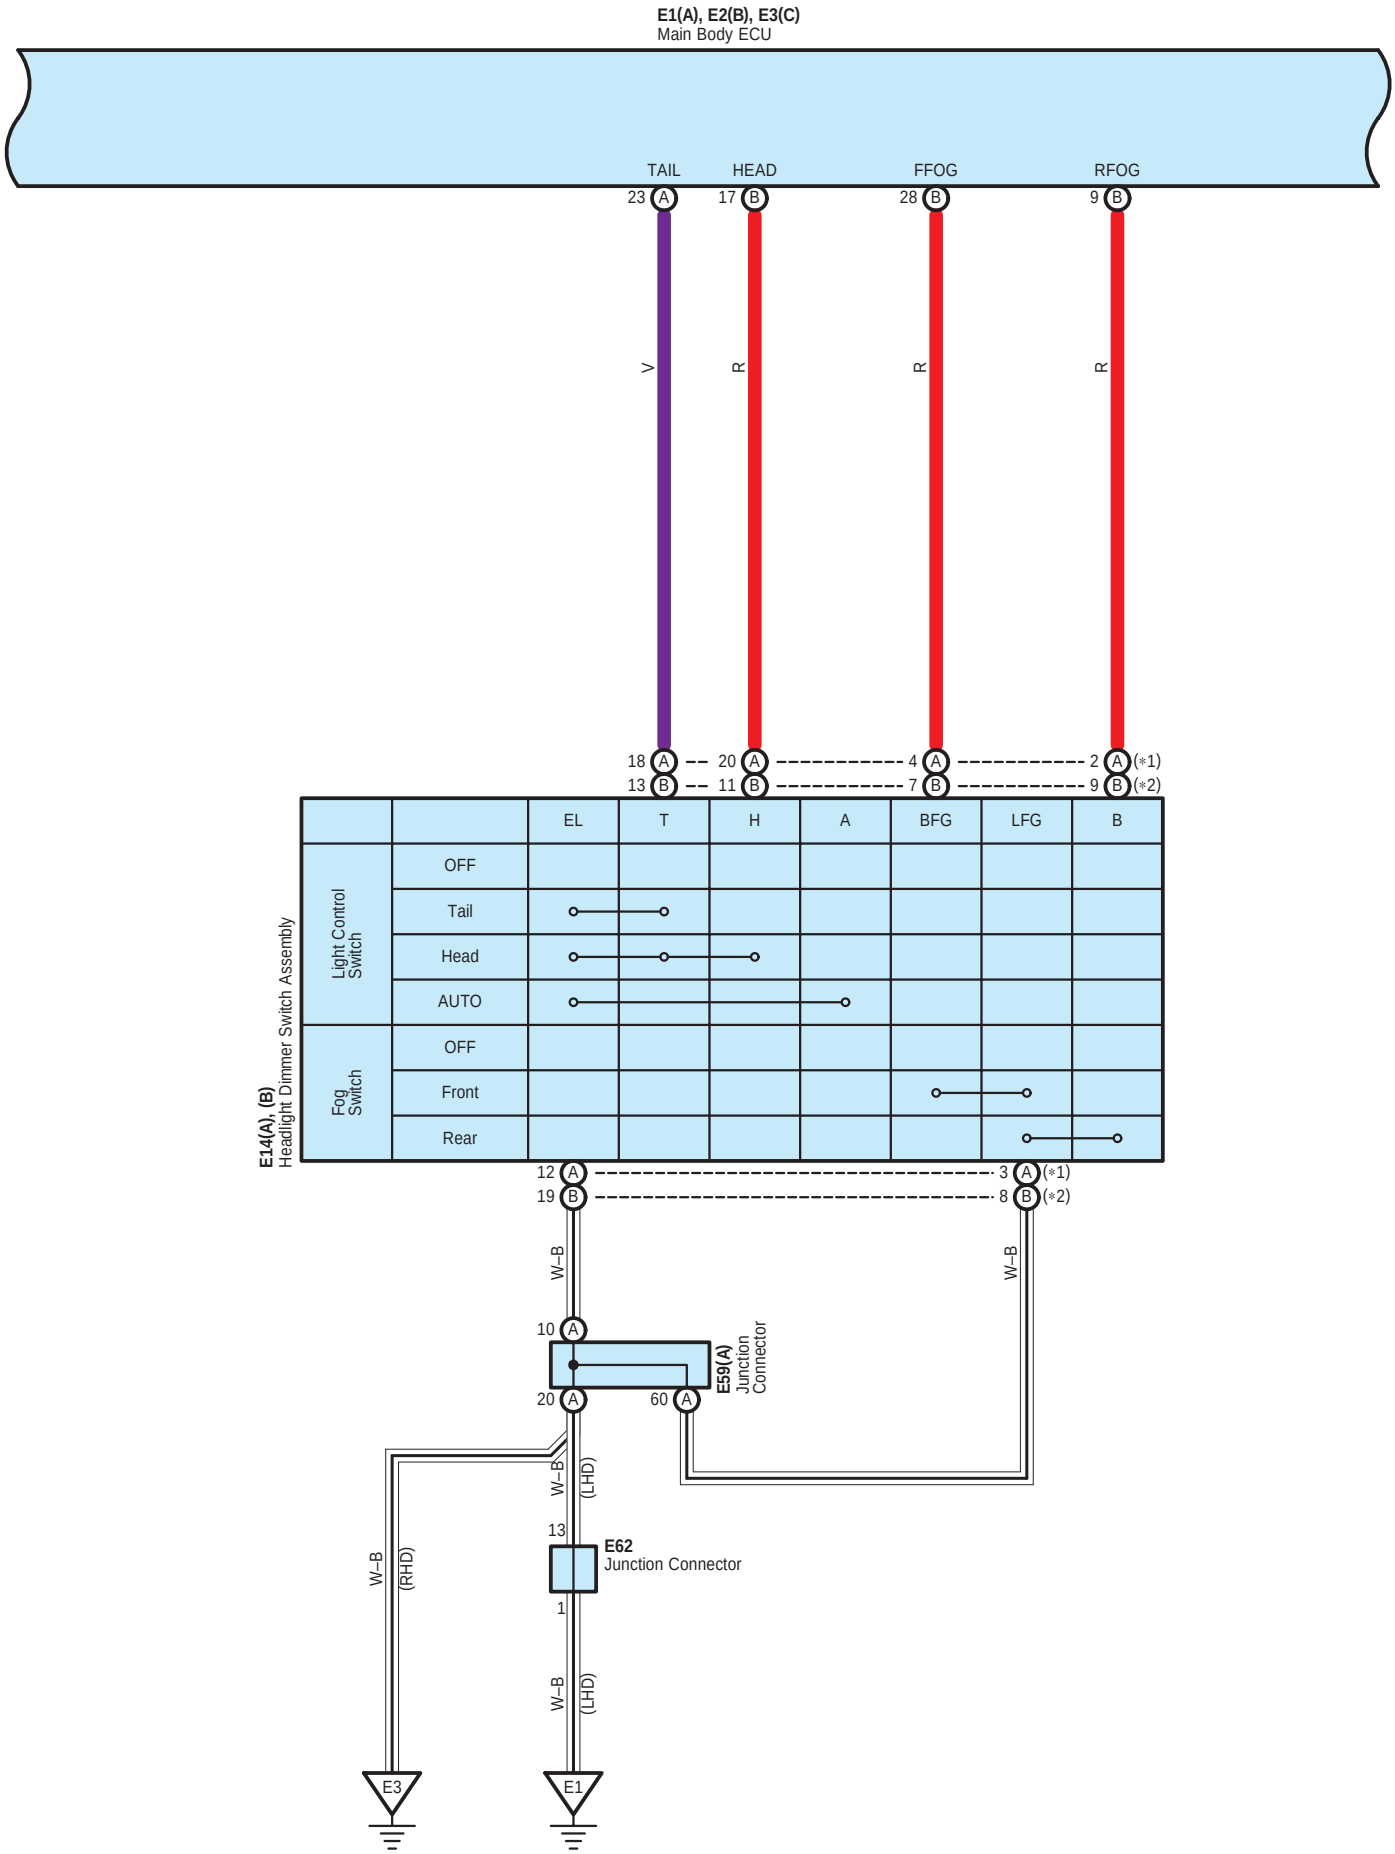
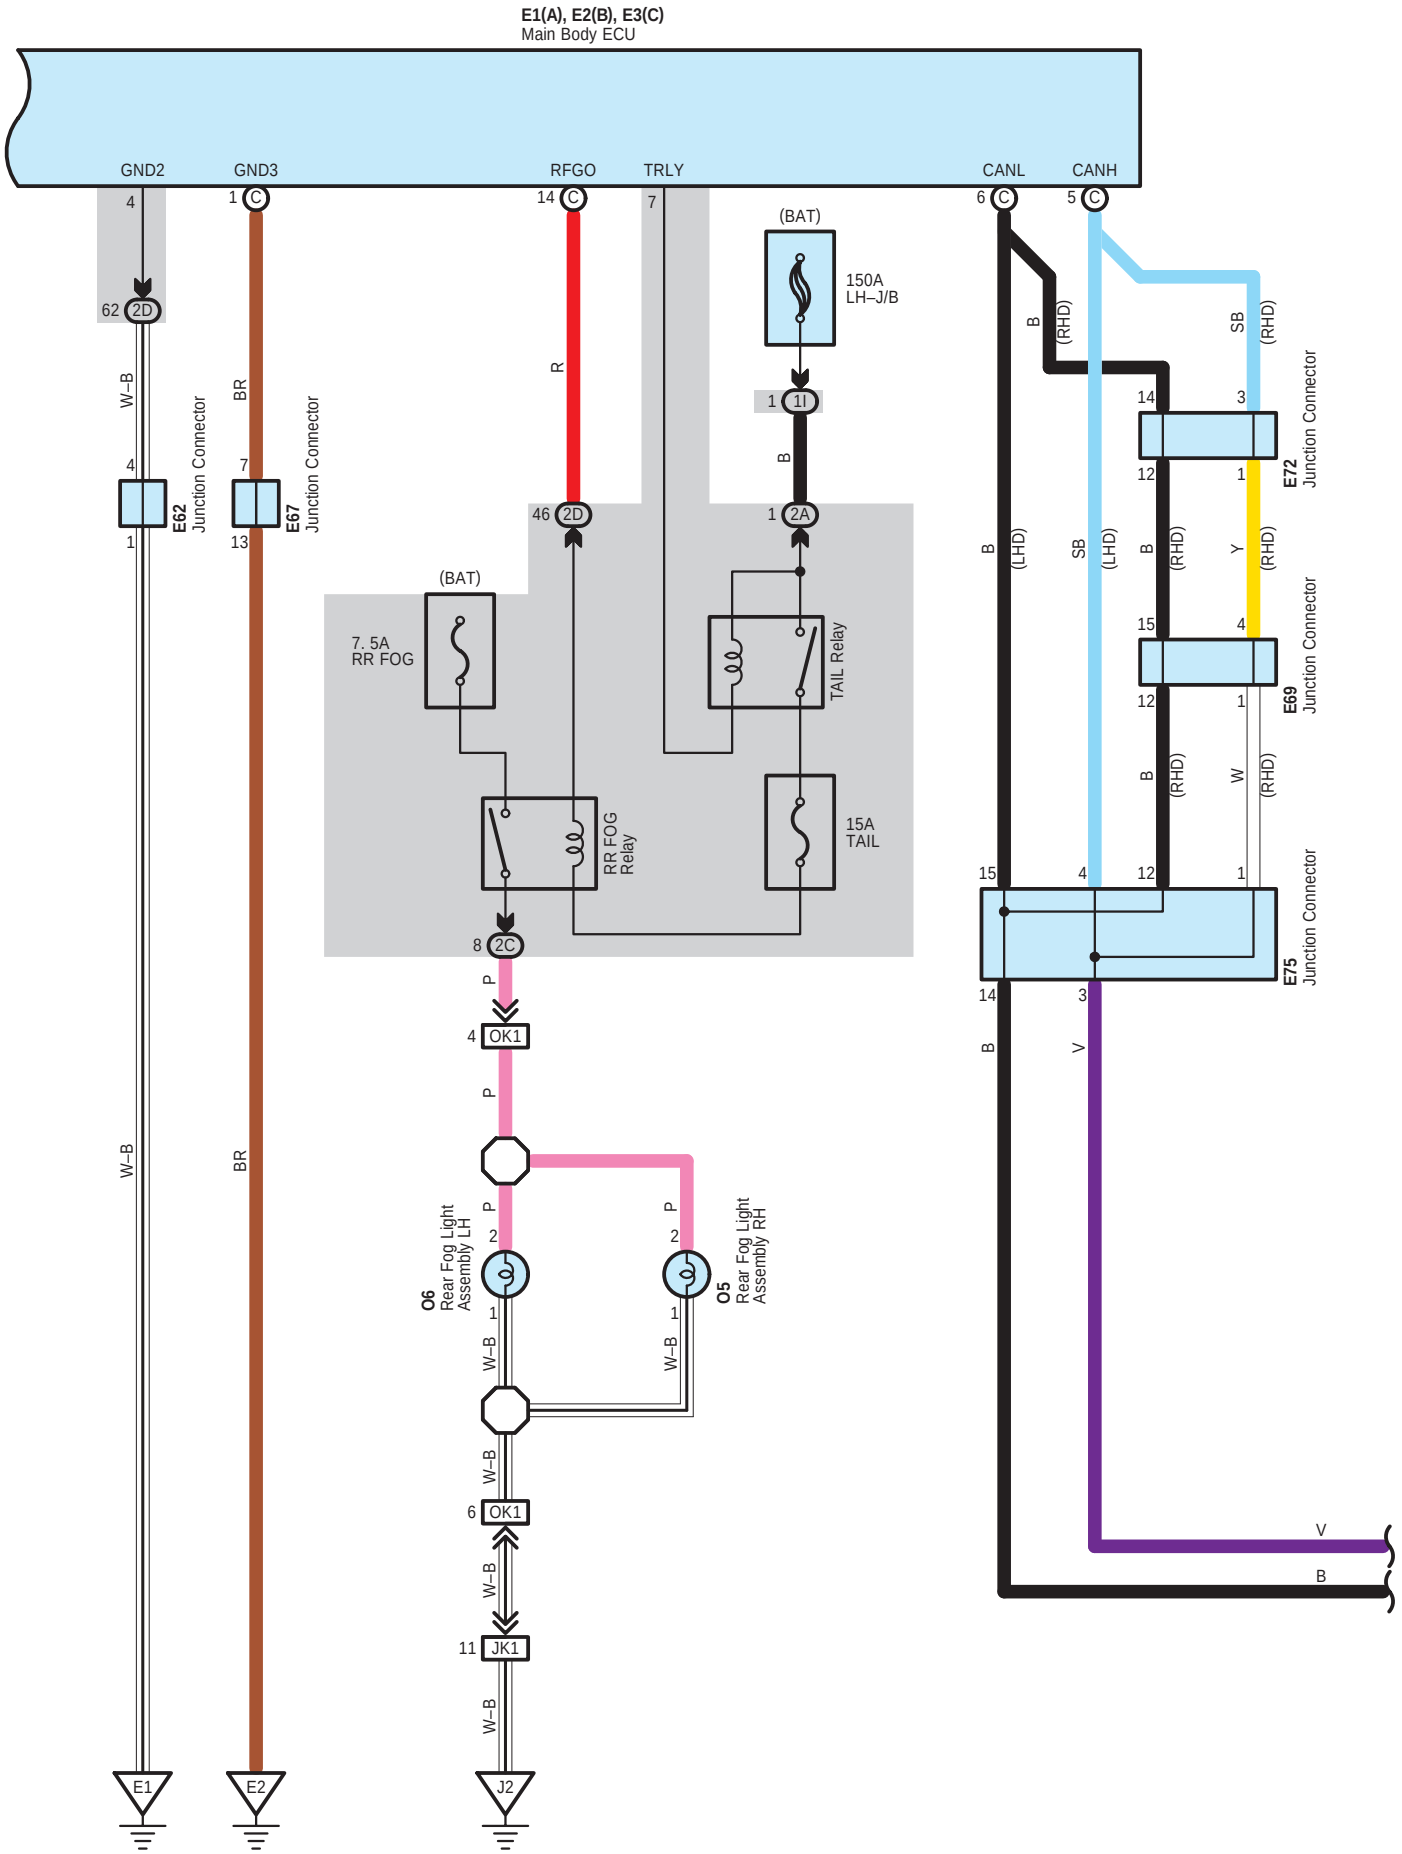
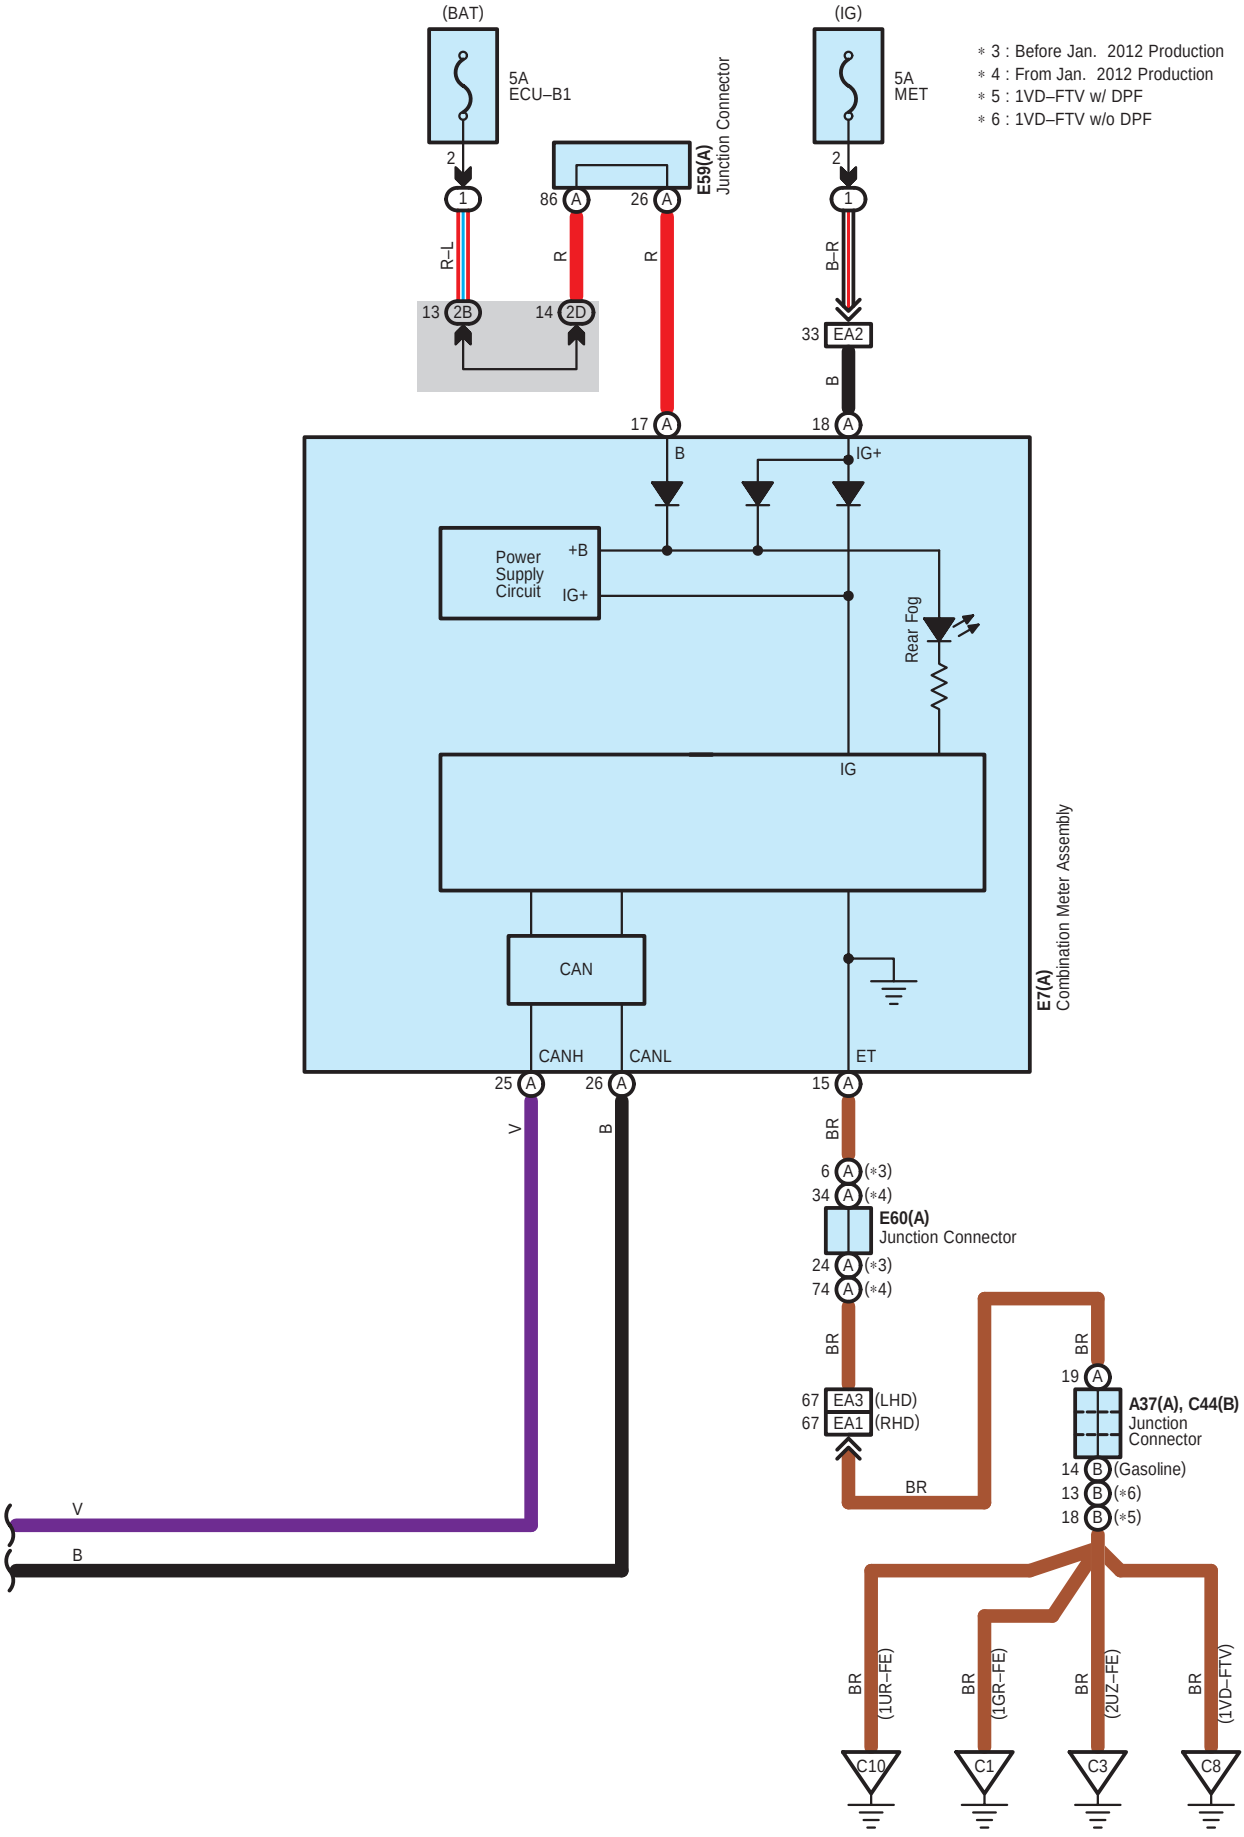



* 1 : LHD, RHD Headlight Dimmer Switch Assembly LH Side Type
* 2 : RHD Headlight Dimmer Switch Assembly RH Side Type
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production


E1(A), E2(B), E3(C)
Main Body ECU
TAIL
HEAD
FFOG
RFOG
23 A
17 B
28 B
9 B
V
R
R
R
18 A
13 B
20 A
11 B
4 A
7 B
2 A (*1)
9 B (*2)
E14(A), (B)
Headlight Dimmer Switch Assembly
EL
T
H
A
BFG
LFG
B
Light Control Switch
OFF
Tail
Head
AUTO
Fog Switch
OFF
Front
Rear
12 A
19 B
3 A (*1)
8 B (*2)
W–B
W–B
10 A
E59(A)
Junction Connector
20 A
60 A
W–B
(LHD)
13
E62
Junction Connector
1
W–B
(RHD)
W–B
(LHD)
E3
E1



E1(A), E2(B), E3(C)
Main Body ECU
GND2
GND3
RFGO
TRLY
CANL
CANH
(BAT)
150A
LH–J/B
7. 5A
RR FOG
TAIL Relay
RR FOG
Relay
15A
TAIL
E62
Junction Connector
E67
Junction Connector
E72
Junction Connector
E69
Junction Connector
E75
Junction Connector
O6
Rear Fog Light
Assembly LH
O5
Rear Fog Light
Assembly RH
(LHD)
(RHD)
E1
E2
J2


(BAT)
5A
ECU–B1
2
1
R–L
13 2B
14 2D
86 A
26 A
R
R
E59(A)
Junction Connector
(IG)
5A
MET
2
1
B–R
33 EA2
B
17 A
18 A
B
IG+
Power
Supply
Circuit
+B
IG+
Rear Fog
IG
CAN
CANH
CANL
ET
E7(A)
Combination Meter Assembly
25 A
26 A
15 A
V
B
BR
6 A (*3)
34 A (*4)
E60(A)
Junction Connector
24 A (*3)
74 A (*4)
BR
67 EA3 (LHD)
67 EA1 (RHD)
BR
BR
19 A
A37(A), C44(B)
Junction
Connector
14 B (Gasoline)
13 B (*6)
18 B (*5)
V
B
BR
(1UR–FE)
BR
(1GR–FE)
BR
(2UZ–FE)
BR
(1VD–FTV)
C10
C1
C3
C8
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production
* 5 : 1VD–FTV w/ DPF
* 6 : 1VD–FTV w/o DPF


A 37
Blue

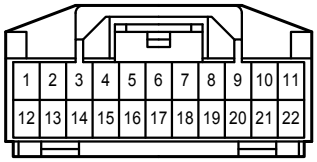


C 44
Blue

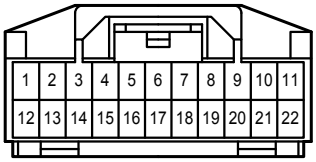


E 1
White

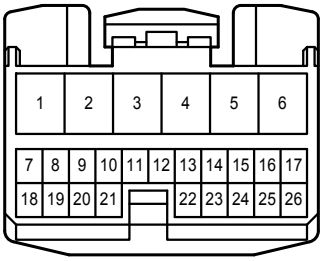


E 2
White

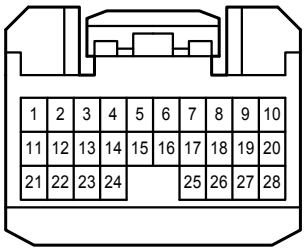


E 3
White

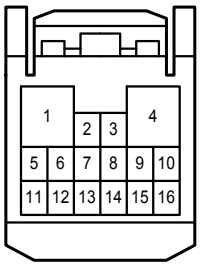


E 7
White

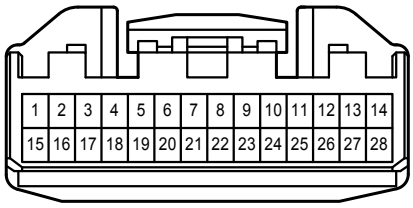


E 14
White

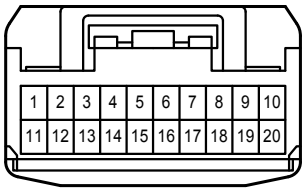


E 59

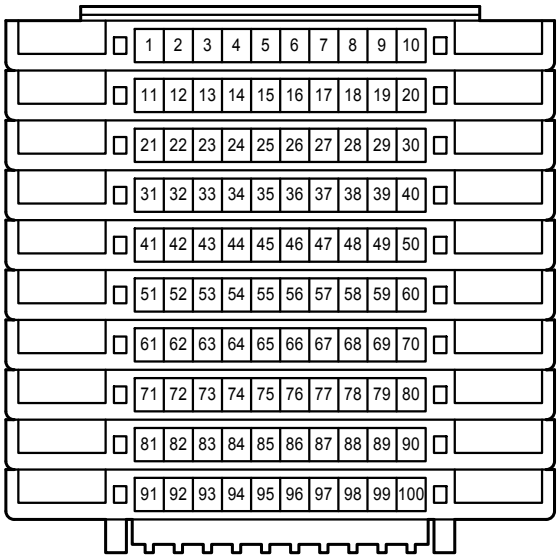


E 60

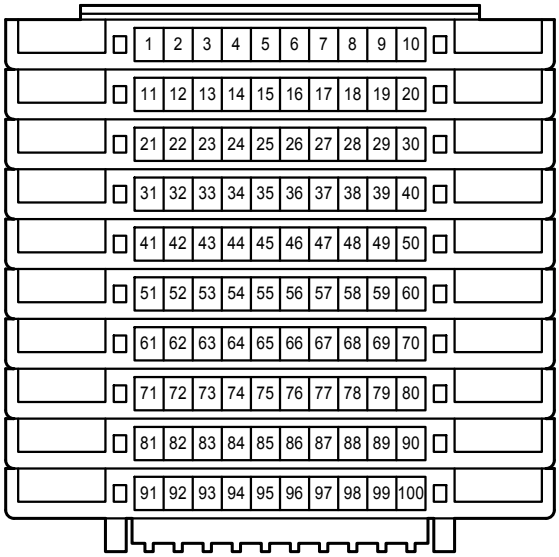


E 62
White

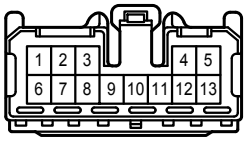


E 67
White

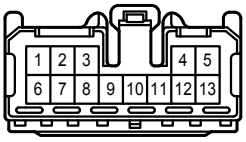


E 69
Gray

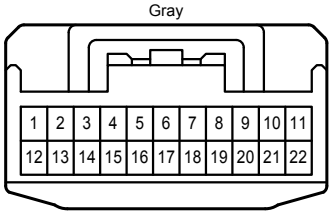


E 72
Gray

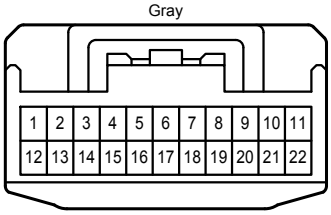


E 75
Gray

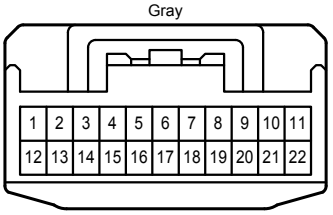


O 5
White

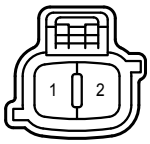


O 6
White

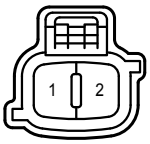


1I




2A
White




2B
White

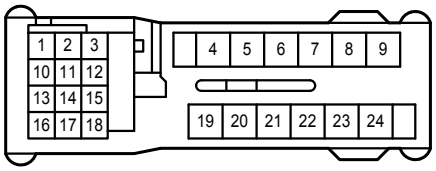

2C
White

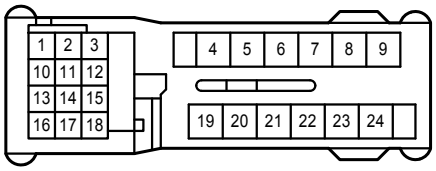


2D
White

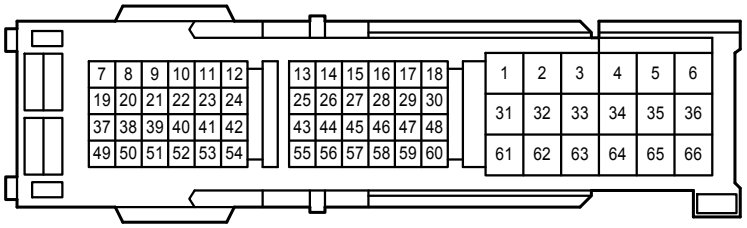

EA1


White

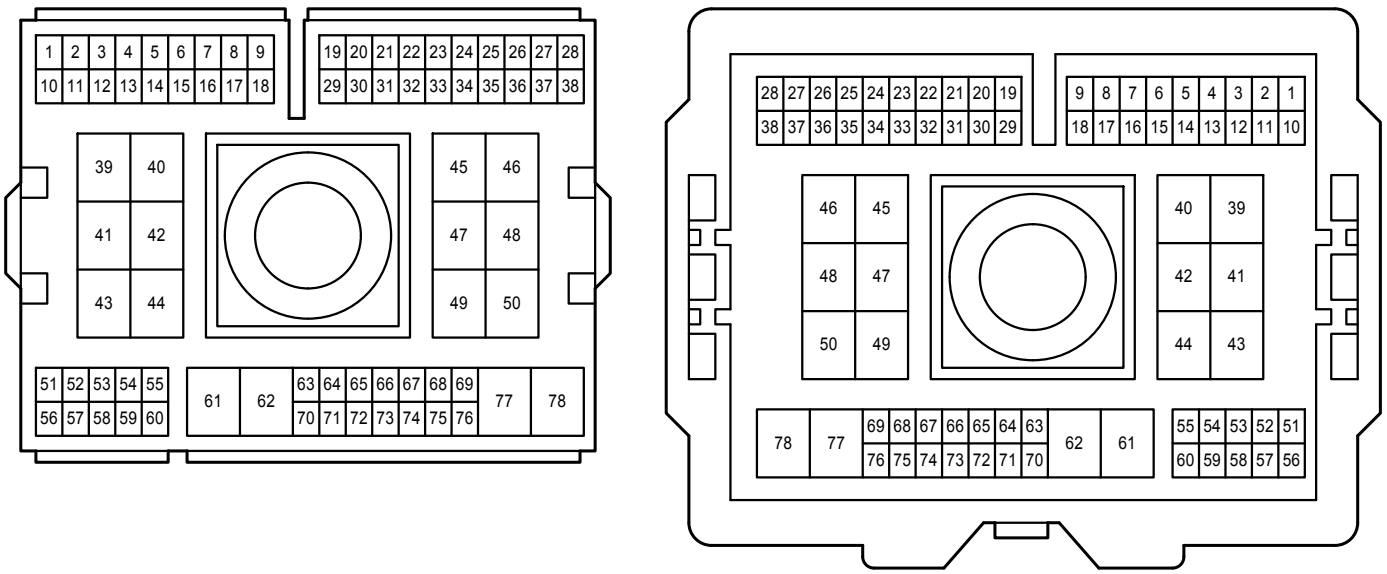


EA2

White


Gray

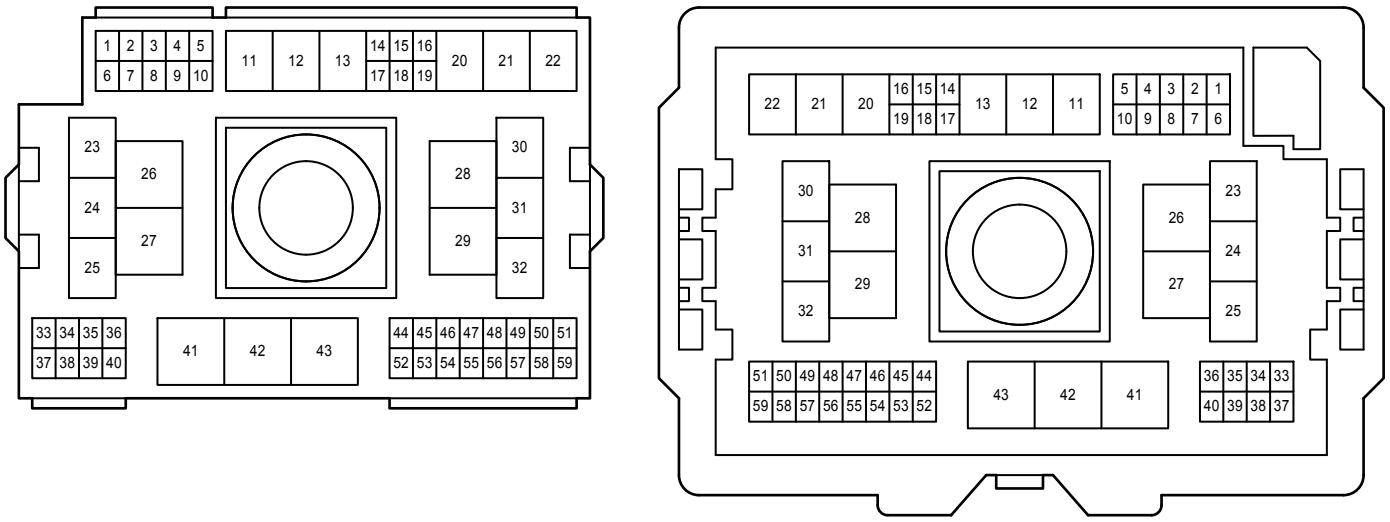

EA3
White

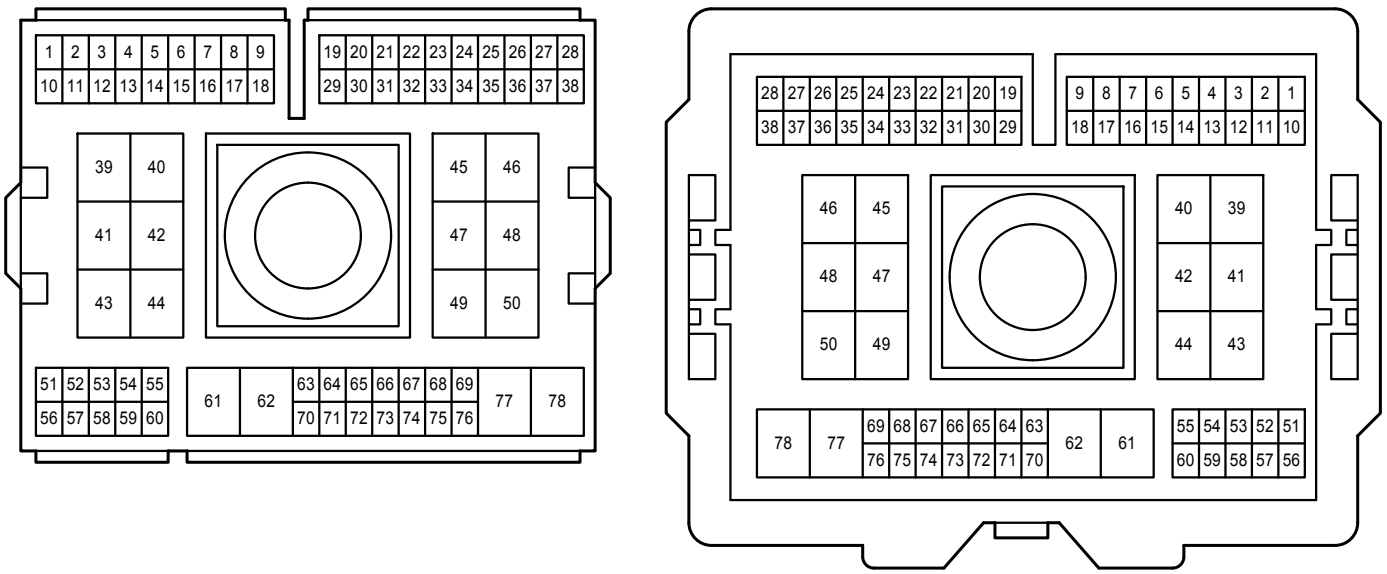

JK1
White

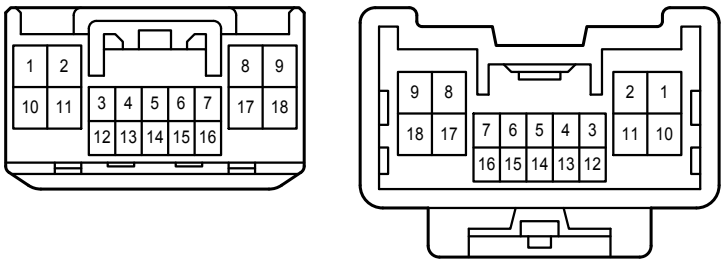

OK1
Black

