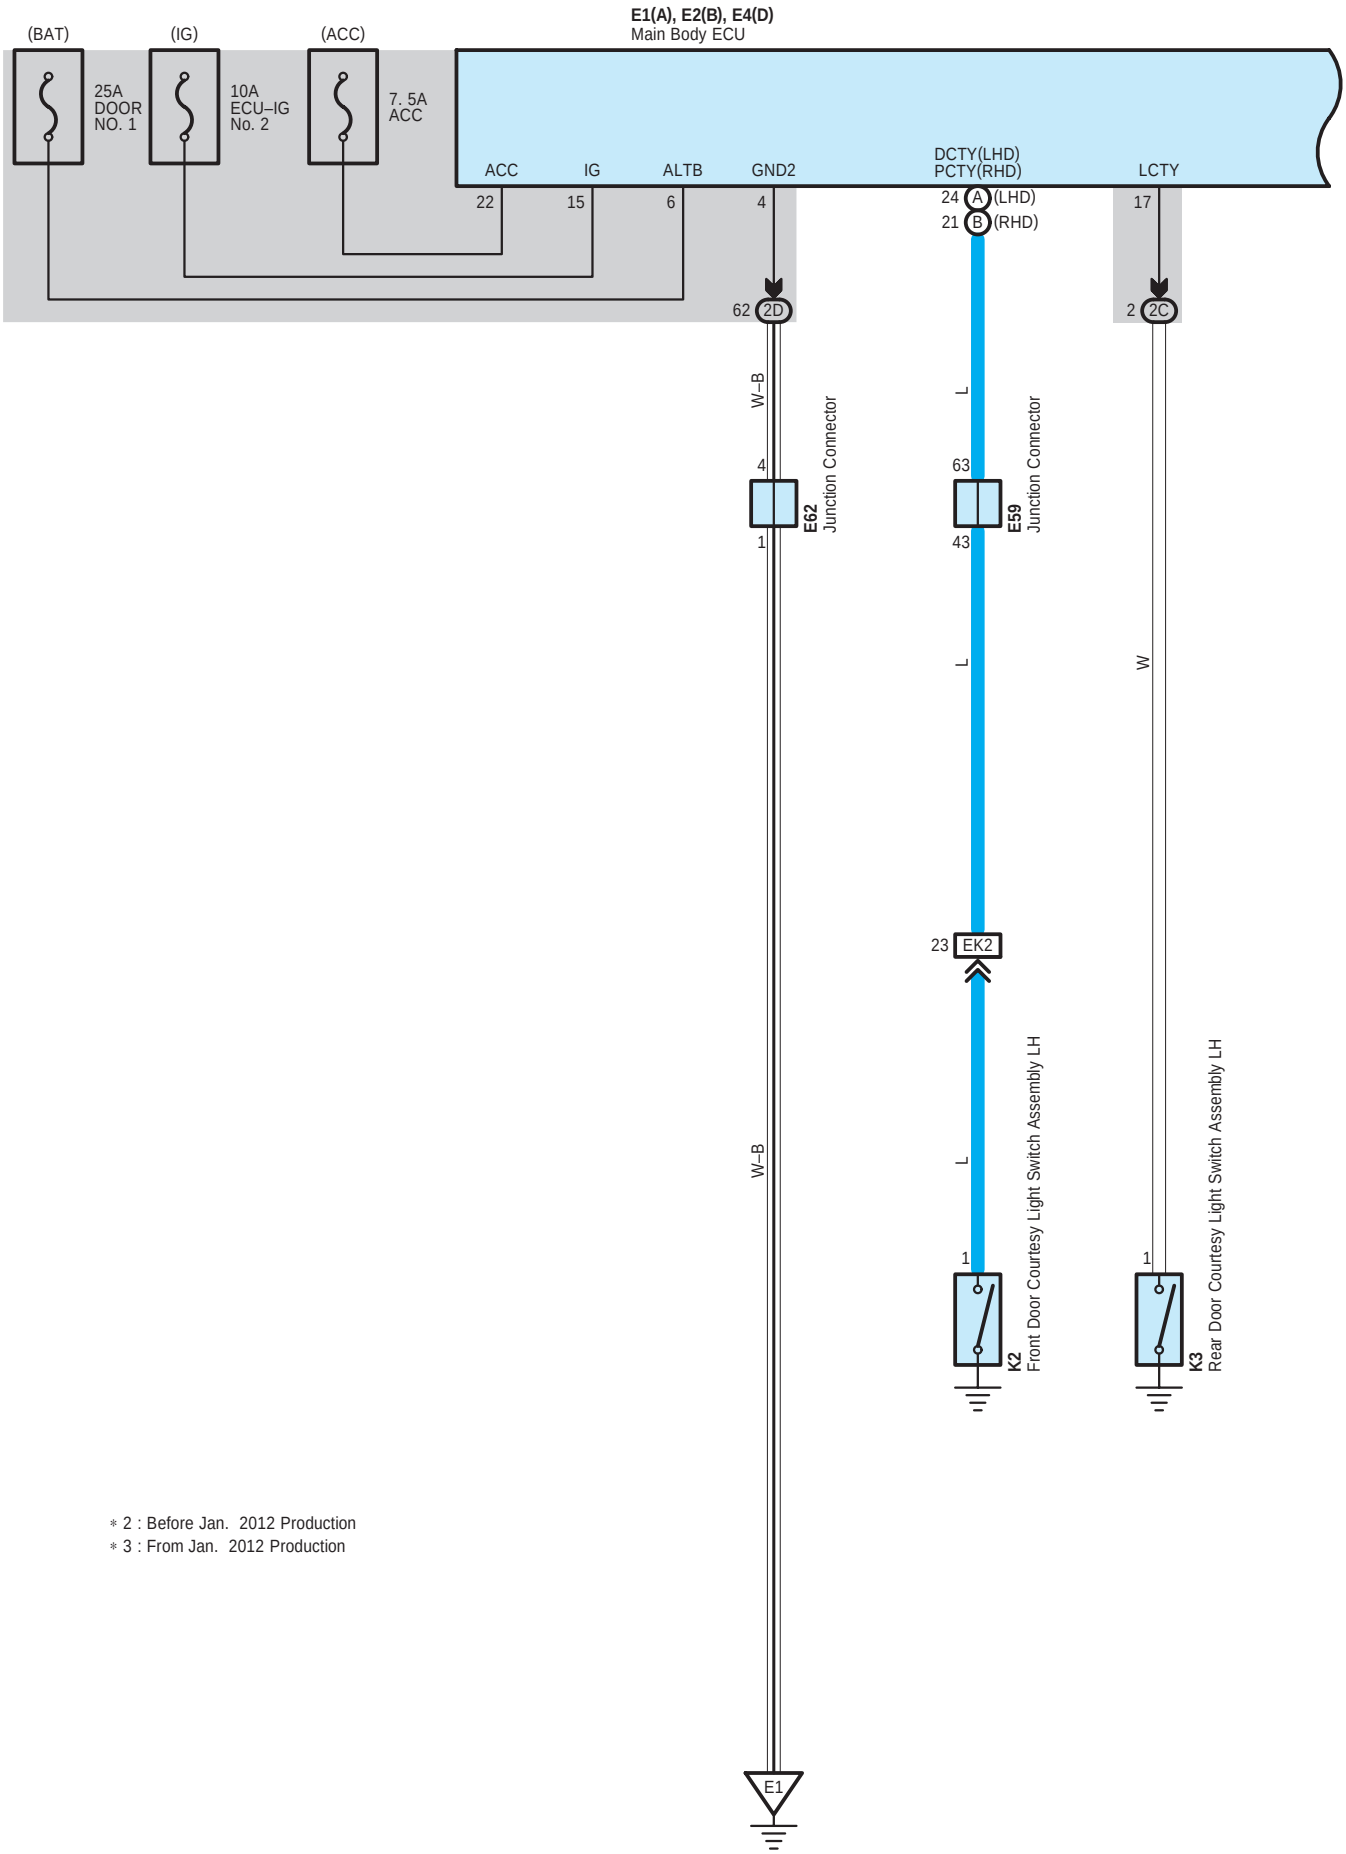
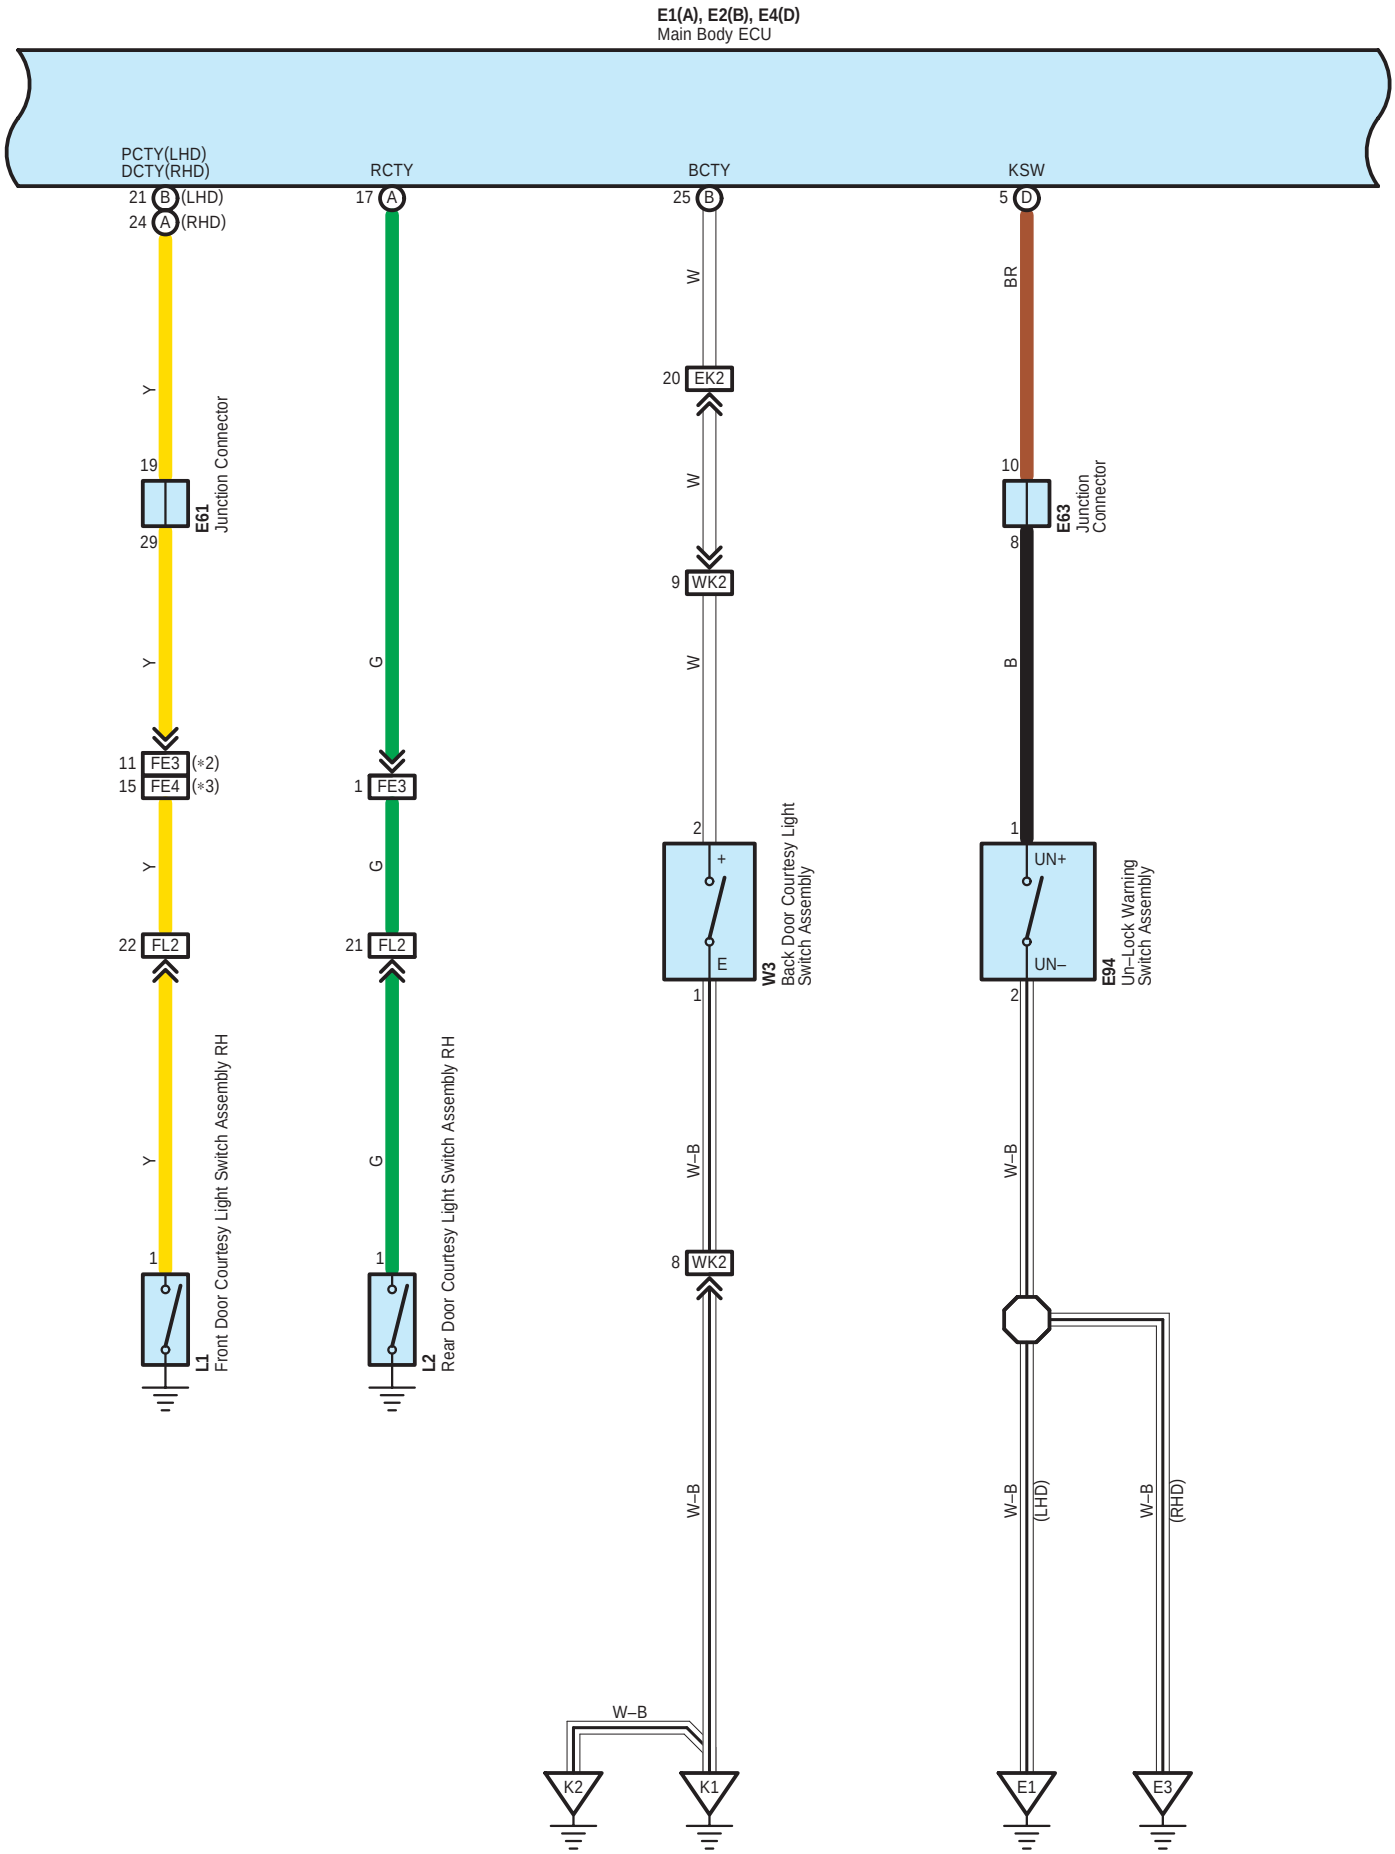
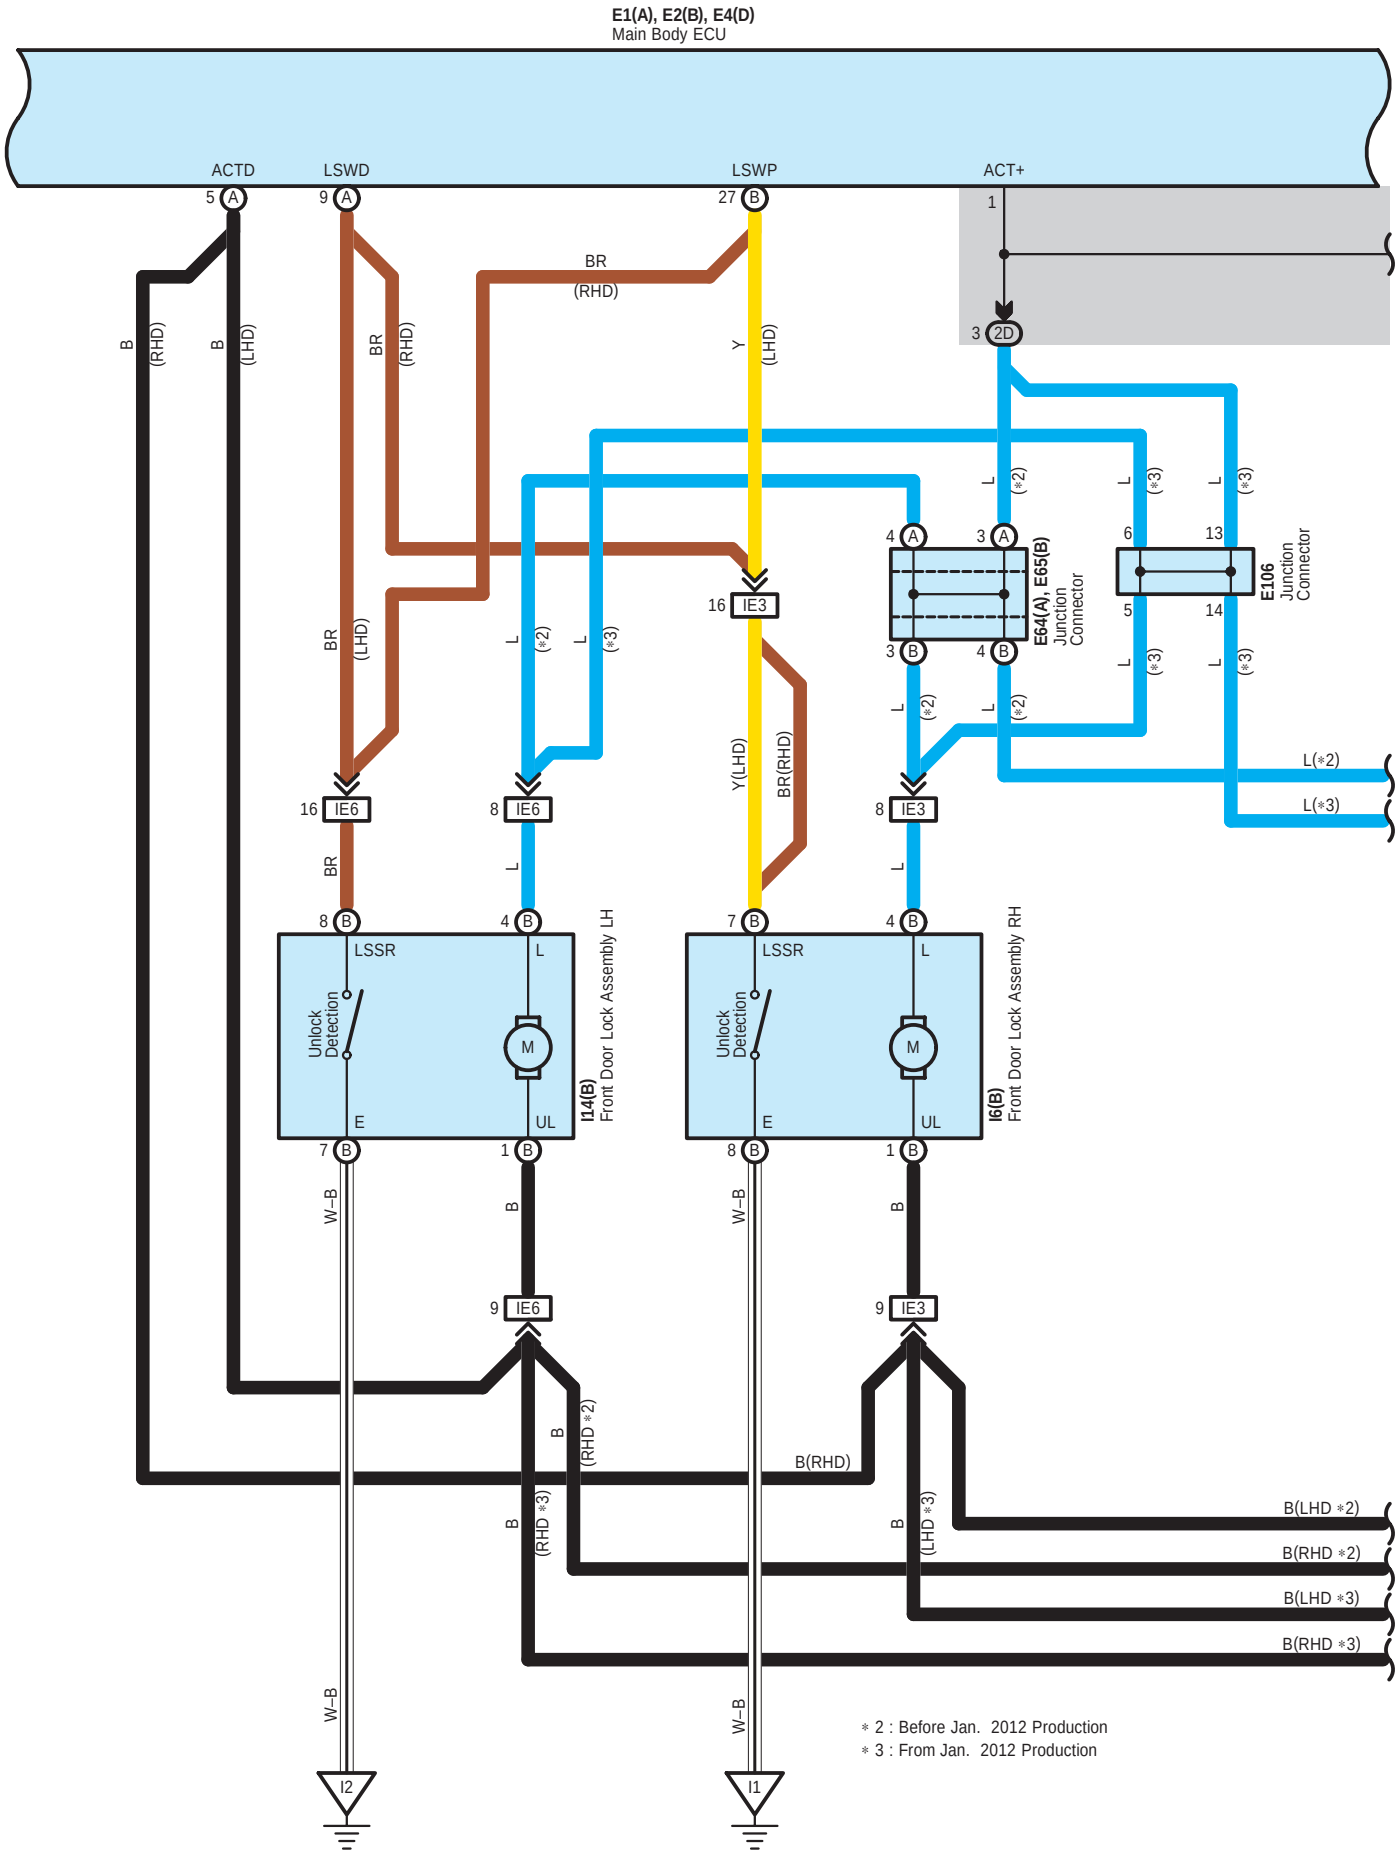
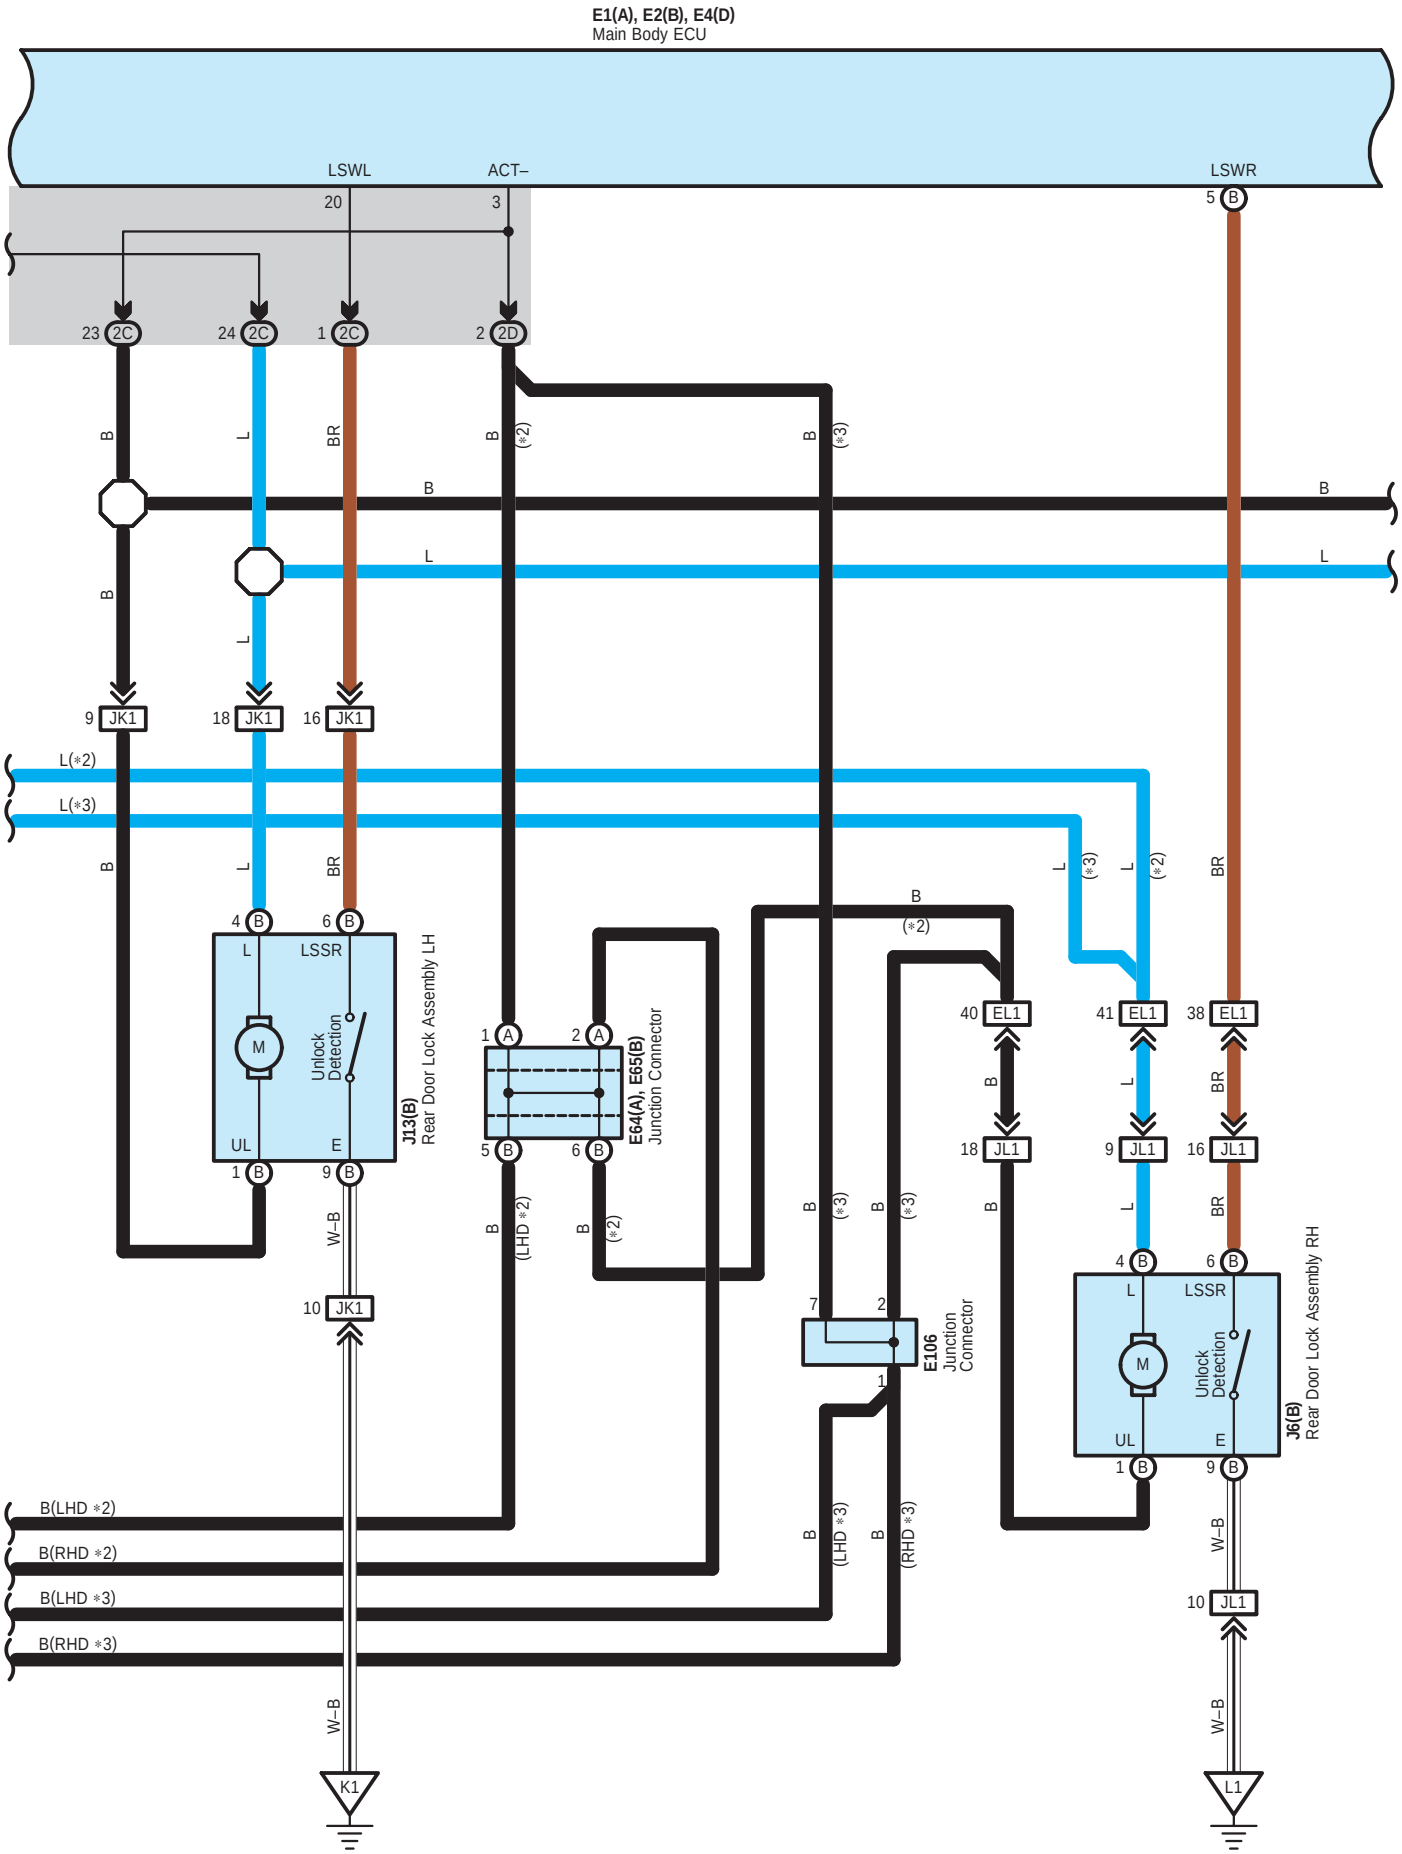
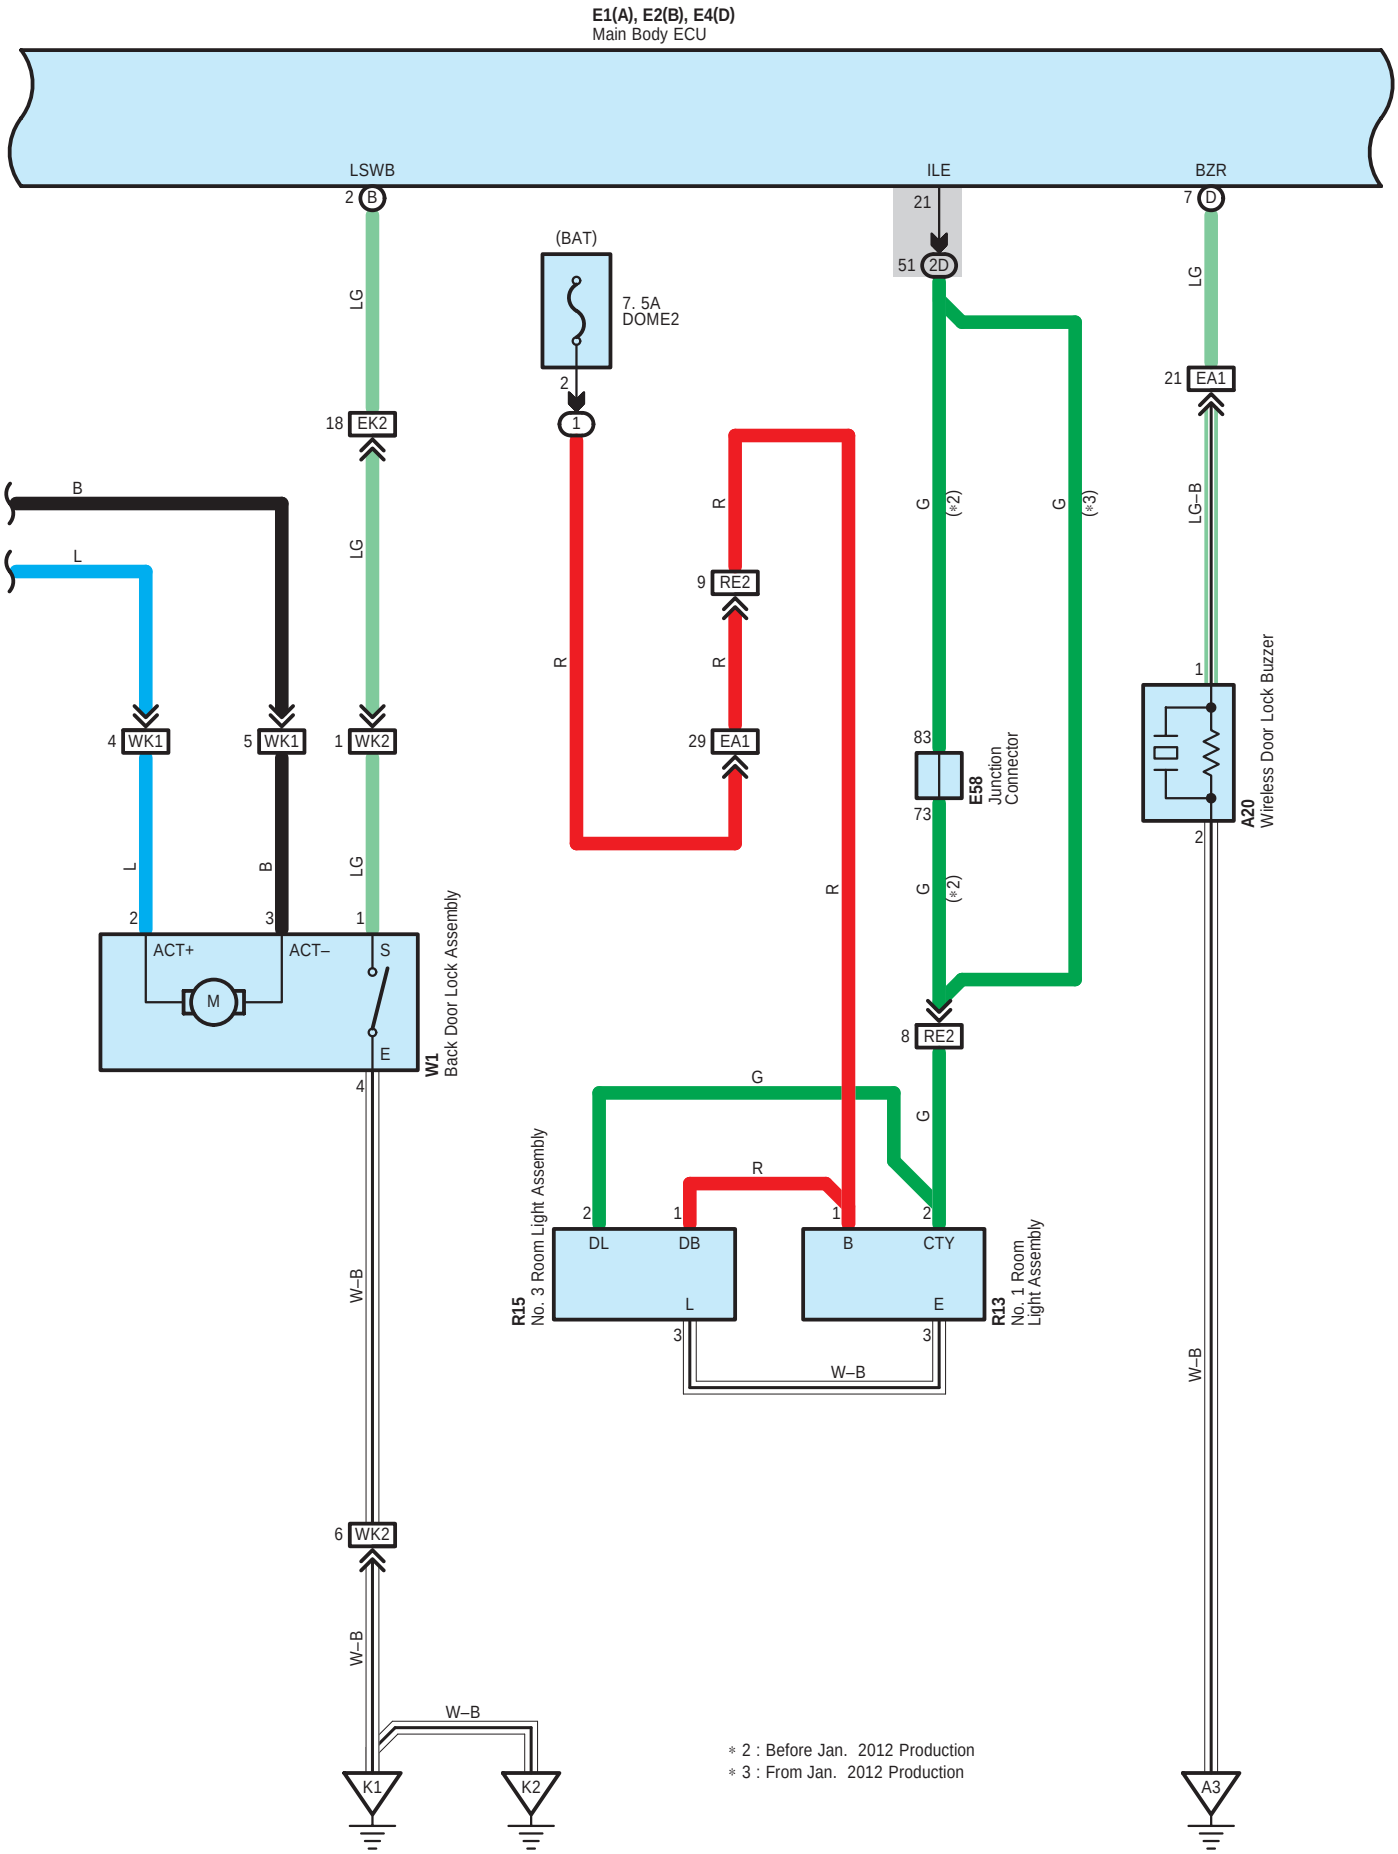


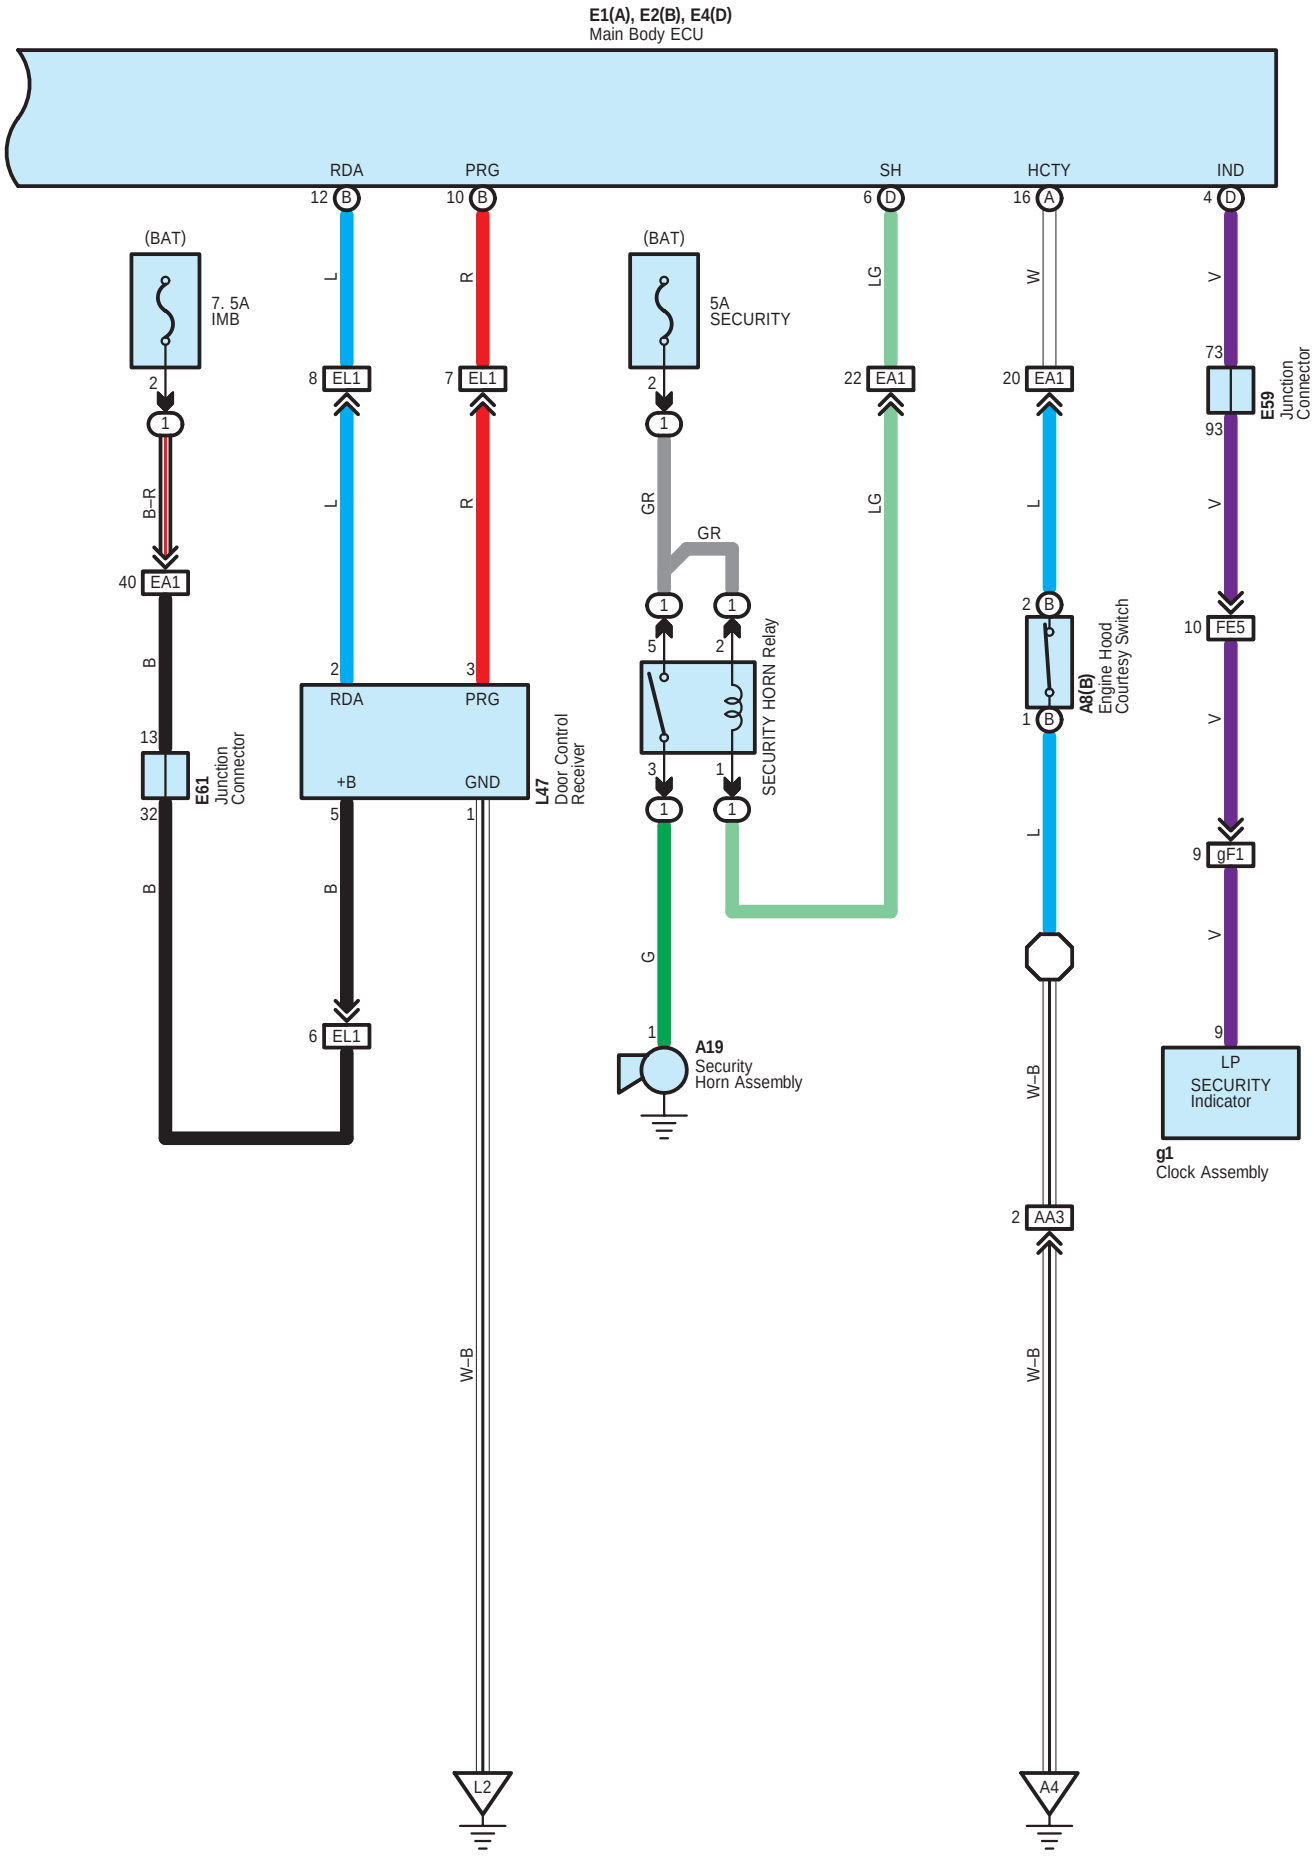

∗ 2 : Before Jan. 2012 Production
∗ 3 : From Jan. 2012 Production


E1(A), E2(B), E4(D)
Main Body ECU
PCTY(LHD)
DCTY(RHD)
RCTY
BCTY
KSW
21 B (LHD)
24 A (RHD)
17 A
25 B
5 D
Y
G
W
BR
B
19
29
E61
Junction Connector
20 EK2
9 WK2
10
8
E63
Junction
Connector
11 FE3 (*2)
15 FE4 (*3)
1 FE3
22 FL2
21 FL2
2
1
+
E
W3
Back Door Courtesy Light
Switch Assembly
UN+
UN–
E94
Un–Lock Warning
Switch Assembly
1
L1
Front Door Courtesy Light Switch Assembly RH
1
L2
Rear Door Courtesy Light Switch Assembly RH
W–B
8 WK2
W–B
(LHD)
W–B
(RHD)
K2
K1
E1
E3


E1(A), E2(B), E4(D)
Main Body ECU
ACTD
LSWD
LSWP
ACT+
5 A
9 A
27 B
1
3 2D
B (RHD)
B (LHD)
BR (RHD)
BR (LHD)
BR (RHD)
Y (LHD)
L (*2)
L (*3)
16 IE3
4 A
3 A
3 B
4 B
E64(A), E65(B) Junction Connector
6
13
5
14
E106 Junction Connector
16 IE6
8 IE6
8 IE3
Y(LHD)
BR(RHD)
L(*2)
L(*3)
BR
L
8 B
4 B
7 B
4 B
LSSR
Unlock Detection
M
E
UL
I14(B) Front Door Lock Assembly LH
I6(B) Front Door Lock Assembly RH
7 B
1 B
8 B
1 B
W–B
B
9 IE6
9 IE3
B(RHD)
B (RHD *2)
B (RHD *3)
B (LHD *3)
B(LHD *2)
B(RHD *2)
B(LHD *3)
B(RHD *3)
W–B
W–B
I2
I1
* 2 : Before Jan. 2012 Production
* 3 : From Jan. 2012 Production


E1(A), E2(B), E4(D)
Main Body ECU
LSWL
ACT–
LSWR
20
3
5 B
23 2C
24 2C
1 2C
2 2D
B
L
BR
B (*2)
B (*3)
9 JK1
18 JK1
16 JK1
L(*2)
L(*3)
4 B
6 B
L
LSSR
M
Unlock Detection
UL
E
1 B
9 B
J13(B)
Rear Door Lock Assembly LH
1 A
2 A
5 B
6 B
E64(A), E65(B)
Junction Connector
W–B
10 JK1
(LHD *2)
(*2)
(*3)
40 EL1
41 EL1
38 EL1
18 JL1
9 JL1
16 JL1
7
2
1
E106
Junction Connector
J6(B)
Rear Door Lock Assembly RH
10 JL1
B(LHD *2)
B(RHD *2)
B(LHD *3)
B(RHD *3)
K1
L1


E1(A), E2(B), E4(D)
Main Body ECU
LSWB
ILE
BZR
2 B
21
51 2D
7 D
(BAT)
7. 5A
DOME2
2
1
LG
18 EK2
21 EA1
LG–B
B
L
4 WK1
5 WK1
1 WK2
R
9 RE2
29 EA1
G
(*2)
(*3)
83
73
E58
Junction
Connector
8 RE2
A20
Wireless Door Lock Buzzer
W1
Back Door Lock Assembly
ACT+
ACT–
S
M
E
W–B
6 WK2
K1
K2
R15
No. 3 Room Light Assembly
DL
DB
L
R13
No. 1 Room
Light Assembly
B
CTY
A3
* 2 : Before Jan. 2012 Production
* 3 : From Jan. 2012 Production


E1(A), E2(B), E4(D)
Main Body ECU
RDA
PRG
SH
HCTY
IND
12 B
10 B
6 D
16 A
4 D
(BAT)
7. 5A
IMB
L
R
LG
W
V
2
8 EL1
7 EL1
22 EA1
20 EA1
73
E59
Junction
Connector
93
1
B–R
GR
L
R
LG
L
V
40 EA1
2 B
10 FE5
B
13
E61
Junction
Connector
RDA
PRG
+B
GND
L47
Door Control
Receiver
5
2
3
1
V
32
5
1
9 gF1
B
B
6 EL1
(BAT)
5A
SECURITY
GR
SECURITY HORN Relay
3
1
G
V
1
A19
Security
Horn Assembly
9
LP
SECURITY
Indicator
A8(B)
Engine Hood
Courtesy Switch
1 B
L
W–B
2 AA3
W–B
g1
Clock Assembly
L2
A4

A 8
Black




(Except U.K.)

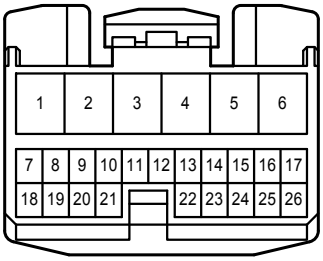
A 19
Black



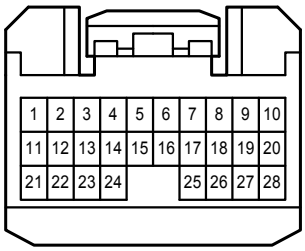

A 20
Black



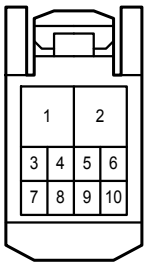

E 1
White



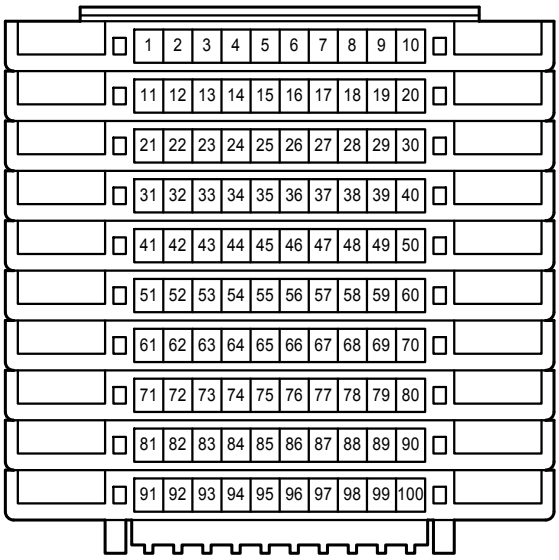

E 2
White



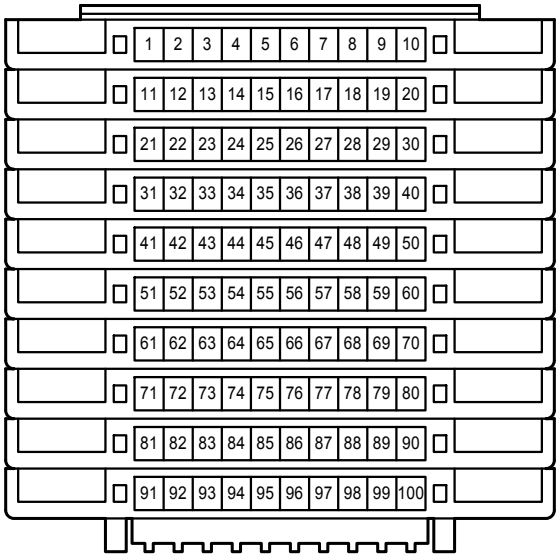

E 4
White



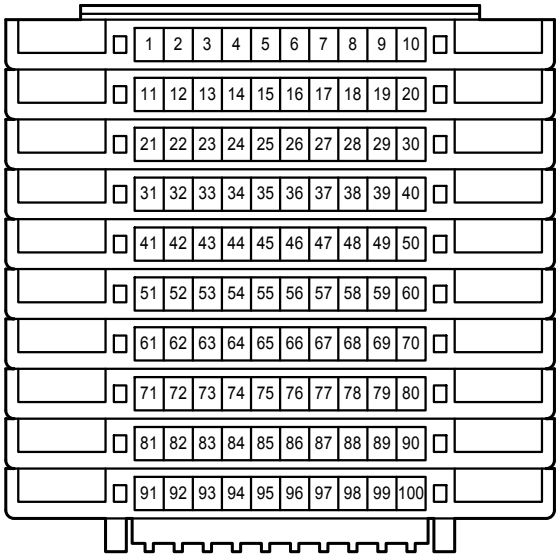

E 58



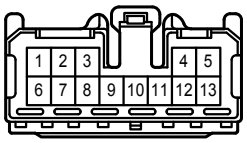

E 59



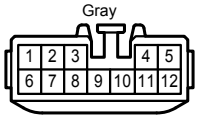

E 61



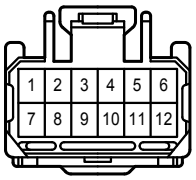

E 62
White



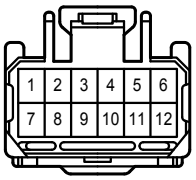

E 63
Gray





E 64
Black





E 65
Black



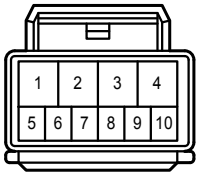
E 94
White



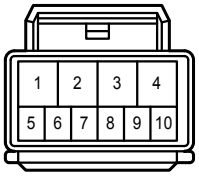

E106
White



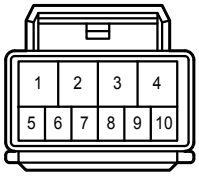

I 6
White



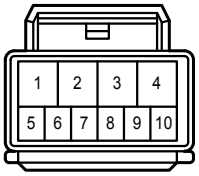

I 14
White




J 6
White




J 13
White




K 2
White




K 3
White



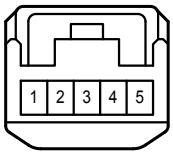

L 1
White





L 2
White





L 47
White




R 13
White



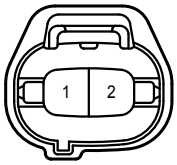

R 15
White




W 1
White



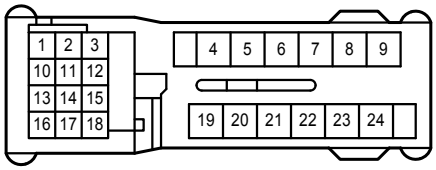

W 3
Blue



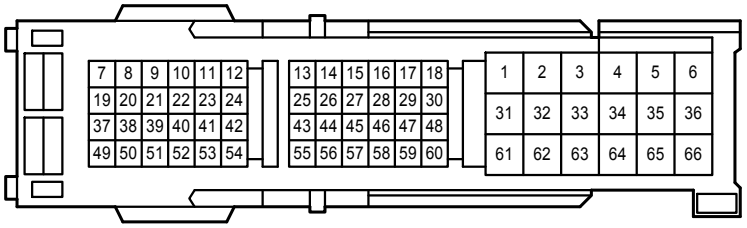

g 1
White



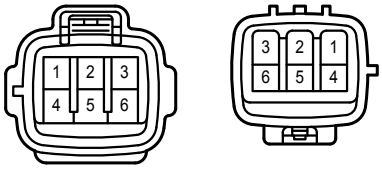

2C
White



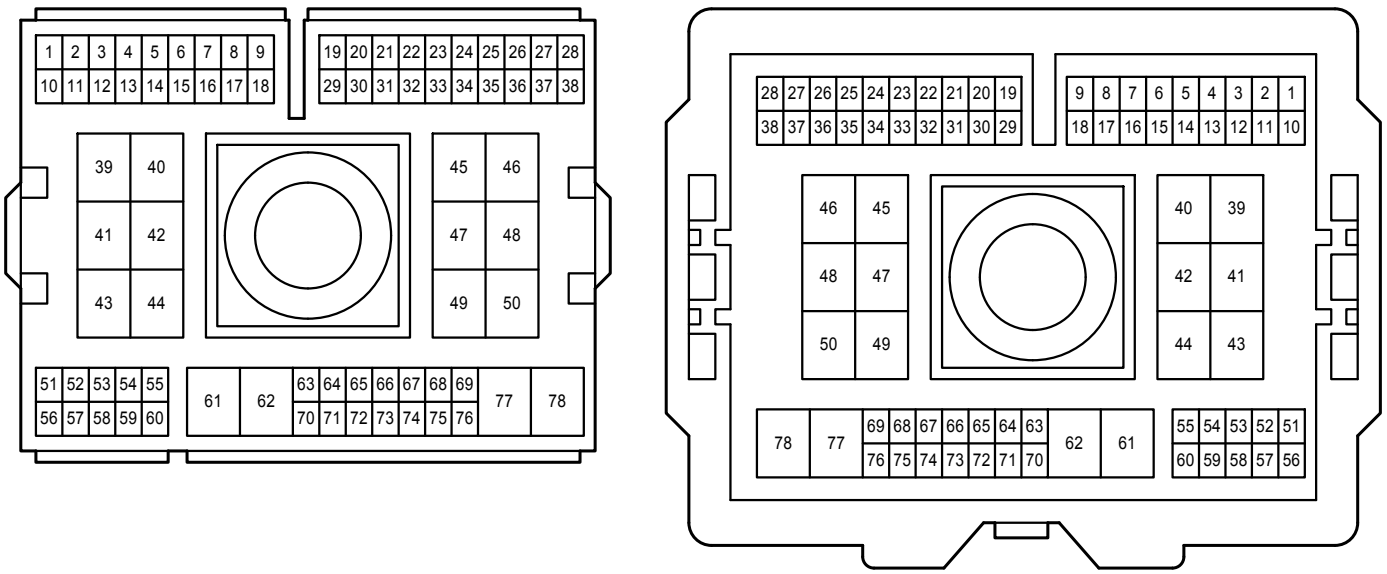

2D
White



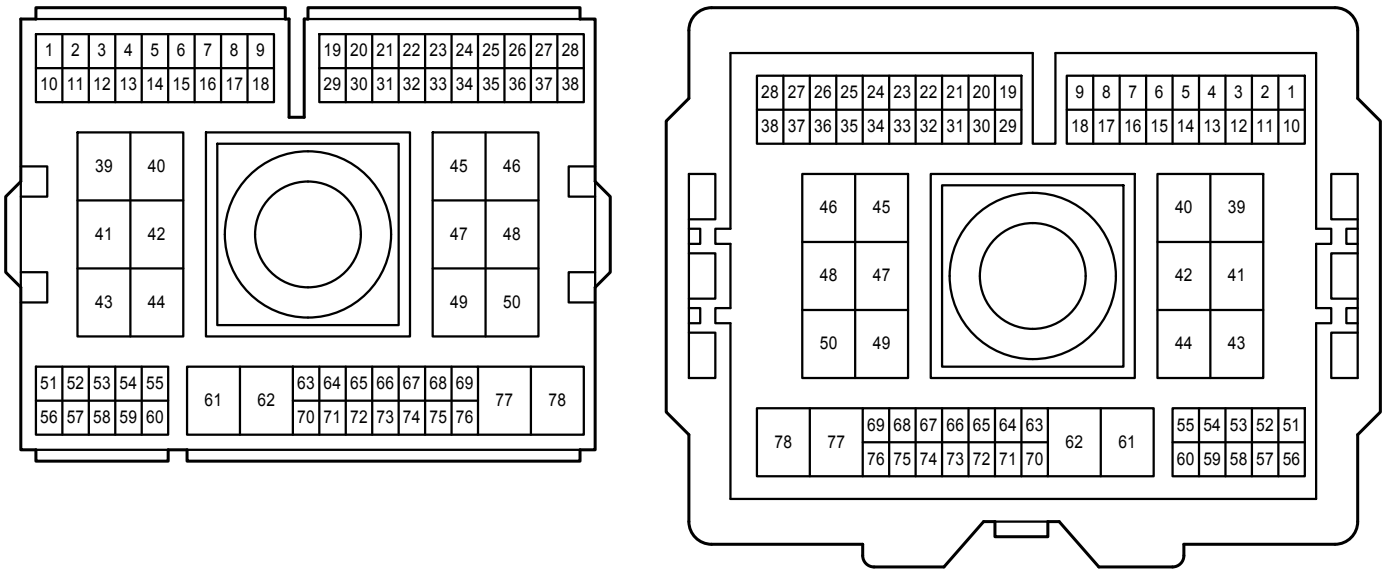

AA3
Gray



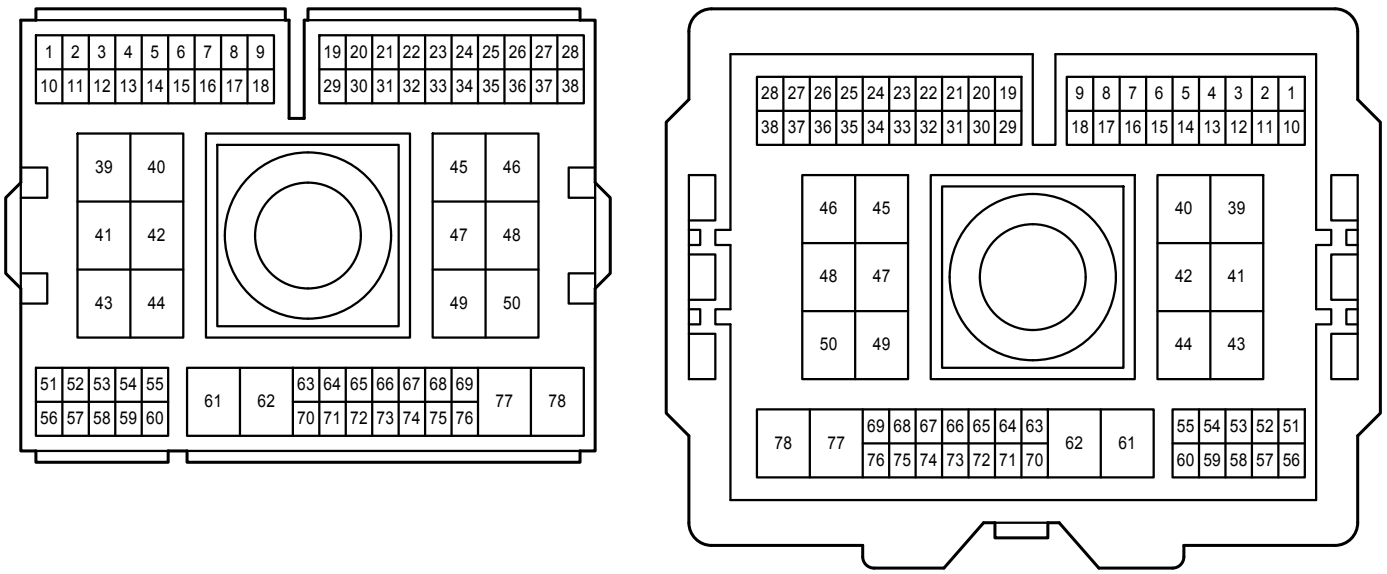
EA1
White



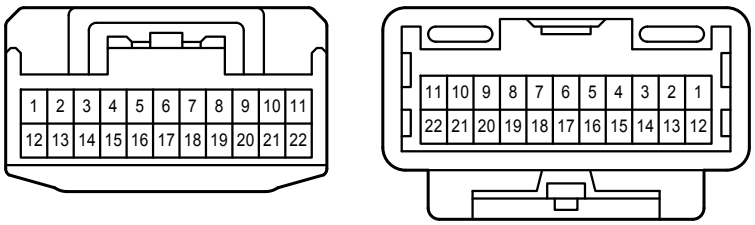

EK2
White



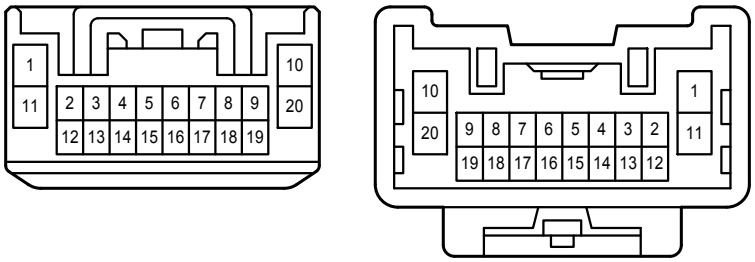
EL1
White



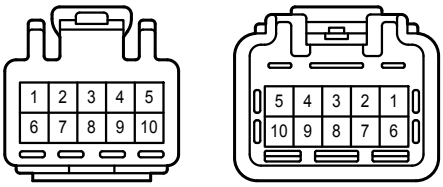

FE3
White



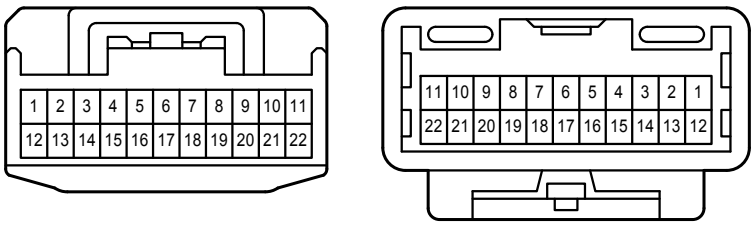

FE4
White

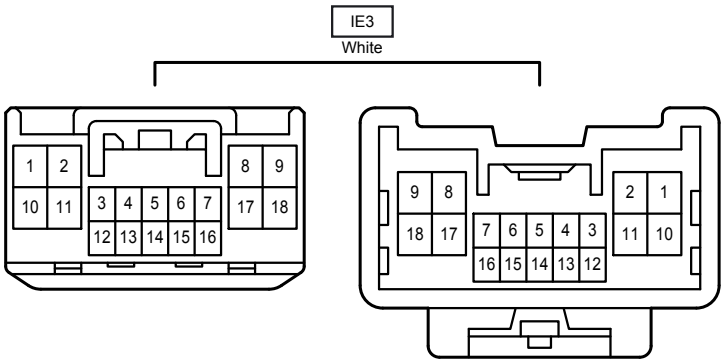


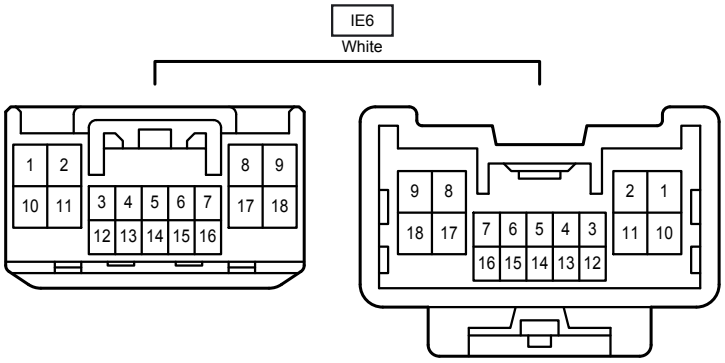

FE5
White

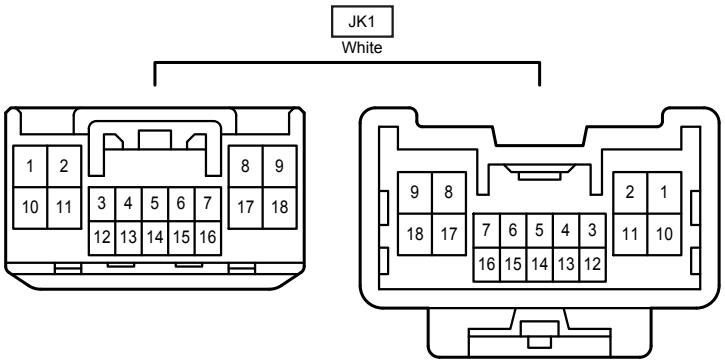


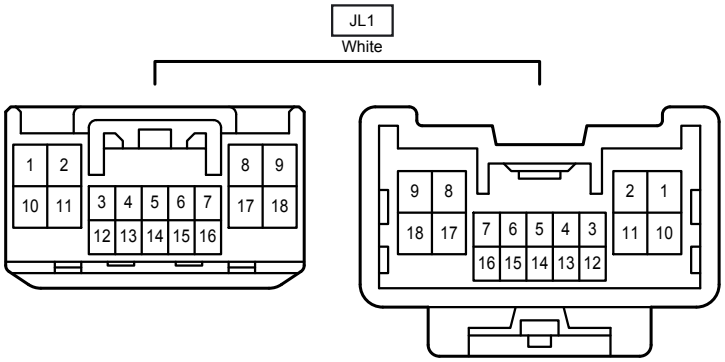

FL2
Blue

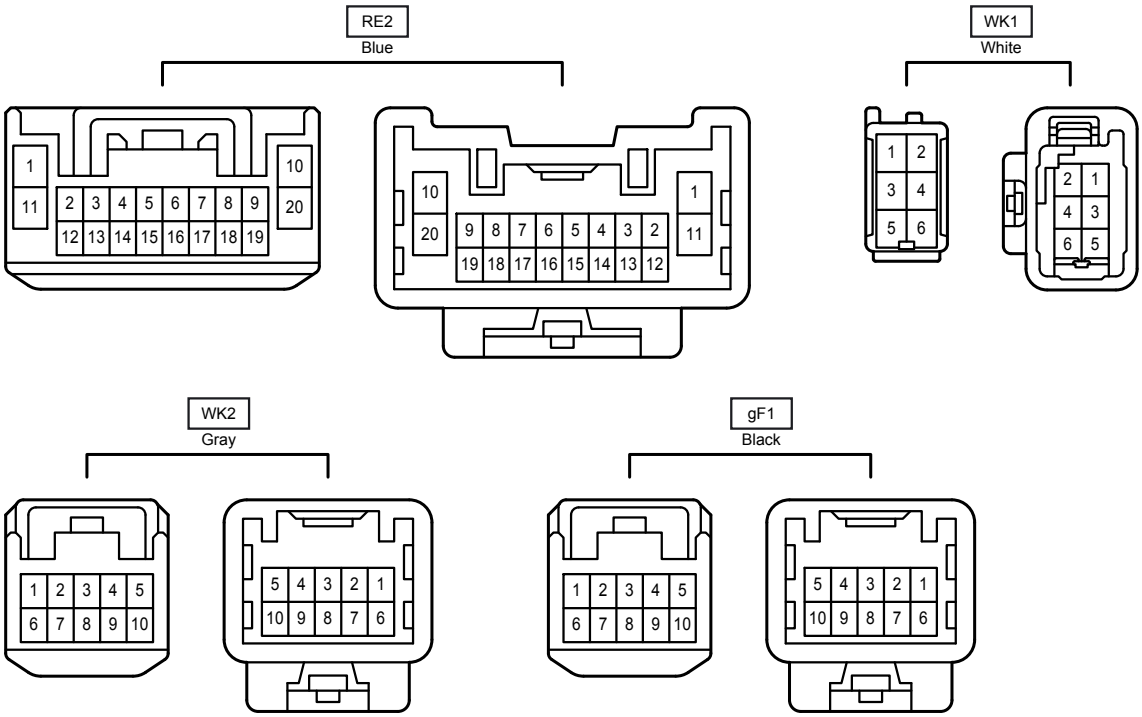



IE3
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10


IE6
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10


JK1
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10


JL1
White
1 2 10 11 3 4 5 6 7 12 13 14 15 16 8 9 17 18
9 8 18 17 7 6 5 4 3 16 15 14 13 12 2 1 11 10


RE2
Blue
1
11
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10
20
10
20
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12
1
11
WK1
White
1 2
3 4
5 6
2 1
4 3
6 5
WK2
Gray
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
gF1
Black
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6