

■ MANUAL HEADLIGHT BEAM LEVEL CONTROL SYSTEM

When the vehicle posture changes due to the number (weight) of passengers and volume of luggage, this system enables the driver to manually adjust the headlight beam level (in 5-steps) to the appropriate level by using the headlight leveling switch. The beam level of the headlights can be adjusted with the actuators that are integrated into the headlight units.

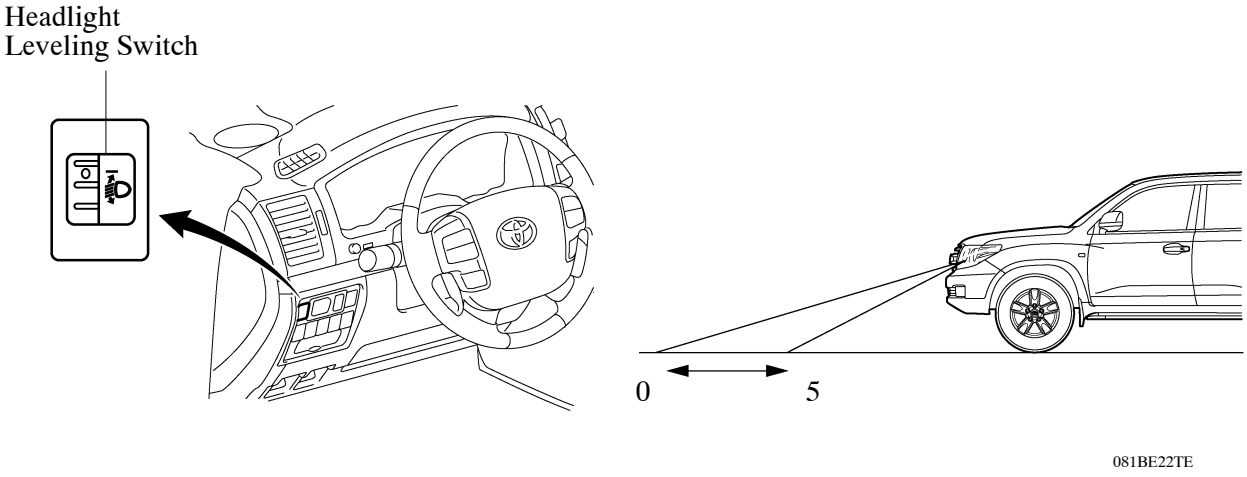

081BE22TE

▶ Wiring Diagram ◀

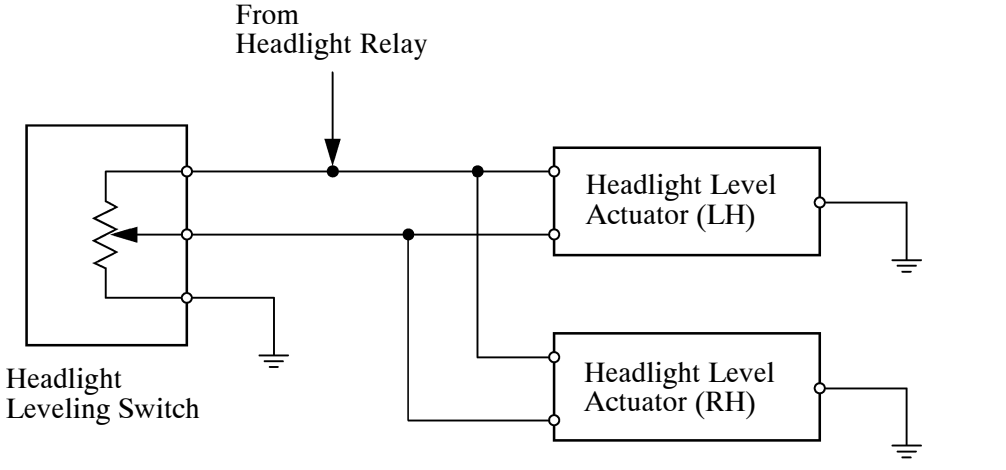

026BE08P