■AIRBAG FOR SIDE / REAR SIDE COLLISION

1. General

The airbag deployment during side collisions is shown in the tables below.

▶ Airbag For Side Collision ◀

○: Deployed —: Not deployed

Collision Detecting Sensor	Front Seat Side Airbag	Rear Seat Side Airbag	Curtain Shield Airbag
• Side Airbag Sensor • Rear Floor Side Airbag Sensor	○	○	○


▶ Airbag For Rear Side Collision ◀

○: Deployed —: Not deployed

Collision Detecting Sensor	Front Seat Side Airbag	Rear Seat Side Airbag	Curtain Shied Airbag
• Rear Airbag Sensor • Rear Floor Side Airbag Sensor	—	○	○


2. Airbags for Side Collision

▶ System Operation for Right Side Collision ◀

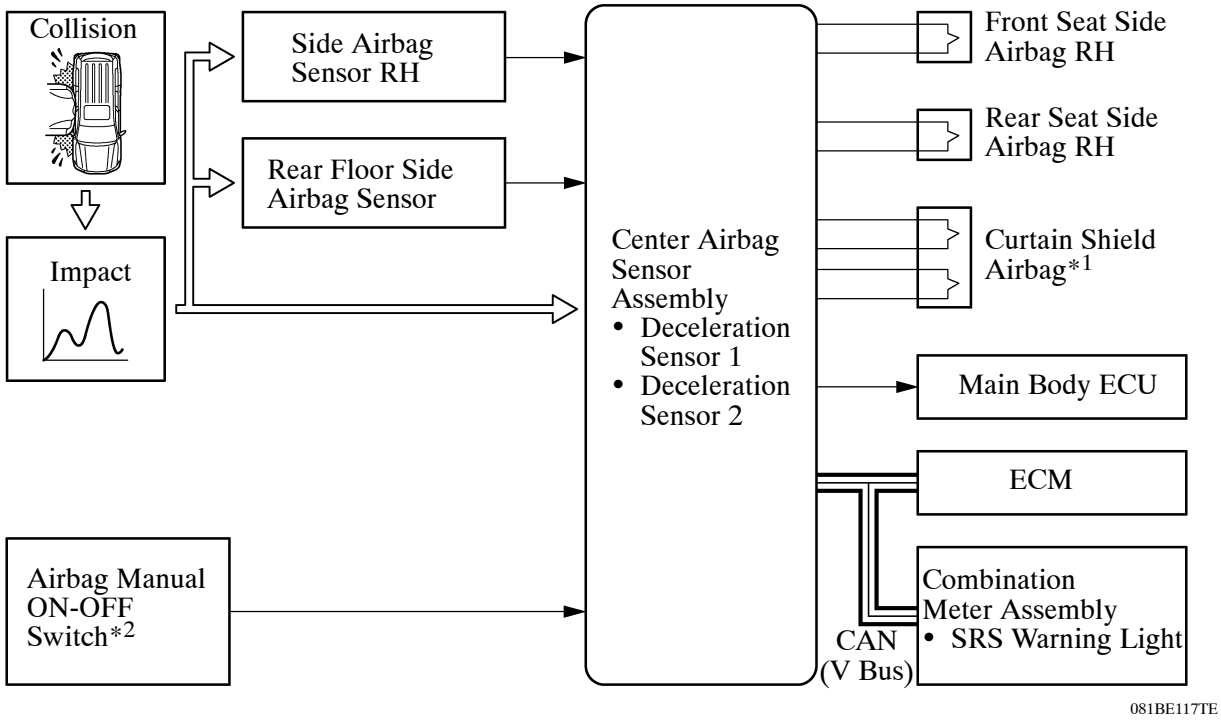

*1: For 8-seater models
*2: Provided on European models and Russian package models


▶ System Operation for Left Side Collision ◀

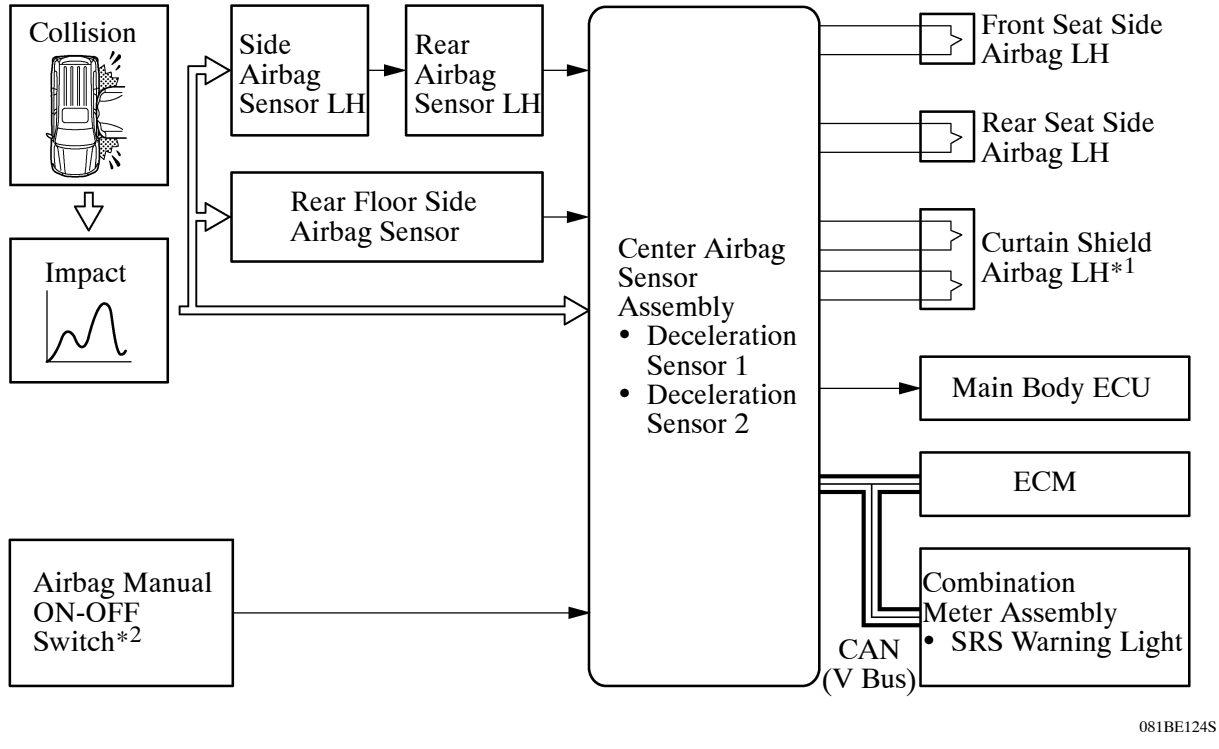

*1: For 8-seater models
*2: Provided on European models and Russian package models

3. Airbags for Rear Side Collision


▶ System Operation for Rear Right Side Collision ◀

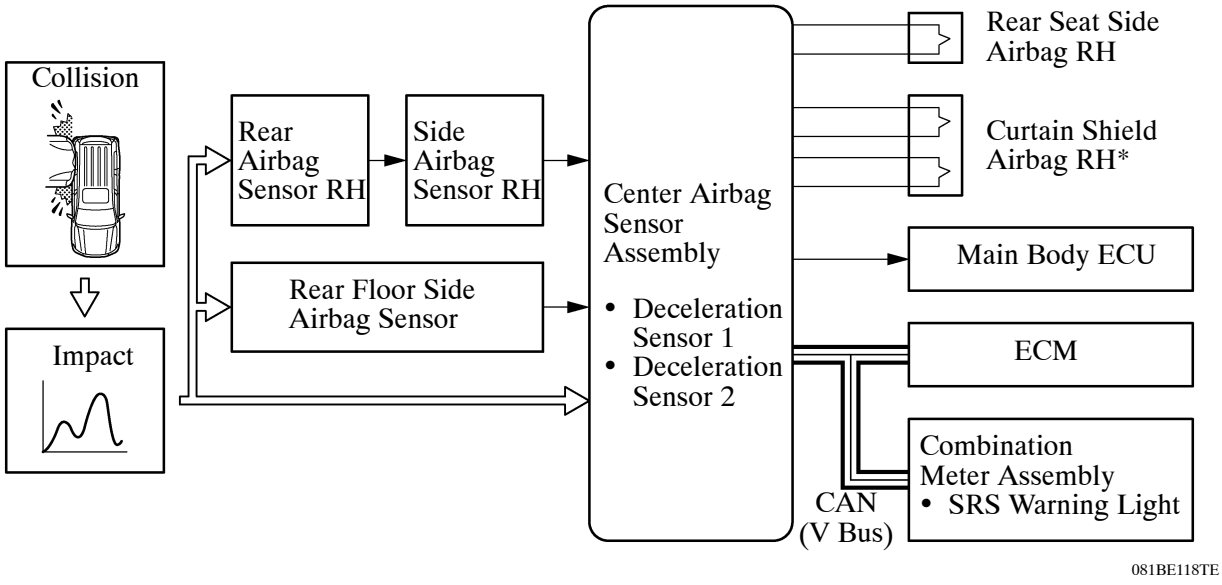

081BE118TE

*: Provided on European models and Russian package models

▶ System Operation for Rear Left Side Collision ◀

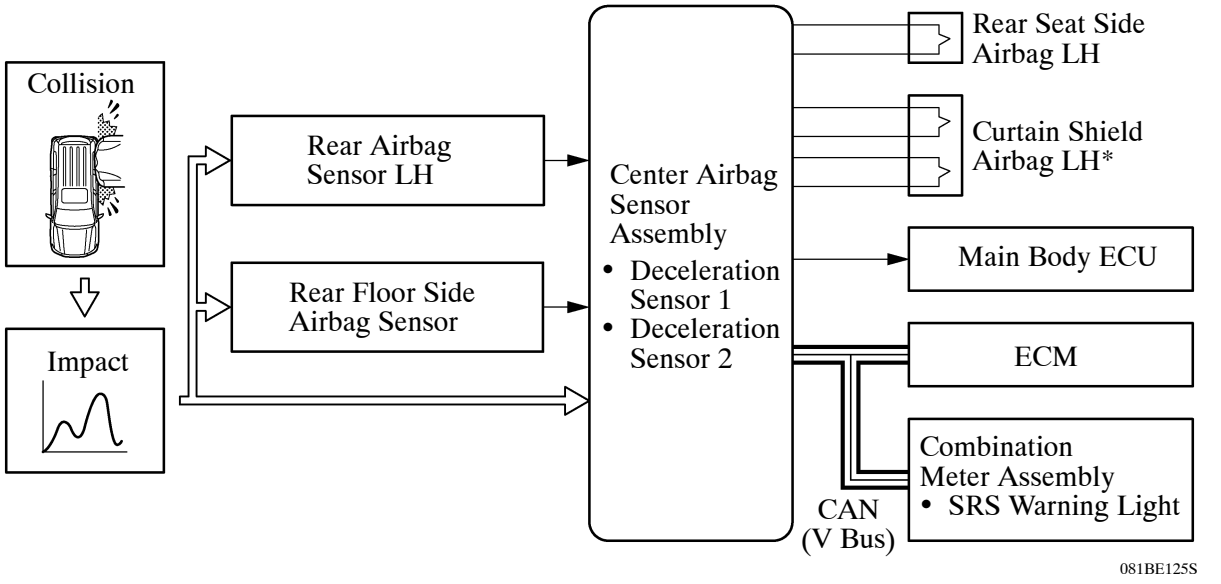

081BE125S

*: Provided on European models and Russian package models


BE

4. SRS Front Side Airbag and SRS Rear Side Airbag


SRS front side airbags are installed into the seat backs of the driver and front passenger seats. SRS rear side airbags are installed into the outer passenger seat backs of the rear No.1 seat. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

5. SRS Curtain Shield Airbag

- 2 types of SRS curtain shield airbags are available: 8-seater and European 5-seater types.
- 8-seater type SRS curtain shield airbags extend from the driver's and front passenger's front pillar to the rear pillar behind the rear No.2 seat and help to reduce injuries to the occupants on the front seats, rear No.1 seat and rear No.2 seat.
- 5-seater type SRS curtain shield airbags extend from the front pillar to the quarter pillar behind the rear No.1 seat and help to reduce injuries to the occupants on the front seats and rear No.1 seat. Each SRS airbag consists of an inflator, a bag and a cover.

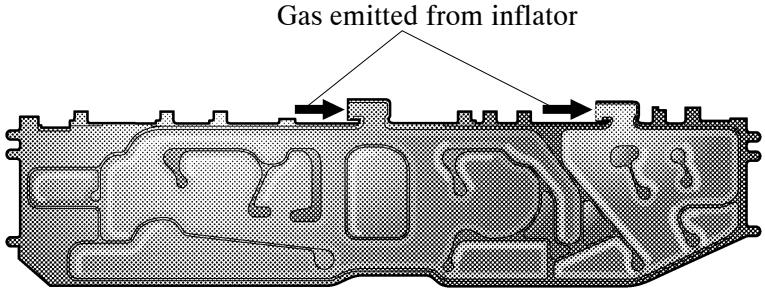

7 & 8-seater Models

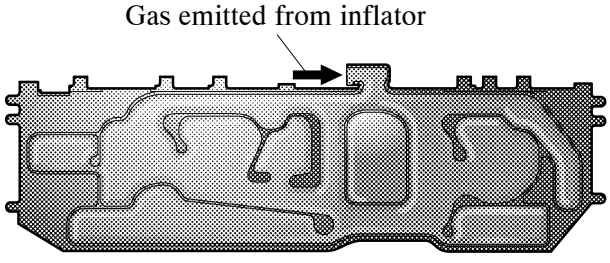

European 5-seater Models

081BE119TE

6. Front, Rear, and Rear Floor Side Airbag Sensors

A deceleration sensor is enclosed in front side airbag, rear side airbag, and rear floor side airbag sensor. Based on the change of acceleration of the sensor during a side or side rear collision, distortion is created in the sensor and converted into an electrical signal.