HEATED & VENTILATED SEAT SYSTEM

■ DESCRIPTION


The heated and ventilated seat system has a heating function* and ventilation function in addition to the blower units in the conventional seat ventilation system. This creates a very comfortable seat.

- The heating function* and the ventilation function cannot be operated at the same time.
- The basic operation of the heating function is the same as in a conventional seat heater system, however the seat climate control ECU controls the heating function.*
- For the ventilation function, only air in the cabin is used and neither hot nor cold air is blown out.
- The seat climate control ECU controls the ventilation function.
- This system is optional equipment for the driver and front passenger seats.

*: Models with seat heater system

■ SYSTEM DIAGRAM

The system consists of the seat heater assembly, seat climate control blower, the seat heater & ventilation volume switch and seat climate control ECU.

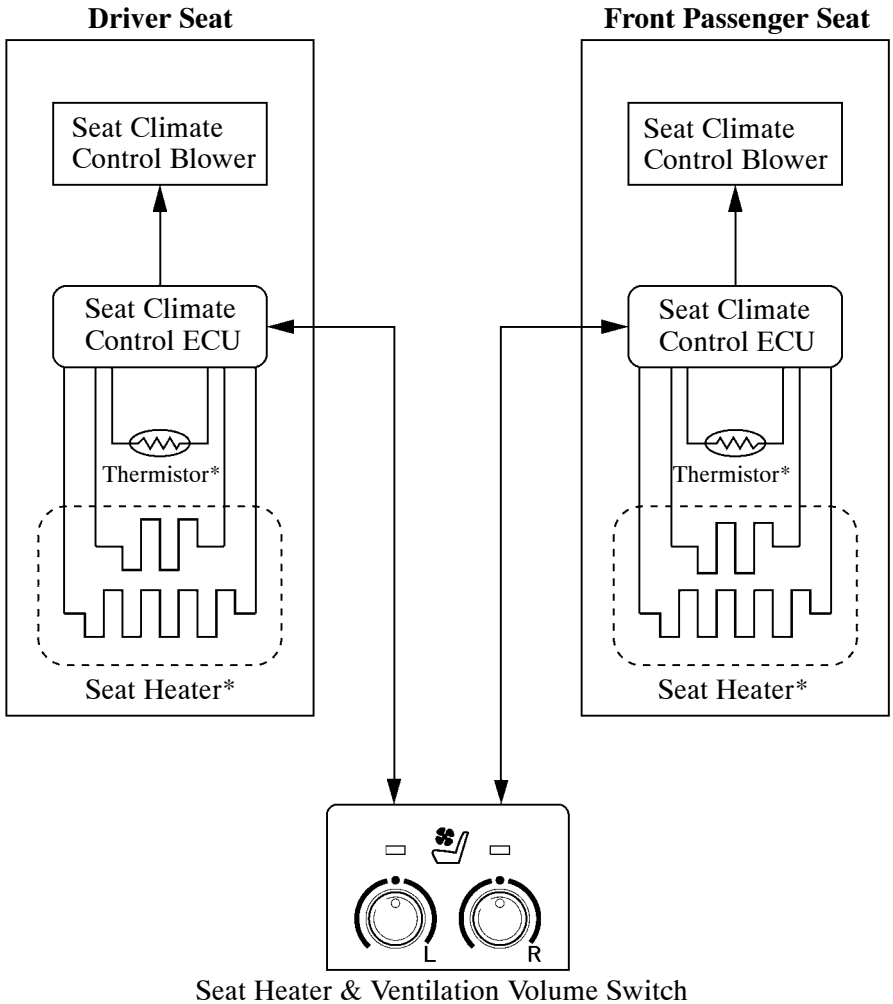

Seat Heater & Ventilation Volume Switch 19UBE117I

*: Models with seat heater system