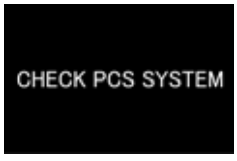
■ PRE-CRASH SAFETY SYSTEM

1. Function of Main Components

Combination Meter

- The master warning light, PCS warning light, warning message of the multi-information display, and buzzer in the combination meter warn the driver of the abnormal or poor conditions of the pre-crash safety system.
- 2 types of warning messages are used for the pre-crash safety system as described below. The pre-crash safety system will not operate when these messages appear in the combination meter.

Warning Message	Detail	⚠ 0150BE35C	PCS 01YBE200P	Multi Buzzer	DTC
 19UBE047I	This message appears when the seat belt control ECU detects a system malfunction.	Illuminates	Illuminates	Sounds Once	○
 19UBE048I	This message appears when the seat belt control ECU overheats. After this condition has been resolved, the system will operate normally.	—	Flashes	—	×

○: Repair is required/DTC is output
×: Repair is not required/DTC is not output
—: Not available