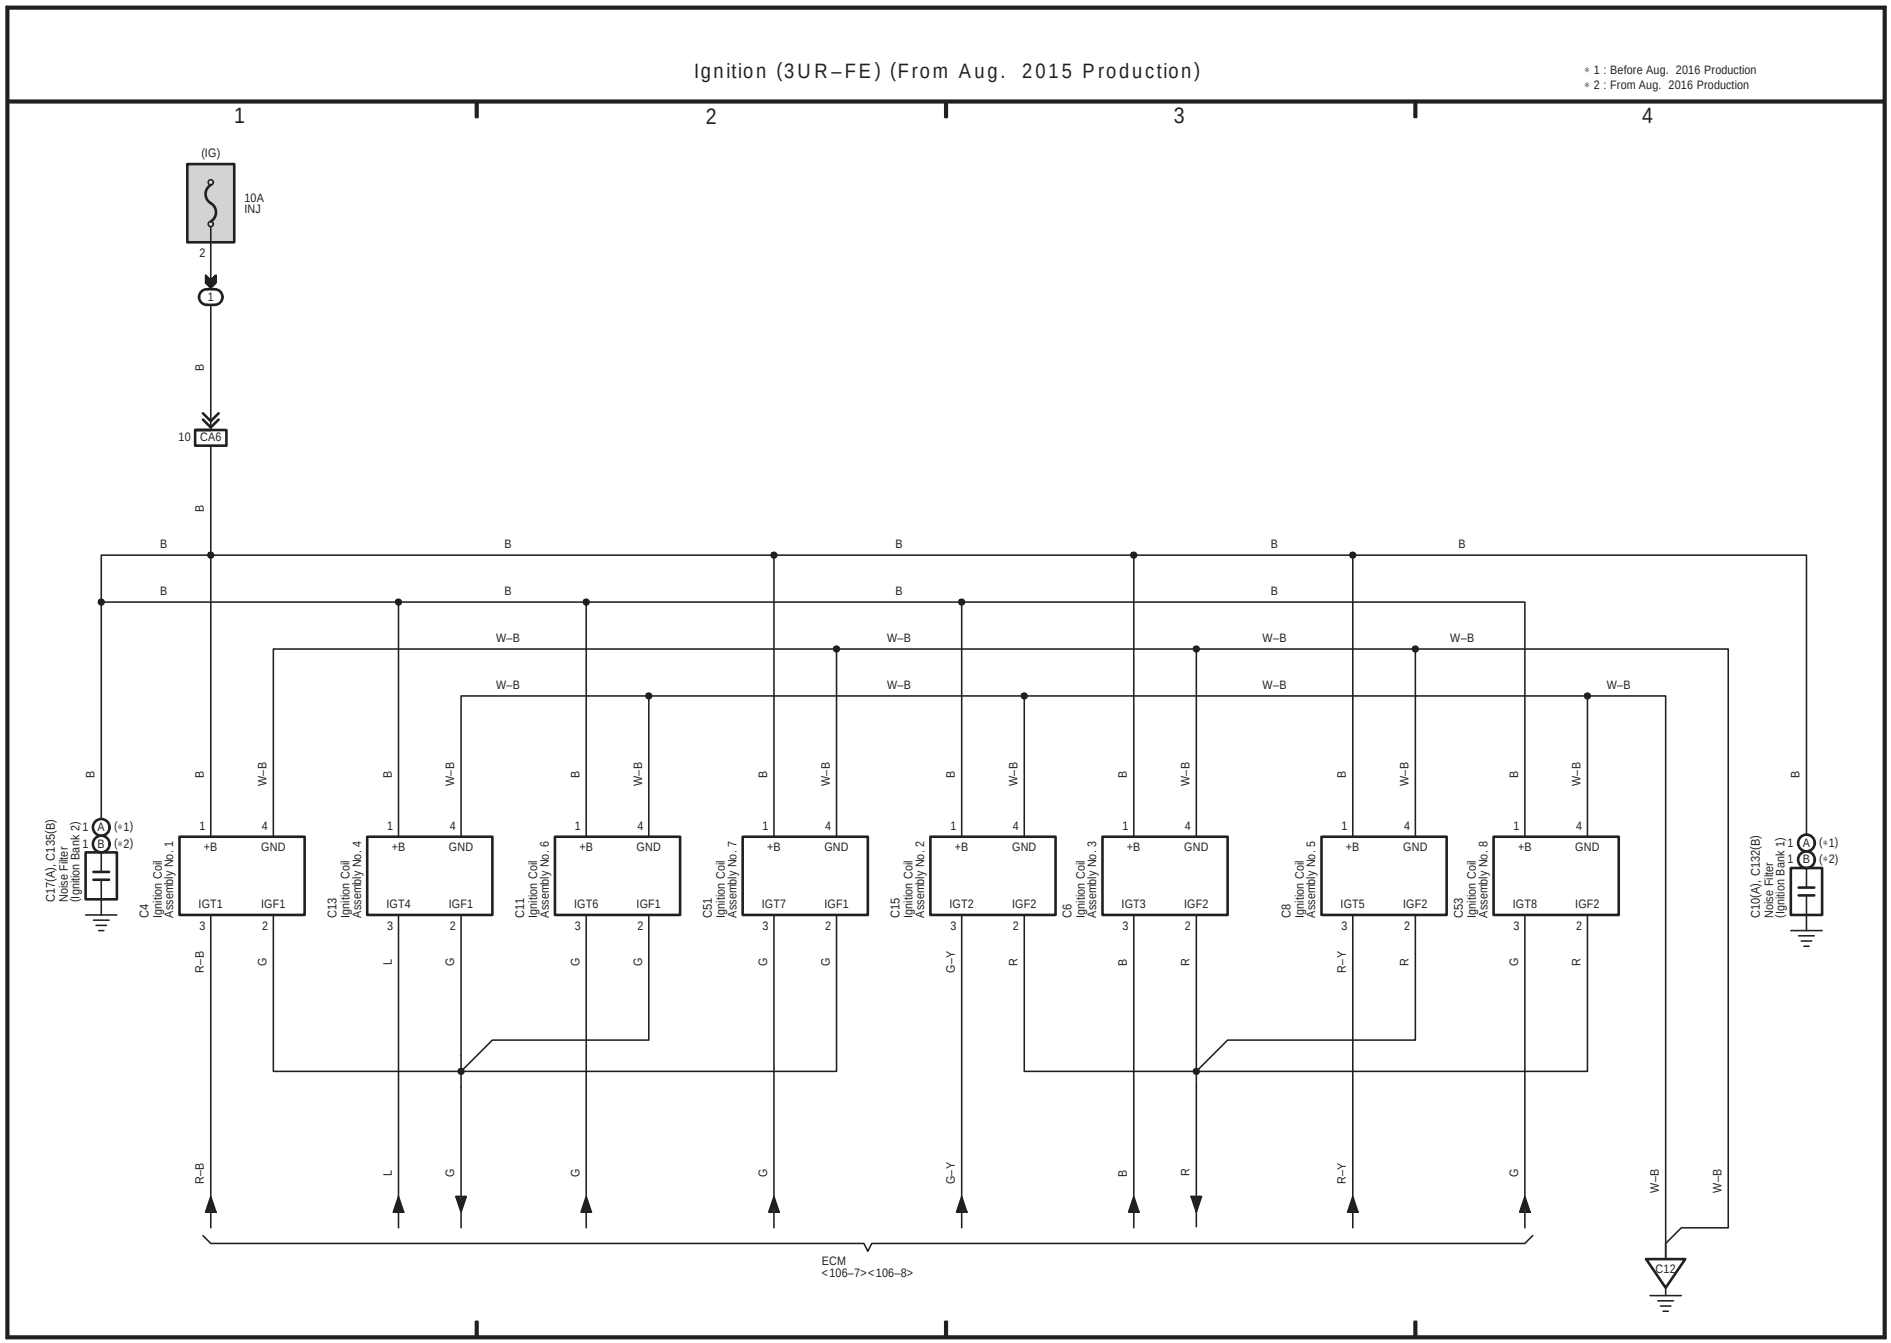

Ignition (3UR–FE) (From Aug. 2015 Production)
* 1 : Before Aug. 2016 Production
* 2 : From Aug. 2016 Production
1
2
3
4
(IG)
10A
INJ
2
1
B
10
CA6
B
B
B
B
B
B
B
B
B
B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
C17(A), C135(B)
Noise Filter
(Ignition Bank 2)
A
B
(*1)
(*2)
C4
Ignition Coil
Assembly No. 1
+B
GND
IGT1
IGF1
C13
Ignition Coil
Assembly No. 4
IGT4
IGF1
C11
Ignition Coil
Assembly No. 6
IGT6
IGF1
C51
Ignition Coil
Assembly No. 7
IGT7
IGF1
C15
Ignition Coil
Assembly No. 2
IGT2
IGF2
C6
Ignition Coil
Assembly No. 3
IGT3
IGF2
C8
Ignition Coil
Assembly No. 5
IGT5
IGF2
C53
Ignition Coil
Assembly No. 8
IGT8
IGF2
C10(A), C132(B)
Noise Filter
(Ignition Bank 1)
R–B
L
G
G–Y
B
R
R–Y
W–B
ECM
<106–7><106–8>
C12