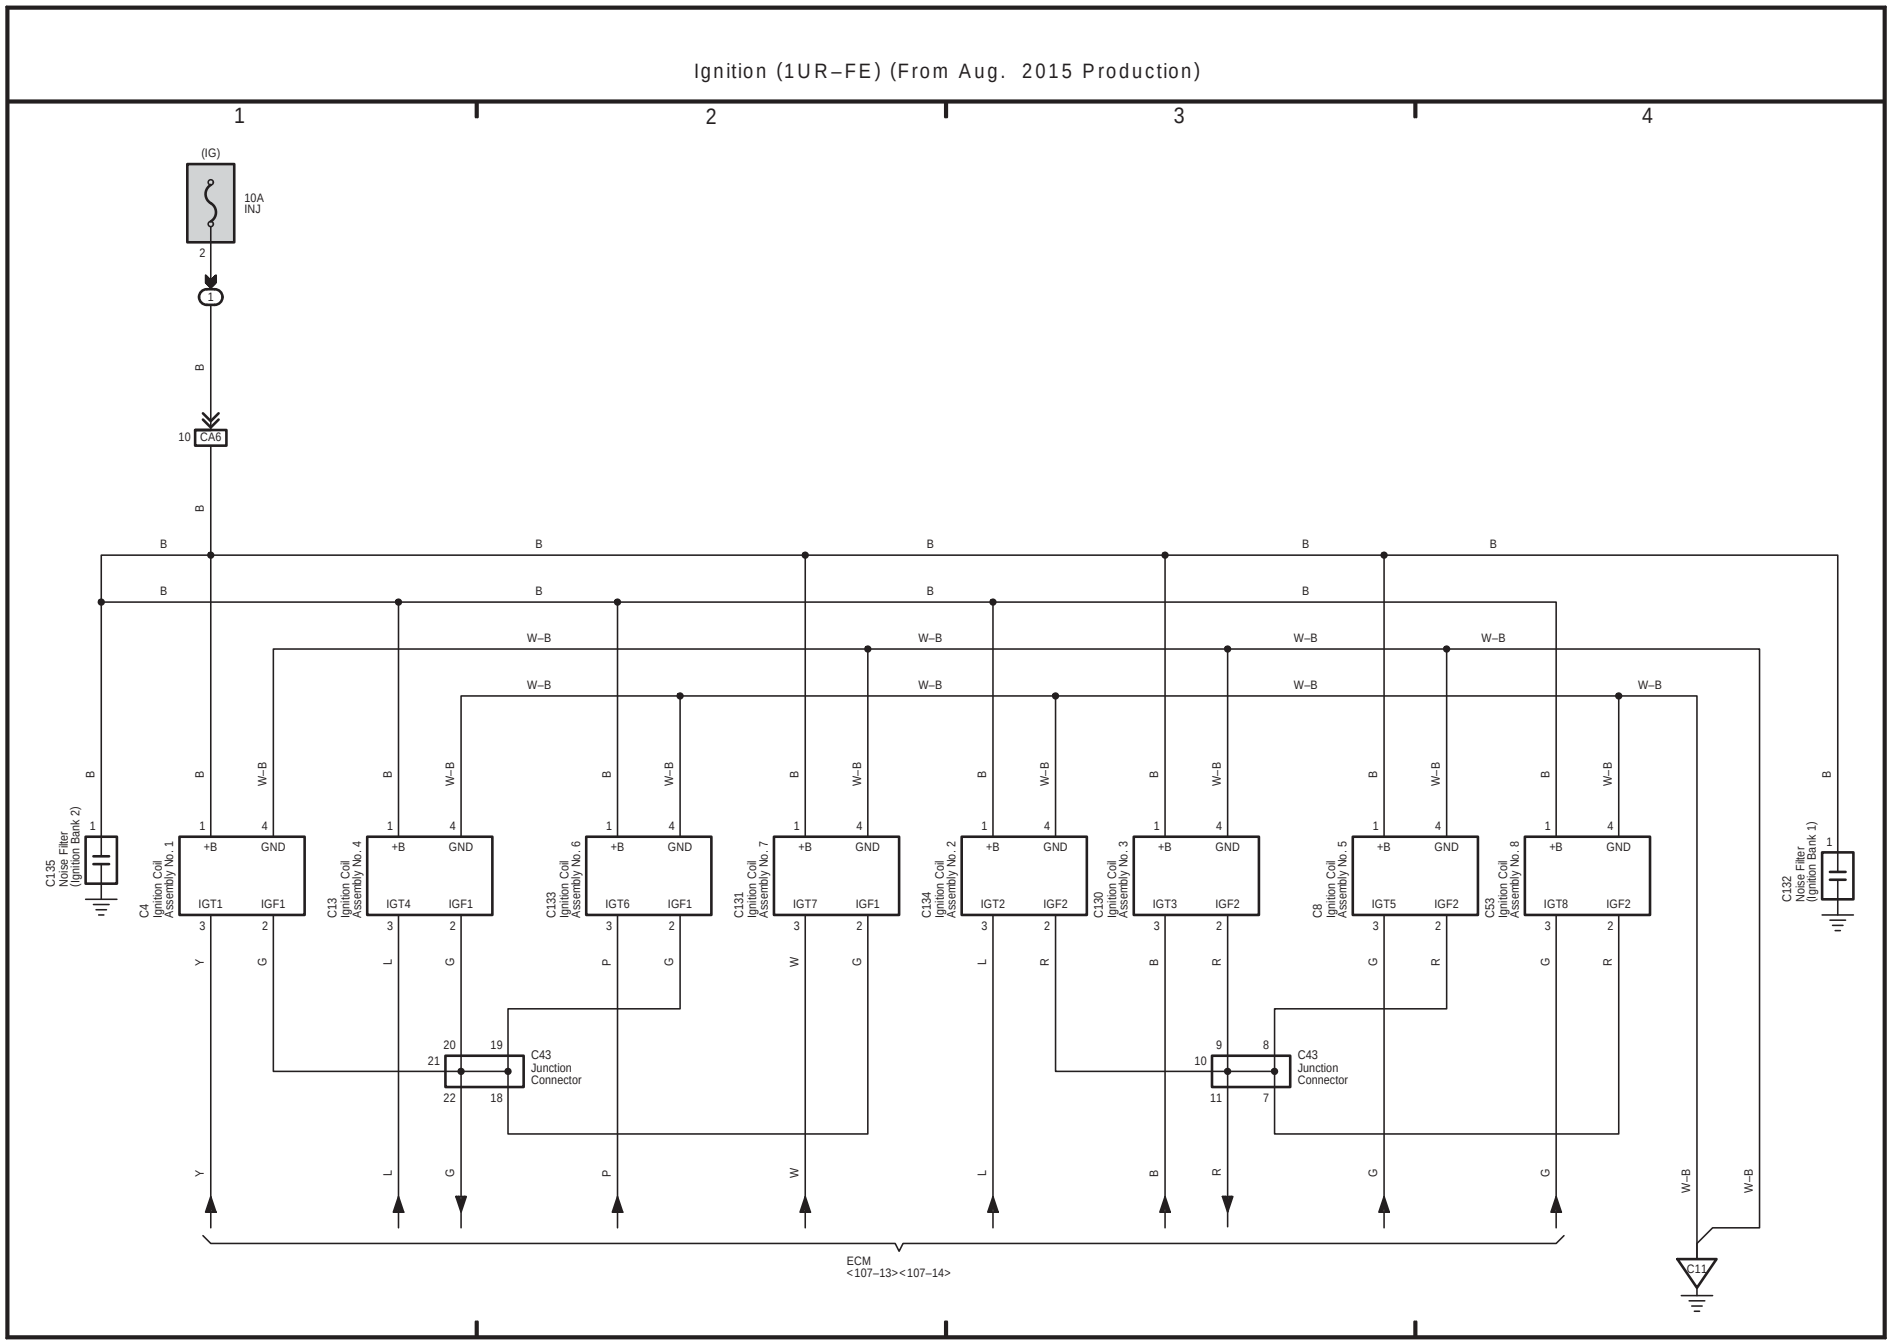

Ignition (1UR–FE) (From Aug. 2015 Production)
1
2
3
4
(IG)
10A
INJ
2
1
B
10
CA6
B
B
B
B
B
B
B
B
B
B
B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
C135
Noise Filter
(Ignition Bank 2)
1
C4
Ignition Coil
Assembly No. 1
+B
GND
IGT1
IGF1
C13
Ignition Coil
Assembly No. 4
IGT4
IGF1
C133
Ignition Coil
Assembly No. 6
IGT6
IGF1
C131
Ignition Coil
Assembly No. 7
IGT7
IGF1
C134
Ignition Coil
Assembly No. 2
IGT2
IGF2
C130
Ignition Coil
Assembly No. 3
IGT3
IGF2
C8
Ignition Coil
Assembly No. 5
IGT5
IGF2
C53
Ignition Coil
Assembly No. 8
IGT8
IGF2
C132
Noise Filter
(Ignition Bank 1)
1
3
2
Y
G
L
G
P
G
W
G
L
R
B
R
G
R
G
R
20
19
21
22
18
C43
Junction
Connector
9
8
10
11
7
C43
Junction
Connector
Y
L
G
P
W
L
B
R
G
G
W–B
W–B
ECM
<107–13><107–14>
C11