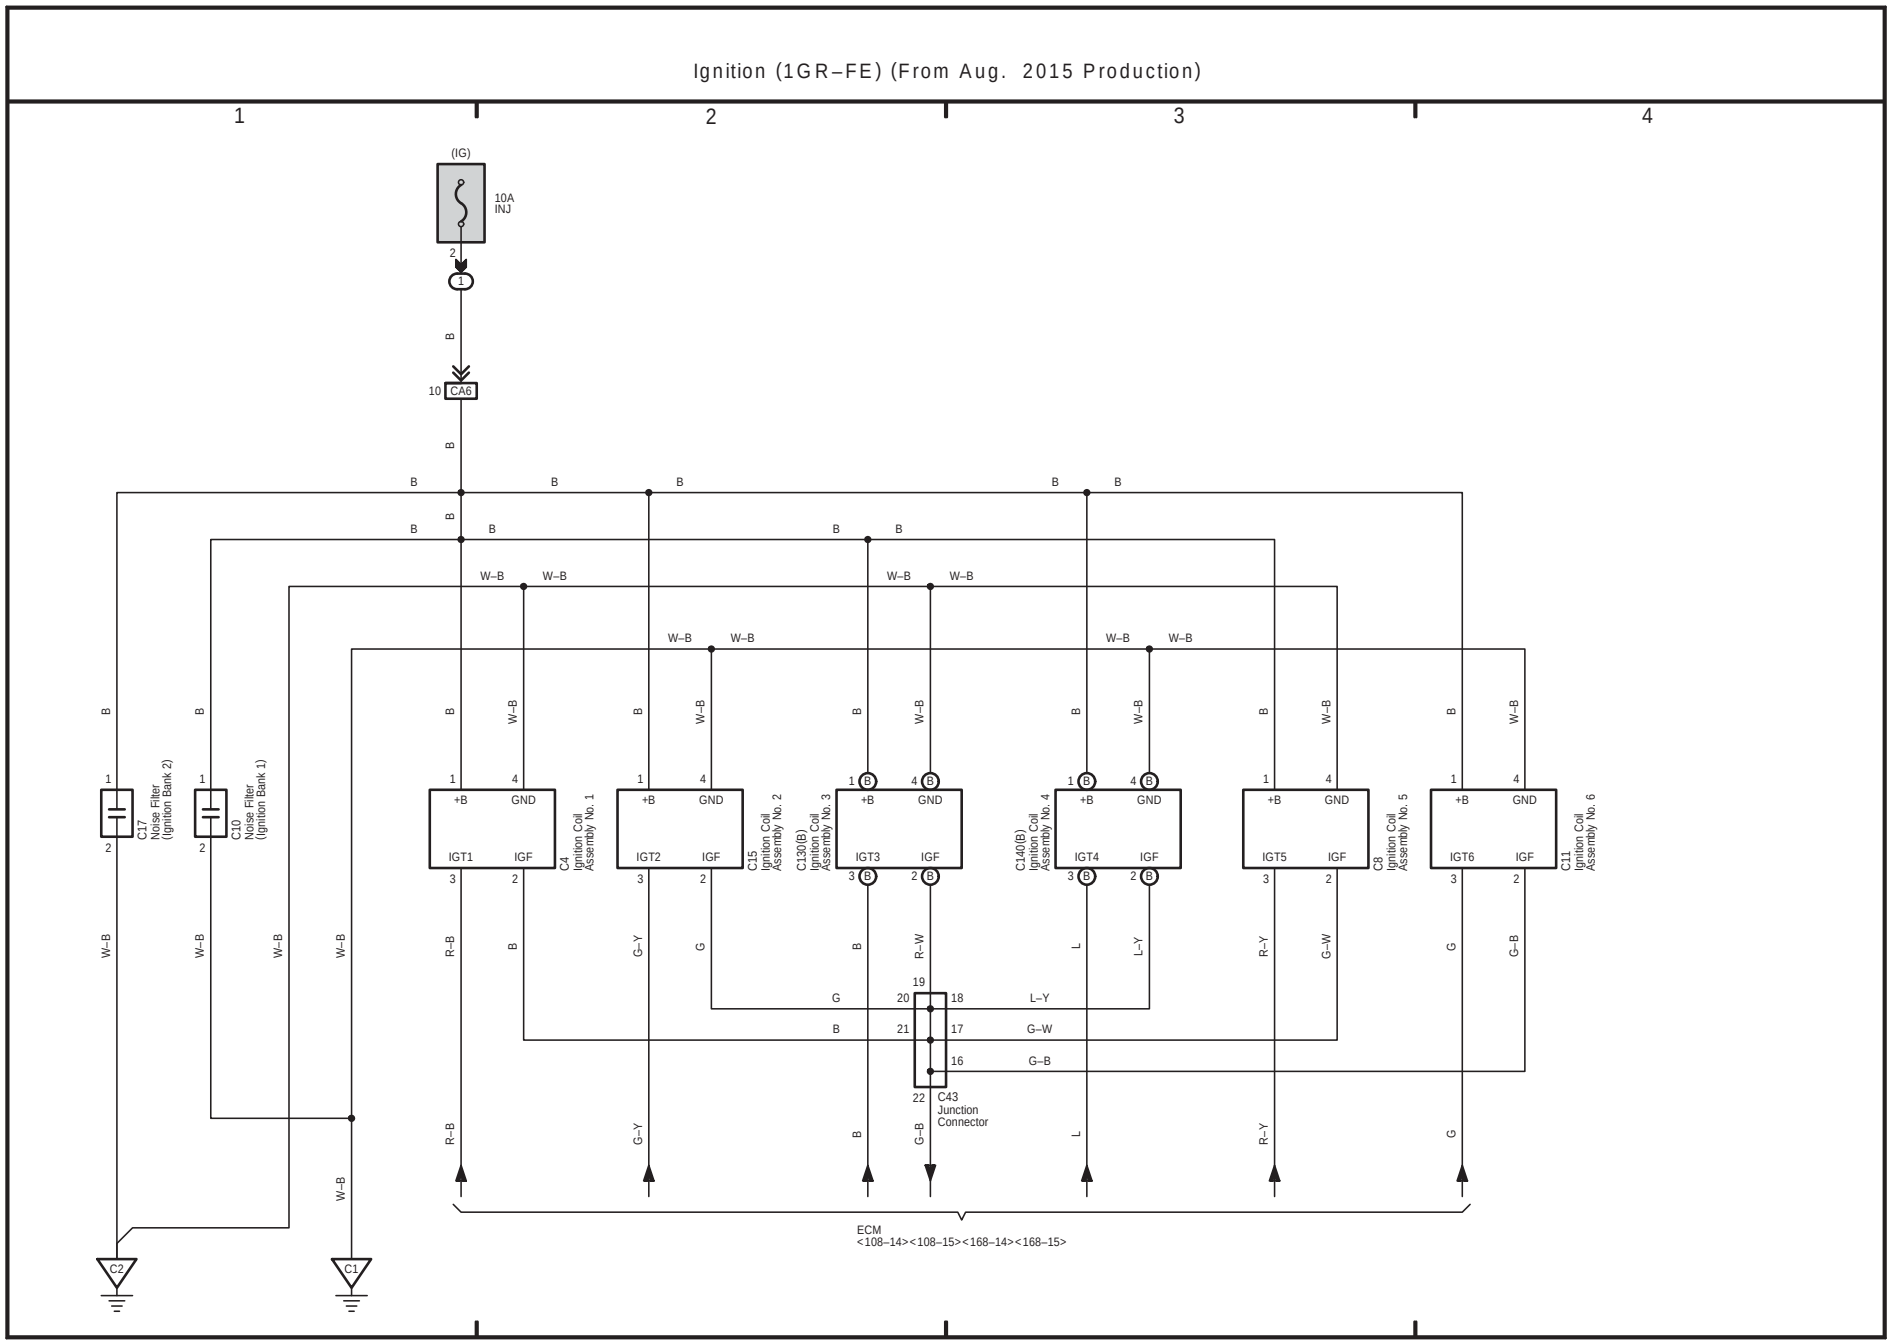

Ignition (1GR–FE) (From Aug. 2015 Production)
1
2
3
4
(IG)
10A
INJ
2
1
B
10
CA6
B
B
B
B
B
B
B
B
B
B
B
B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
W–B
1
2
C17
Noise Filter
(Ignition Bank 2)
C10
Noise Filter
(Ignition Bank 1)
+B
GND
IGT1
IGF
C4
Ignition Coil
Assembly No. 1
IGT2
C15
Ignition Coil
Assembly No. 2
C130(B)
Ignition Coil
Assembly No. 3
IGT3
C140(B)
Ignition Coil
Assembly No. 4
IGT4
IGT5
C8
Ignition Coil
Assembly No. 5
IGT6
C11
Ignition Coil
Assembly No. 6
3
2
R–B
B
G–Y
G
B
R–W
L
L–Y
R–Y
G–W
G
G–B
19
20
18
L–Y
21
17
G–W
16
G–B
22
C43
Junction
Connector
ECM
<108–14><108–15><168–14><168–15>
C2
C1