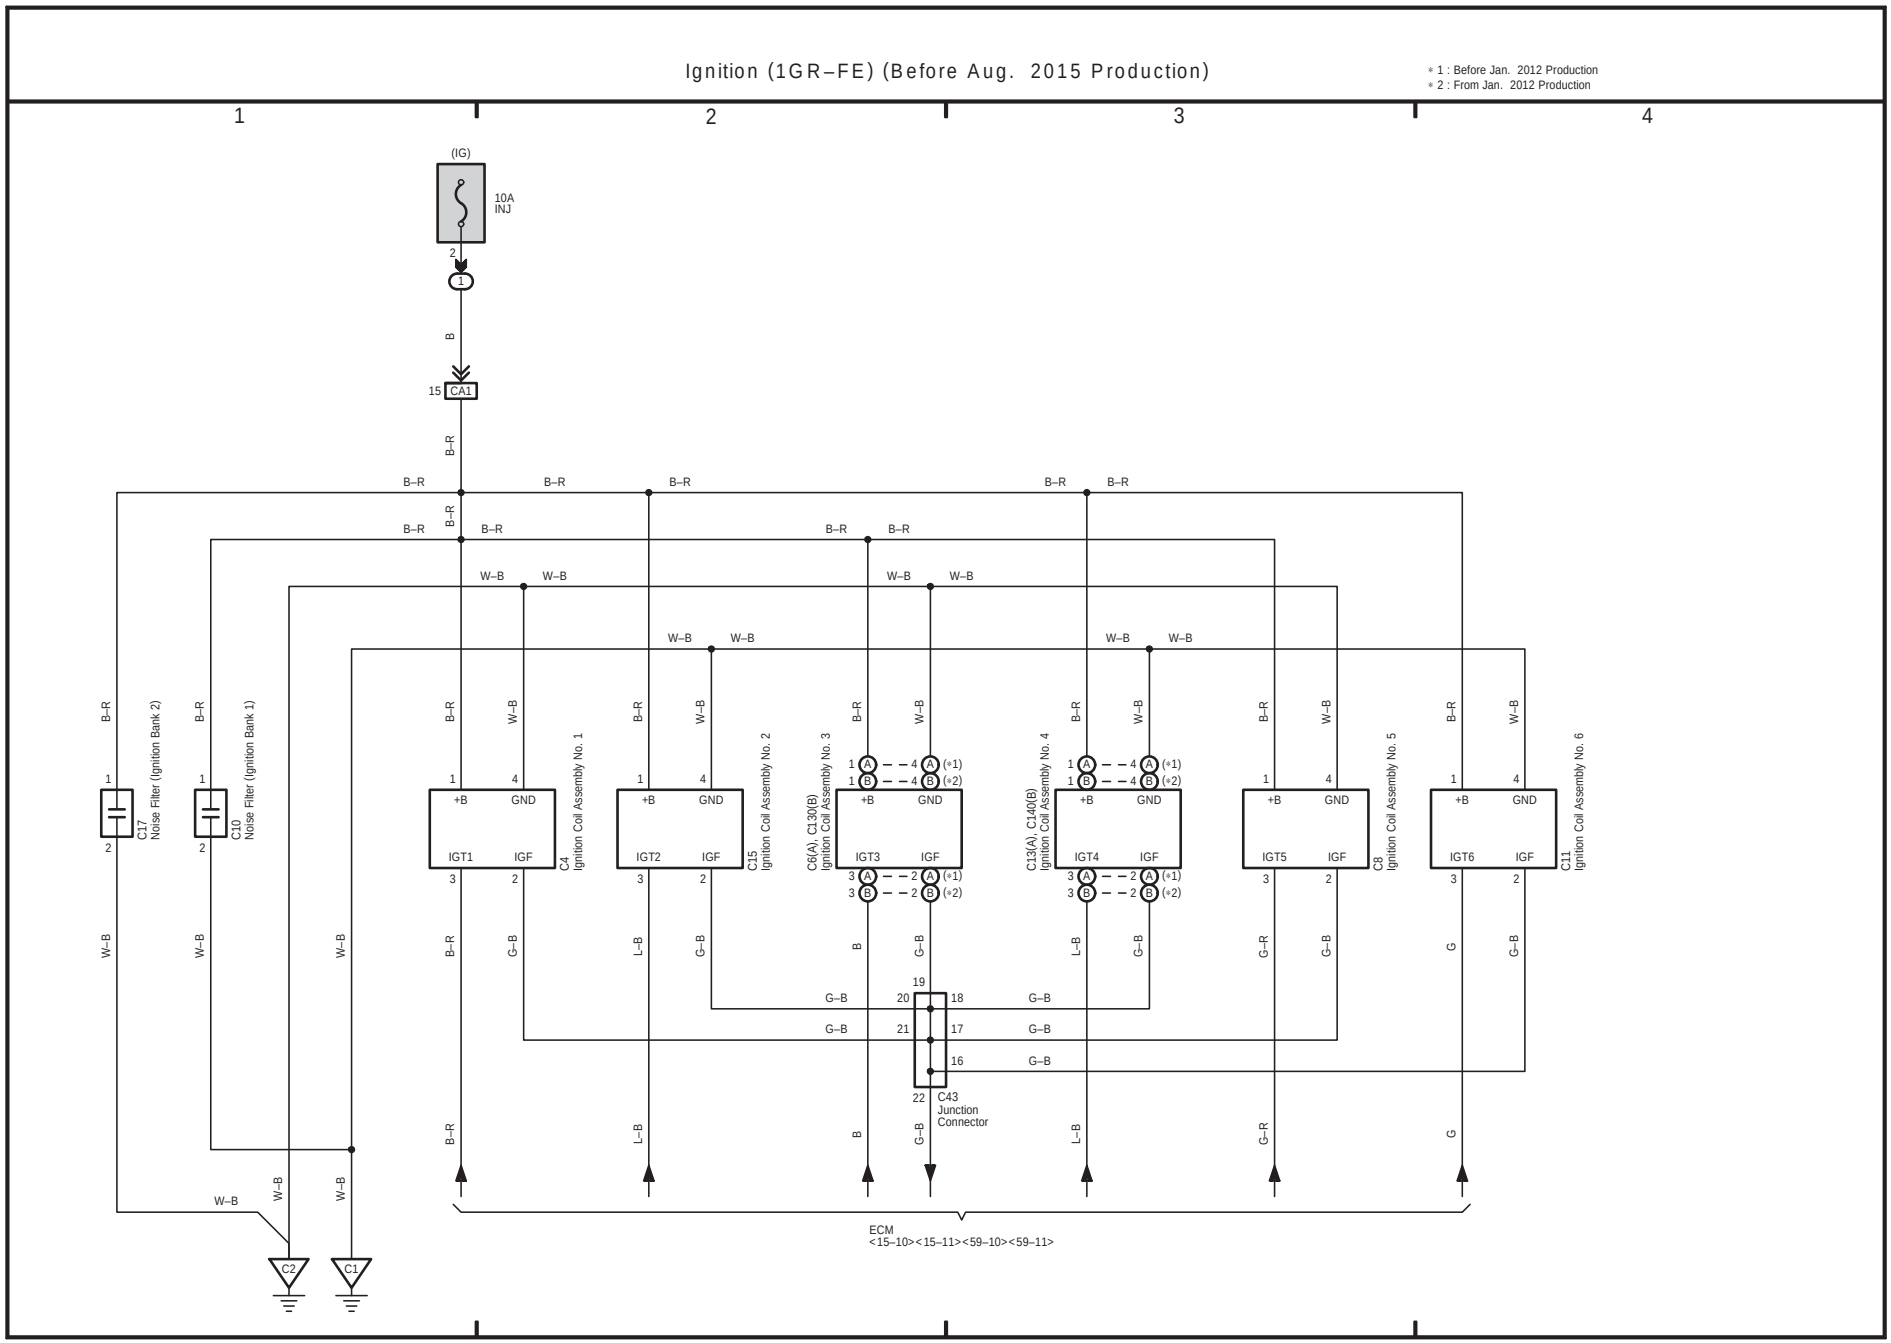

Ignition (1GR–FE) (Before Aug. 2015 Production)
* 1 : Before Jan. 2012 Production
* 2 : From Jan. 2012 Production
1
2
3
4
(IG)
10A
INJ
2
1
B
15 CA1
B–R
W–B
C17
Noise Filter (Ignition Bank 2)
C10
Noise Filter (Ignition Bank 1)
+B
GND
IGT1
IGF
C4
Ignition Coil Assembly No. 1
IGT2
C15
Ignition Coil Assembly No. 2
C6(A), C130(B)
Ignition Coil Assembly No. 3
IGT3
C13(A), C140(B)
Ignition Coil Assembly No. 4
IGT4
IGT5
C8
Ignition Coil Assembly No. 5
IGT6
C11
Ignition Coil Assembly No. 6
(*1)
(*2)
G–B
L–B
G–R
G
19
20
21
18
17
16
22 C43
Junction
Connector
ECM
<15–10><15–11><59–10><59–11>
C2
C1