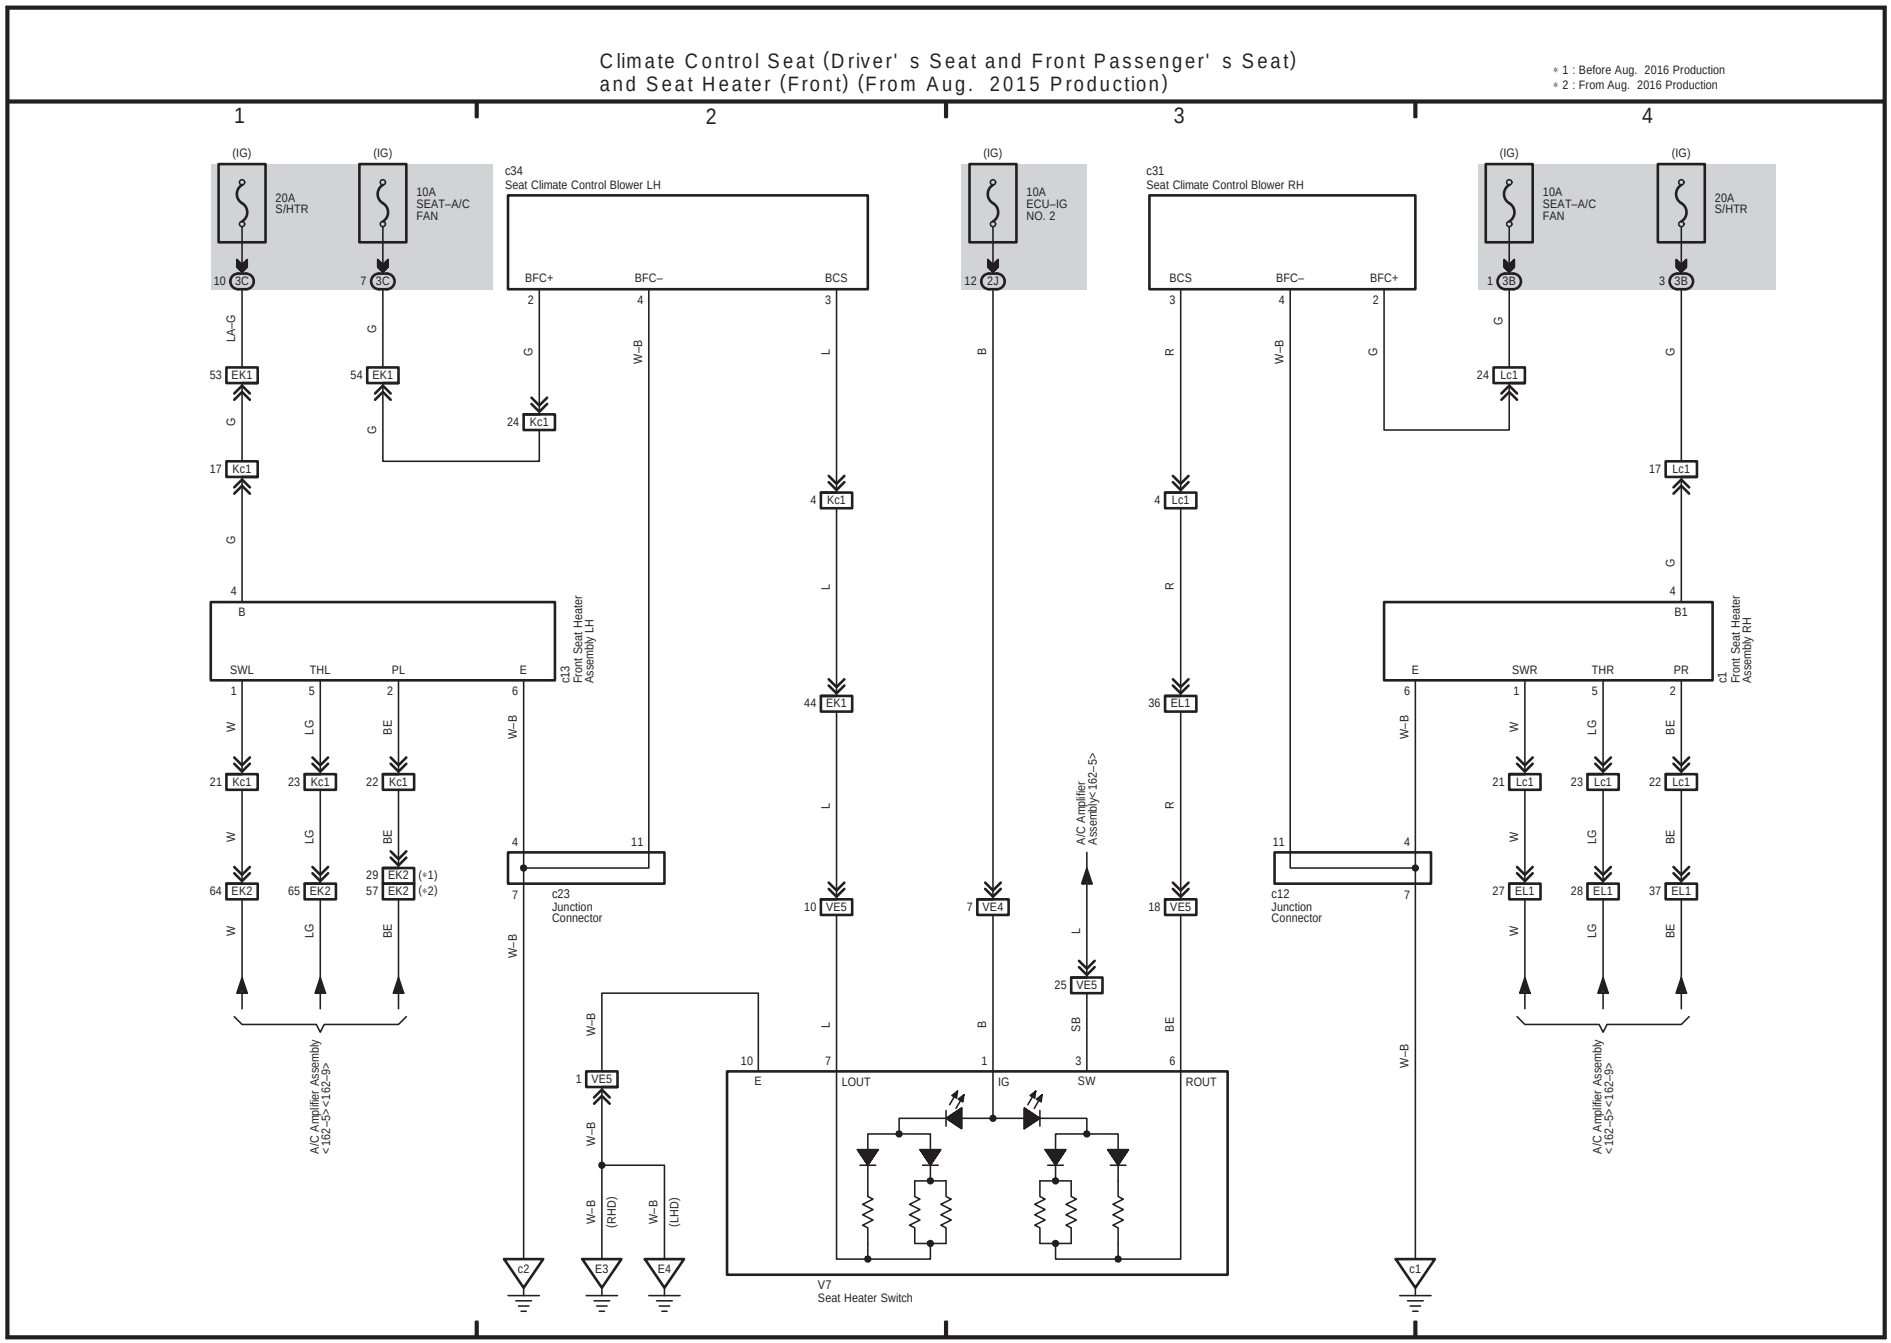

Climate Control Seat (Driver' s Seat and Front Passenger' s Seat)
and Seat Heater (Front) (From Aug. 2015 Production)
* 1 : Before Aug. 2016 Production
* 2 : From Aug. 2016 Production
1
2
3
4
(IG)
20A
S/HTR
10A
SEAT–A/C
FAN
10A
ECU–IG
NO. 2
c34
Seat Climate Control Blower LH
c31
Seat Climate Control Blower RH
BFC+
BFC–
BCS
c13
Front Seat Heater
Assembly LH
c1
Front Seat Heater
Assembly RH
SWL
THL
PL
E
SWR
THR
PR
B
B1
c23
Junction
Connector
c12
Junction
Connector
A/C Amplifier
Assembly<162–5>
A/C Amplifier Assembly
<162–5><162–9>
V7
Seat Heater Switch
LOUT
IG
SW
ROUT
(RHD)
(LHD)
c2
E3
E4
c1