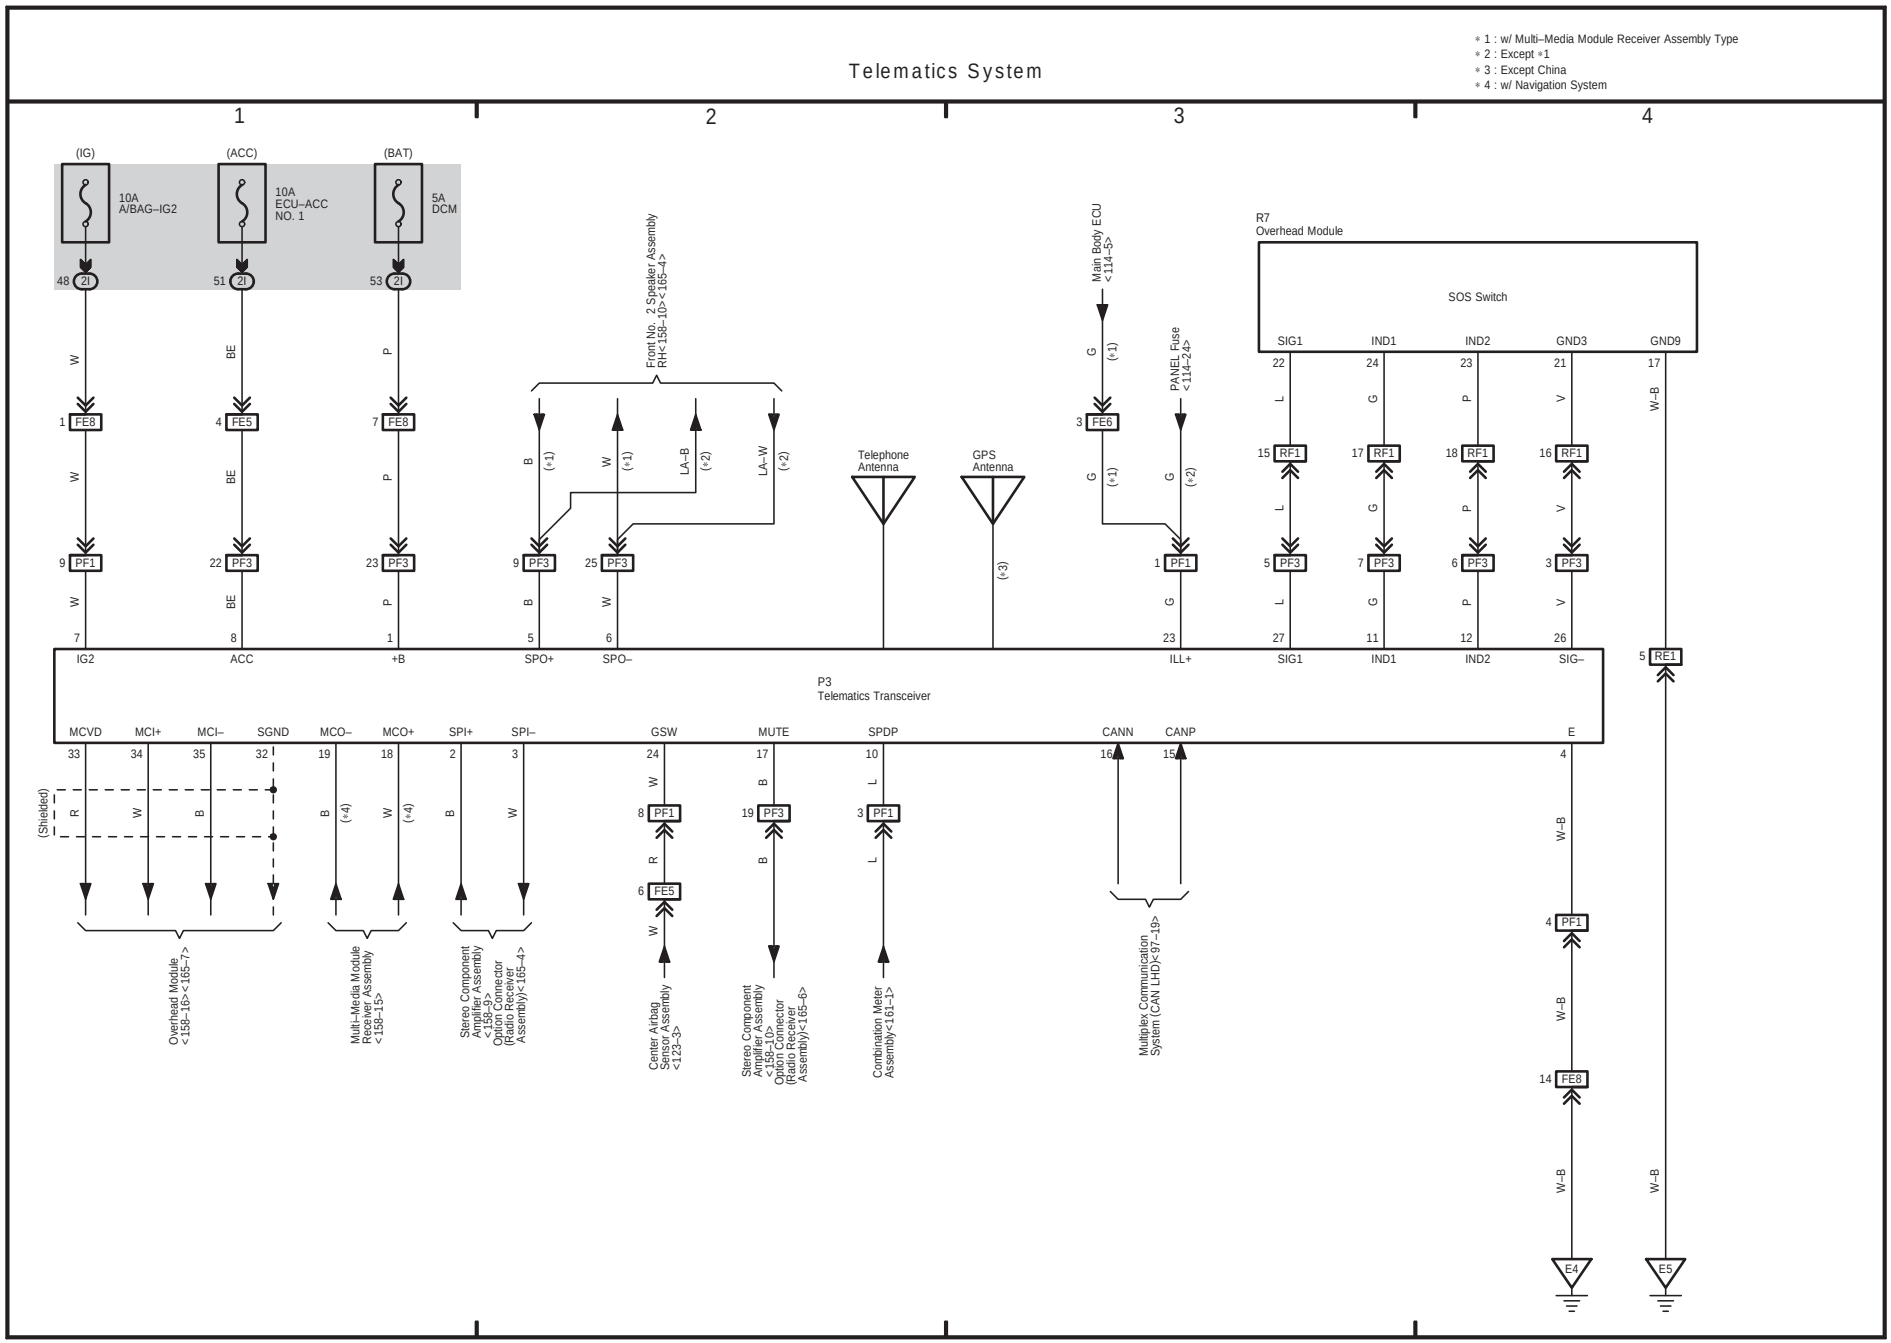

Telematics System
* 1 : w/ Multi–Media Module Receiver Assembly Type
* 2 : Except *1
* 3 : Except China
* 4 : w/ Navigation System
1
2
3
4
(IG)
(ACC)
(BAT)
10A A/BAG–IG2
10A ECU–ACC NO. 1
5A DCM
48 2I
51 2I
53 2I
Front No. 2 Speaker Assembly RH<158–10><165–4>
Main Body ECU <114–5>
PANEL Fuse <114–24>
R7 Overhead Module
SOS Switch
SIG1
IND1
IND2
GND3
GND9
Telephone Antenna
GPS Antenna
IG2
ACC
+B
SPO+
SPO–
ILL+
SIG1
IND1
IND2
SIG–
P3 Telematics Transceiver
MCVD
MCI+
MCI–
SGND
MCO–
MCO+
SPI+
SPI–
GSW
MUTE
SPDP
CANN
CANP
E
(Shielded)
Overhead Module <158–16><165–7>
Multi–Media Module Receiver Assembly <158–15>
Stereo Component Amplifier Assembly <158–9> Option Connector (Radio Receiver Assembly)<165–4>
Center Airbag Sensor Assembly <123–3>
Stereo Component Amplifier Assembly <158–10> Option Connector (Radio Receiver Assembly)<165–6>
Combination Meter Assembly<161–1>
Multiplex Communication System (CAN LHD)<97–19>
E4
E5