
(Cont. next page)

Engine Control (1GR–FE) (From Aug. 2017 Production)


∗ 4 : w/ Air Injection Control Driver

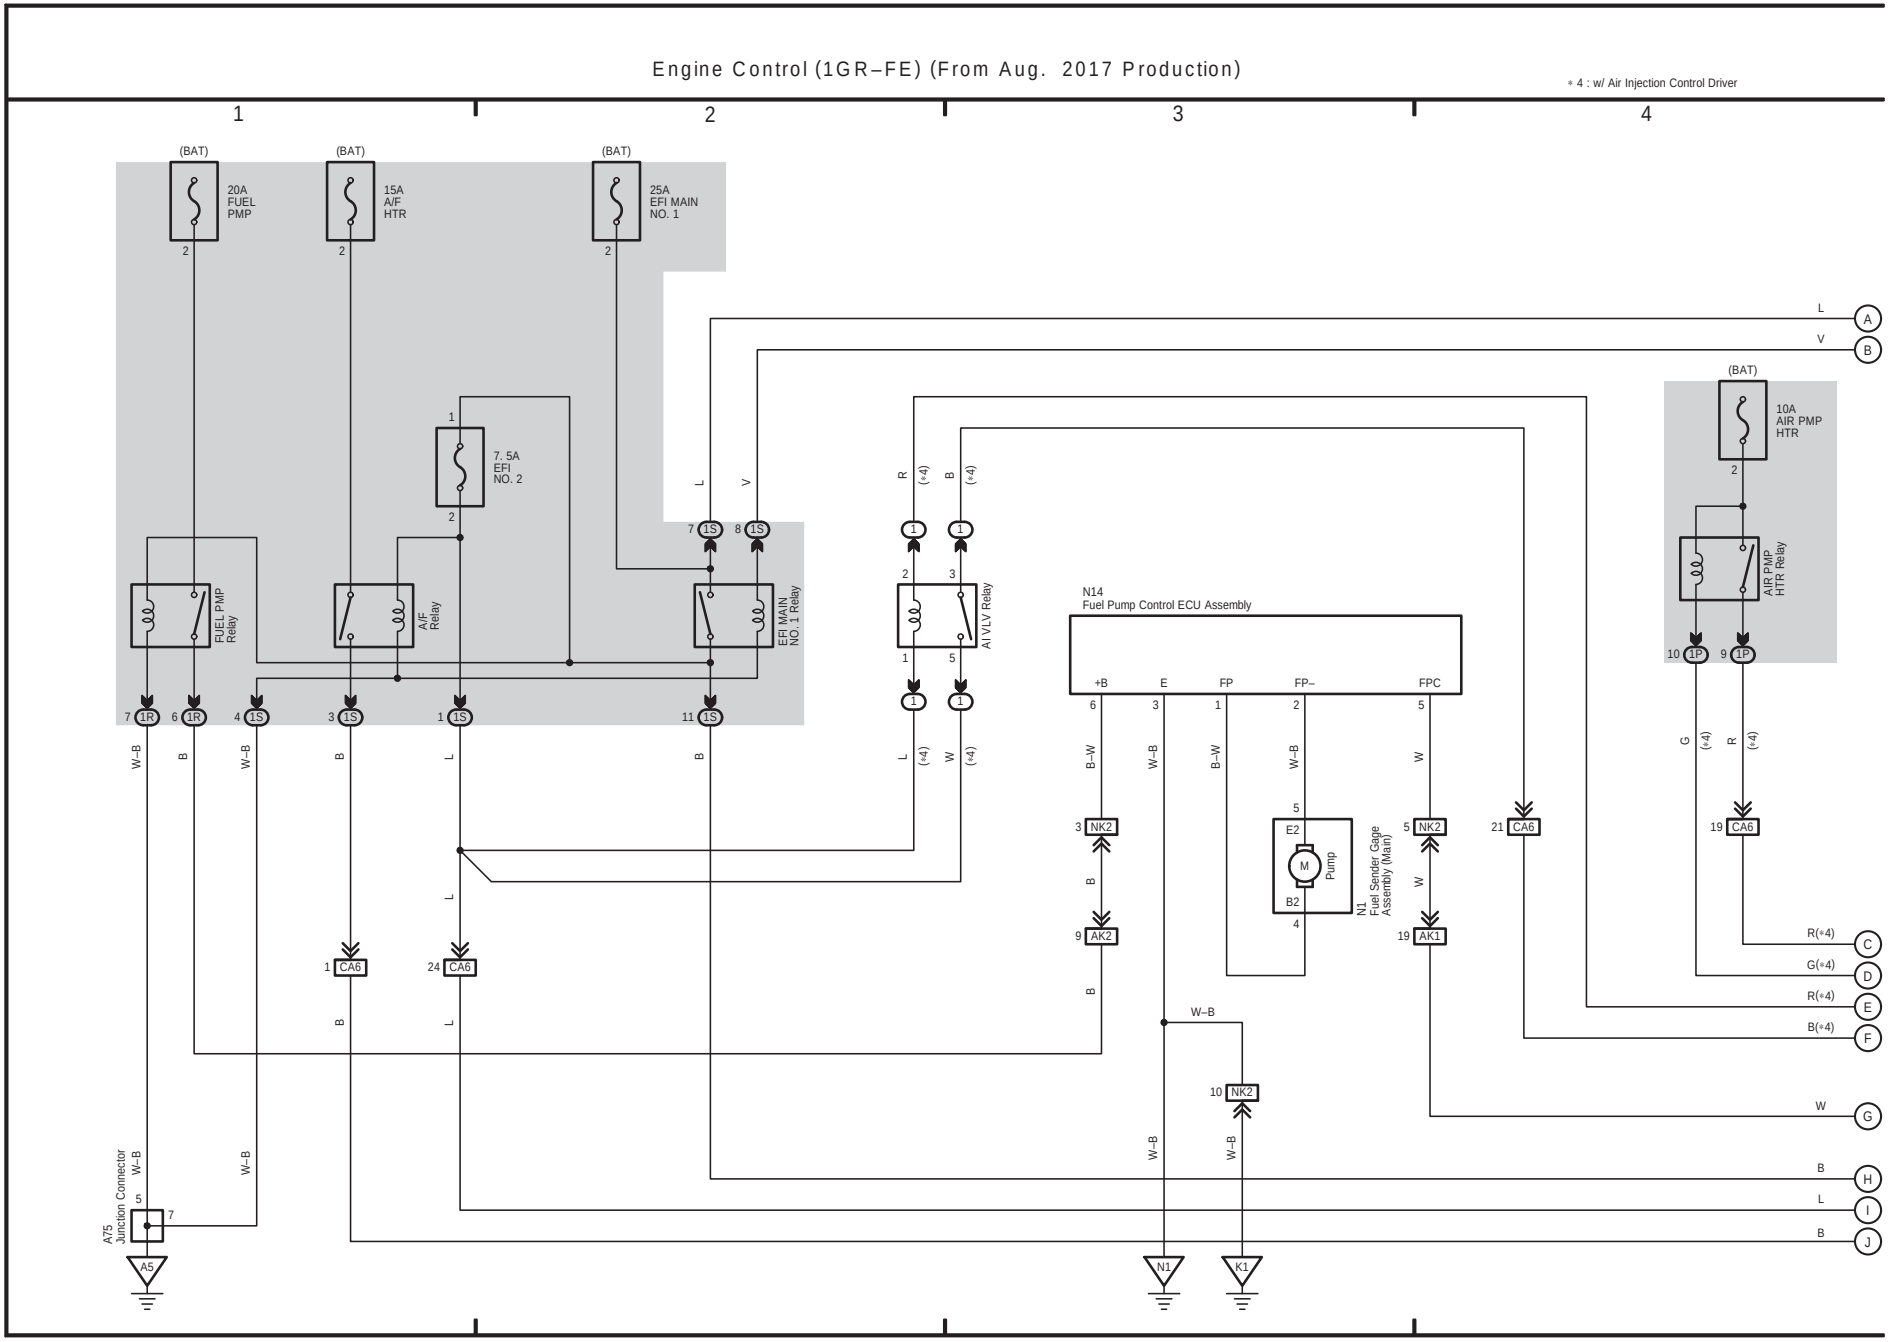

(Cont. next page)

Engine Control (1GR–FE) (From Aug. 2017 Production)


∗ 4 : w/ Air Injection Control Driver

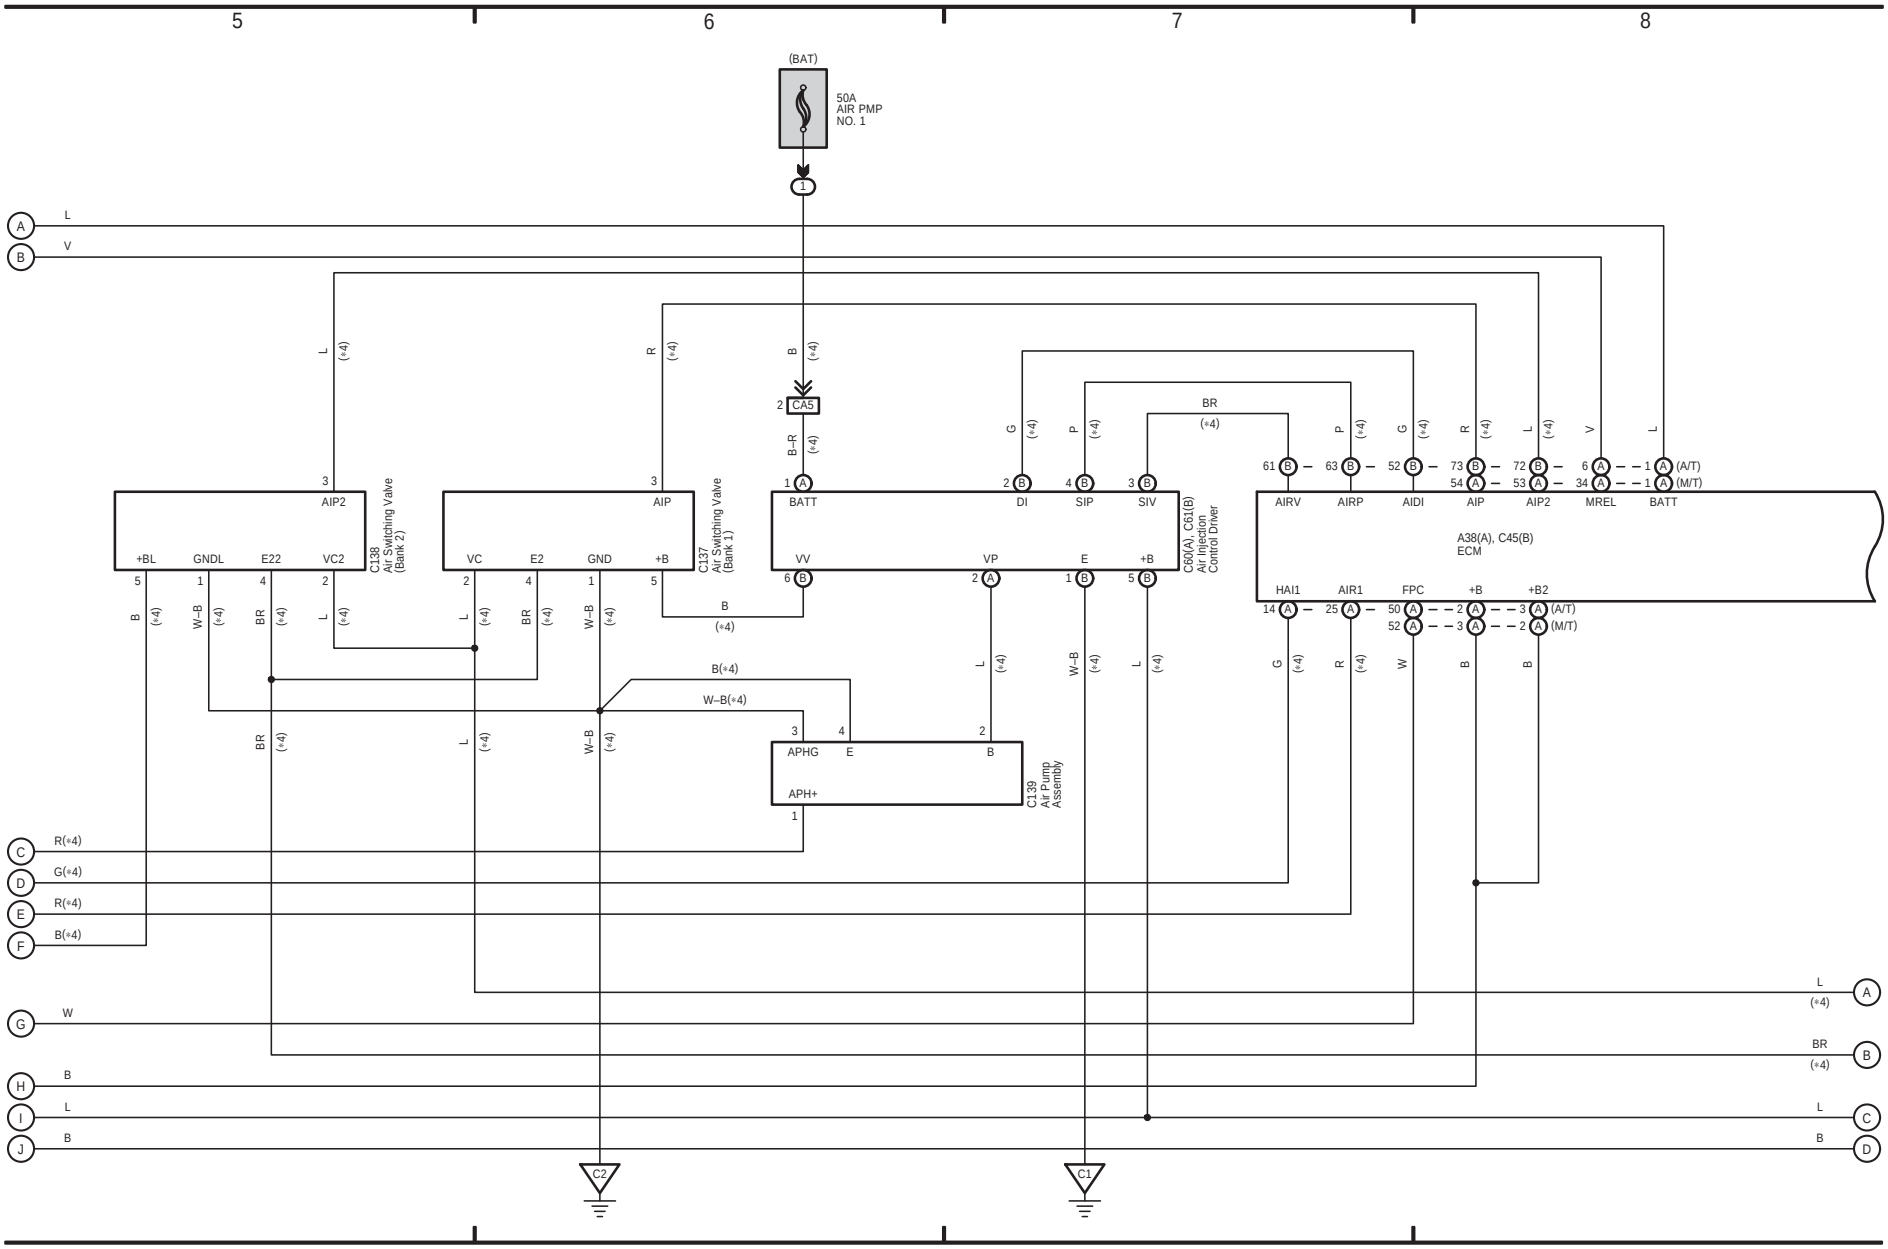

(Cont. next page)


Engine Control (1GR–FE) (From Aug. 2017 Production)

∗ 4 : w/ Air Injection Control Driver

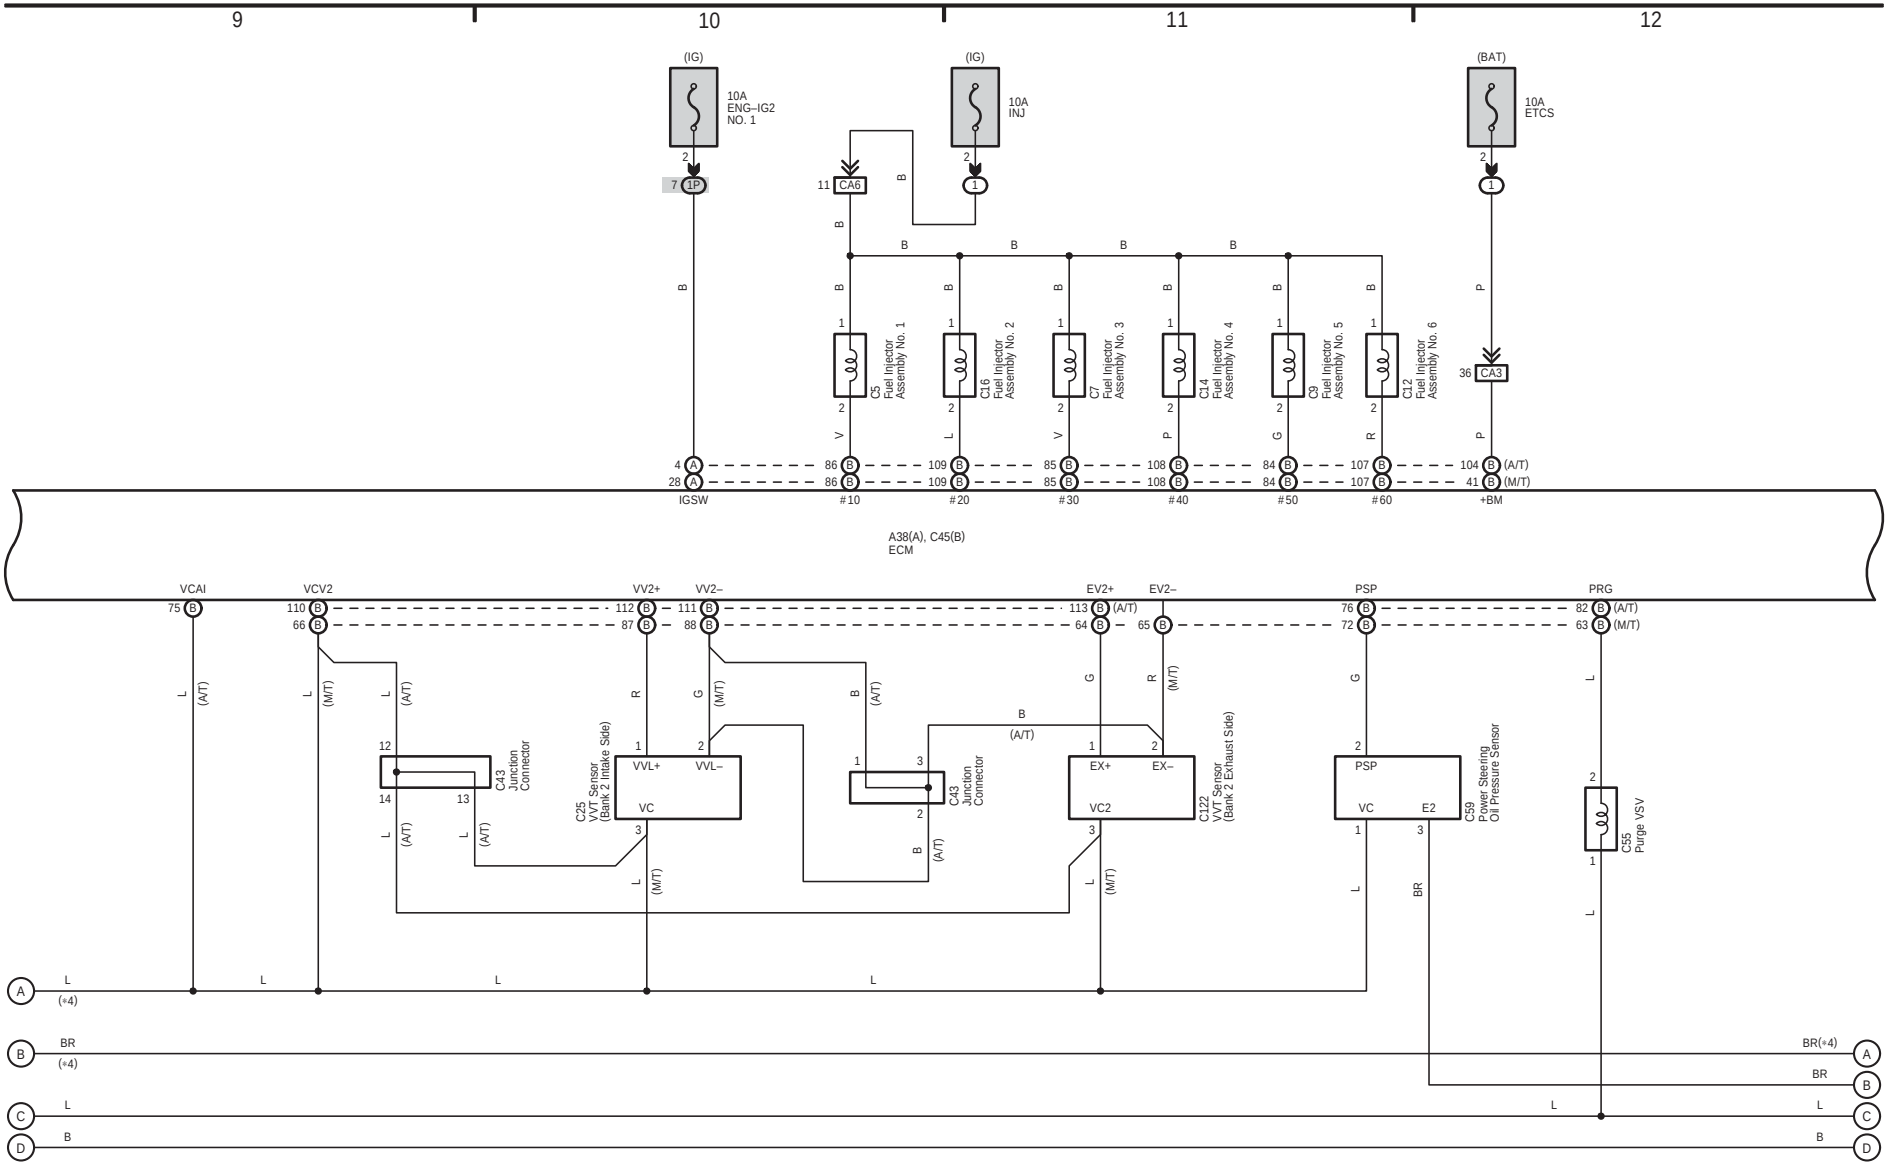

Engine Control (1GR–FE) (From Aug. 2017 Production)


* 1 : Shielded
* 4 : w/ Air Injection Control Driver

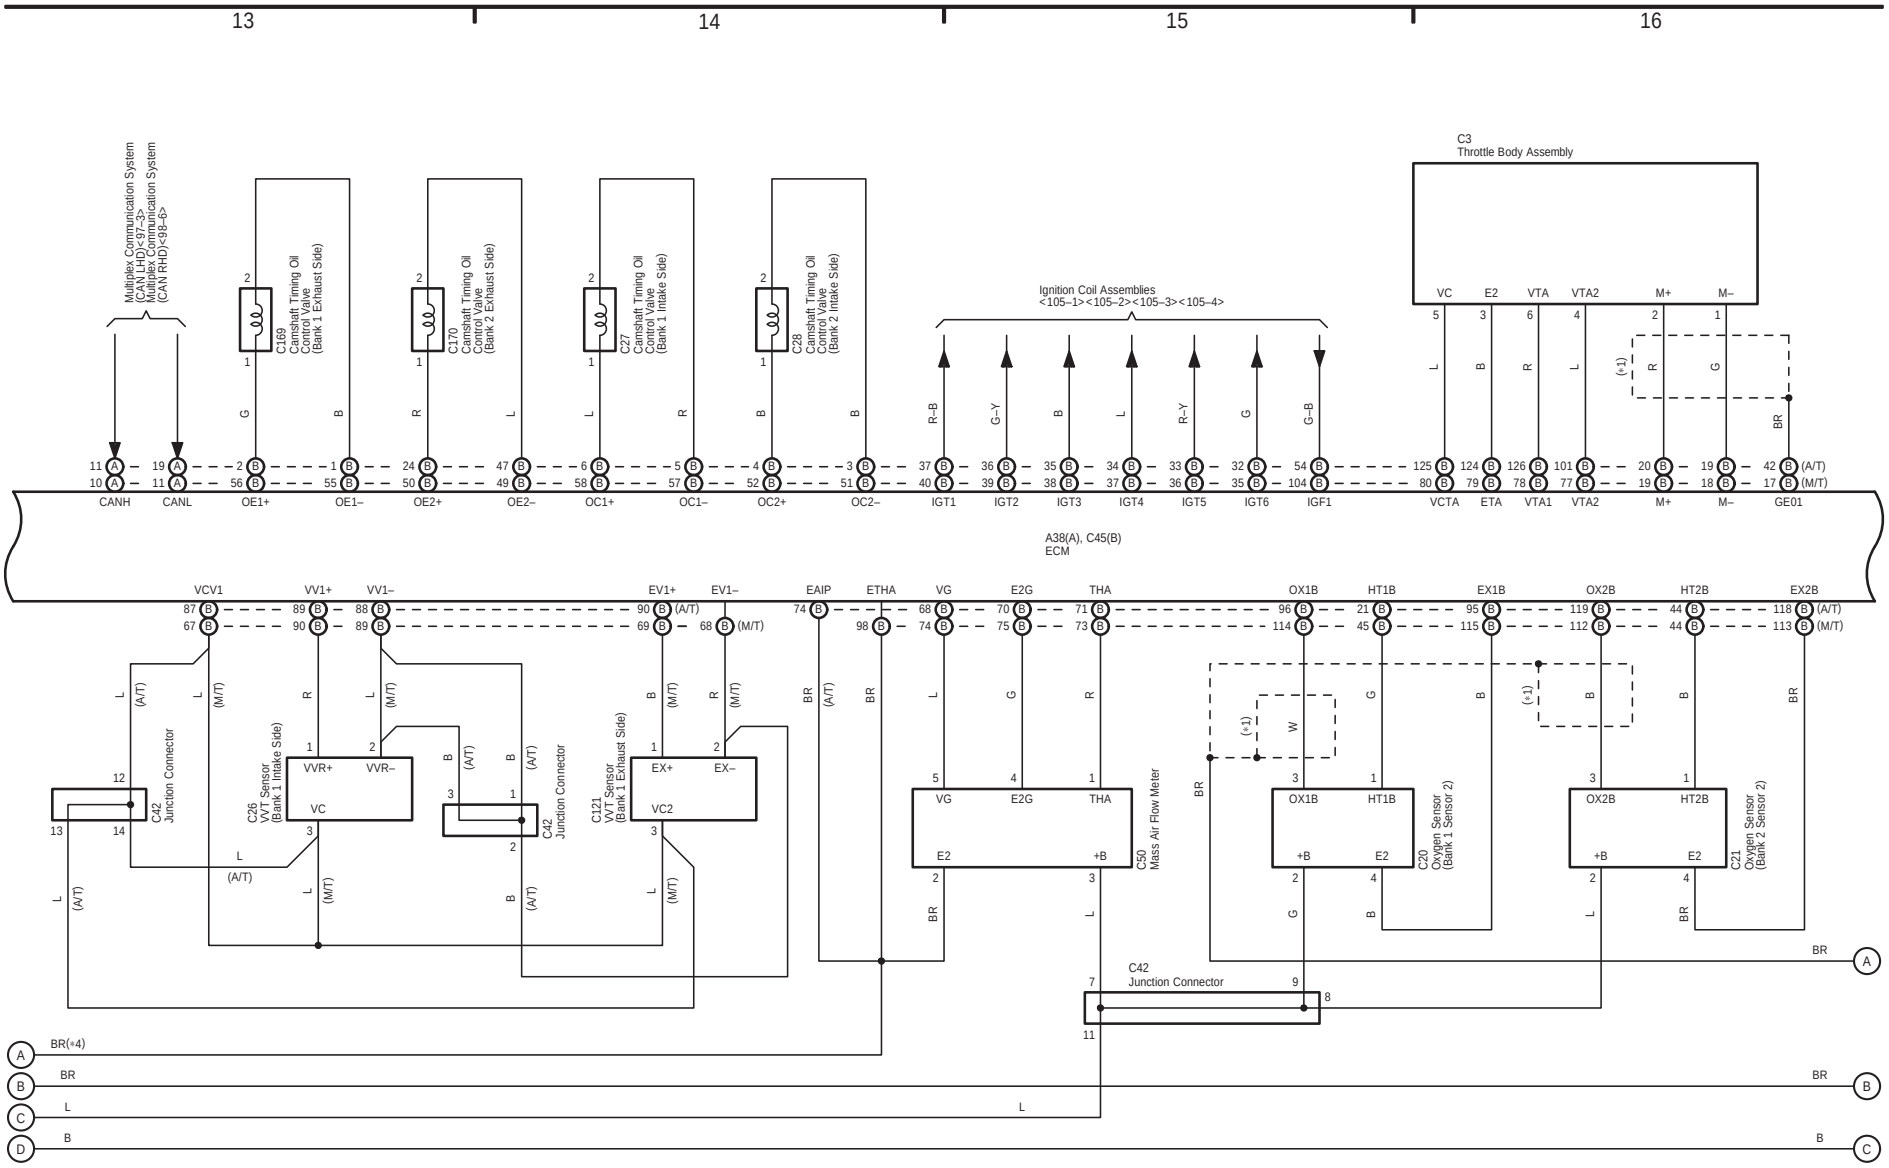

(Cont. next page)

Engine Control (1GR–FE) (From Aug. 2017 Production)

* 1 : Shielded
* 7 : w/ Entry & Start System
* 8 : w/o Entry & Start System

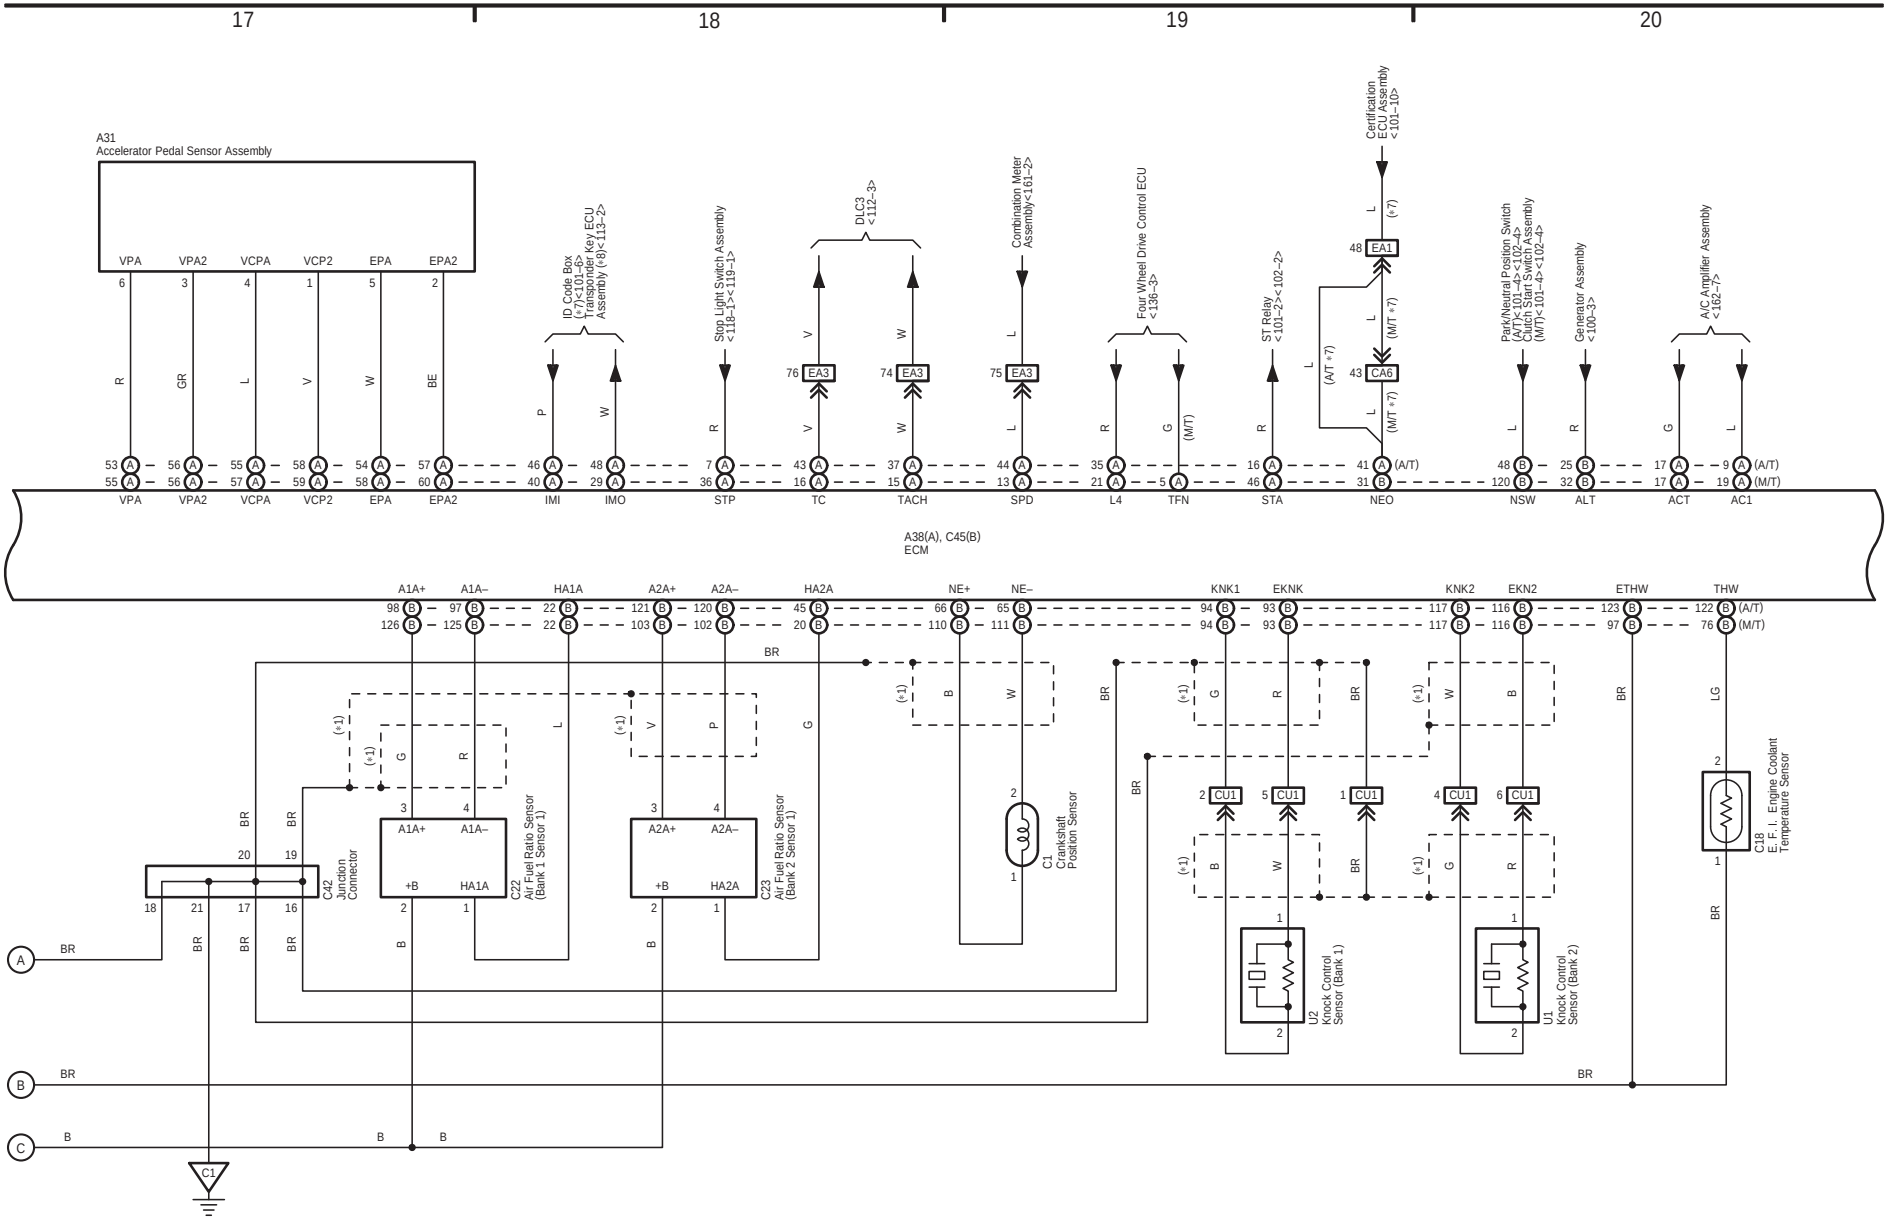


(Cont. next page)

Cruise Control (1GR–FE) (From Aug. 2017 Production)


21 22 23 24

* 7 : w/ Entry & Start System
* 8 : w/o Entry & Start System

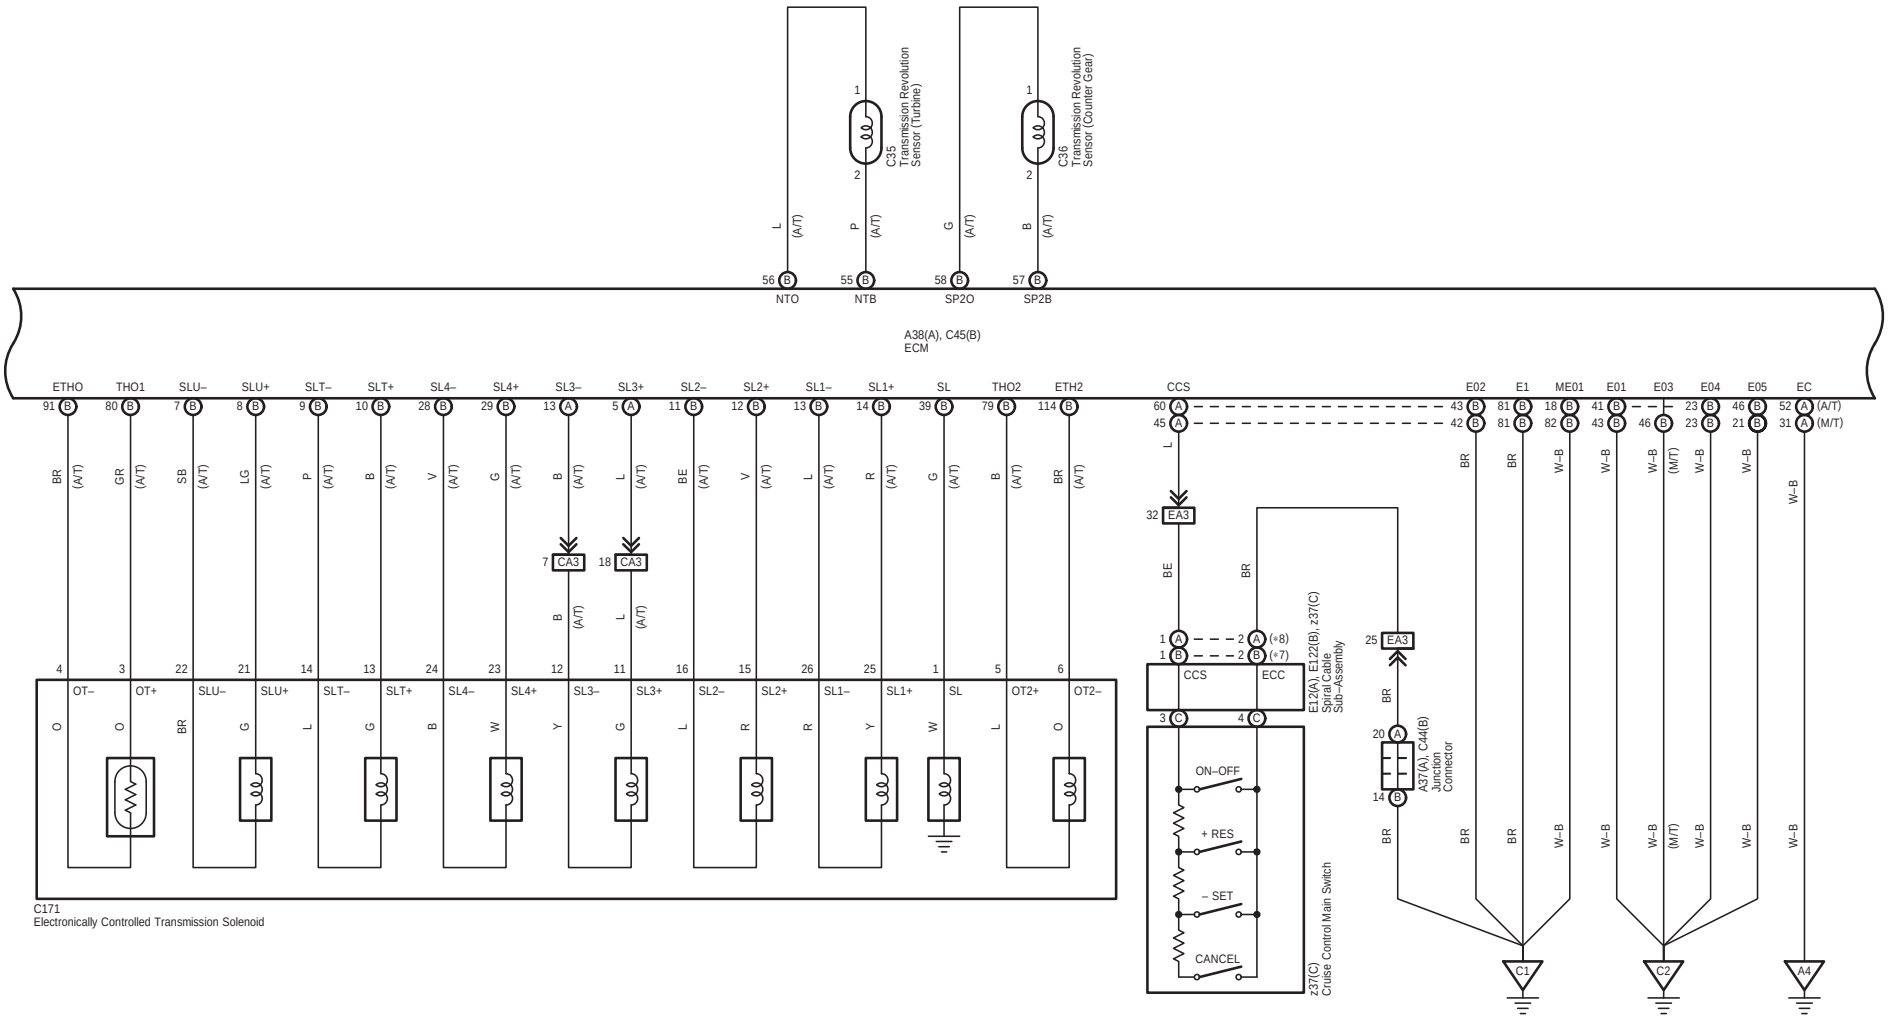

(Cont. next page)

ECT and A/T Indicator (1GR–FE) (From Aug. 2017 Production)

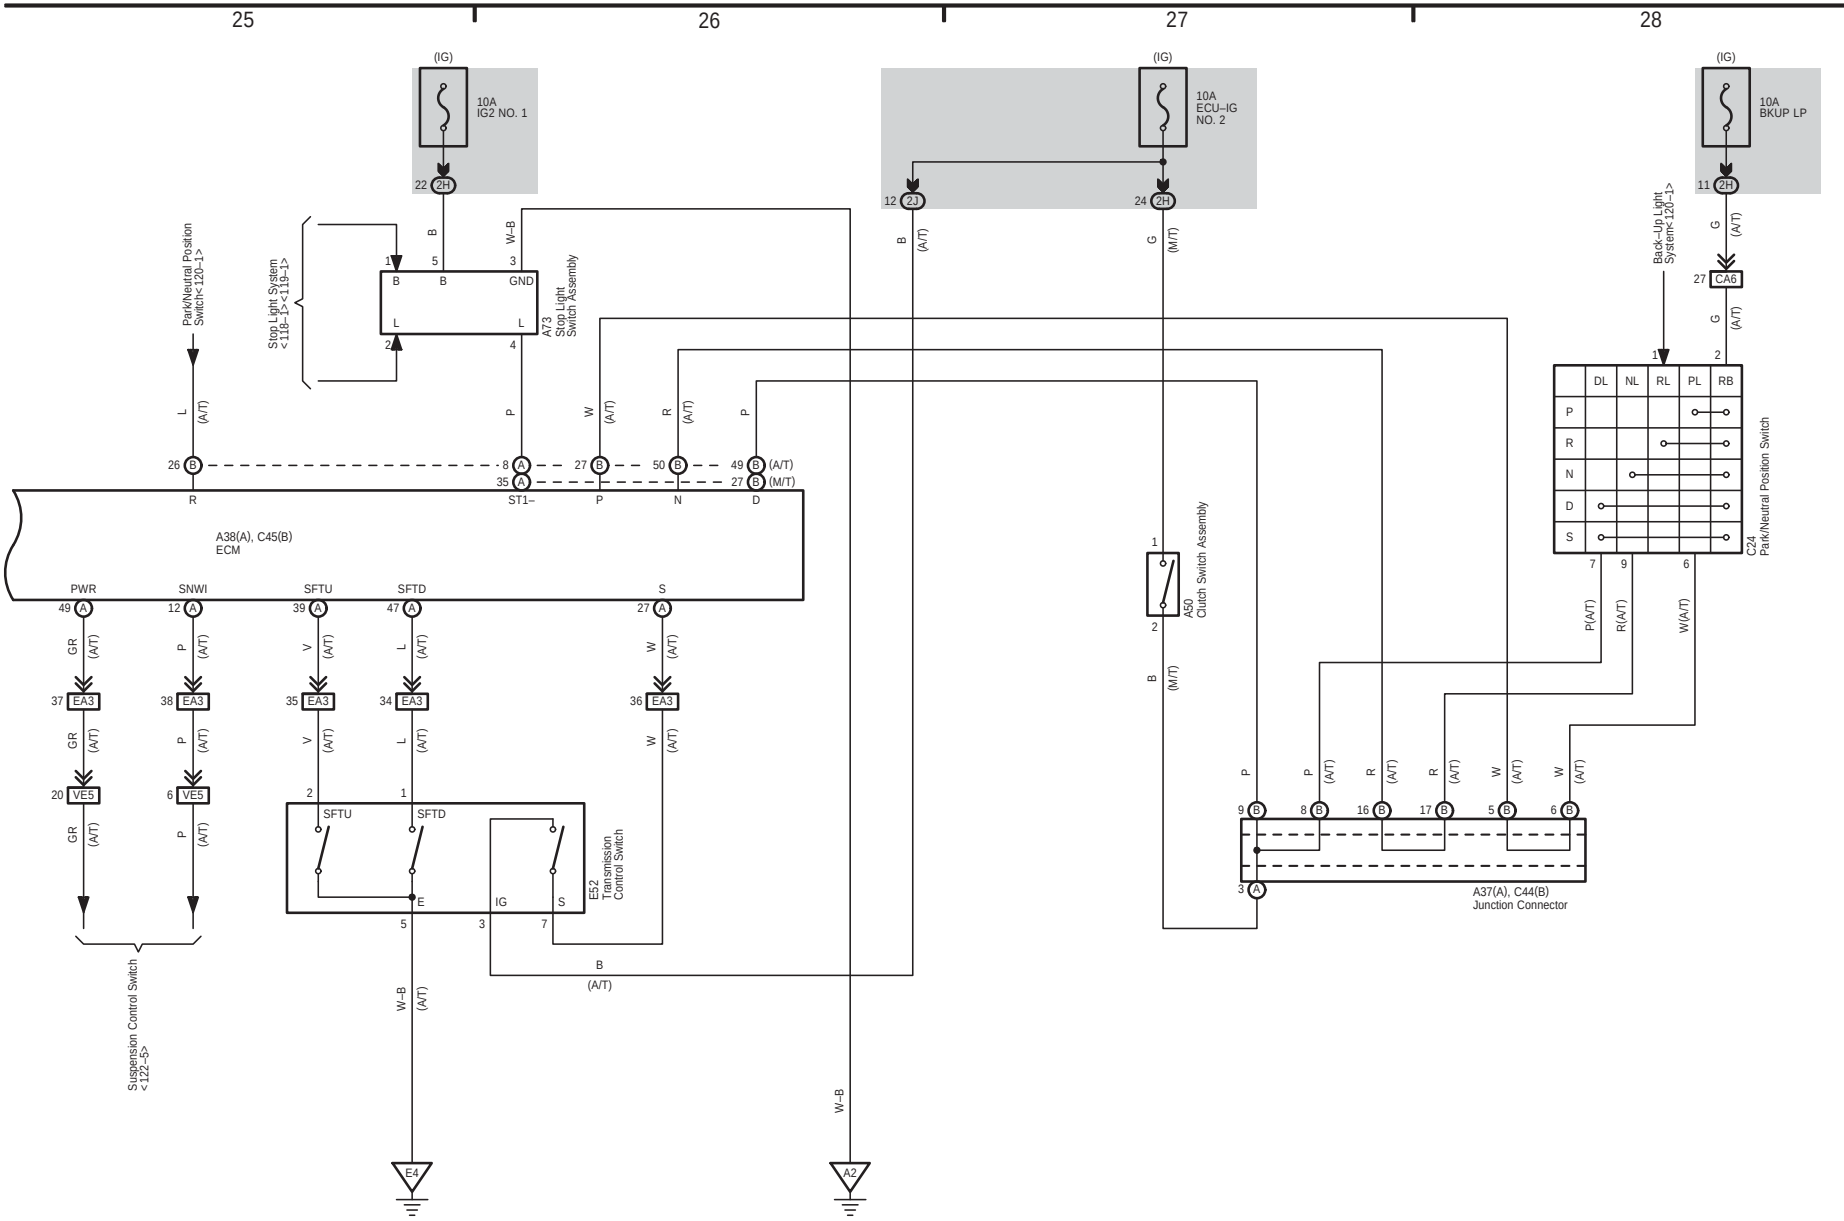

ECT and A/T Indicator (1GR–FE) (From Aug. 2017 Production)

