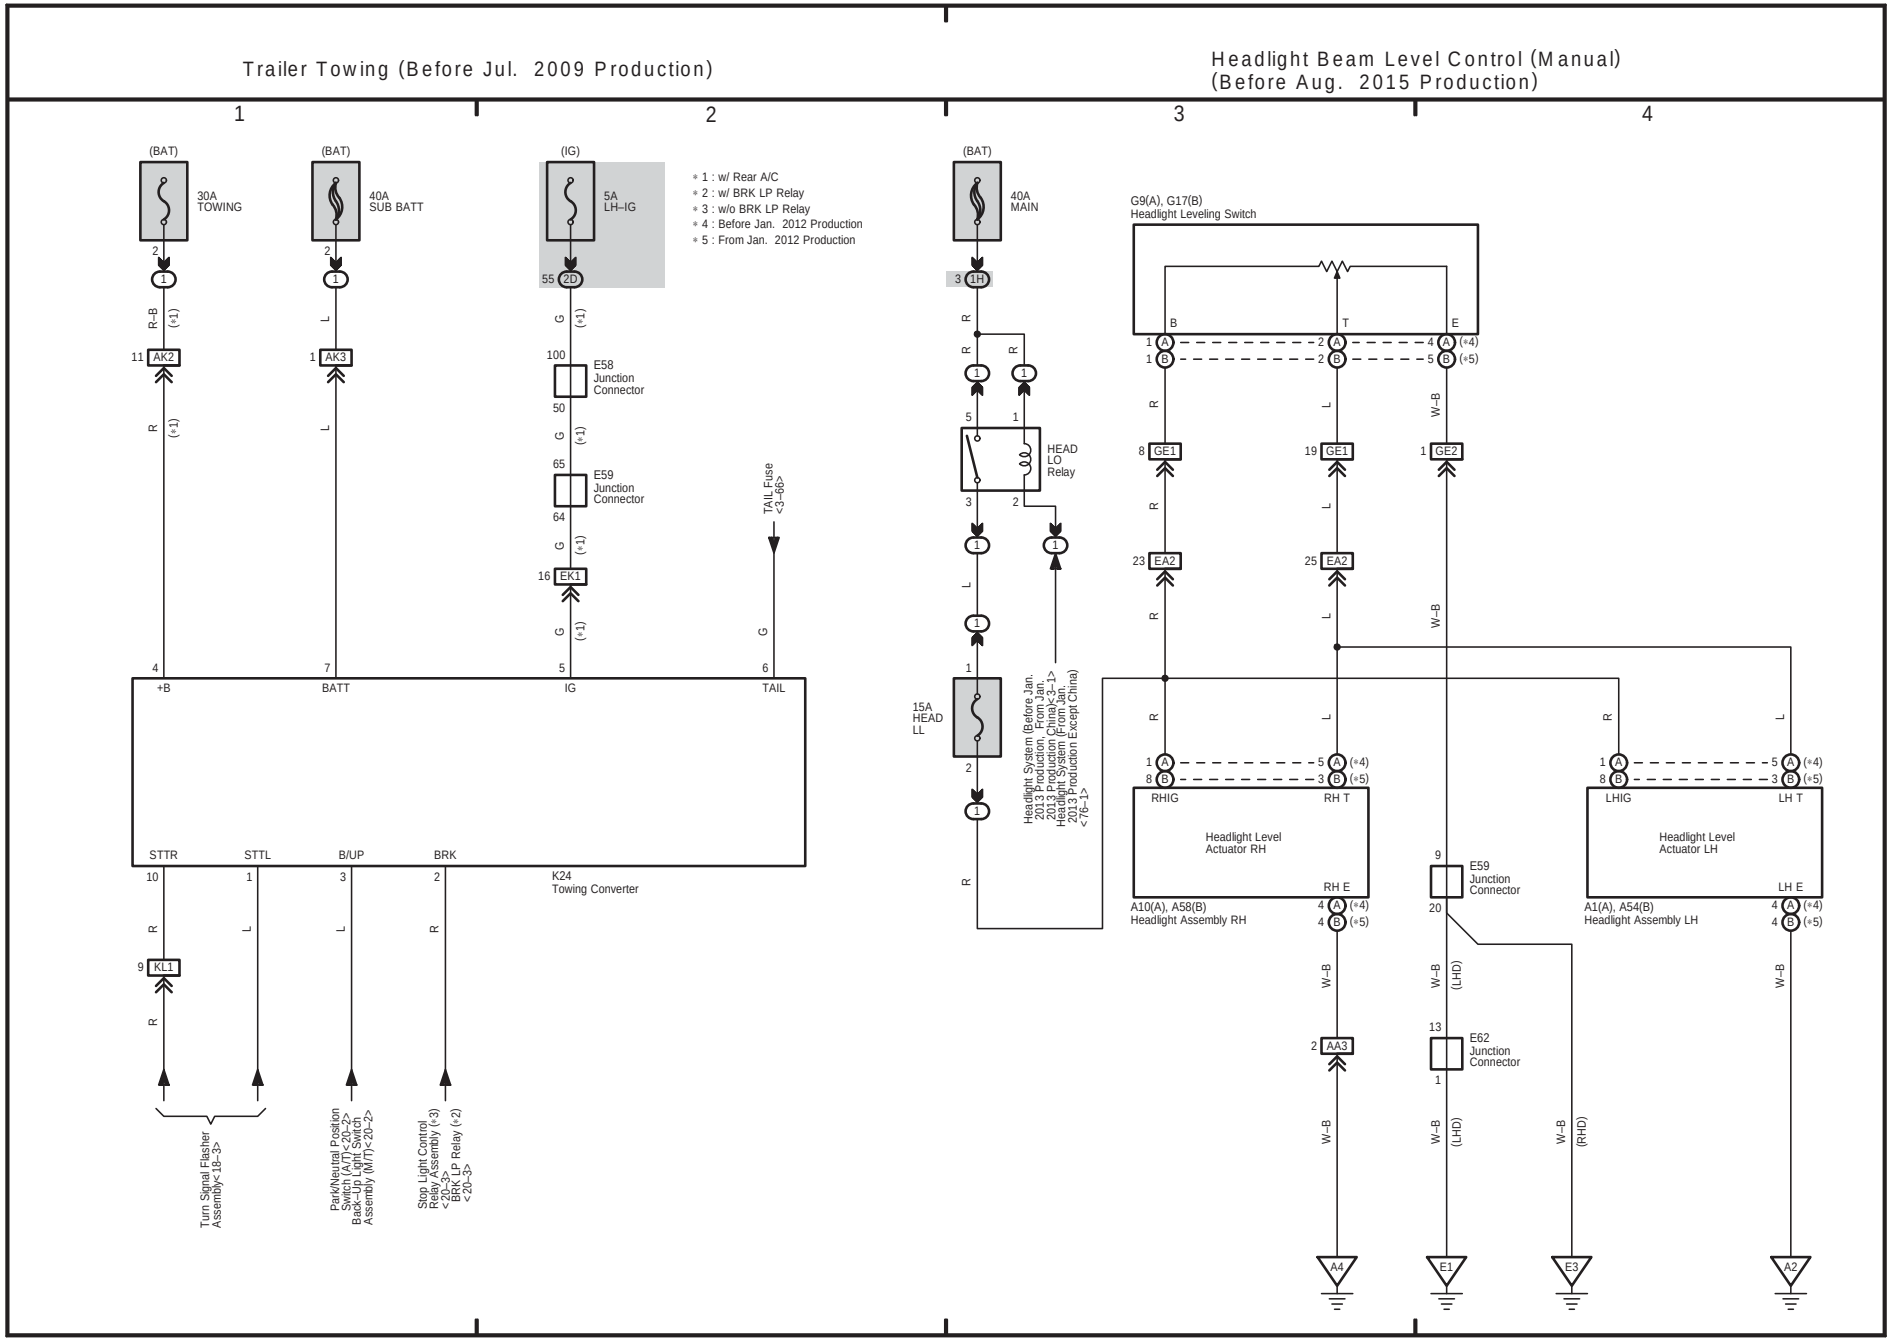

Trailer Towing (Before Jul. 2009 Production)
Headlight Beam Level Control (Manual)
(Before Aug. 2015 Production)
1
2
3
4
(BAT)
30A
TOWING
(BAT)
40A
SUB BATT
(IG)
5A
LH–IG
∗ 1 : w/ Rear A/C
∗ 2 : w/ BRK LP Relay
∗ 3 : w/o BRK LP Relay
∗ 4 : Before Jan. 2012 Production
∗ 5 : From Jan. 2012 Production
(BAT)
40A
MAIN
G9(A), G17(B)
Headlight Leveling Switch
E58
Junction
Connector
E59
Junction
Connector
TAIL Fuse
<3–66>
HEAD
LO
Relay
15A
HEAD
LL
Headlight System (Before Jan. 2013 Production, From Jan. 2013 Production (From Jan. 2013 Production Except China)<1>
Headlight System (From Jan. 2013 Production Except China)<76–1>
+B
BATT
IG
TAIL
STTR
STTL
B/UP
BRK
K24
Towing Converter
Turn Signal Flasher
Assembly<18–3>
Park/Neutral Position
Switch (A/T)<20–2>
Back–Up Light Switch
Assembly (M/T)<20–2>
Stop Light Control
Relay Assembly (∗3)
<20–3>
BRK LP Relay (∗2)
<20–3>
RHIG
RH T
RH E
Headlight Level
Actuator RH
A10(A), A58(B)
Headlight Assembly RH
LHIG
LH T
LH E
Headlight Level
Actuator LH
A1(A), A54(B)
Headlight Assembly LH
E59
Junction
Connector
E62
Junction
Connector
(LHD)
(RHD)
A4
E1
E3
A2