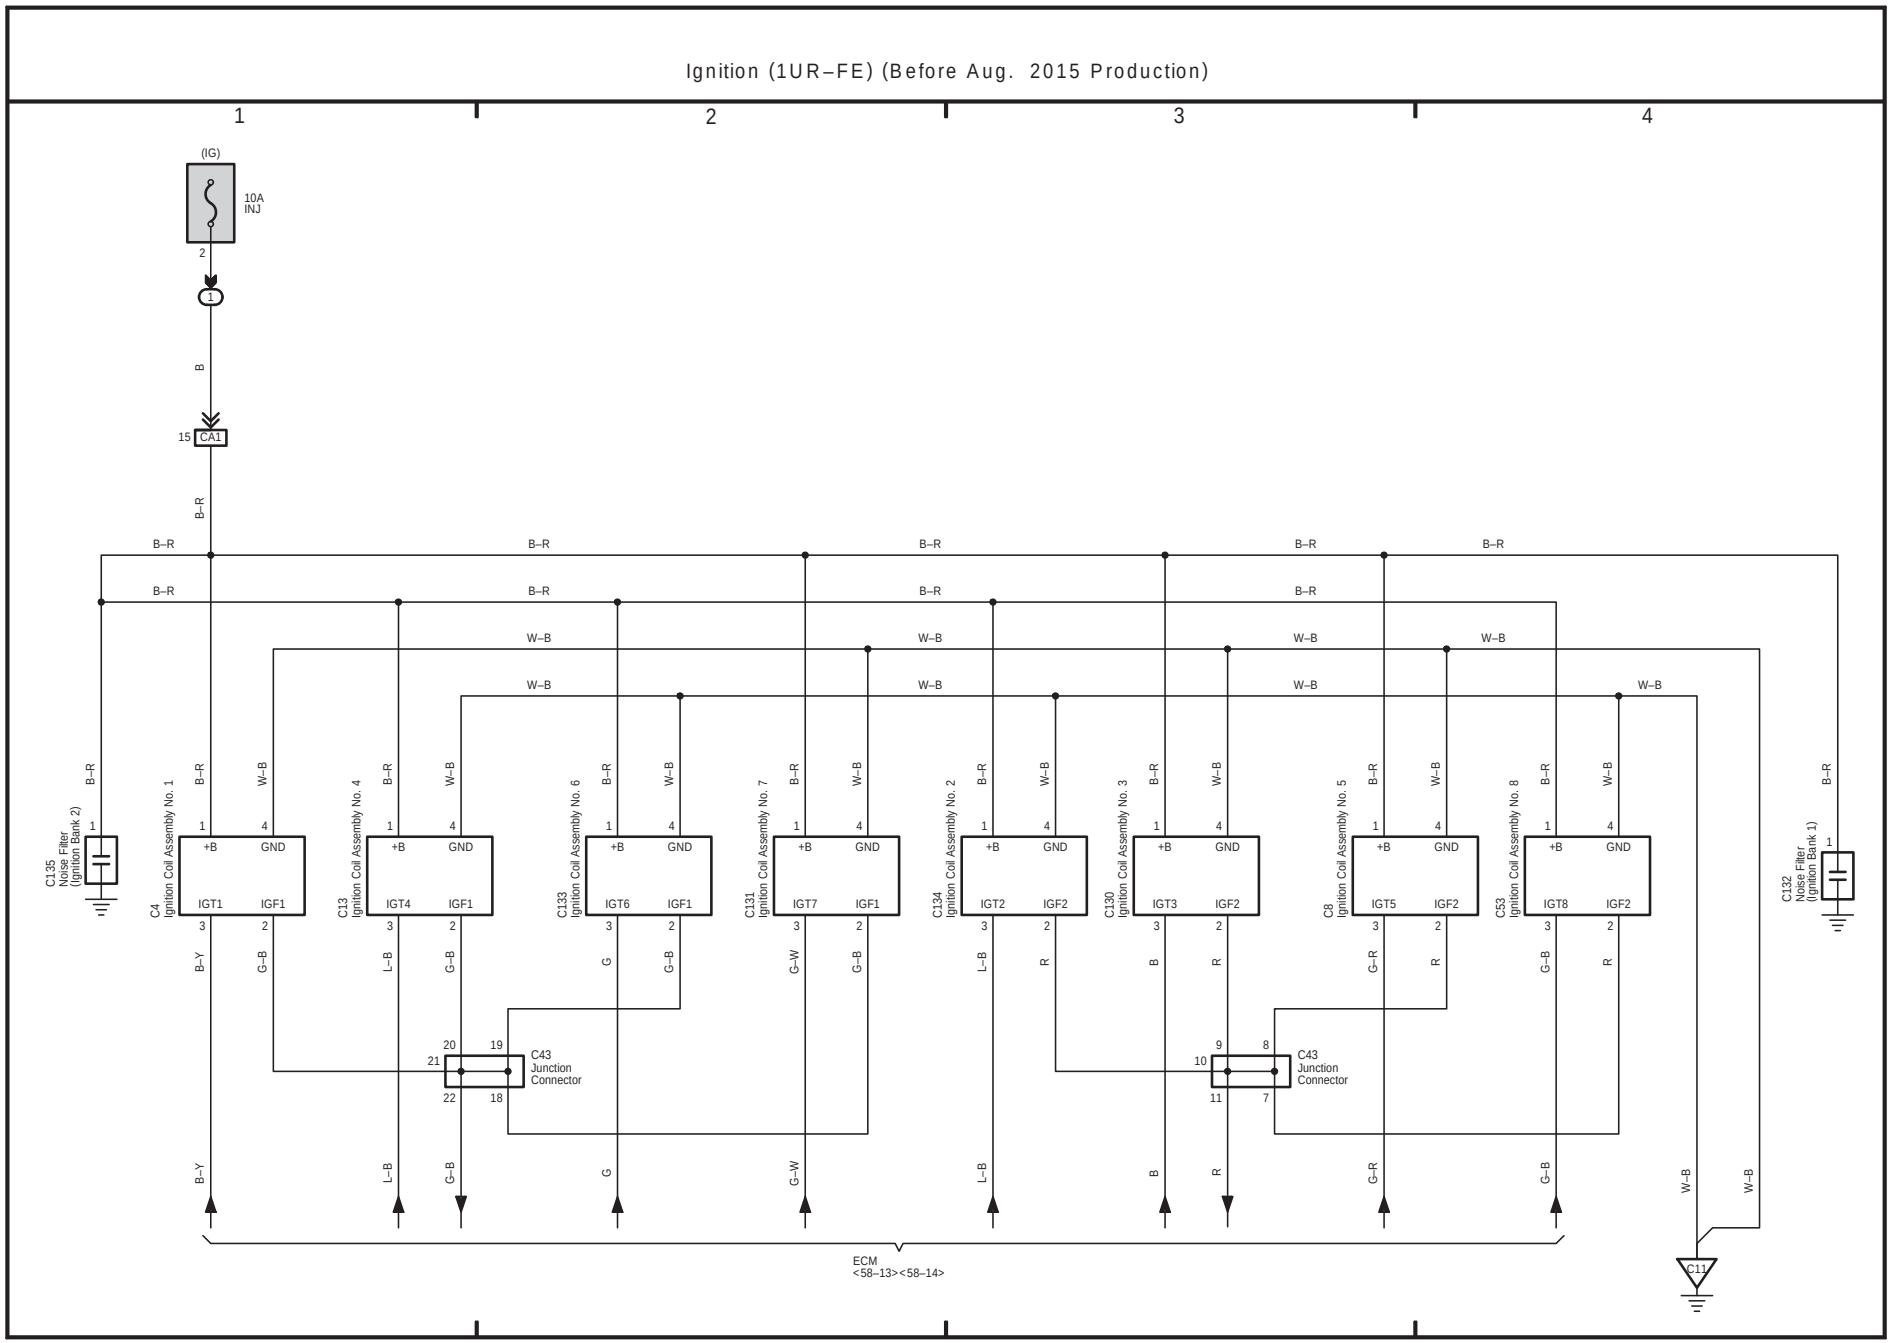

Ignition (1UR–FE) (Before Aug. 2015 Production)
1
2
3
4
(IG)
10A
INJ
2
1
B
15
CA1
B–R
W–B
C135
Noise Filter
(Ignition Bank 2)
C4
Ignition Coil Assembly No. 1
C13
Ignition Coil Assembly No. 4
C133
Ignition Coil Assembly No. 6
C131
Ignition Coil Assembly No. 7
C134
Ignition Coil Assembly No. 2
C130
Ignition Coil Assembly No. 3
C8
Ignition Coil Assembly No. 5
C53
Ignition Coil Assembly No. 8
+B
GND
IGT1
IGF1
IGT4
IGT6
IGT7
IGT2
IGF2
IGT3
IGT5
IGT8
B–Y
G–B
L–B
G
G–W
R
B
G–R
C43
Junction
Connector
C132
Noise Filter
(Ignition Bank 1)
C11
ECM
<58–13><58–14>