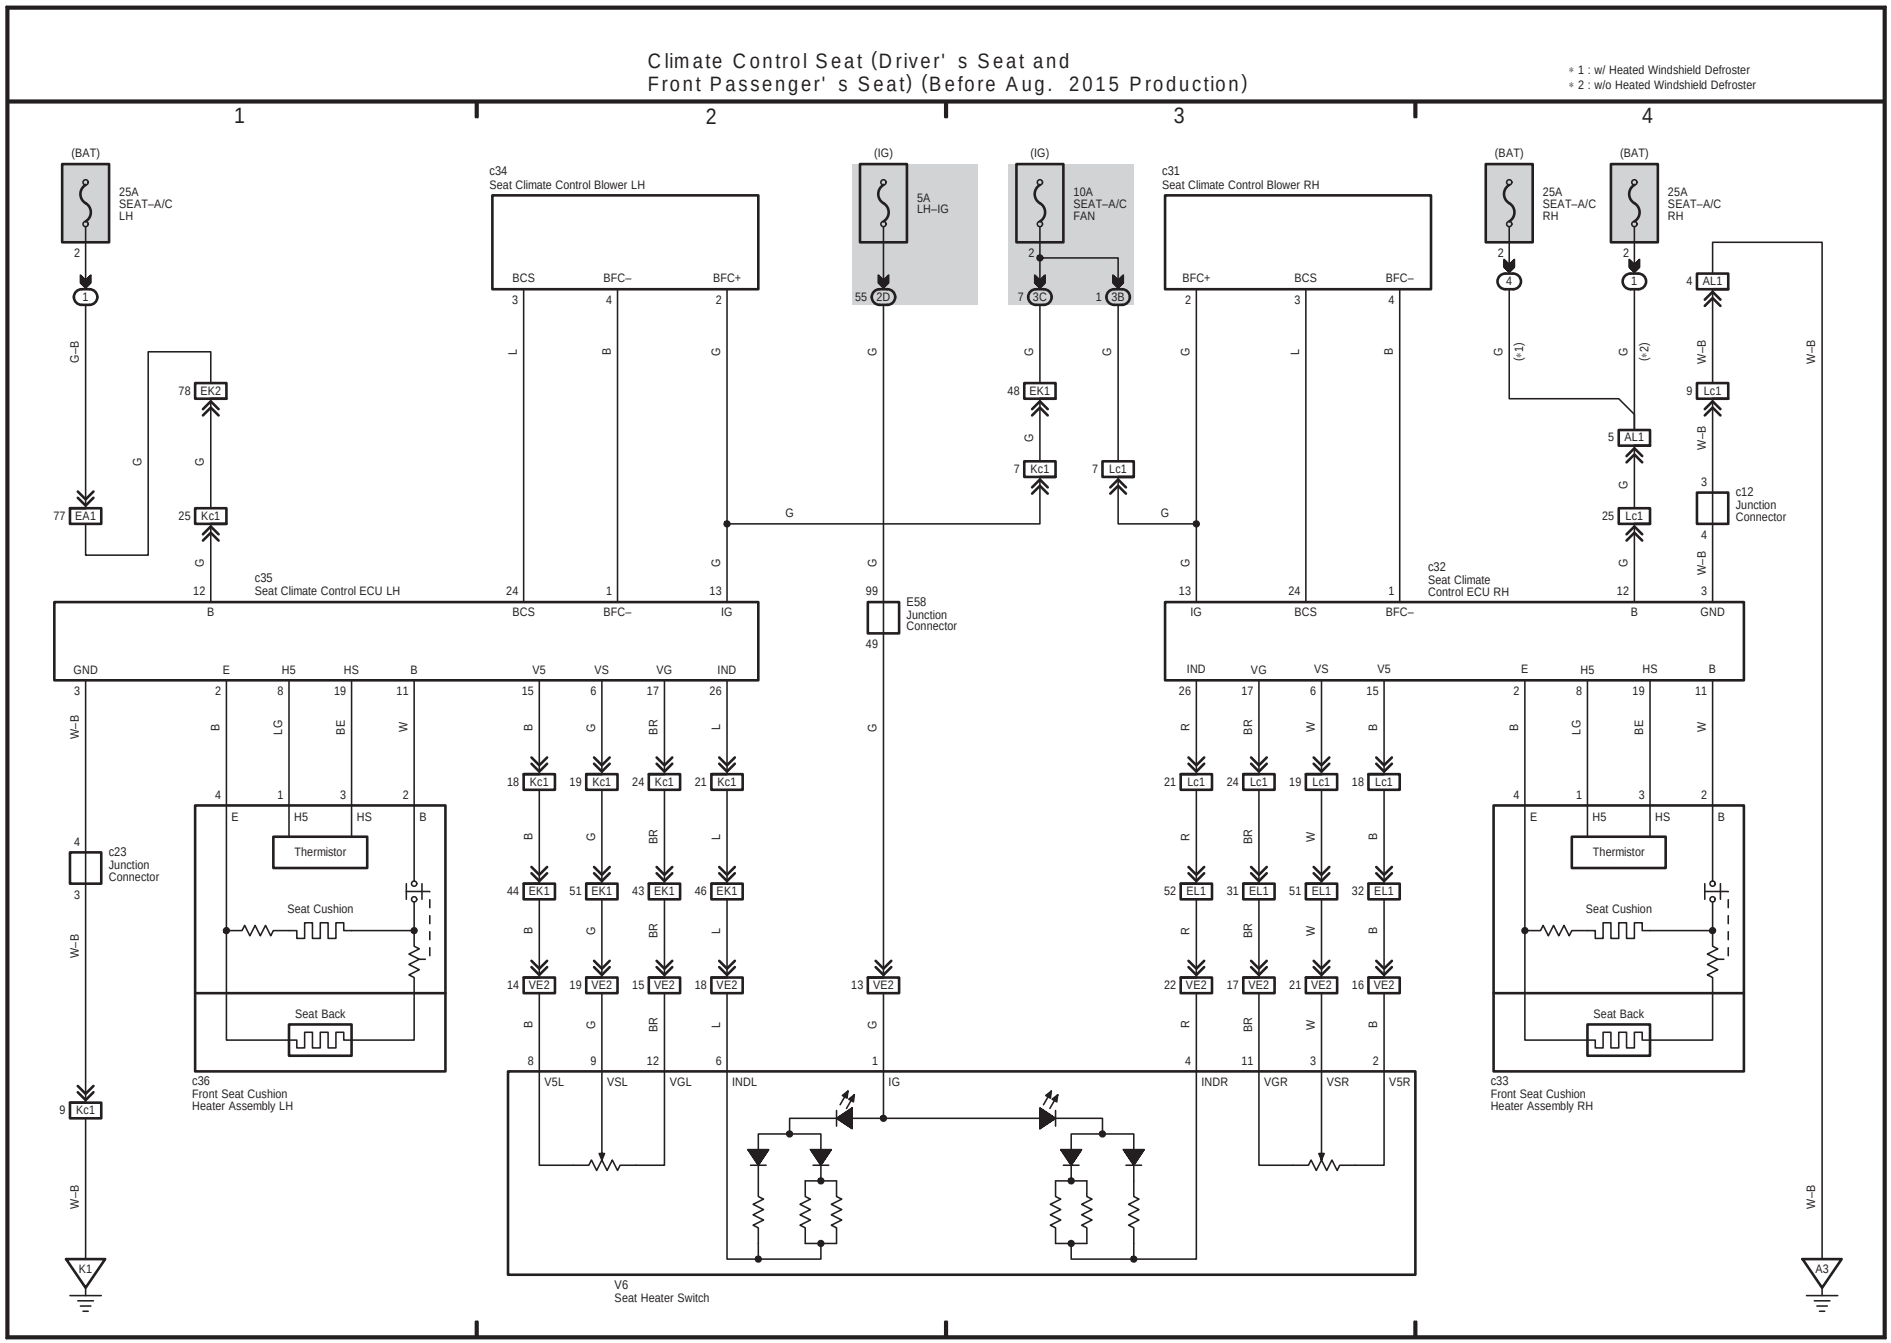

Climate Control Seat (Driver' s Seat and
Front Passenger' s Seat) (Before Aug. 2015 Production)
* 1 : w/ Heated Windshield Defroster
* 2 : w/o Heated Windshield Defroster
1
2
3
4
(BAT)
25A SEAT–A/C LH
(IG)
5A LH–IG
10A SEAT–A/C FAN
(BAT)
25A SEAT–A/C RH
25A SEAT–A/C RH
c34 Seat Climate Control Blower LH
c31 Seat Climate Control Blower RH
BCS BFC– BFC+
BFC+ BCS BFC–
c35 Seat Climate Control ECU LH
c32 Seat Climate Control ECU RH
E58 Junction Connector
c12 Junction Connector
c23 Junction Connector
Thermistor
Seat Cushion
Seat Back
c36 Front Seat Cushion Heater Assembly LH
c33 Front Seat Cushion Heater Assembly RH
V6 Seat Heater Switch
K1
A3