

(Cont. next page)


Combination Meter (From Jan. 2013 Production until Aug. 2015 Production Except China)

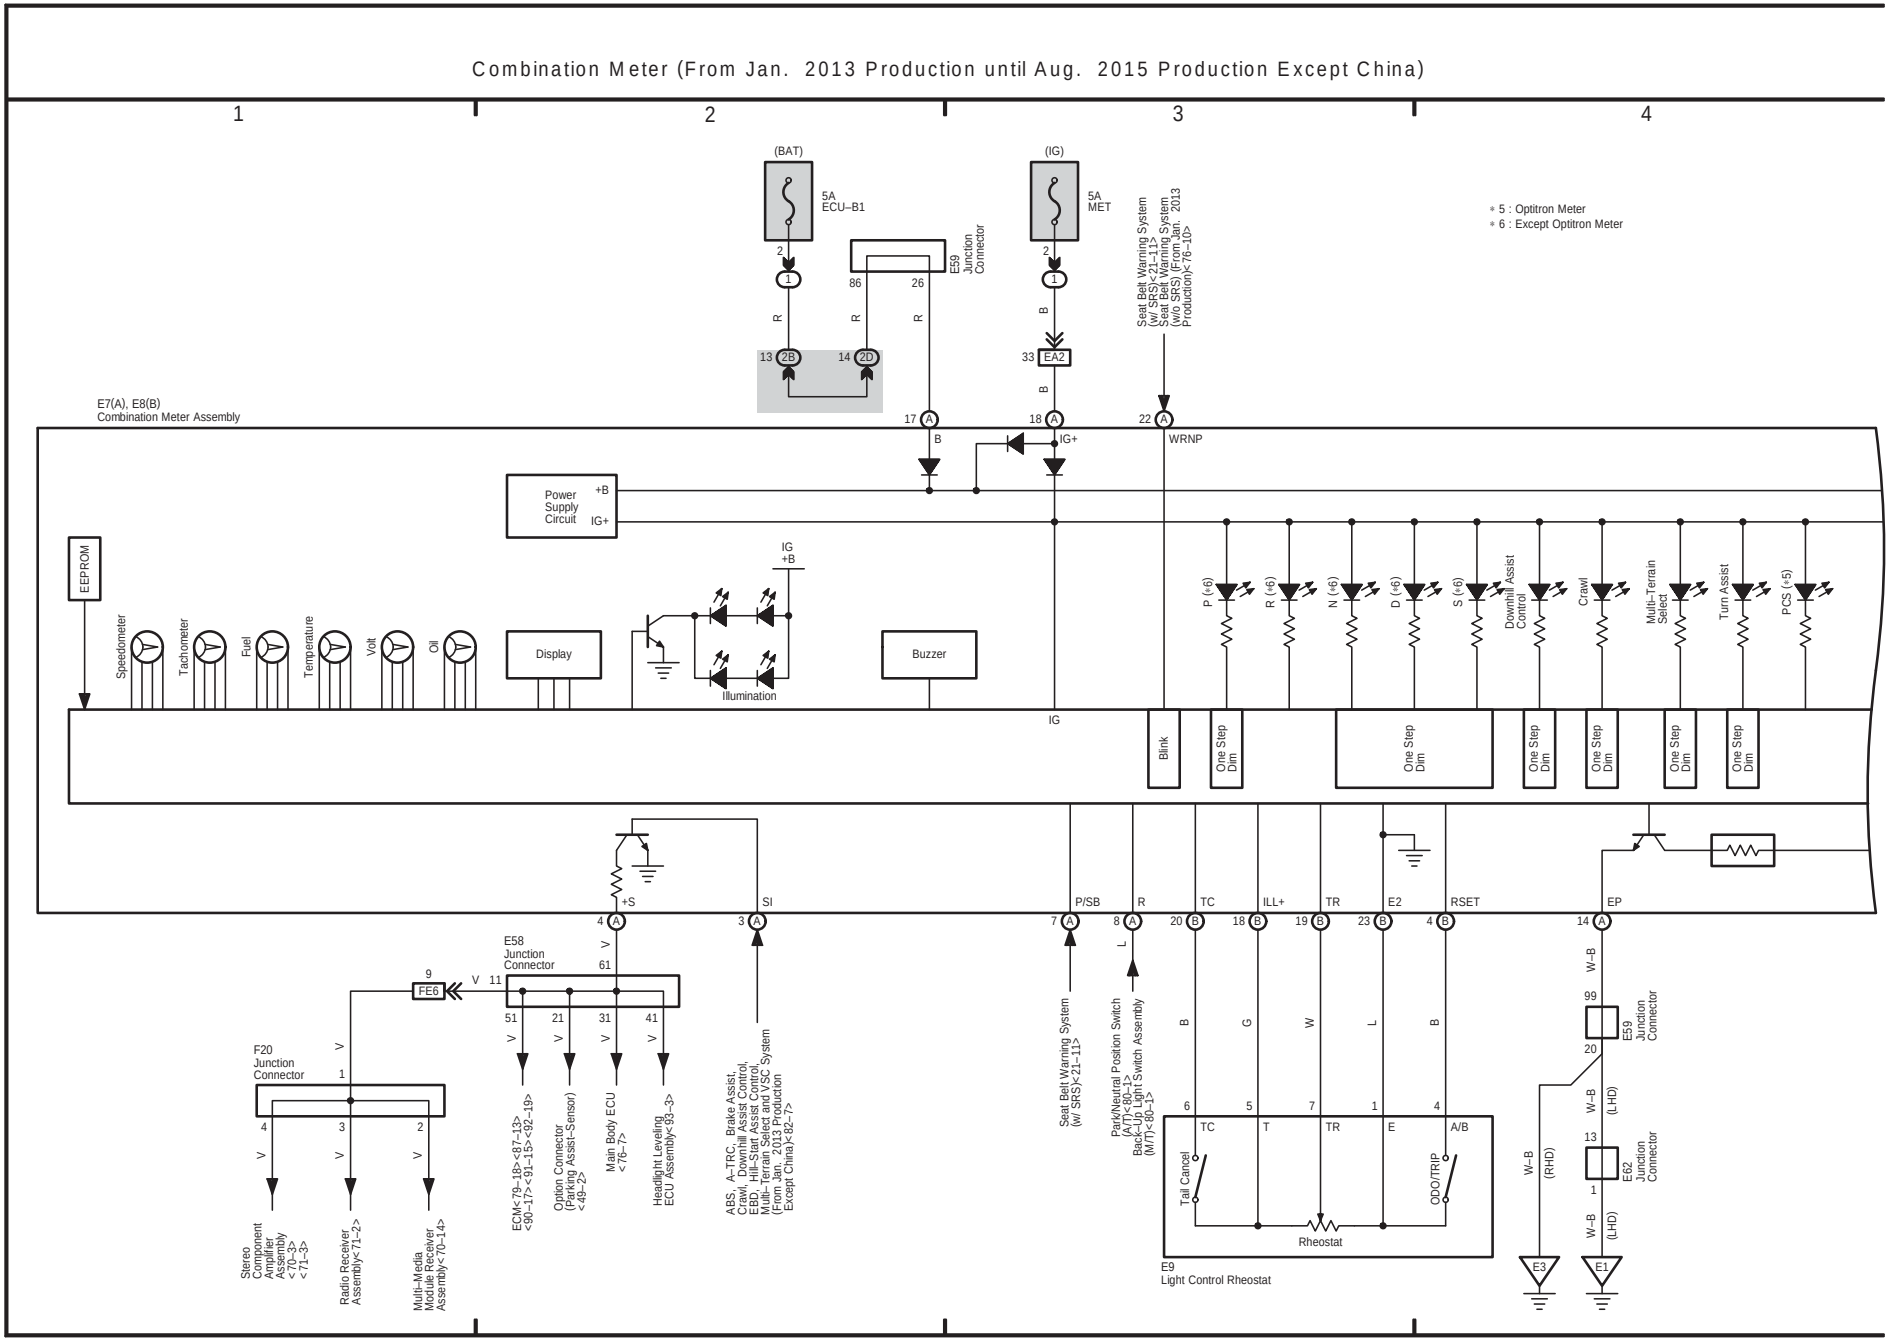

(Cont. next page)

Combination Meter (From Jan. 2013 Production until Aug. 2015 Production Except China)

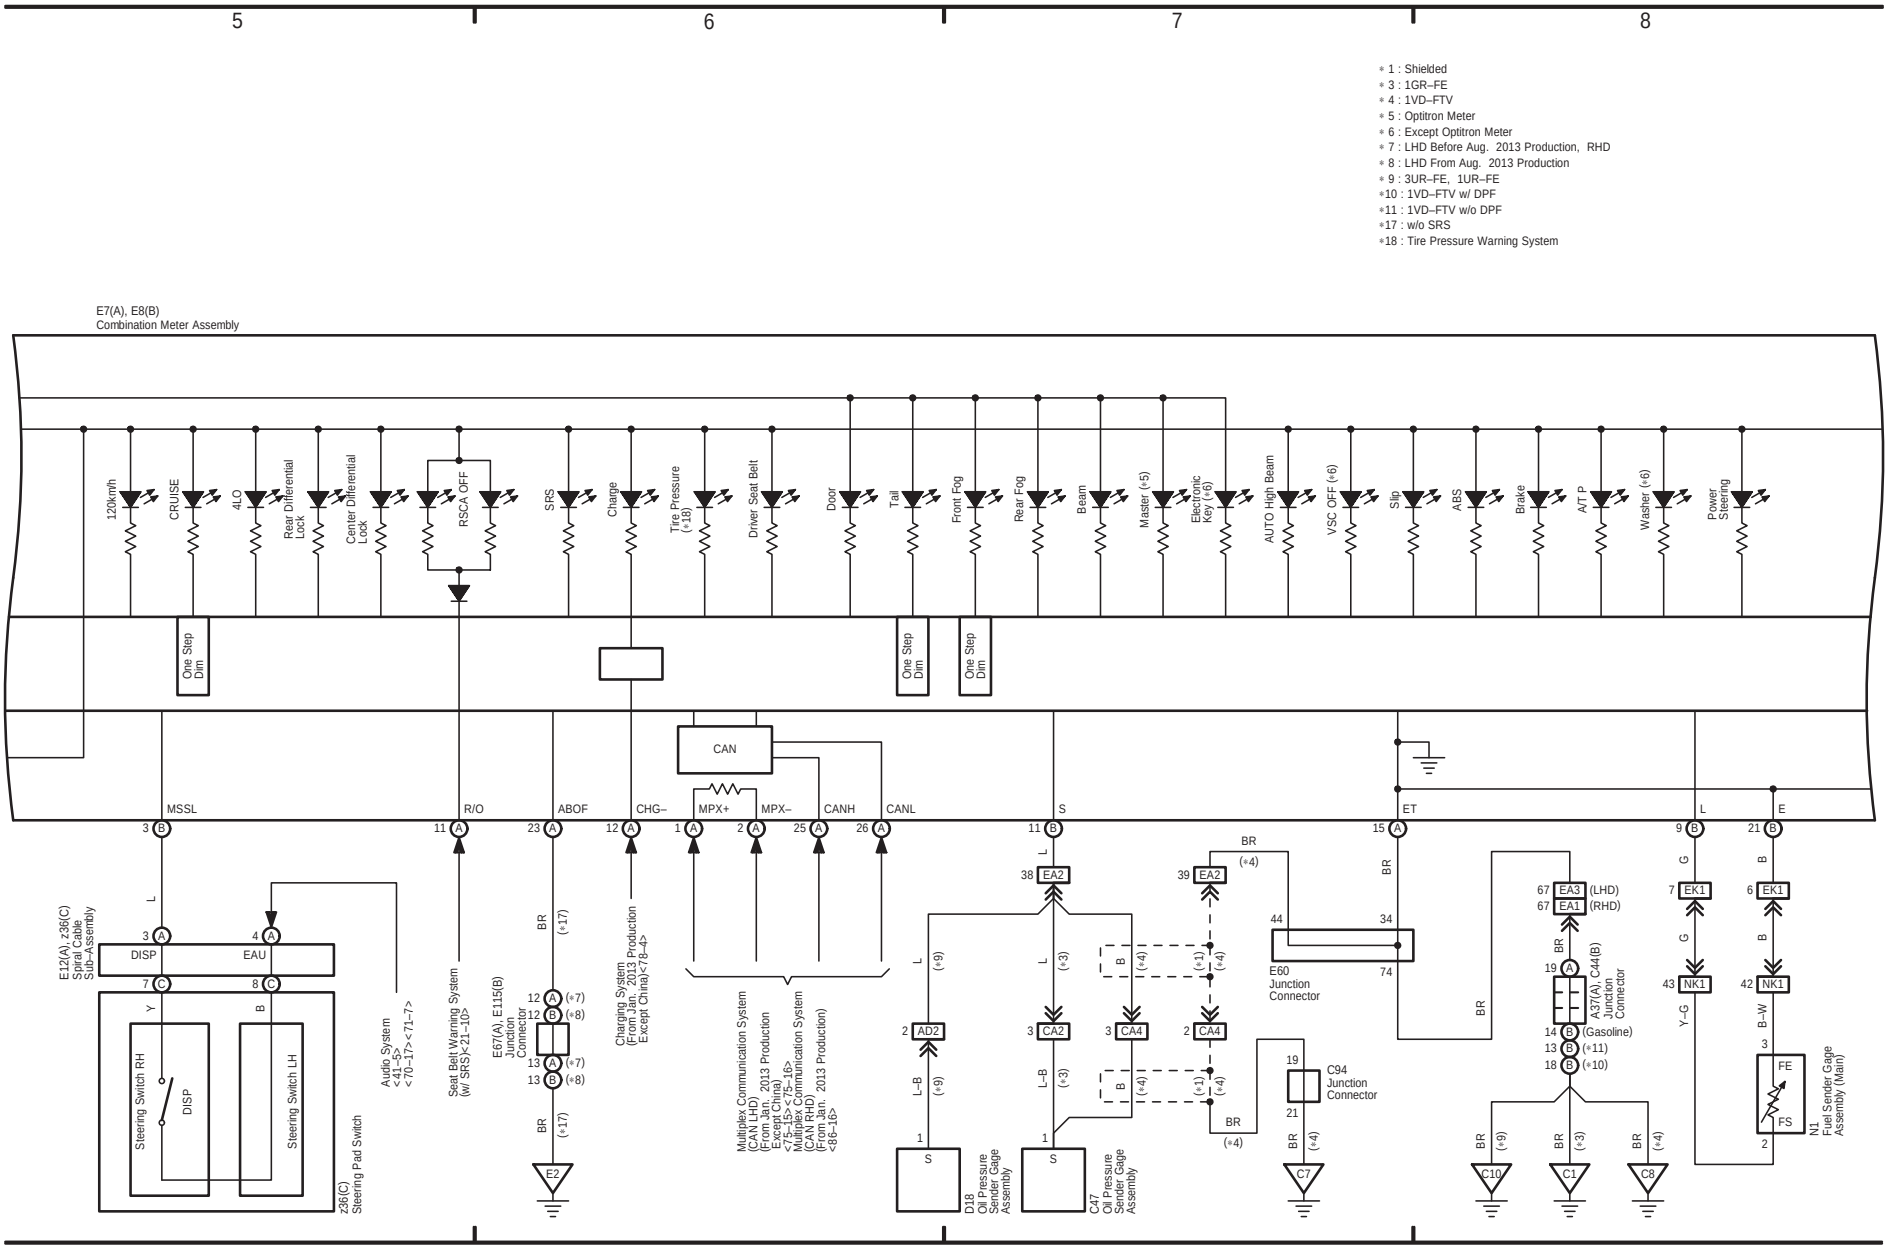

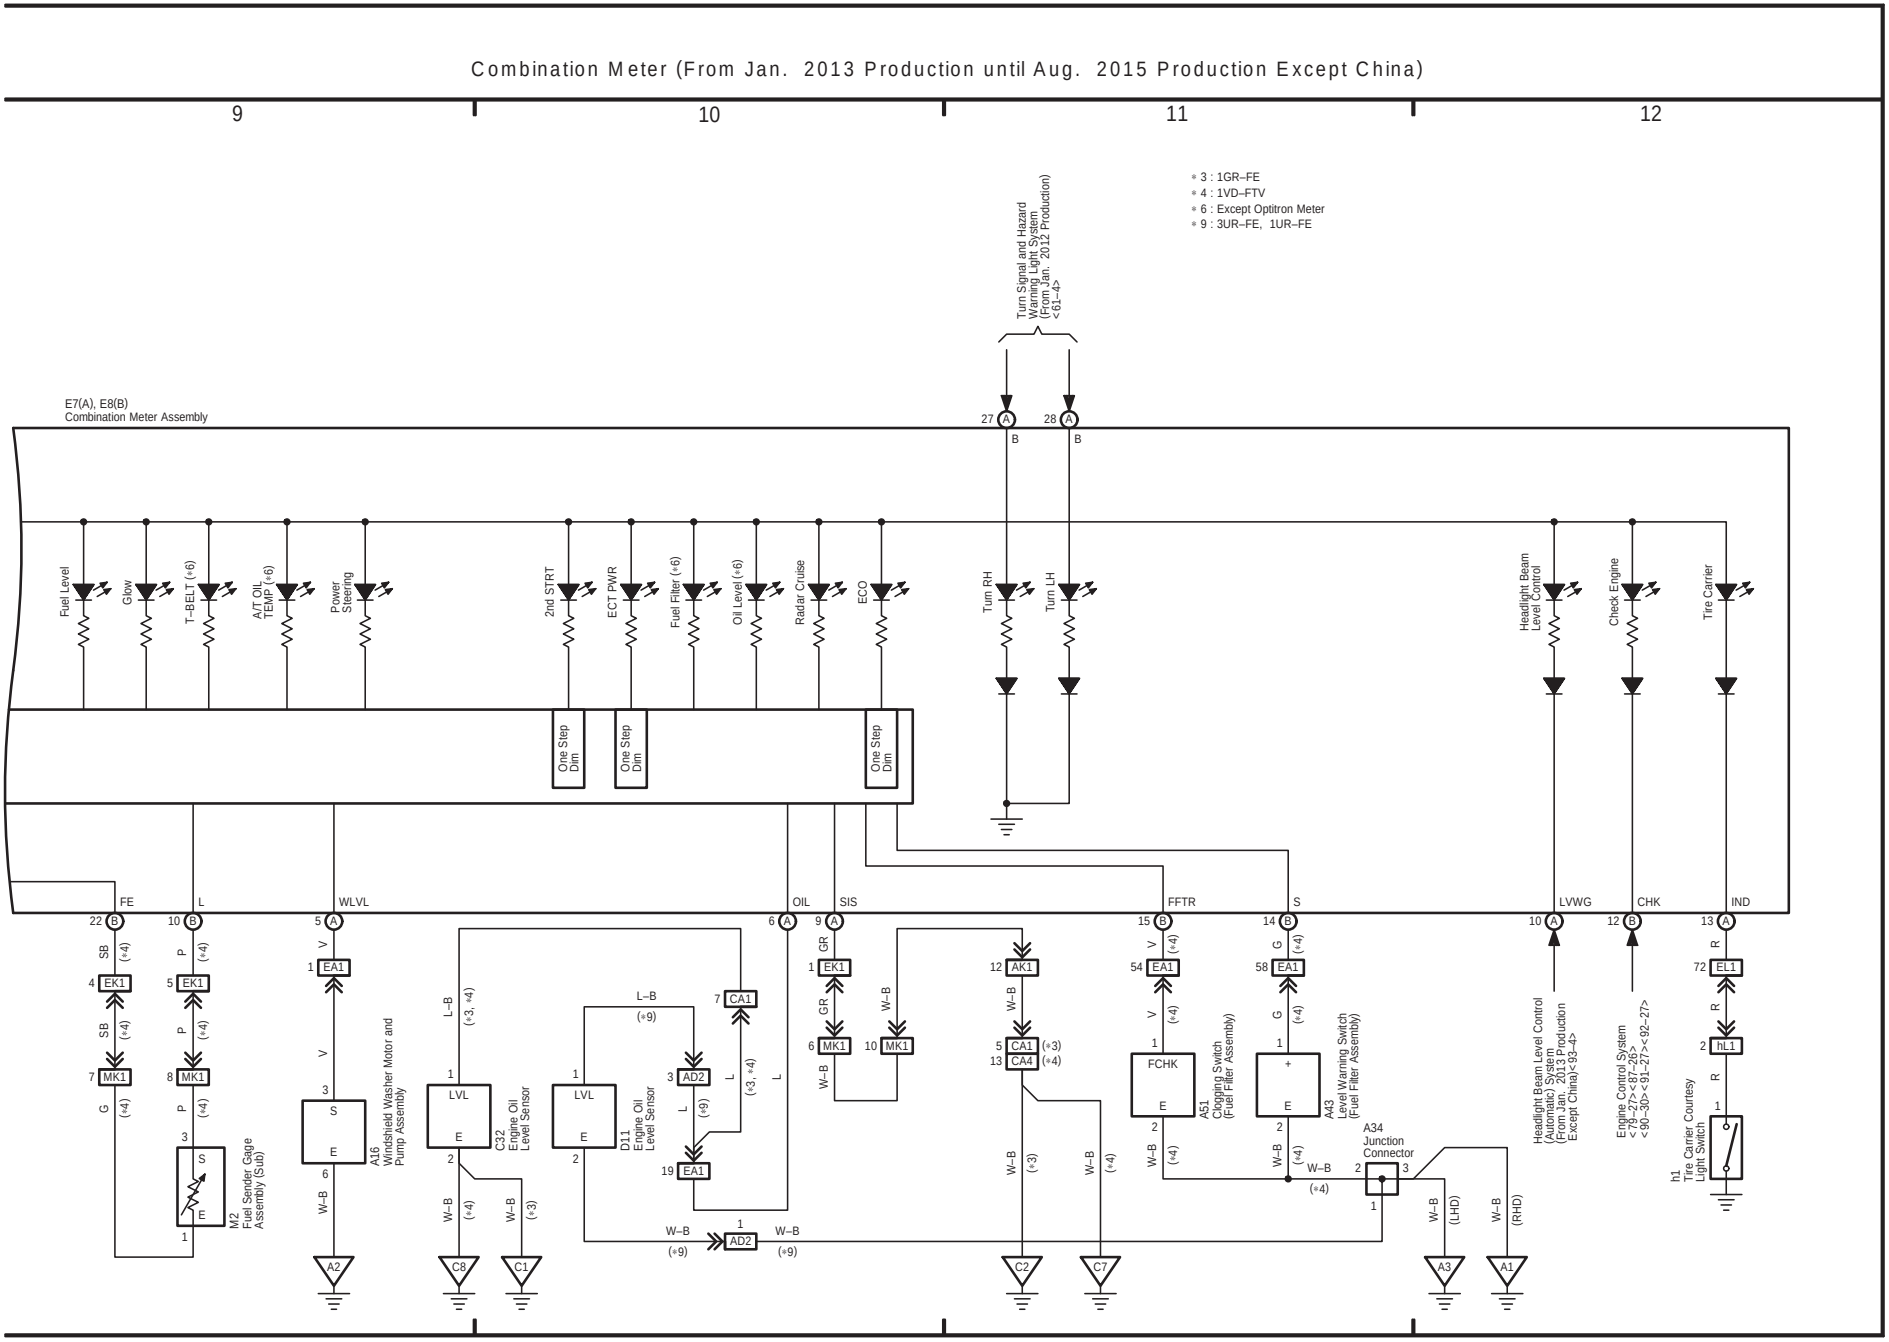
Combination Meter (From Jan. 2013 Production until Aug. 2015 Production Except China)
9
10
11
12
* 3 : 1GR–FE
* 4 : 1VD–FTV
* 6 : Except Optitron Meter
* 9 : 3UR–FE, 1UR–FE
Turn Signal and Hazard Warning Light System (From Jan. 2012 Production) <61–4>
E7(A), E8(B) Combination Meter Assembly
27 A B
28 A B
Fuel Level
Glow
T–BELT (*6)
A/T Oil TEMP (*6)
Power Steering
2nd STRT
ECT PWR
Fuel Filter (*6)
Oil Level (*6)
Radar Cruise
ECO
Turn RH
Turn LH
Headlight Beam Level Control
Check Engine
Tire Carrier
One Step Dim
FE
L
WLVL
OIL
SIS
FFTR
S
LVWG
CHK
IND
M12 Fuel Sender Gage Assembly (Sub)
A16 Windshield Washer Motor and Pump Assembly
C32 Engine Oil Level Sensor
D11 Engine Oil Level Sensor
A51 Charging Switch (Fuel Filter Assembly)
A43 Level Warning Switch (Fuel Filter Assembly)
A34 Junction Connector
Headlight Beam Level Control (Automatic) System (From Jan. 2013 Production Except China)<93–4>
Engine Control System <79–27><87–28> <90–30><91–27><92–27>
h1 Tire Carrier Light Switch
A2
C8
C1
C2
C7
A3
A1