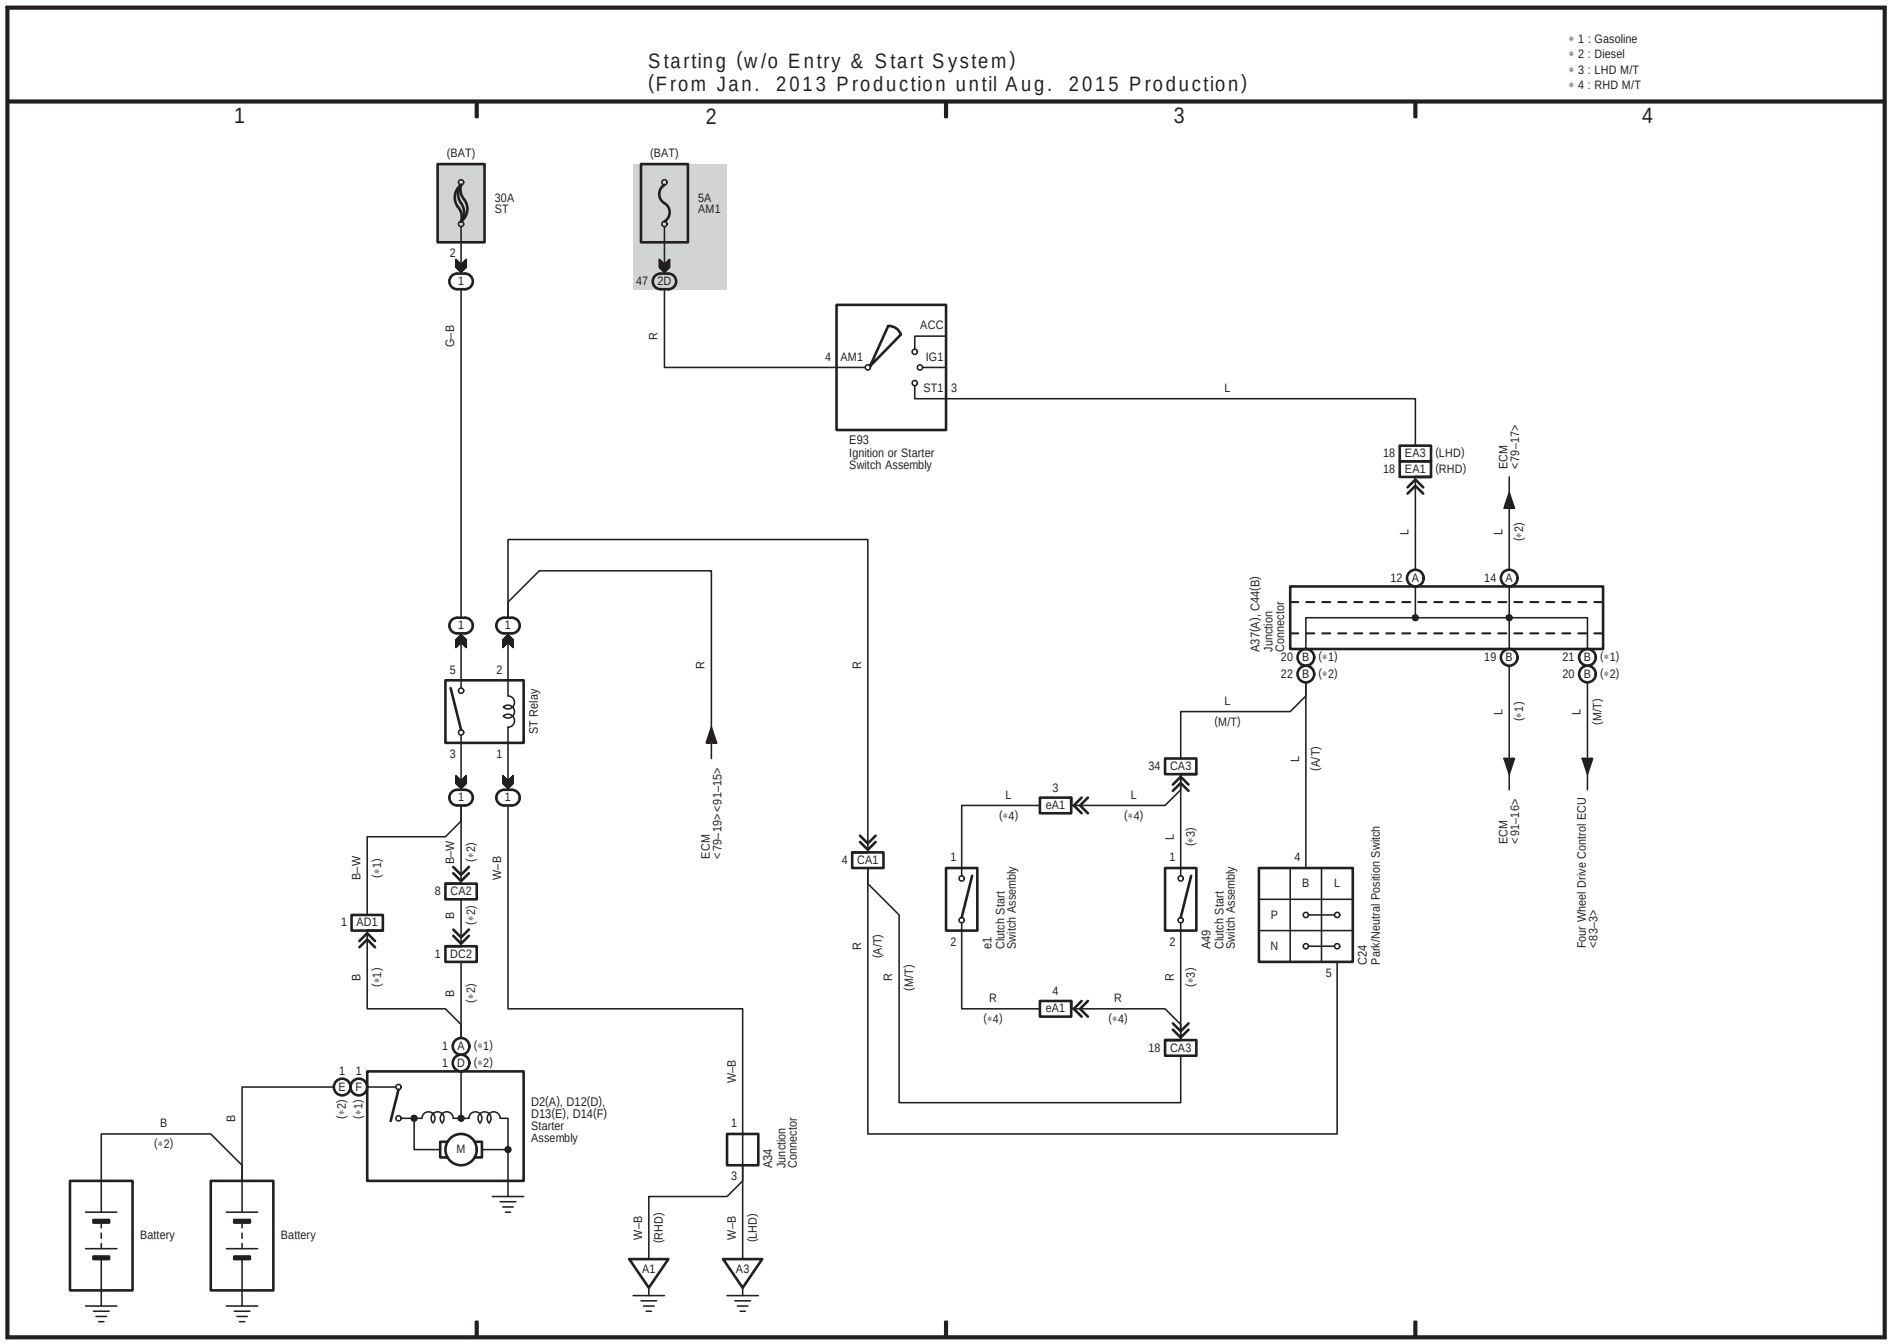

Starting (w/o Entry & Start System)
(From Jan. 2013 Production until Aug. 2015 Production)
* 1 : Gasoline
* 2 : Diesel
* 3 : LHD M/T
* 4 : RHD M/T
1
2
3
4
(BAT)
30A ST
5A AM1
ACC
IG1
ST1
AM1
E93 Ignition or Starter Switch Assembly
ST Relay
ECM <79–19><91–15>
ECM <79–17>
ECM <91–16>
A37(A), C44(B) Junction Connector
Four Wheel Drive Control ECU <83–3>
e1 Clutch Start Switch Assembly
A49 Clutch Start Switch Assembly
C24 Park/Neutral Position Switch
D2(A), D12(D), D13(E), D14(F) Starter Assembly
A34 Junction Connector
Battery
Battery
A1
A3
(LHD)
(RHD)
(A/T)
(M/T)