

(Cont. next page)

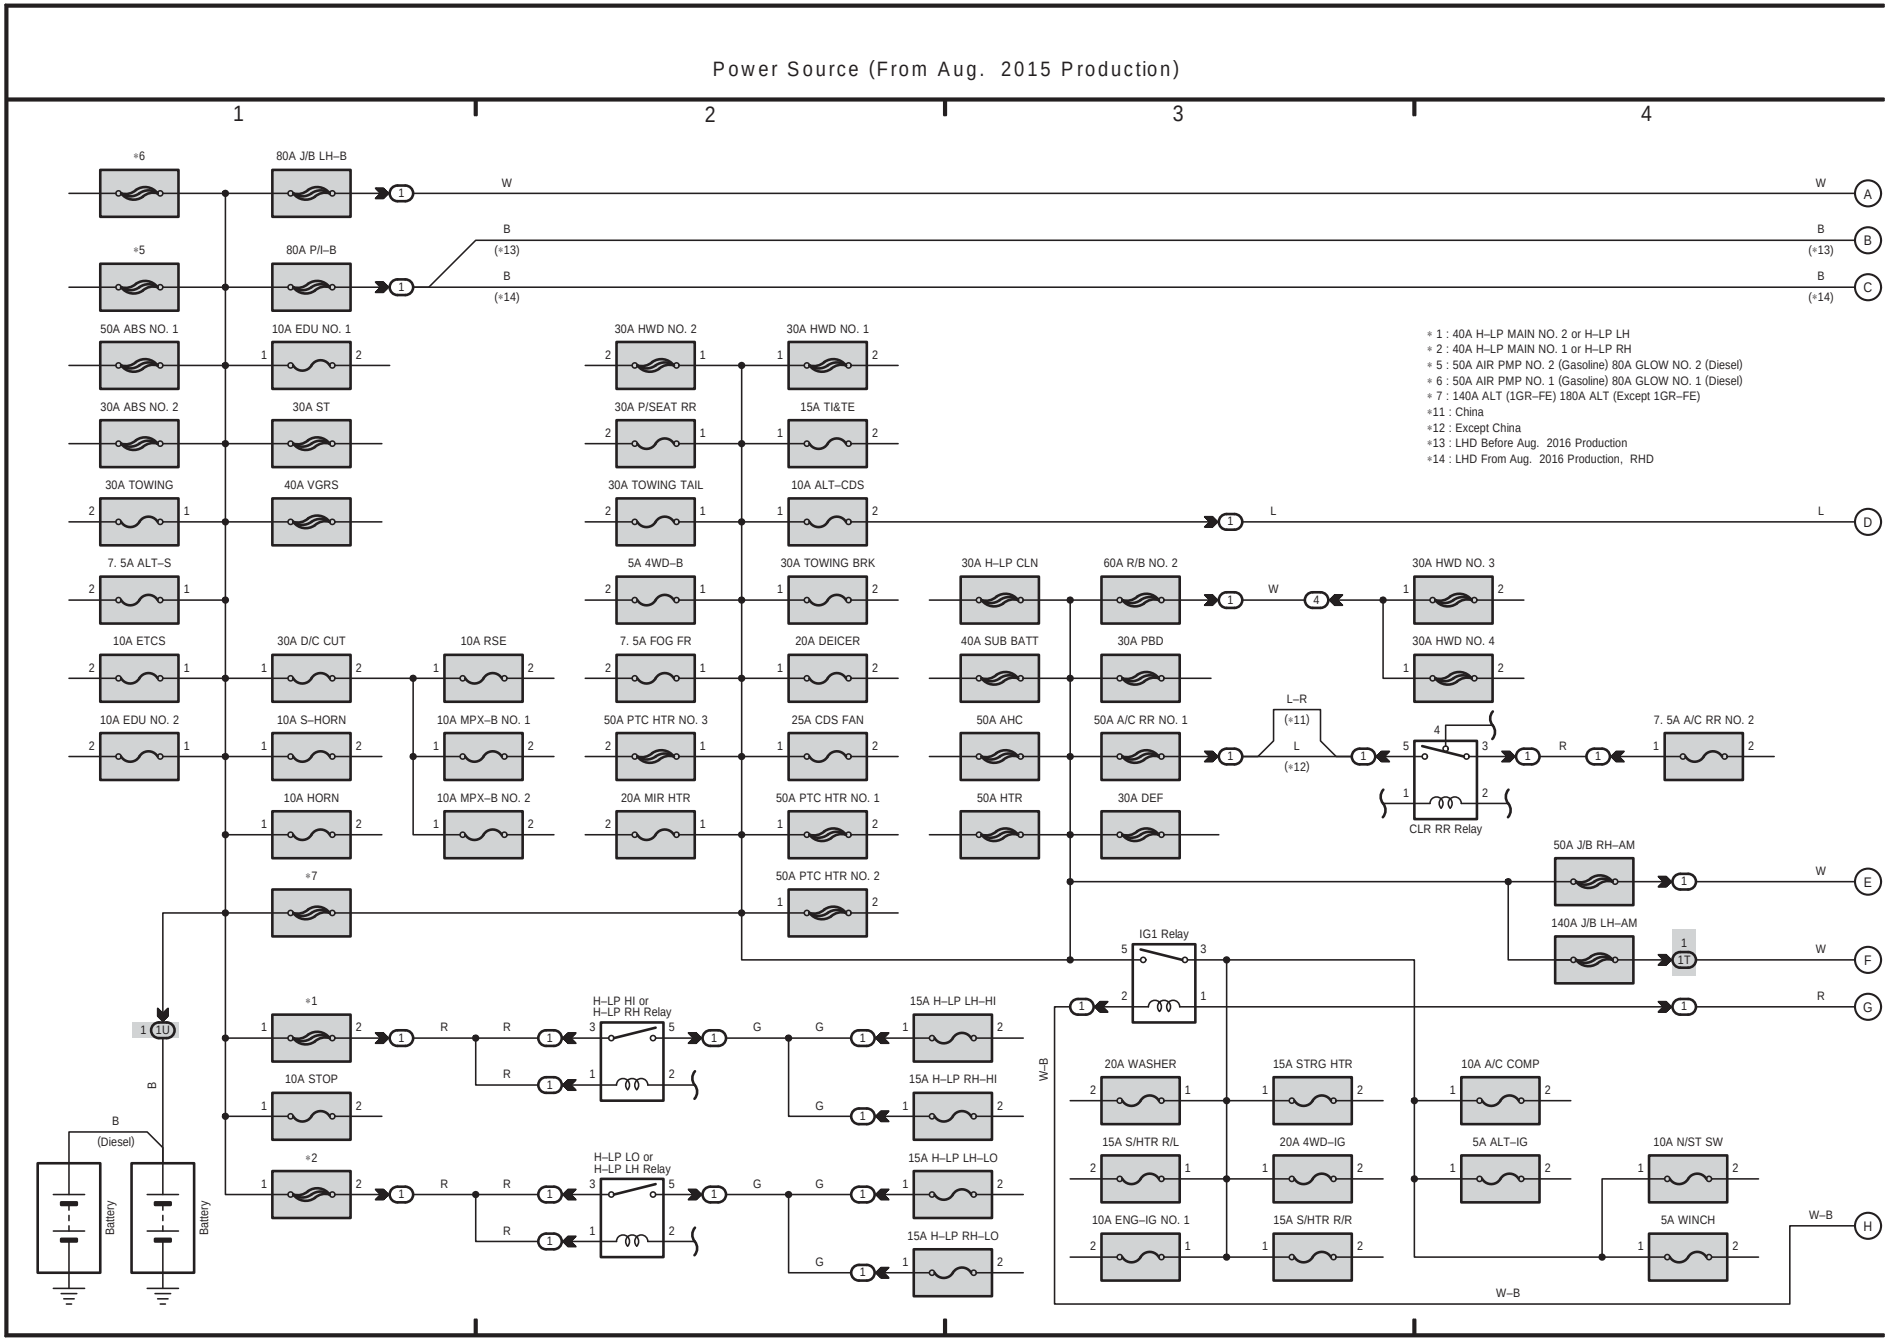

(Cont. next page)

Power Source (From Aug. 2015 Production)


∗ 3 : w/ Entry & Start System
∗ 4 : w/o Entry & Start System
∗13 : LHD Before Aug. 2016 Production
∗14 : LHD From Aug. 2016 Production, RHD

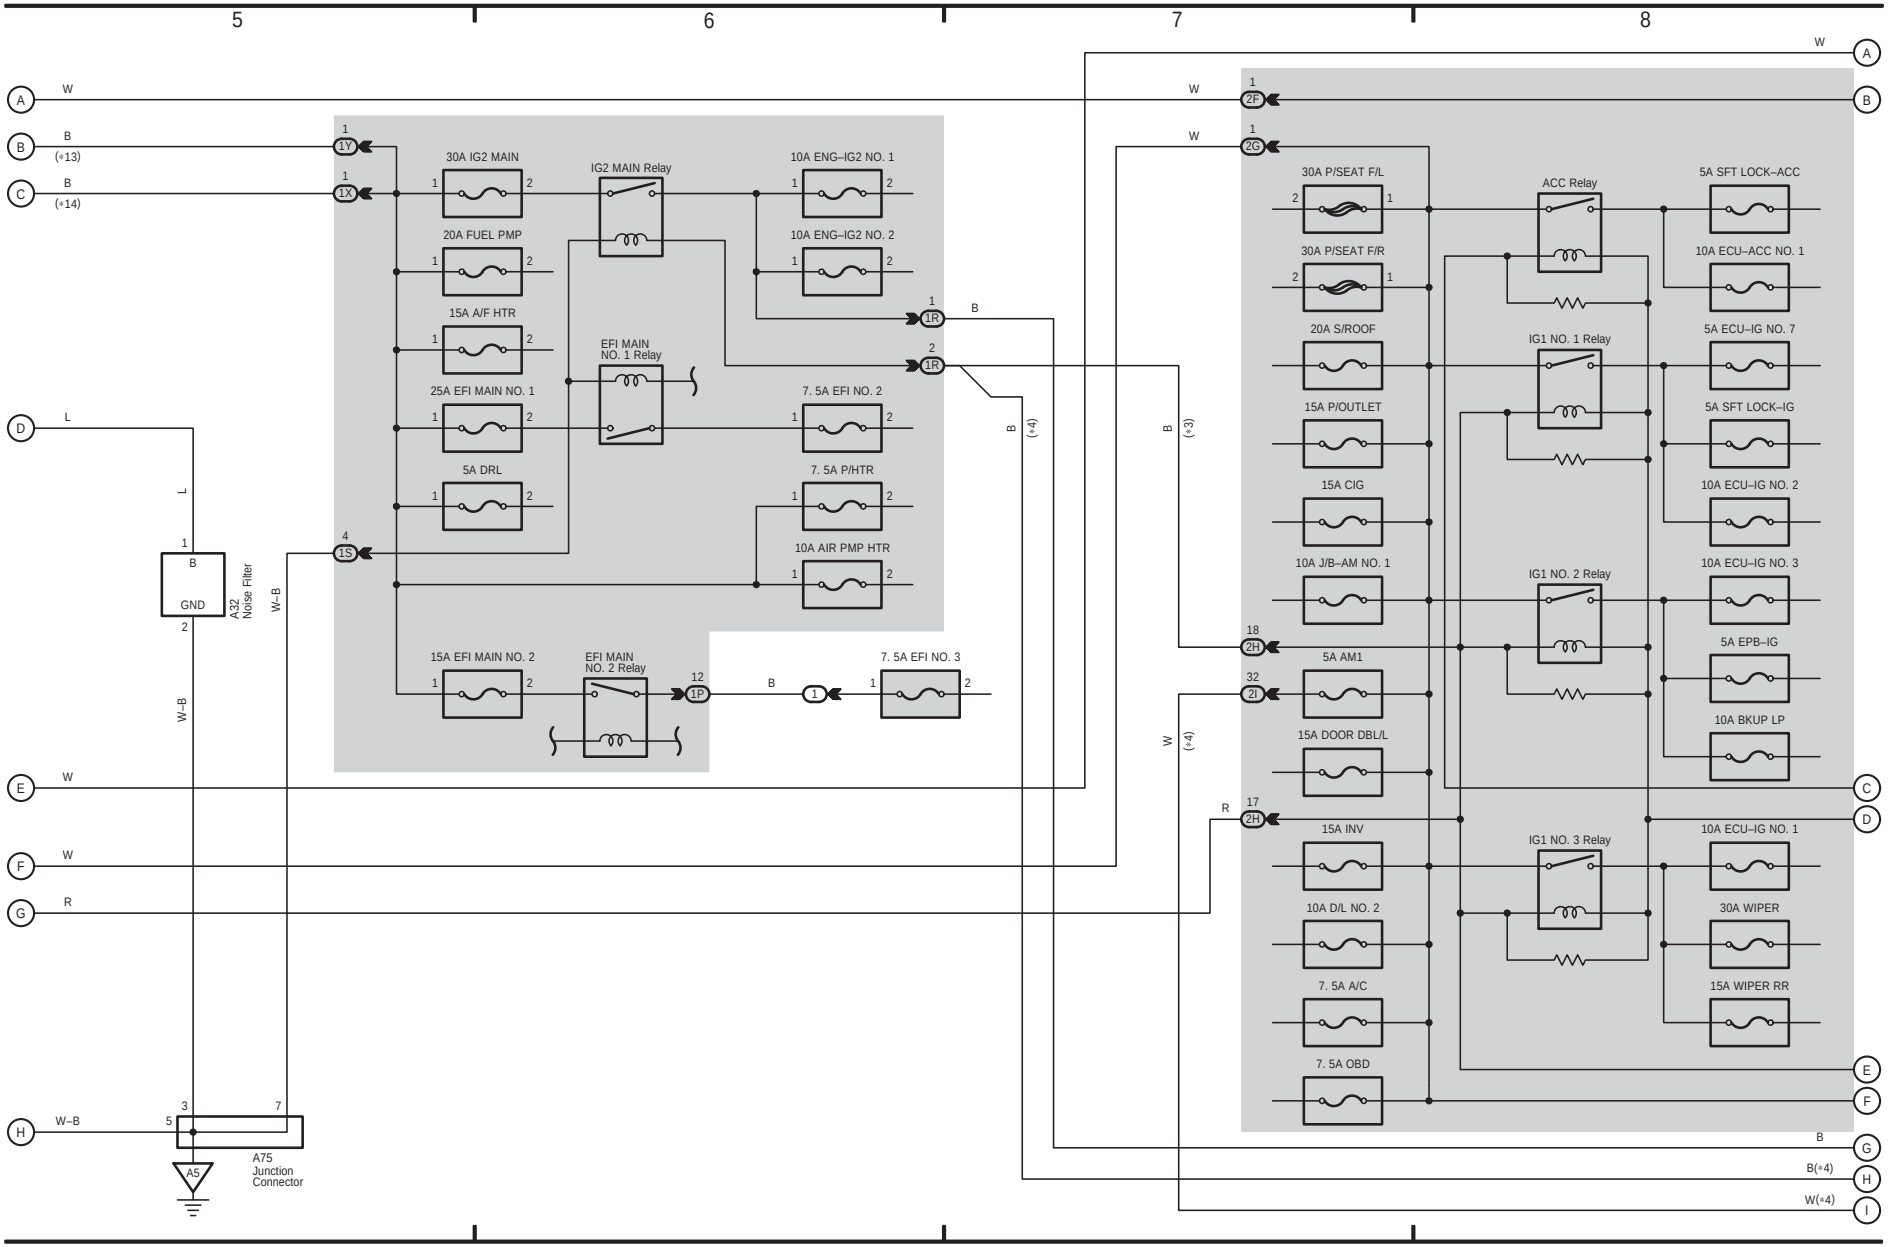


M

(Cont. next page)

Power Source (From Aug. 2015 Production)

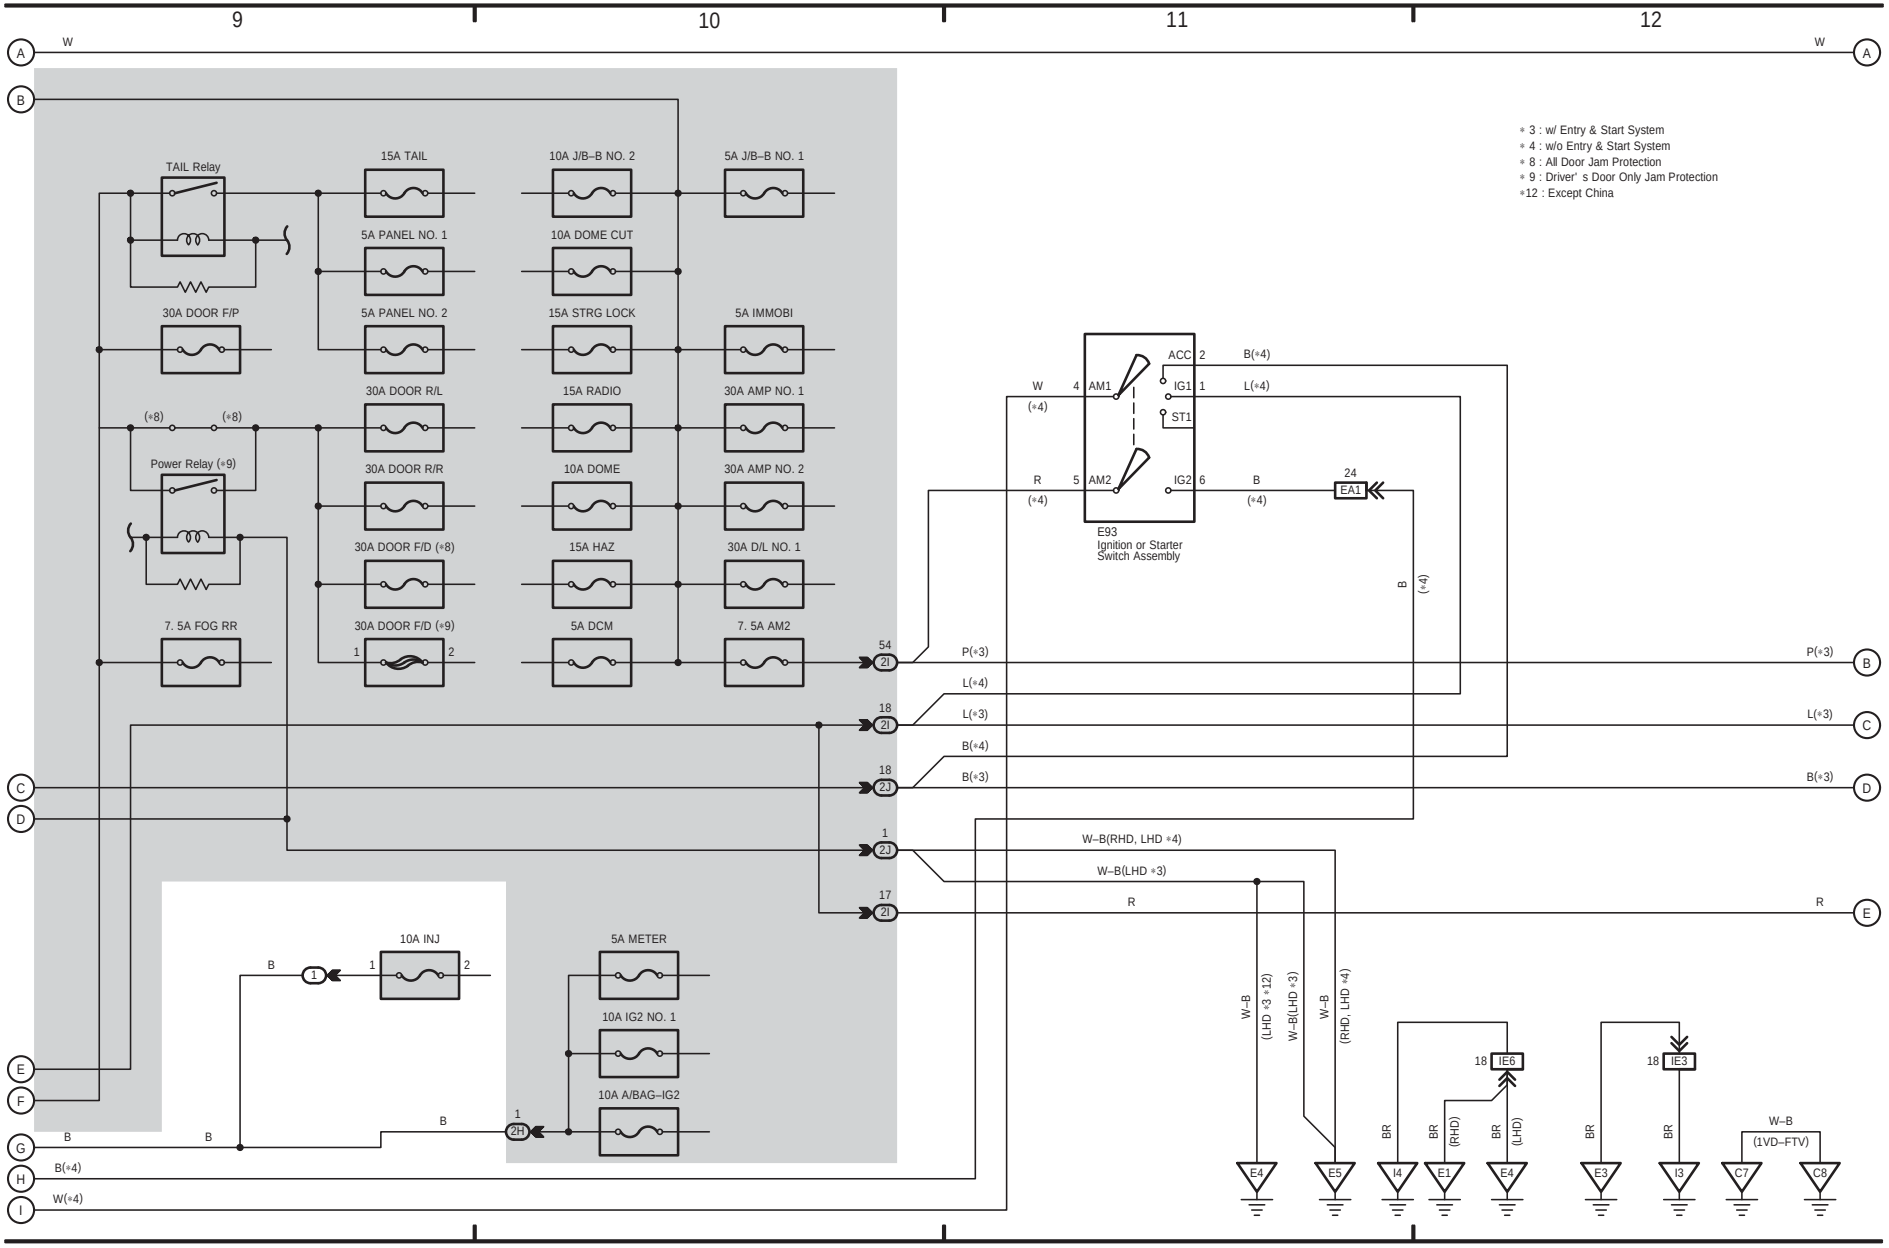

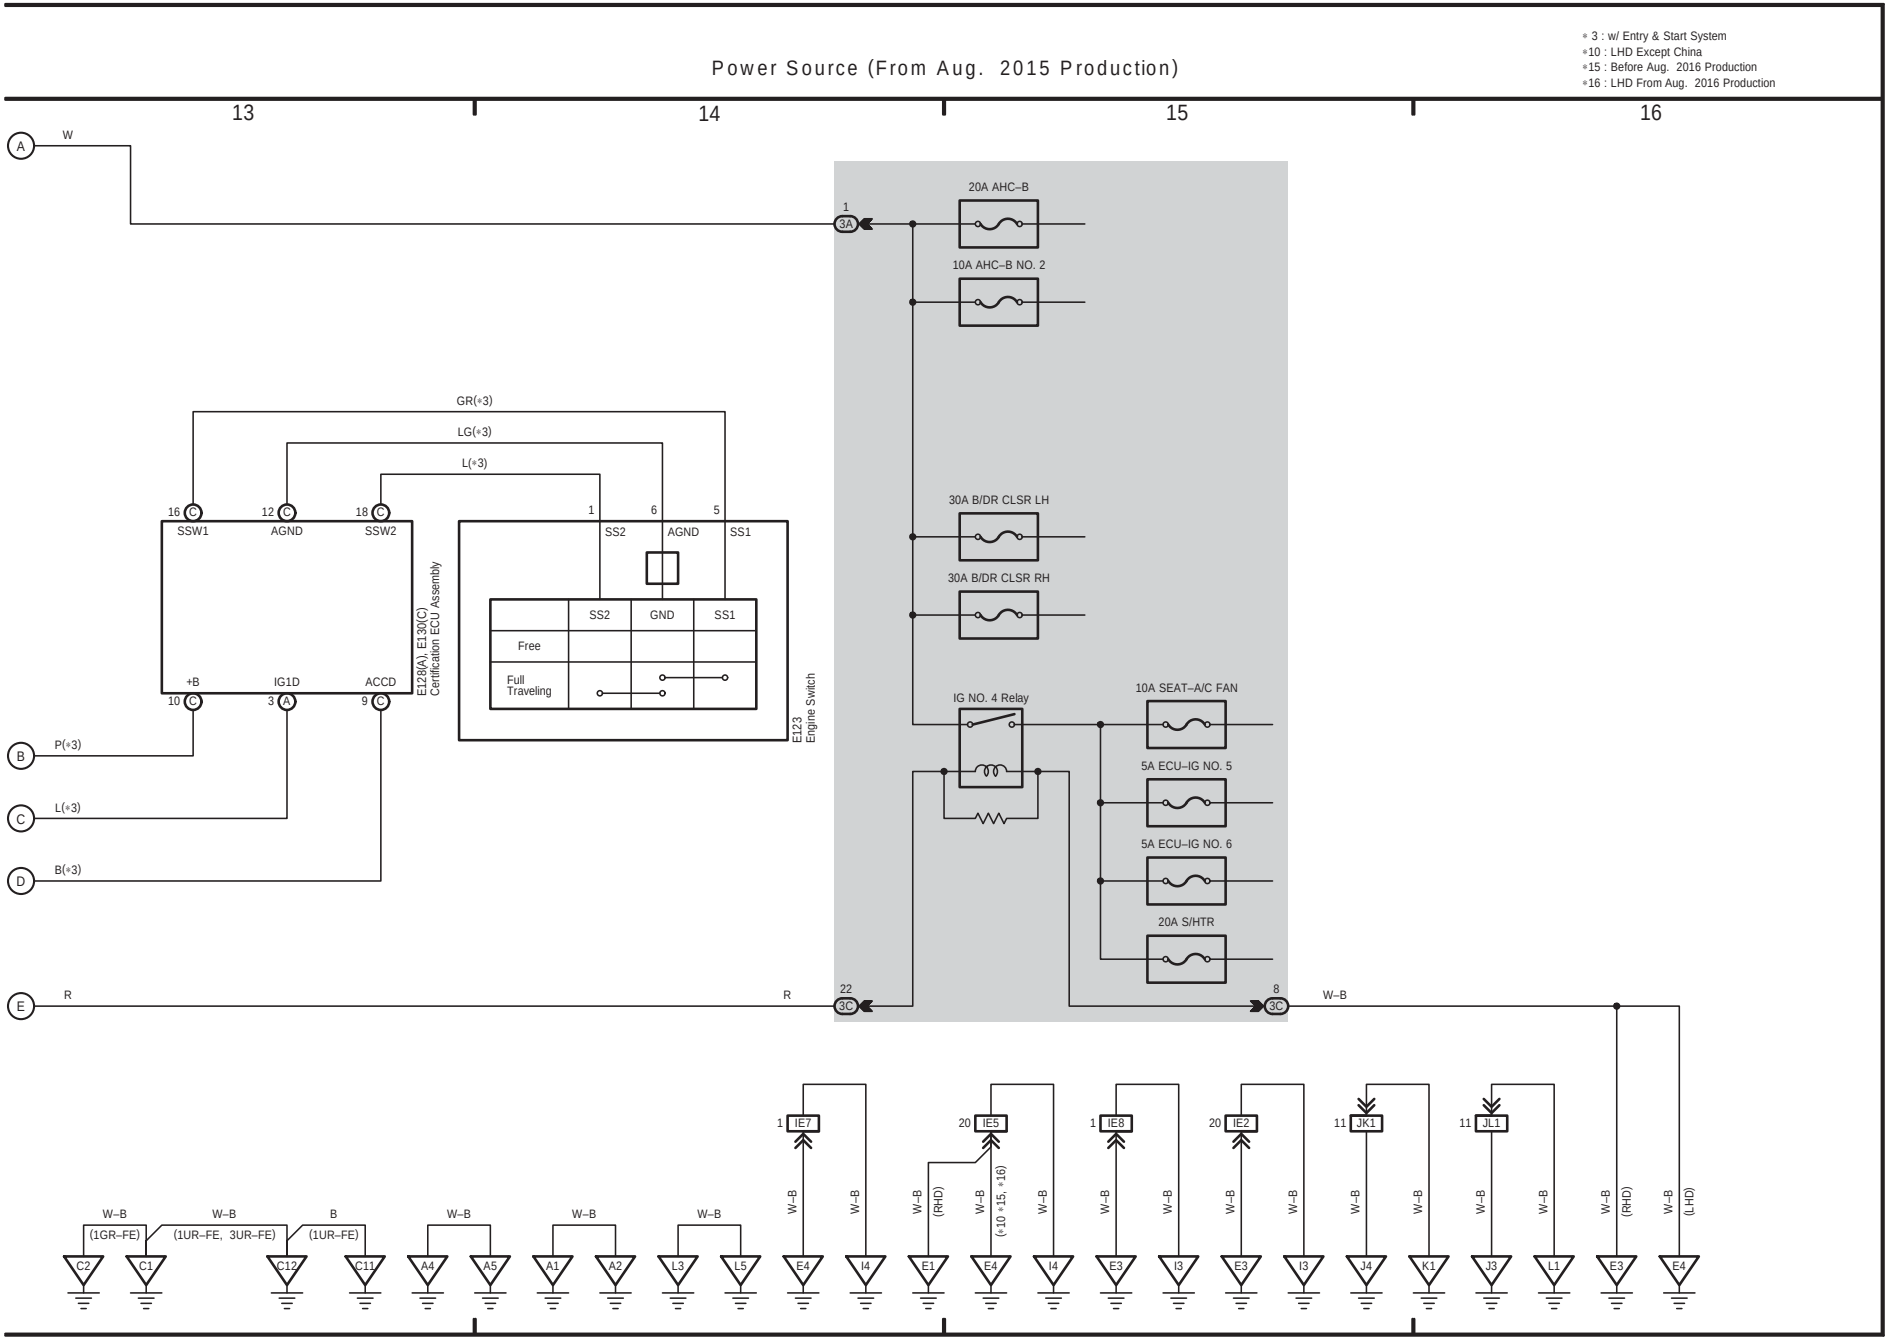
∗3 : w/ Entry & Start System
∗10 : LHD Except China
∗15 : Before Aug. 2016 Production
∗16 : LHD From Aug. 2016 Production
Power Source (From Aug. 2015 Production)
13
14
15
16
20A AHC–B
10A AHC–B NO. 2
30A B/DR CLSR LH
30A B/DR CLSR RH
IG NO. 4 Relay
10A SEAT–A/C FAN
5A ECU–IG NO. 5
5A ECU–IG NO. 6
20A S/HTR
GR(∗3)
LG(∗3)
L(∗3)
P(∗3)
B(∗3)
R
W–B
SSW1
AGND
SSW2
SS2
AGND
SS1
+B
IG1D
ACCD
Free
Full Traveling
E128(A), E130(C) Certification ECU Assembly
E123 Engine Switch
(1GR–FE)
(1UR–FE, 3UR–FE)
(1UR–FE)
(RHD)
(∗10) ∗15, ∗16)
(LHD)

M