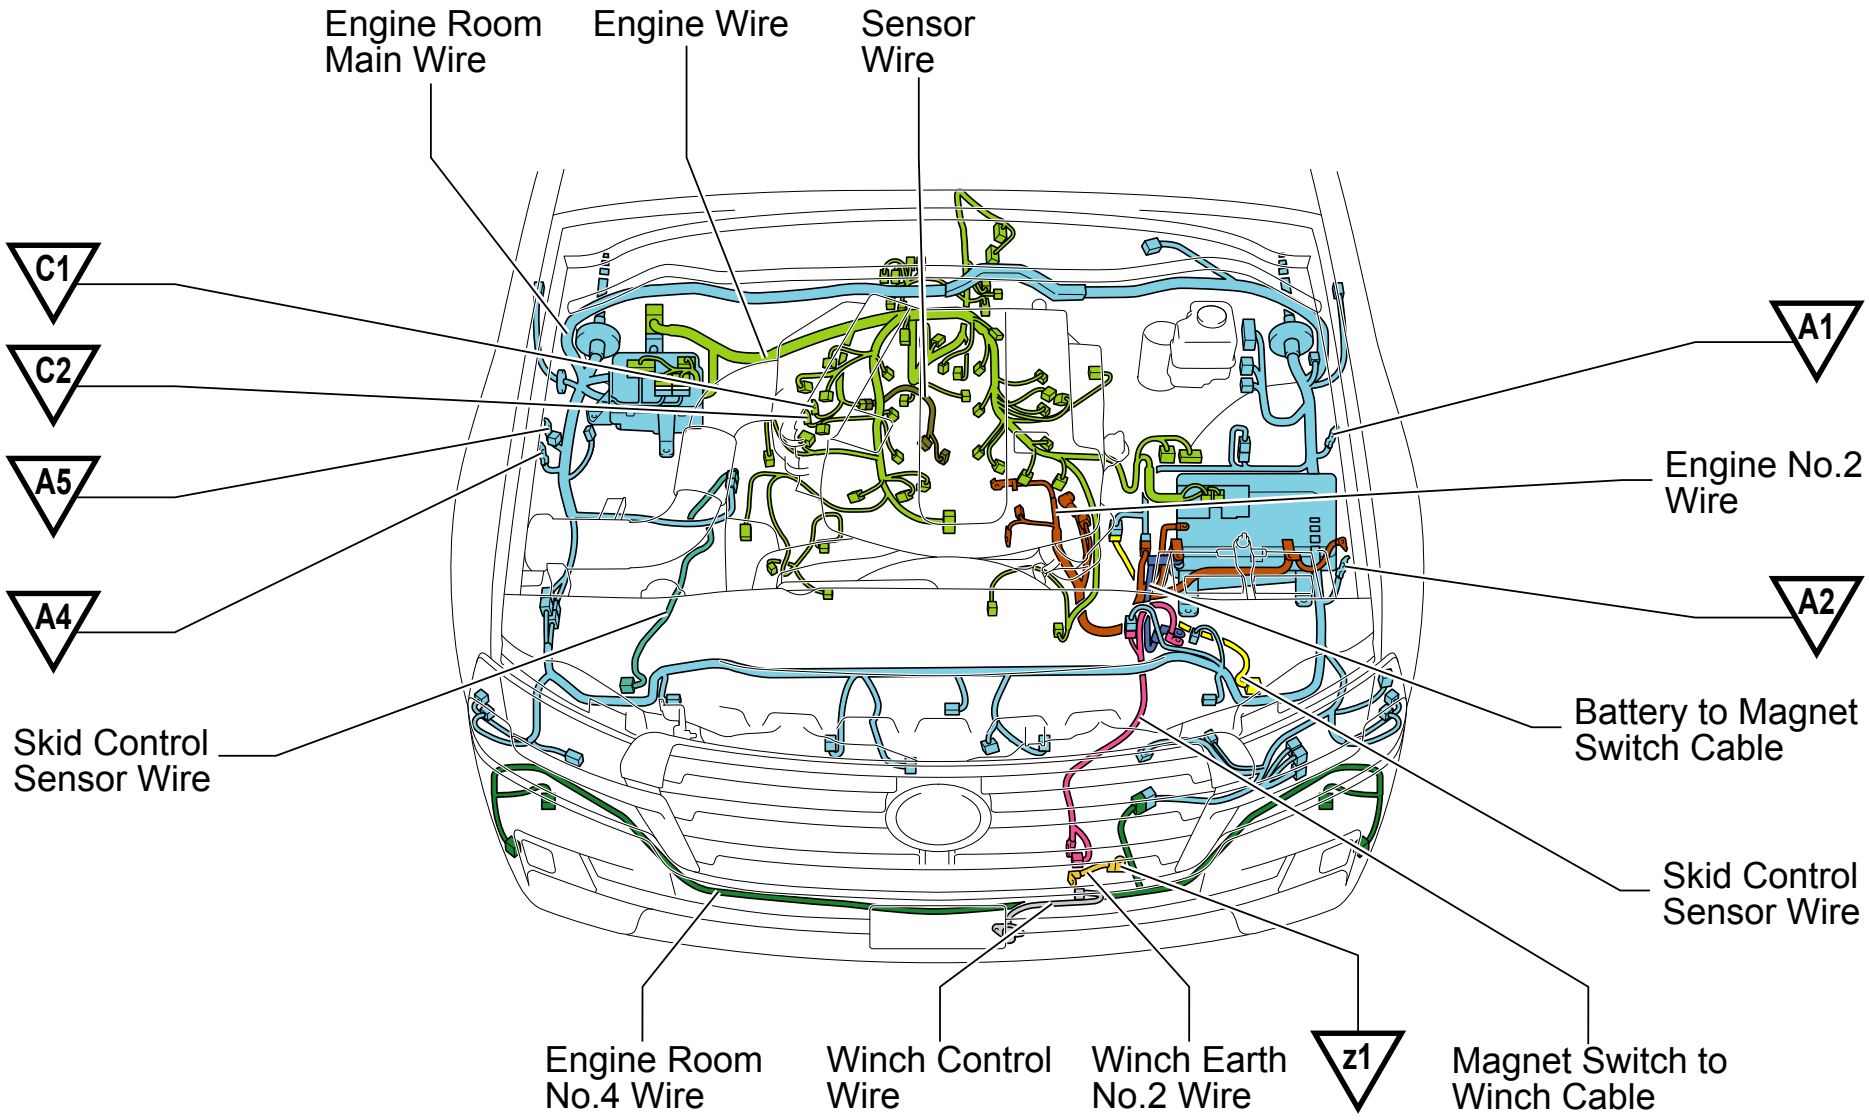

Engine Room Main Wire
Engine Wire
Sensor Wire
C1
C2
A5
A4
Skid Control Sensor Wire
A1
Engine No.2 Wire
A2
Battery to Magnet Switch Cable
Skid Control Sensor Wire
Engine Room No.4 Wire
Winch Control Wire
Winch Earth No.2 Wire
Z1
Magnet Switch to Winch Cable