



C171
C138
C122
C55
C140
C61
C60
C121
C130
C137
C139
C59
C169
C170

C 55 Purge VSV
C 59 Power Steering Oil Pressure Sensor
C 60 Air Injection Control Driver
C 61 Air Injection Control Driver
C 121 VVT Sensor (Bank 1 Exhaust Side)
C 122 VVT Sensor (Bank 2 Exhaust Side)
C 130 Ignition Coil Assembly No.3
C 137 Air Switching Valve (Bank 1)
C 138 Air Switching Valve (Bank 2)
C 139 Air Pump Assembly
C 140 Ignition Coil Assembly No.4
C 169 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
C 170 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
C 171 Electronically Controlled Transmission Solenoid


C 55
Black

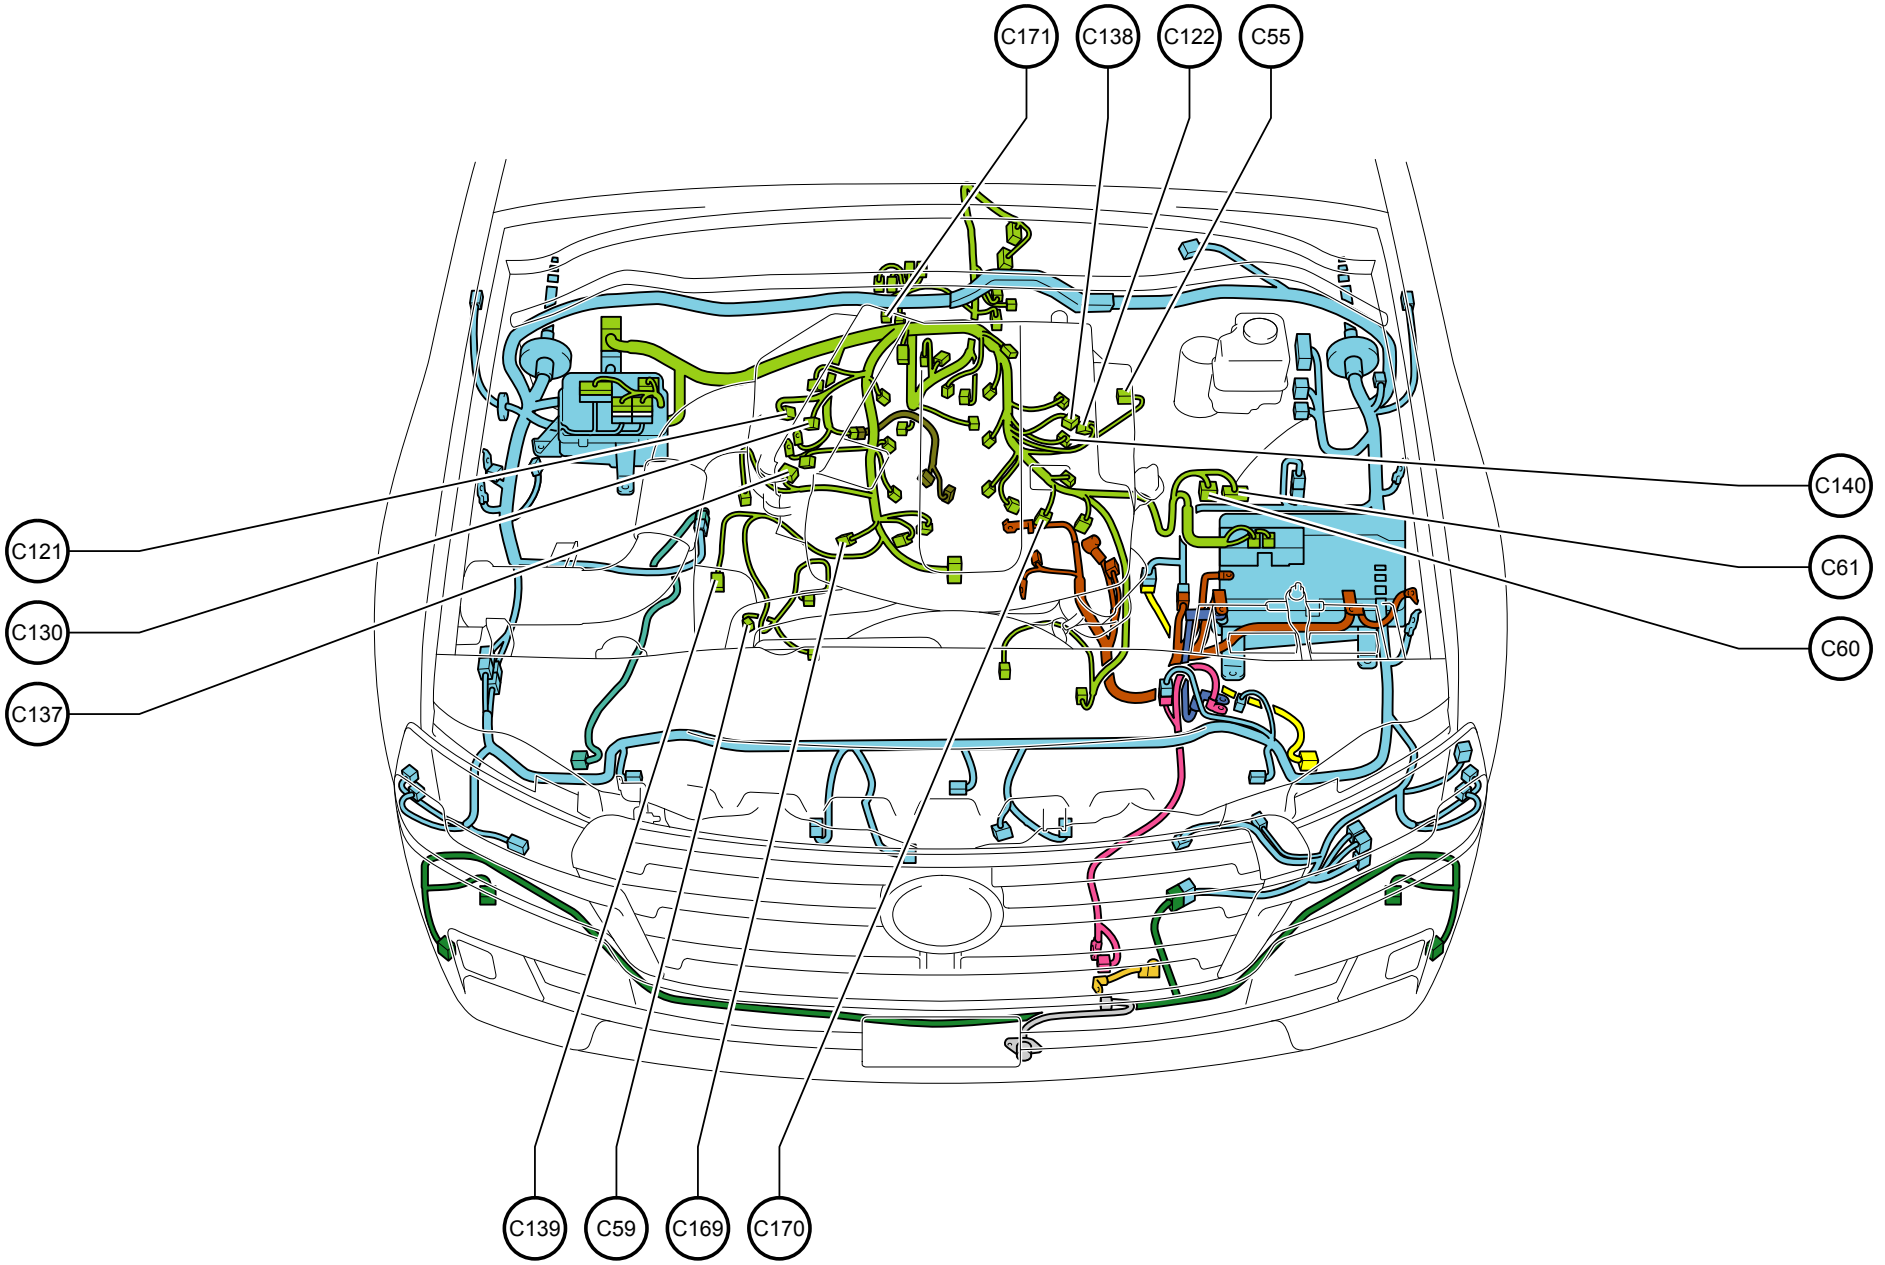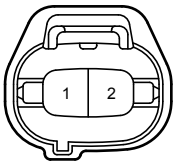


C 59
Gray

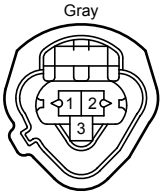


C 60
Black

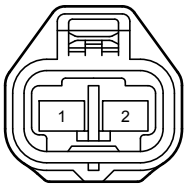


C 61
Black

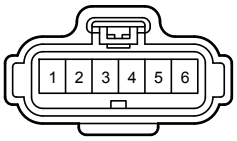


C121
Black

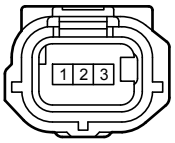


C122
Black

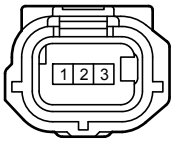


C130
Gray

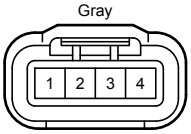


C137
Black

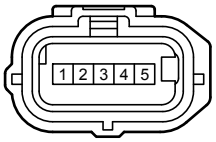


C138
Black

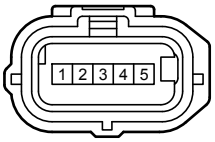

C139
Black

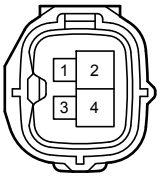

C140
Gray



C169
Gray



C170
Gray



C171
Gray

