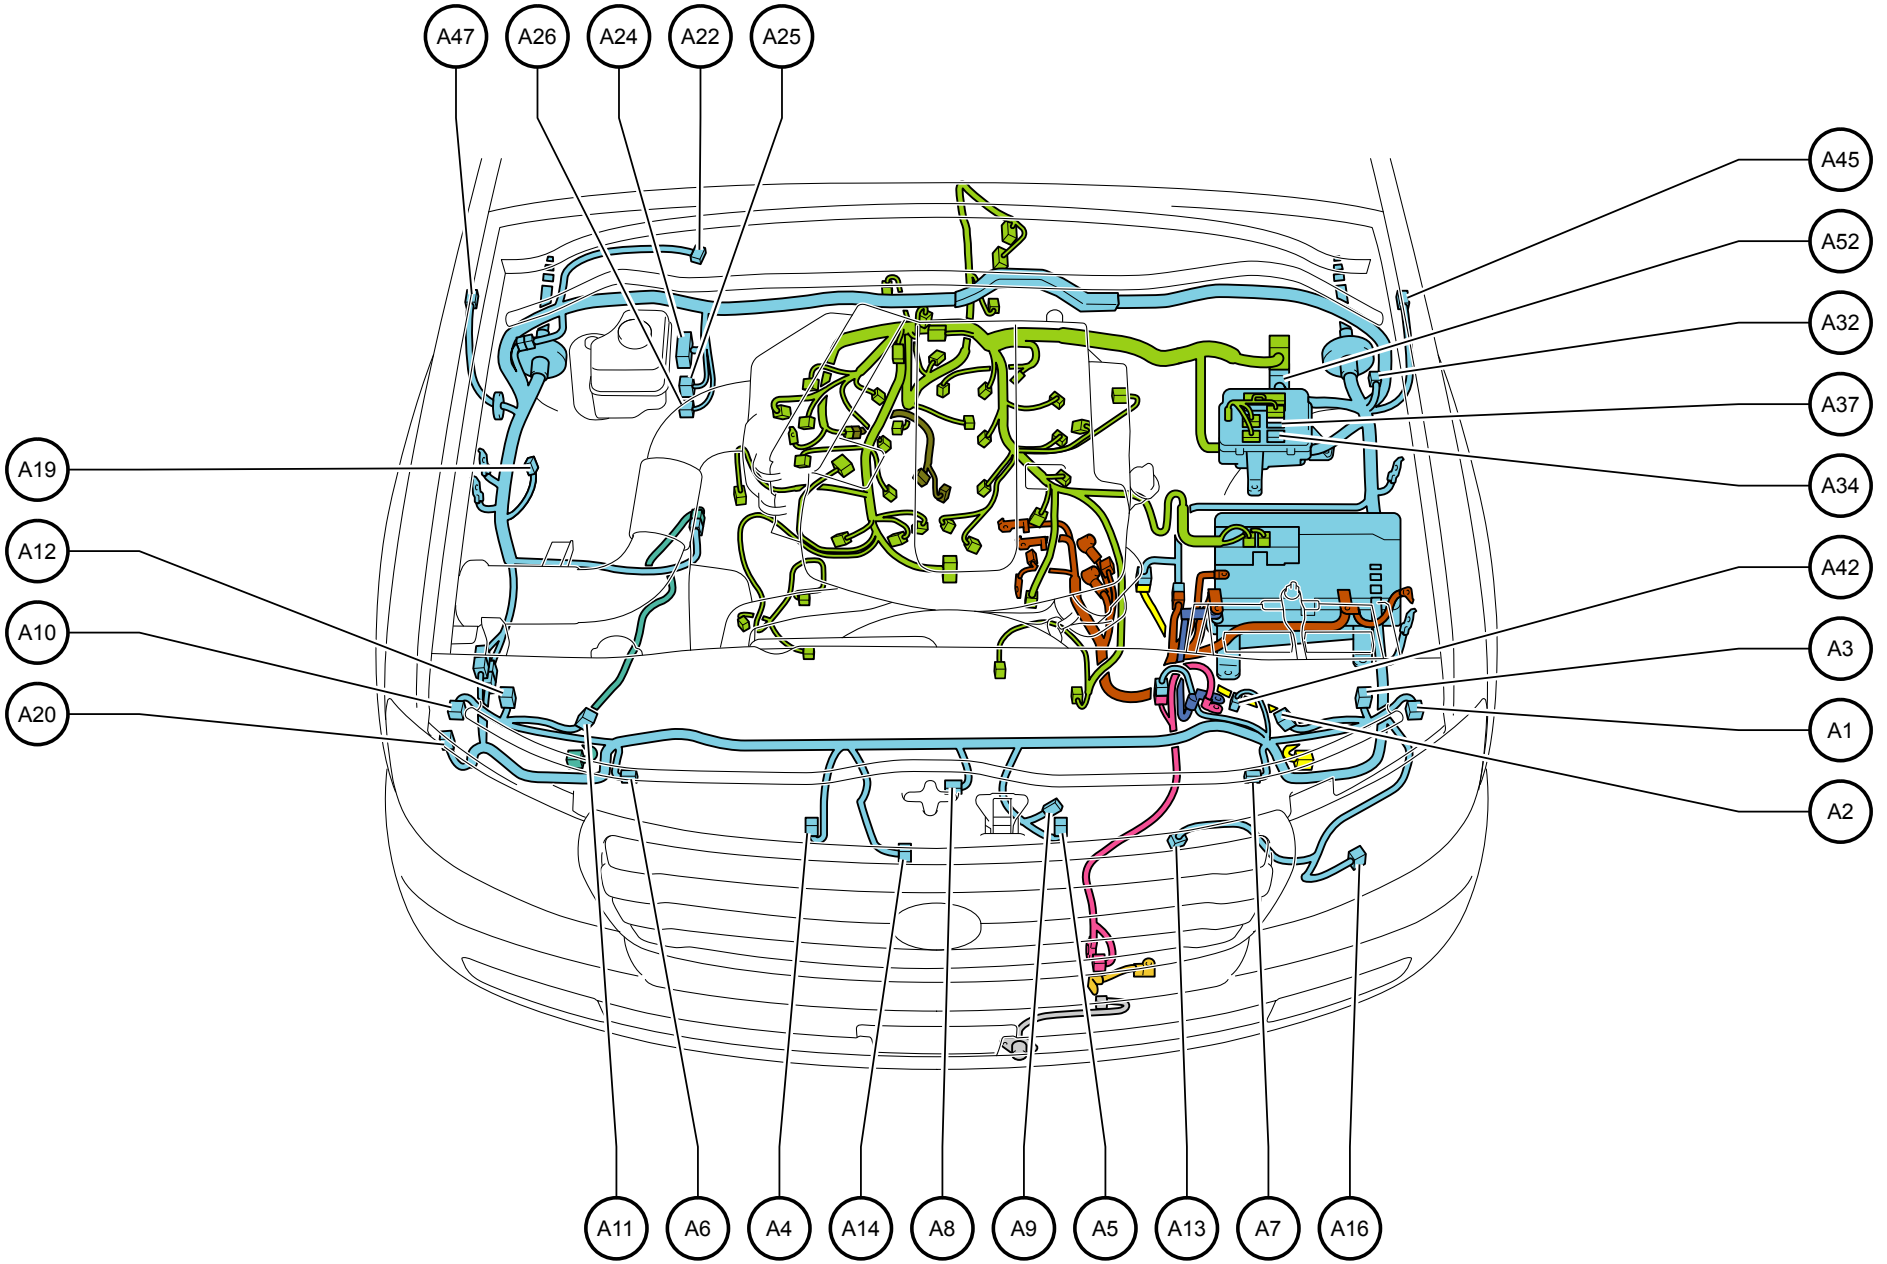


A47
A26
A24
A22
A25
A45
A52
A32
A37
A34
A19
A12
A10
A20
A42
A3
A1
A2
A11
A6
A4
A14
A8
A9
A5
A13
A7
A16

| | | |
|---|---|---|
| A | 1 | Headlight Assembly LH |
| A | 2 | Headlight Assembly LH |
| A | 3 | Headlight Assembly LH |
| A | 4 | High Pitched Horn Assembly |
| A | 5 | Low Pitched Horn Assembly |
| A | 6 | Front Airbag Sensor RH |
| A | 7 | Front Airbag Sensor LH |
| A | 8 | Engine Hood Courtesy Switch |
| A | 9 | Condenser Blower Motor Assembly |
| A | 10 | Headlight Assembly RH |
| A | 11 | Headlight Assembly RH |
| A | 12 | Headlight Assembly RH |
| A | 13 | A/C Pressure Sensor |
| A | 14 | Ambient Temperature Sensor |
| A | 16 | Windshield Washer Motor and Pump Assembly |
| A | 19 | Security Horn Assembly |
| A | 20 | Wireless Door Lock Buzzer |
| A | 22 | Windshield Wiper Motor Assembly |
| A | 24 | Skid Control ECU with Actuator Assembly |
| A | 25 | Skid Control ECU with Actuator Assembly |
| A | 26 | Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly) |
| A | 32 | Noise Filter |
| A | 34 | Junction Connector |
| A | 37 | Junction Connector |
| A | 42 | Winch Main Relay (No.1 Magnet Switch Assembly) |
| A | 45 | Side Turn Signal Light Assembly LH |
| A | 47 | Side Turn Signal Light Assembly RH |
| A | 52 | ECM |

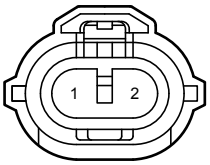
A 1
Gray





A 2
Black





A 3
Black



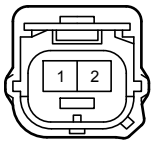

A 4
Black



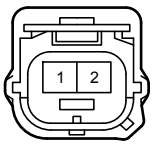

A 5
Black




A 6
Yellow




A 7
Yellow




A 8
Dark Gray




(U.K.)

A 8
Black

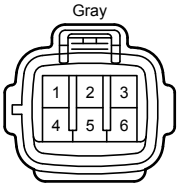



(Except U.K.)


A 9
Black



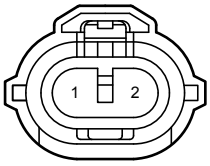

A 10
Gray



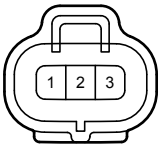

A 11
Black




A 12
Black



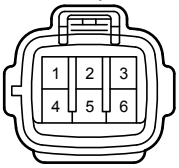

A 13
Black




A 14
Black





A 16
Gray



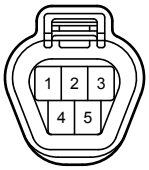

A 19
Black



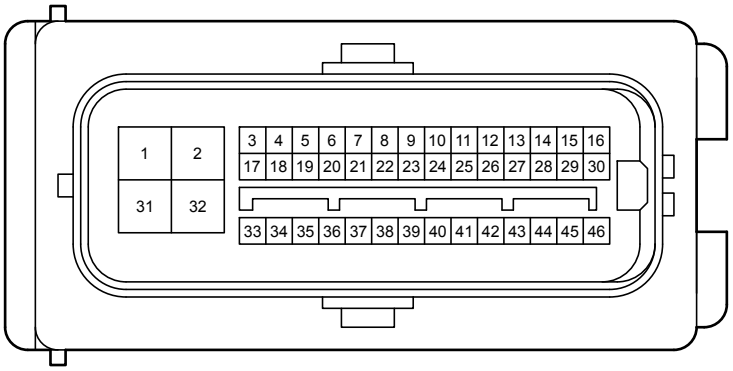

A 20
Black



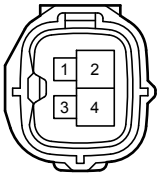

A 22
Black



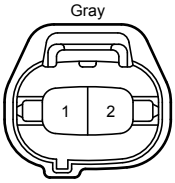

A 24
Black



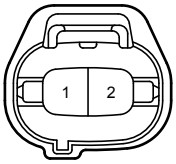

A 25
Black



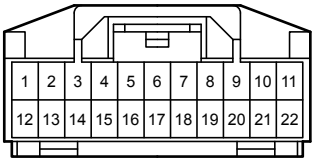

A 26
Gray



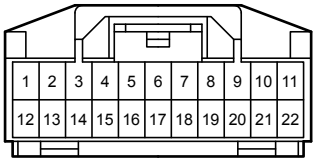

A 32
Black



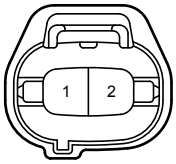

A 34
White




A 37
Blue




A 42
Black



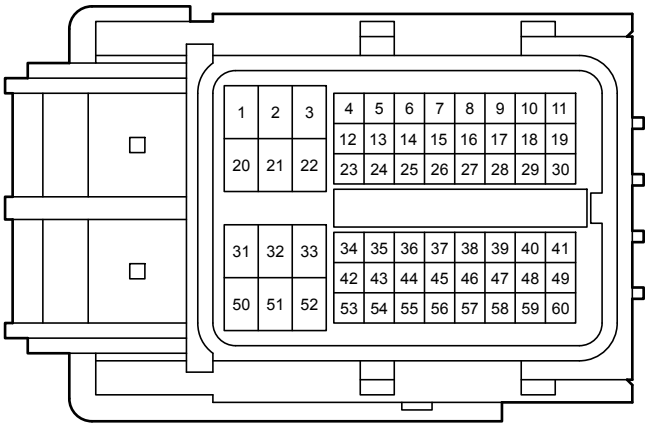

A 45
Gray




A 47
Gray



A 52
Black


1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19
20 21 22 23 24 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41
42 43 44 45 46 47 48 49
50 51 52 53 54 55 56 57 58 59 60