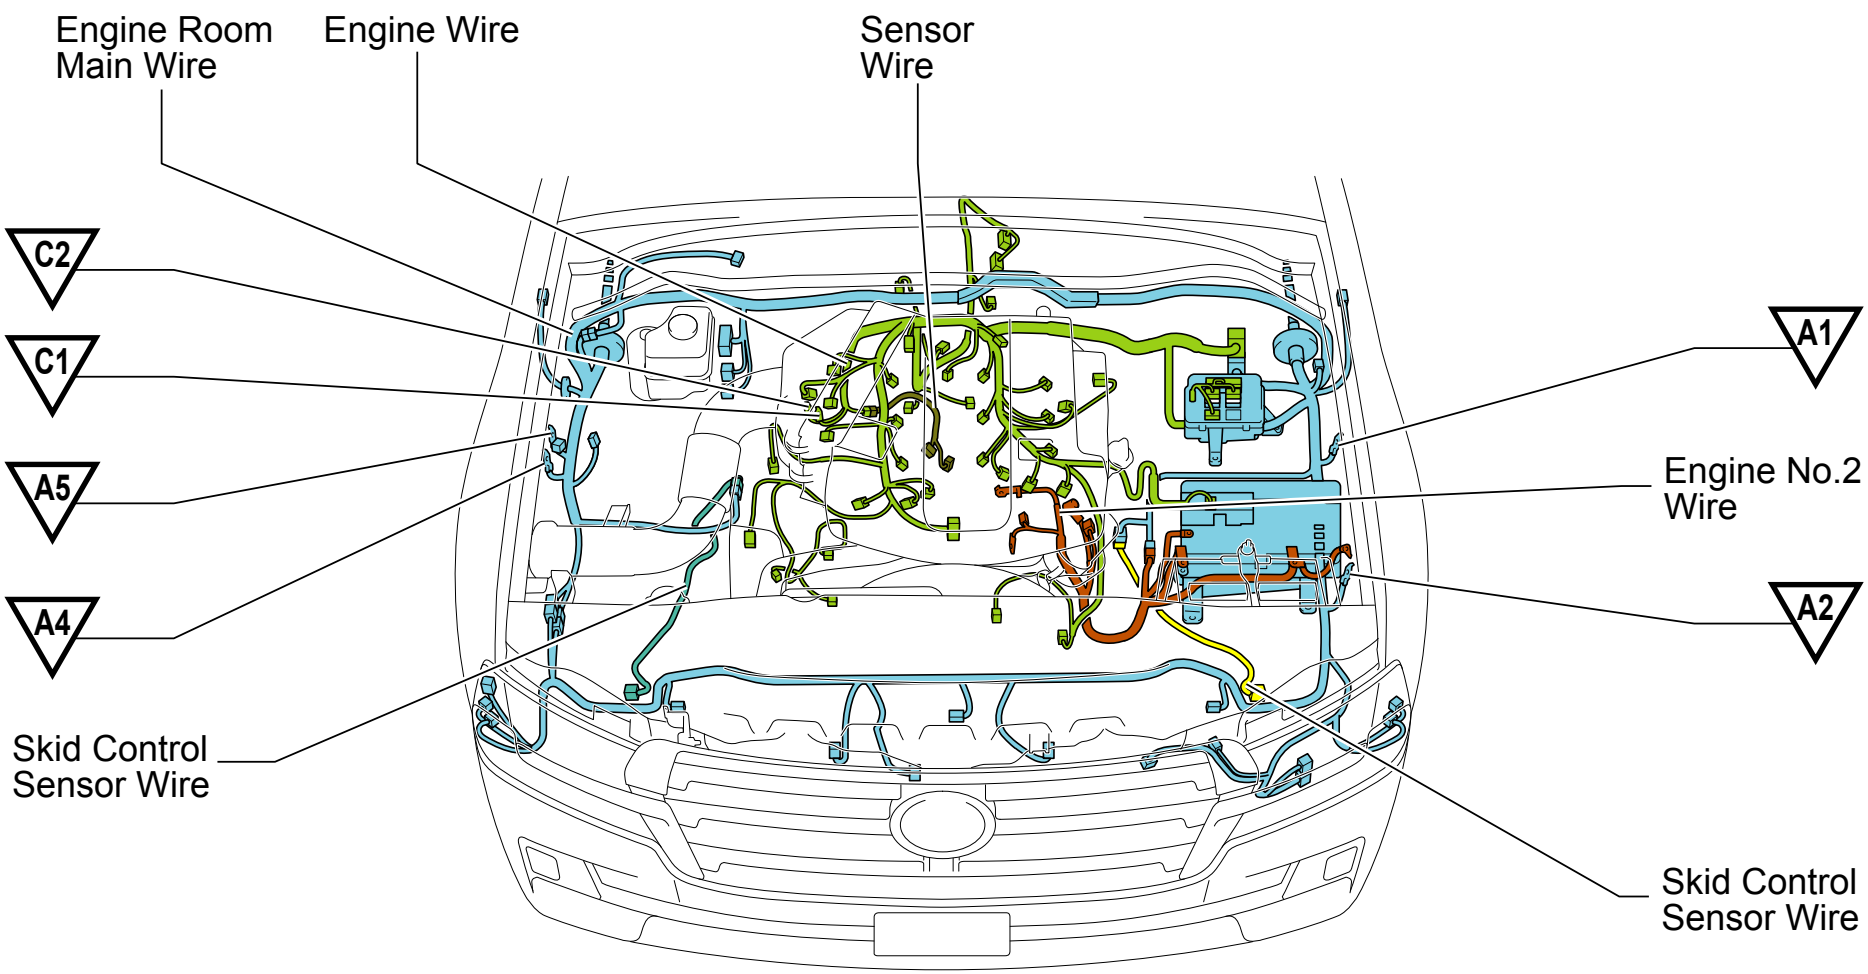

Engine Room Main Wire
Engine Wire
Sensor Wire
C2
C1
A5
A4
Skid Control Sensor Wire
A1
Engine No.2 Wire
A2
Skid Control Sensor Wire